

Service Manual

Trucks

Group 37

Release 01

Wiring diagram


FM

CHID A698436–

CHID B564590–

CHID W100620–754005

CHID CKD891518–

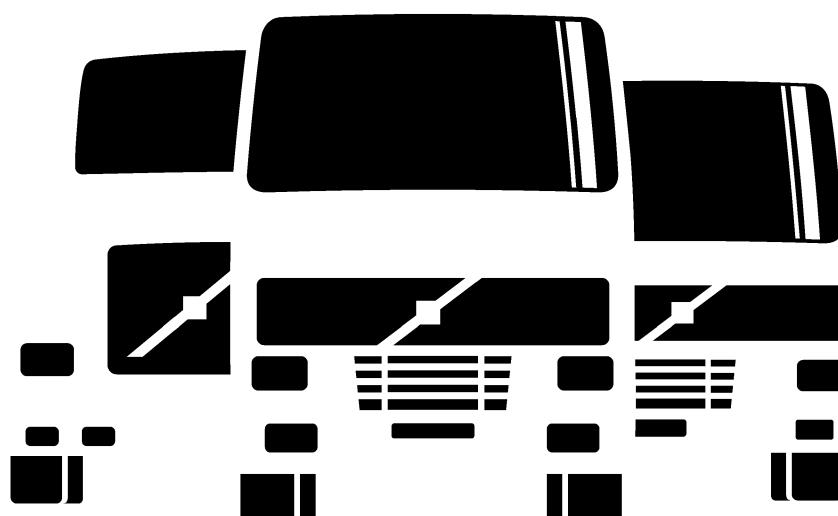

88956890

VOLVO

Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to September 10.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

Note: Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

Caution: Indicates an unsafe practice where damage to the product could occur.

Warning: Indicates an unsafe practice where personal injury or severe damage to the product could occur.

Danger: Indicates an unsafe practice where serious personal injury or death could occur.

Volvo Truck Corporation
Göteborg, Sweden

Note: Check always the latest information at the “Wiring diagrams-site”.

Order number: 88956890

Repl: Service bulletin 370-160 TSP 88956892 and service bulletin 370-161 TSP 88956893.


©10 Volvo Truck Corporation, Göteborg, Sweden

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation .


Contents

Example of wiring diagram.....	2
Component wiring diagram index.....	5
Component wiring diagrams	9
Illustrations index.....	125
Illustrations	126
Fuses	227
Relays.....	229
Wiring harness illustration index.....	231
Ground connections	234
List of connectors.....	237
List of components.....	252
Abbreviations	262
Cable colour code.....	264
Feedback	265



Example of wiring diagram

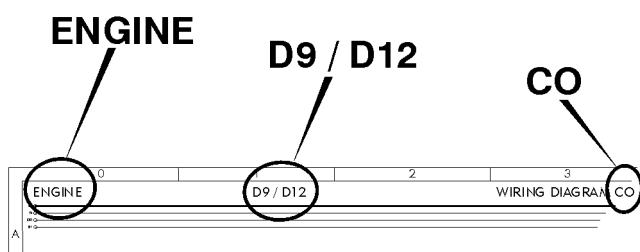

Component wiring diagram title, variant/subtitle and symbol.

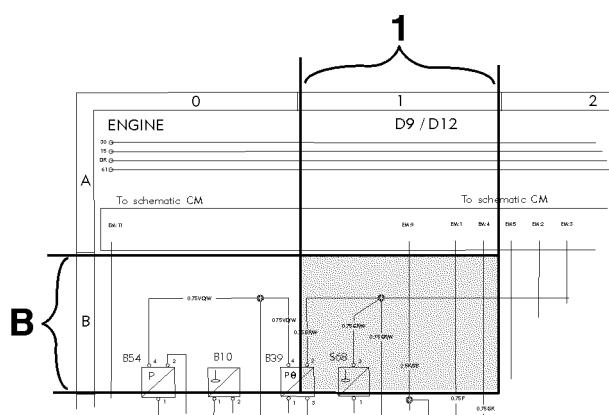

Coordinates (B 1).

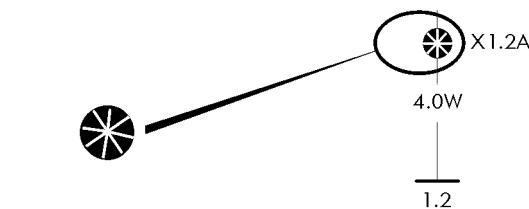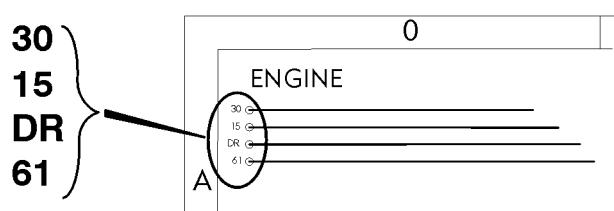


30 Voltage battery, kl.30.

15 Voltage with starter key in drive position, kl.15.


DR Voltage with starter key in drive position, preheat position and start position, kl.DR.

61 Voltage when alternator charges, kl.61.


Splice.

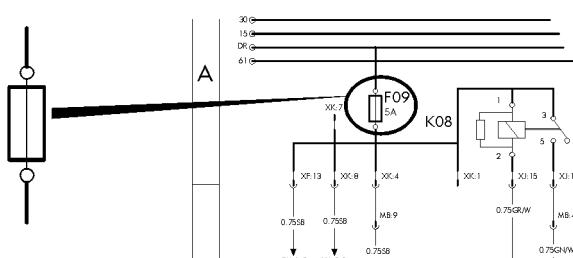







Fuse.

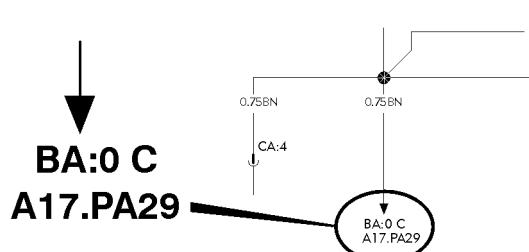


Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.

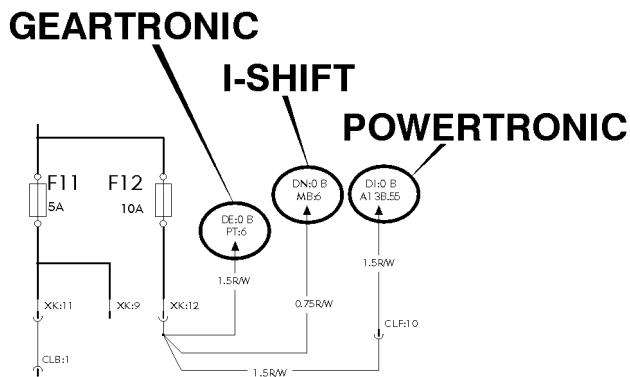


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

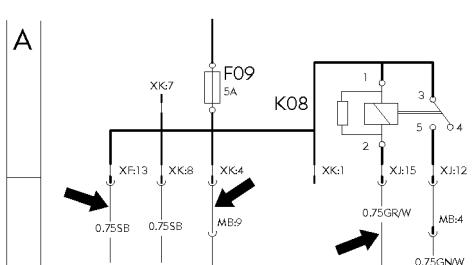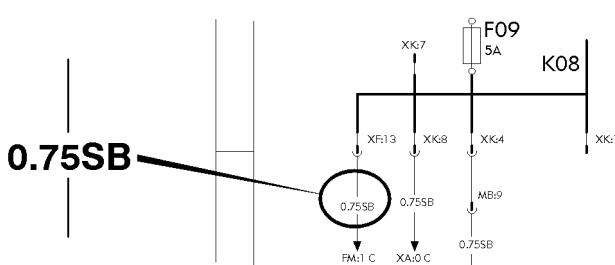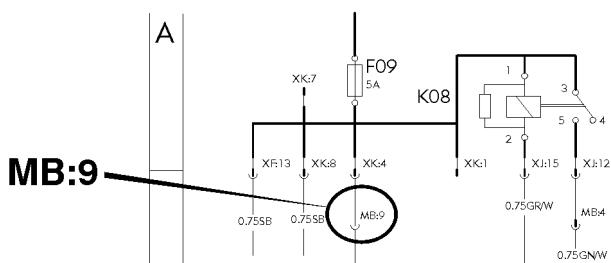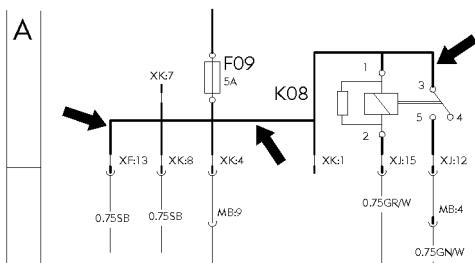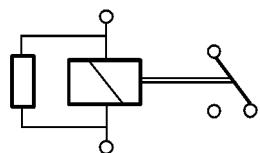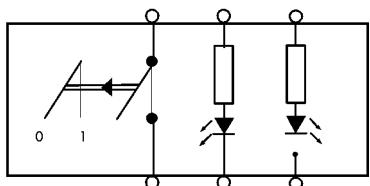


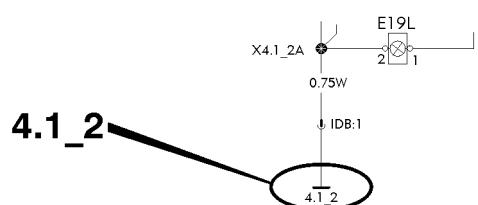


Earth connection point 4, earth connection 1 and wire 2.

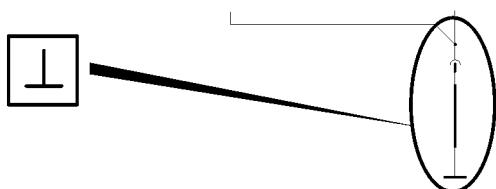

Earth connection to circuit card.

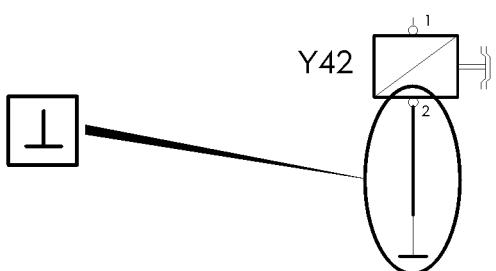

Earth connection without wire.

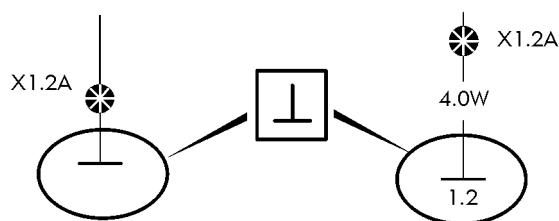

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.

Component wiring diagram index


AA	Power supply, starting system	"", page 9
AB	Main switch	"", page 10
AC	Power distribution	"", page 11
AE	ADR, main switch	"", page 12
AF	ADR, main switch, ADR3	"", page 13
BA	Vehicle ECU	"", page 14
BE	Driver Assistance System, ACC	"", page 15
BI	Instrument cluster	"", page 16
BM	Tachograph in dash	"", page 17
BN	Tachograph in shelf	"", page 18
BU	Dynafleet TIS-BAS/TIS-MED/TIS-HIGH	"", page 19
BX	FMS Gateway	"", page 20
BZ	Toll collect	"", page 21
BZ RHD	Toll collect	"", page 22
CJ	Engine interface	"", page 23
CO	Engine D11A, D11B, D13A	"", page 24
	Engine D11C, EM-EU5	"", page 25
	Engine D11C, EM-EU5	"", page 26
	Engine D13B, EGR-C, EM-EC06	"", page 27
	Engine D13B, EGR-C, EM-EC06	"", page 28
	Engine D13H, EM-JPN10	"", page 29
	Engine D13H, EM-JPN10	"", page 30
	Engine D13C, EM-EU5	"", page 31
	Engine D13C, EM-EU5	"", page 32
CP	12V trailer ABS converter, VERS-AUS, TABS-12V	"", page 33
CR	SCR+DPF, EM-JPN10	"", page 34
CV	SCR	"", page 35
DC	Gear selector ECU (I-SHIFT/POWERTRONIC)	"", page 36
DI	Powertronic	"", page 37
DM	Retarder manual gearshift	"", page 38
DP	I-shift	"", page 39
DQ	Power take off	"", page 40
DU	Diff-lock	"", page 41
EE	ABS basic, E-version	"", page 42
EE RHD	ABS basic, E-version	"", page 43
EF	ABS 6x2 VERS-SAM	"", page 44
EO	EBS ECU	"", page 45
EO RHD	EBS ECU	"", page 46


EP	EBS modulators	"", page 47
FA	Air-suspension	"", page 48
FA RHD	Air-suspension	"", page 49
FB	Air-suspension	"", page 50
FB RHD	Air-suspension	"", page 51
FG	Load indicator	"", page 52
FI	Bogie lift A-ride	"", page 53
FK	Bogie lift A-ride with axle load limiter	"", page 54
FL	Bogie lift J-ride 6x2	"", page 55
FM	Axle lock, self steered axle	"", page 56
FO	Electronic steered axle	"", page 57
FP	Dual steered front axle	"", page 58
FQ	Air dryer	"", page 59
FU	Central lubrication system	"", page 60
FX	Fuel heater, Thermoline	"", page 61
GA	LCM head lights, BUMP-S/BUMP-P/BUMP-SC	"", page 62
GA4	LCM head lights, BUMP-HDC	"", page 63
GB	LCM trailer	"", page 64
GC	LCM rear lights	"", page 65
GC RHD	LCM rear lights	"", page 66
GE	Rear lights overhang	"", page 67
GF	Rear lights, India/Korea	"", page 68
GG	Trailer connections, RIGID	"", page 69
GH	Trailer connections, TRACTOR	"", page 70
GK	Trailer connections (AUS only)	"", page 71
GL	Identification lamps	"", page 72
GL2	Identification lamps, sunvisor H1	"", page 73
GM	Wiper, rainsensor	"", page 74
GQ	Horn	"", page 75
GR	Trailer connections TREL14	"", page 76
GU	Headlights adjust, BUMP-S/BUMP-P/BUMP-SC	"", page 77
GU_2	Headlights adjust, BUMP-HDC	"", page 78
HE	Fan in dash board	"", page 79
HG	Climate unit, CU,-BAS,-MCC,-ECC	"", page 80
HI	Air heater, UADR	"", page 81
HI2	Air heater, ADR	"", page 82
HM	Water heater	"", page 83
HP	Short stop cab heater	"", page 84


HY	Climat unit, CU,-HEAT,-ACMAN,-ACAUT.	„, page 85
HY RHD	Climat unit, CU,-HEAT,-ACMAN,-ACAUT.	„, page 86
HZ	Air cooler, Brazil	„, page 87
IA	El. heated/adj. seat	„, page 88
IE	El. heat/adj. mirrors, El. window winders	„, page 89
IF	Foldable mirror bracket	„, page 90
IH	Interior light, H1	„, page 91
IH3	Interior light, INLI-NL/INLI-BAS	„, page 92
IH4	Interior light, H2/H3	„, page 93
IK	Alcolock, start prevention system	„, page 94
IM	Central locking, immobiliser	„, page 95
IQ	El. sunroof, cig. lighter, refrigerator	„, page 96
IR	12V power supply	„, page 97
IR2	Power outlets	„, page 98
IS	SRS. Air-bag	„, page 99
IU	Audio	„, page 100
IU RHD	Audio	„, page 101
IV	Amplifier	„, page 102
IX	Integrated telephone	„, page 103
IZ	Backup camera	„, page 104
KA	Cab tilt	„, page 105
KE	Load light, 5:th wheel lamp	„, page 106
KI	Light sign	„, page 107
KM	Beacon warning light	„, page 108
ME	Extra fuse block, key switch relay	„, page 109
MF	Extra fuse block, SPDU-S	„, page 110
NA	Body builder (BB), auxsw-6 and swapbody	„, page 111
NA_2	Body builder (BB), auxsw-6, working lamps	„, page 112
NB	Body builder (BB), tailprep and swapbody	„, page 113
NC	Body builder (BB), ELCE-CK, BBM, PTO2	„, page 114
NI	Extra spotlamps front/roof, max 4x70W	„, page 115
NK	Burglar alarm	„, page 116
NU	Body builder (BB), SPEED-DU	„, page 117
NX	Body builder (BB), SPDU-S	„, page 118
OA	Tyre pressure monitoring (TPM)	„, page 119
XA	Bus J1708/J1587	„, page 120
XB	Bus J1939	„, page 121
XC	Bus J1939-7, OBD	„, page 122

YA	Ground connector	"", page 123
ZA RHD	Ground/Misc.	"", page 124


Component wiring diagrams

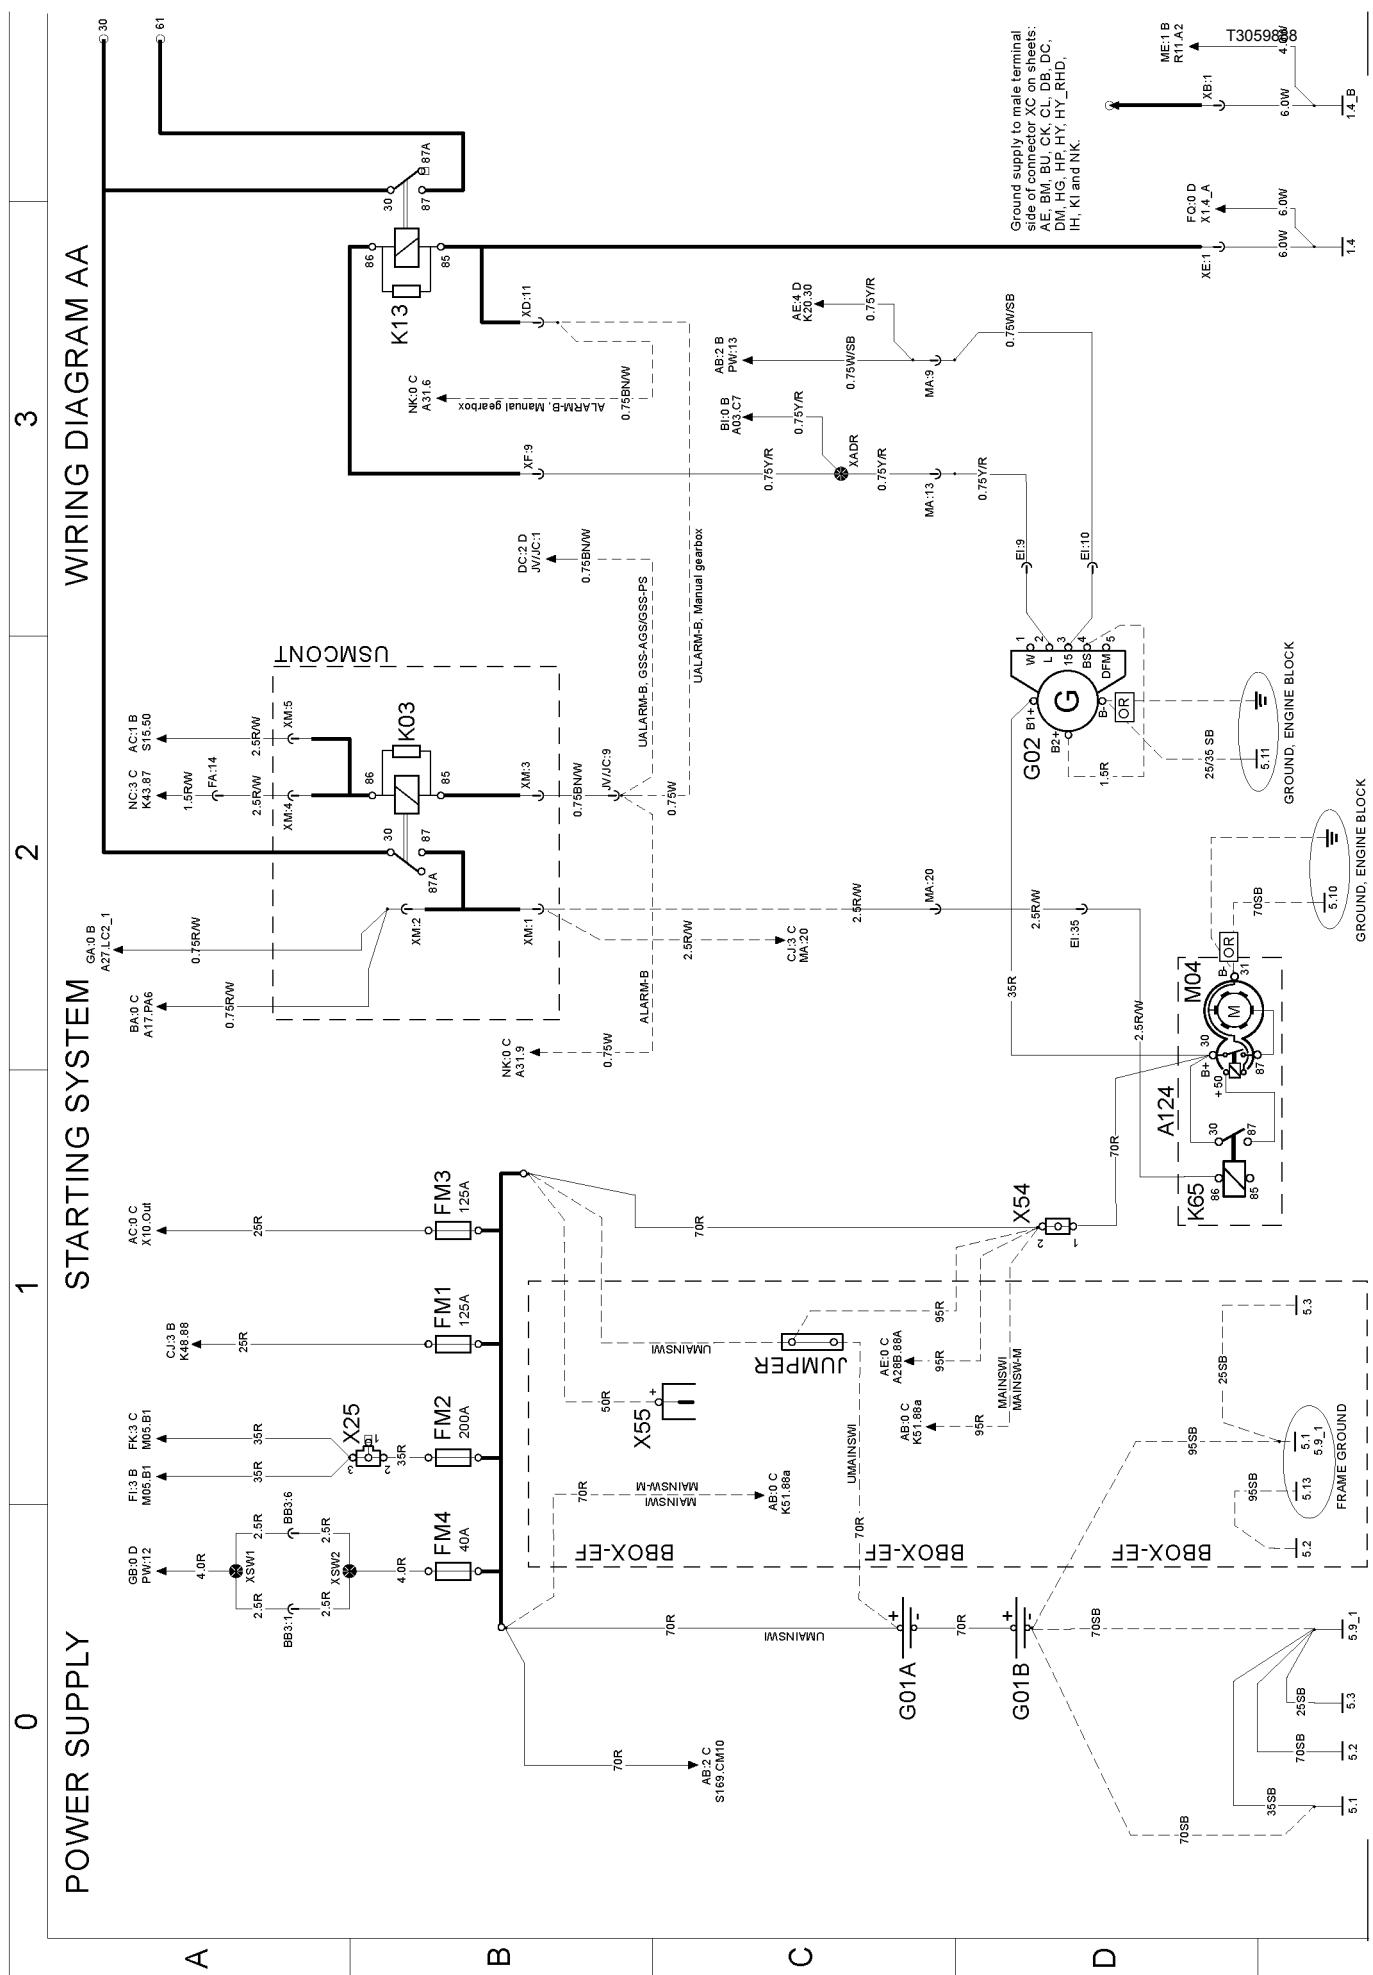


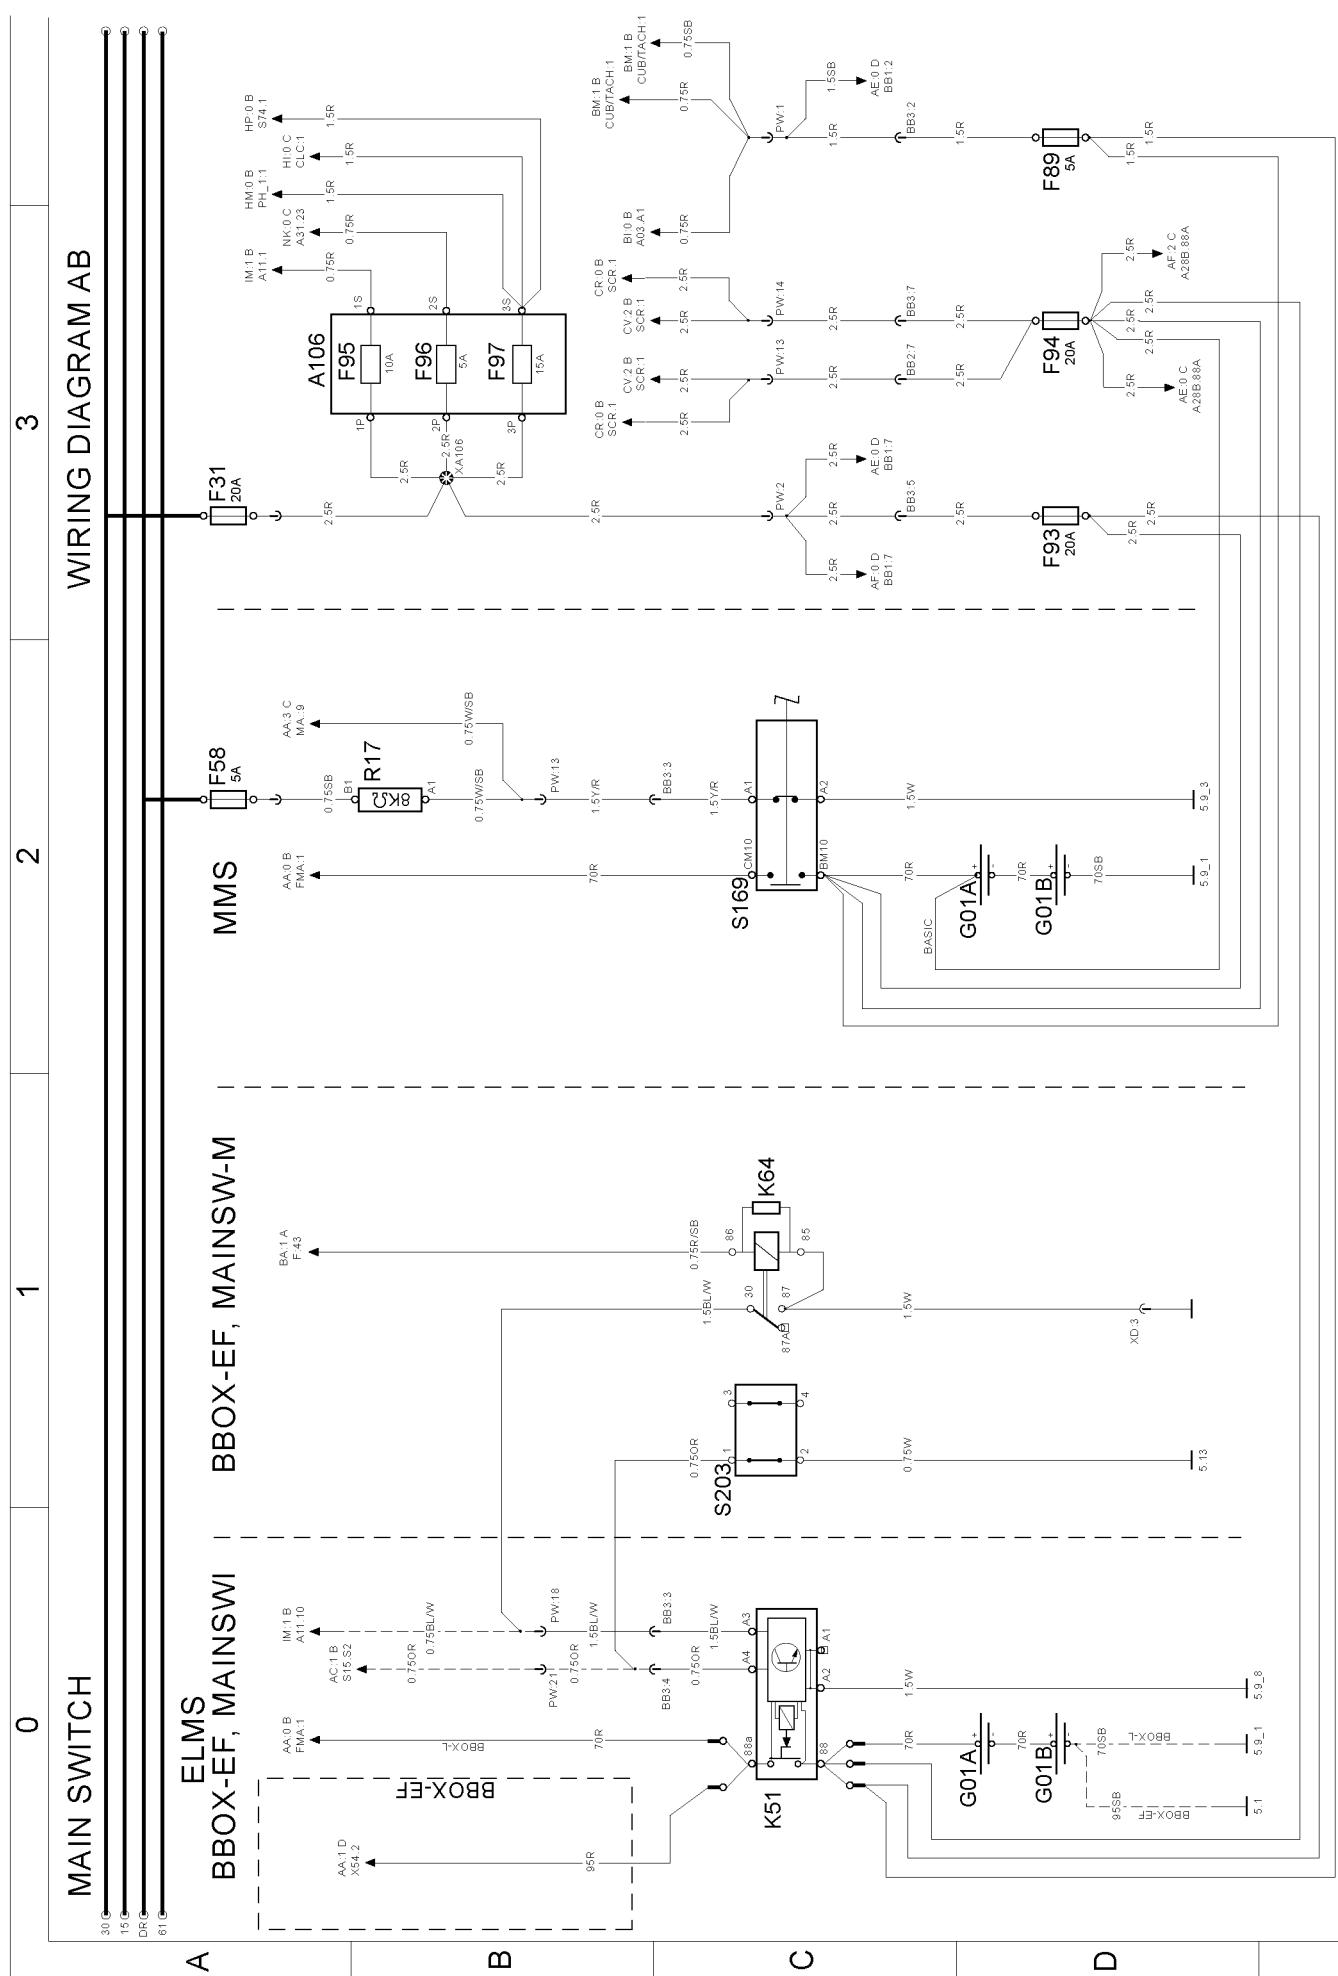

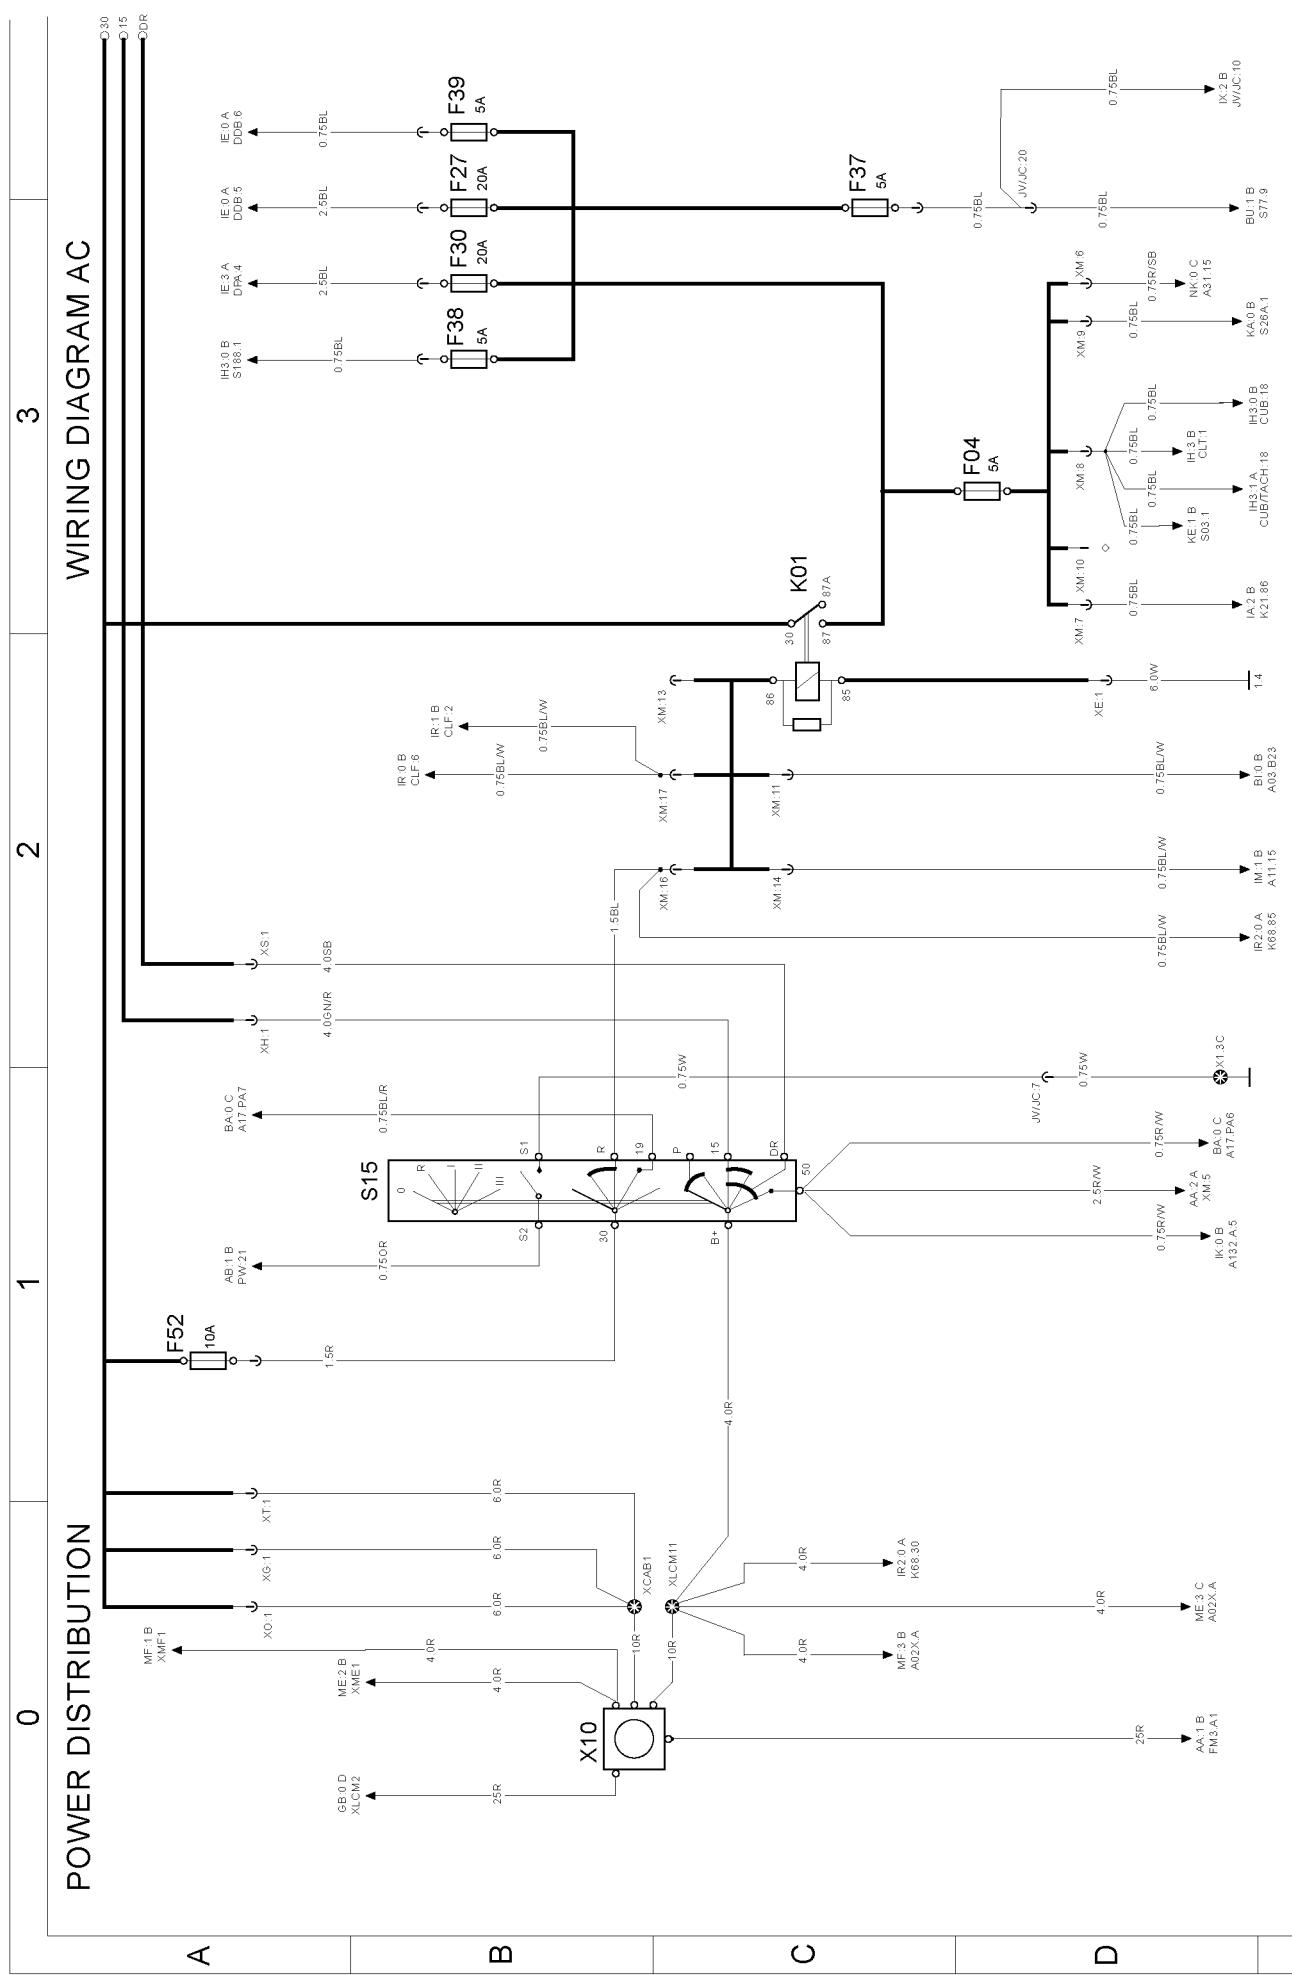



0	1	2	3
ADR, MAIN SWITCH			WIRING DIAGRAM AE

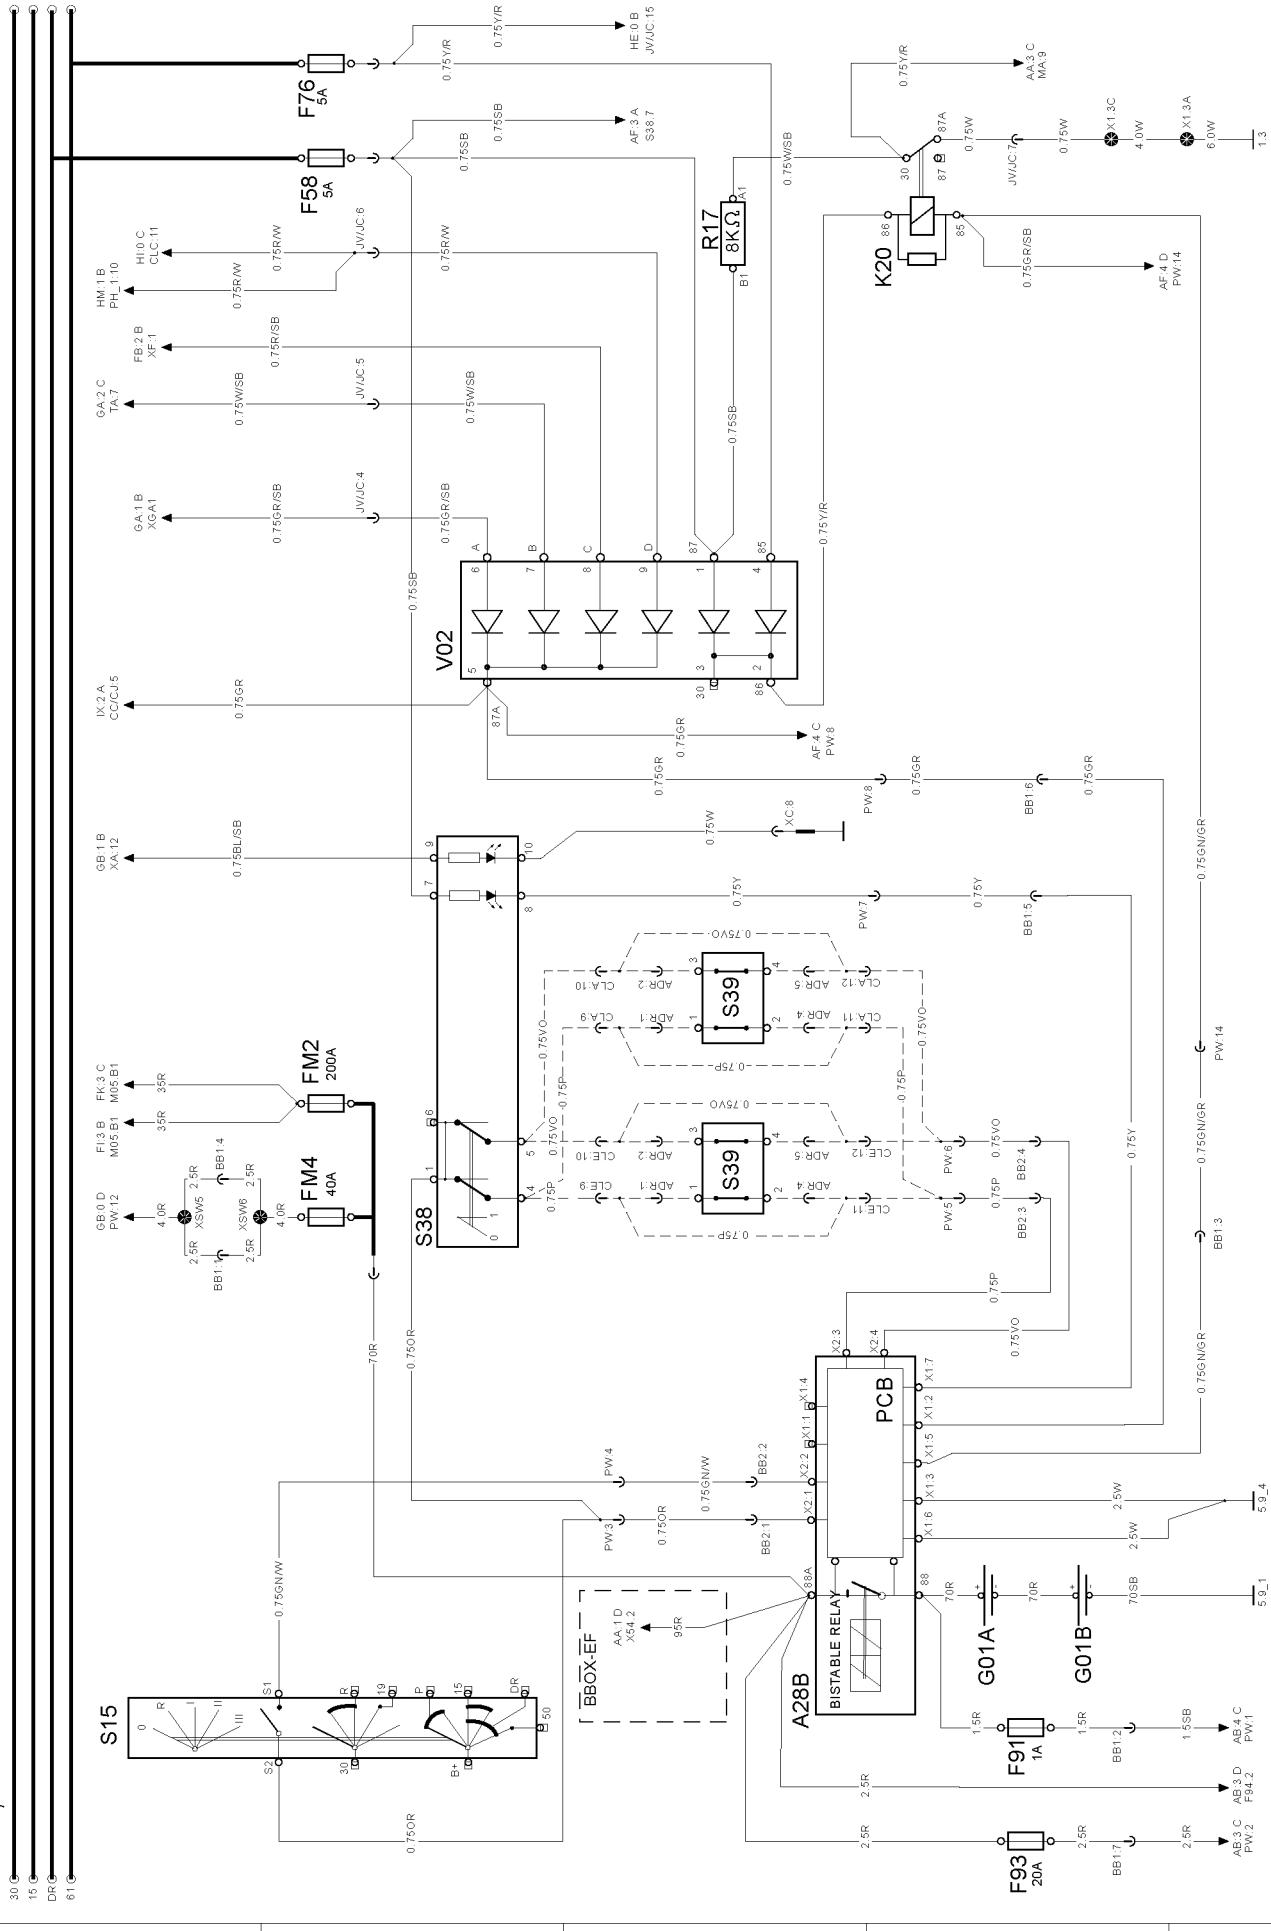

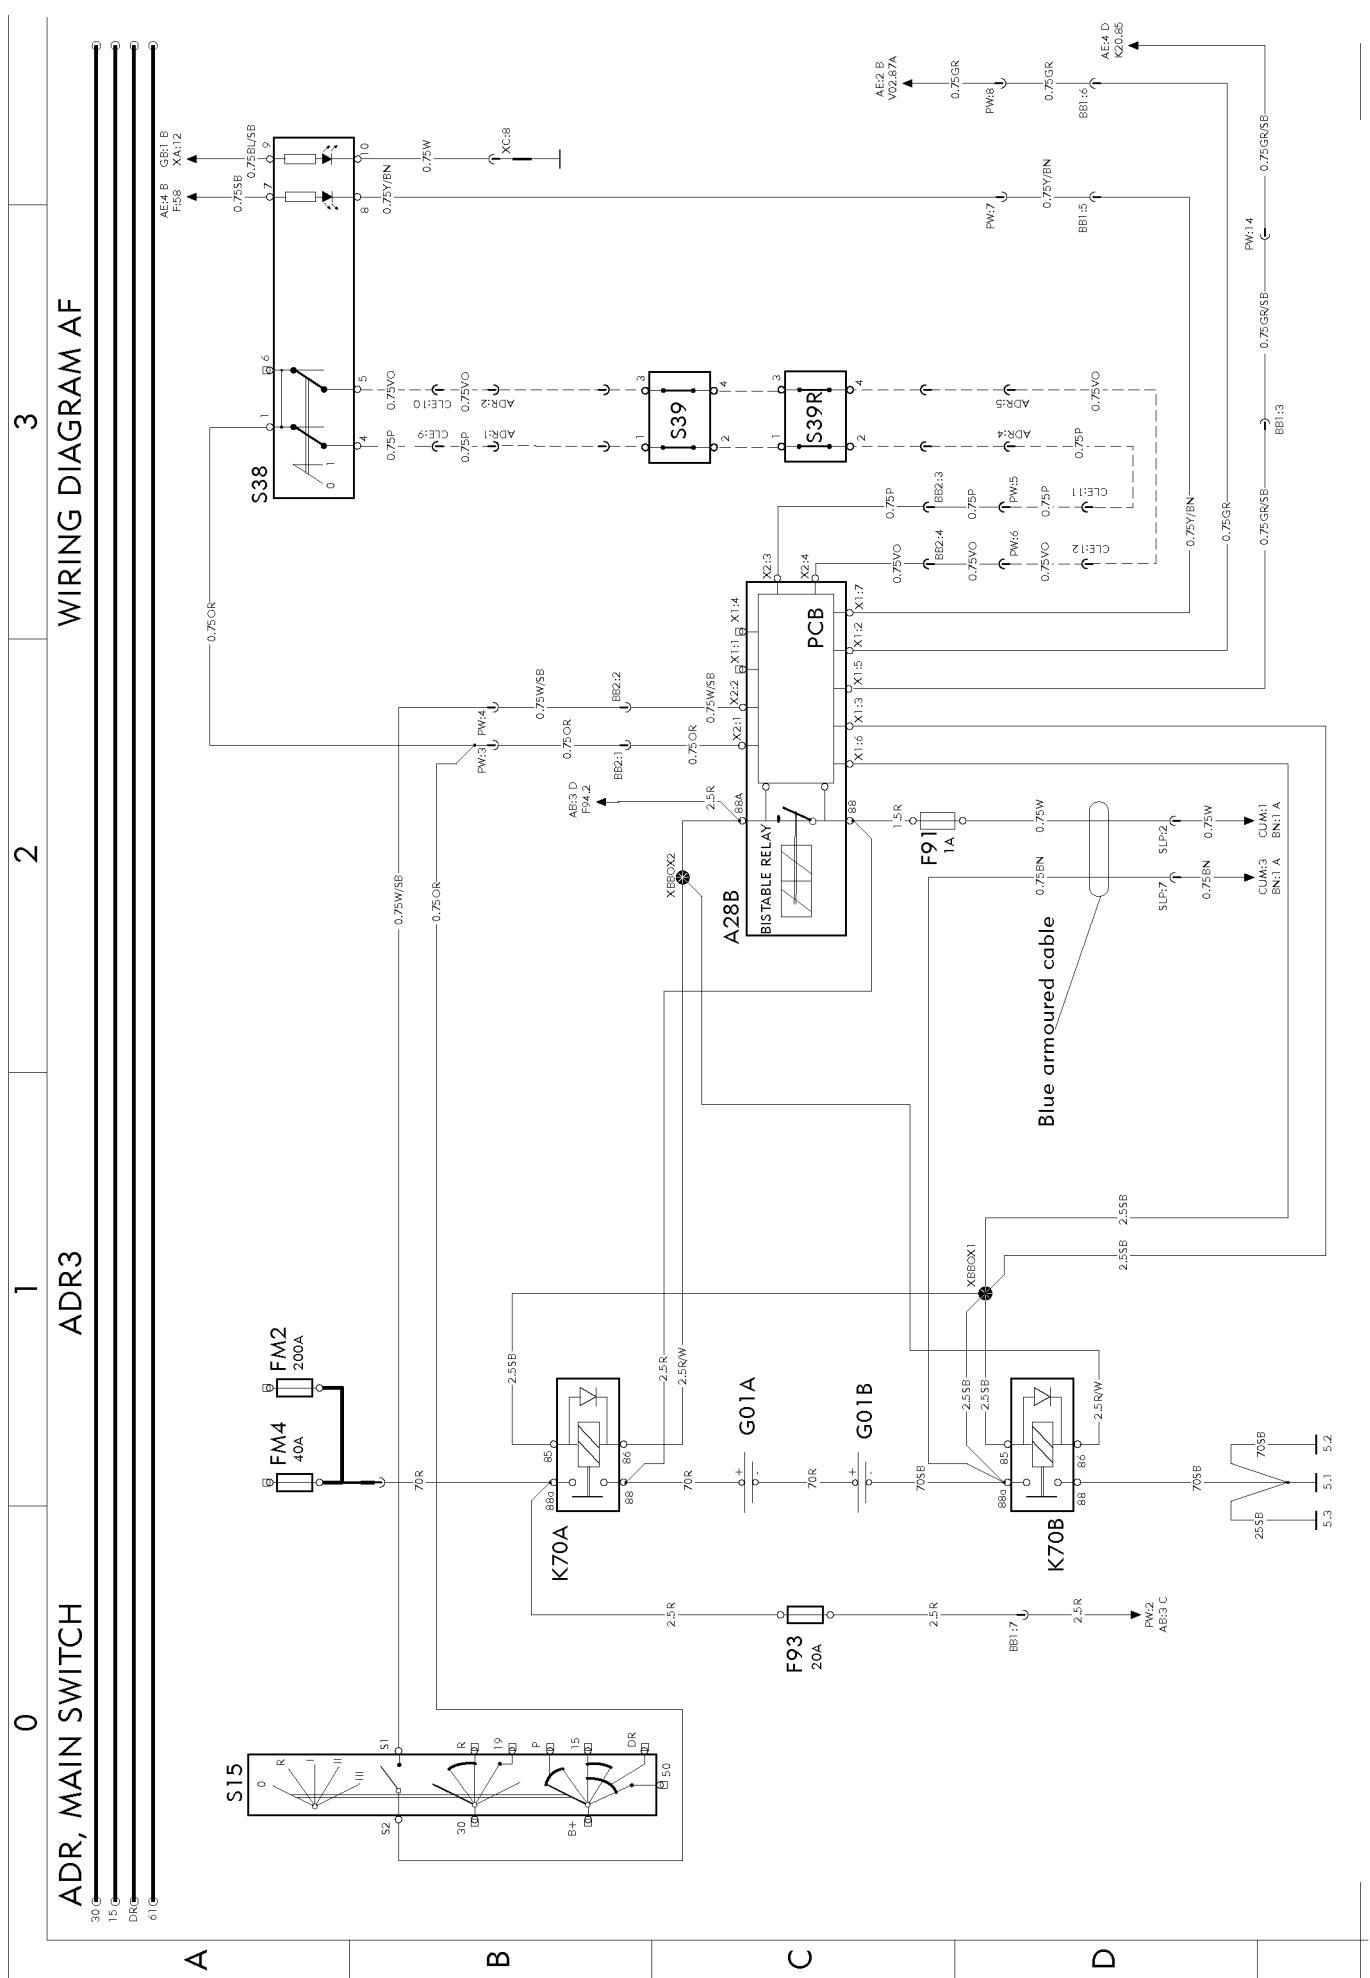

VEHICLE ECU

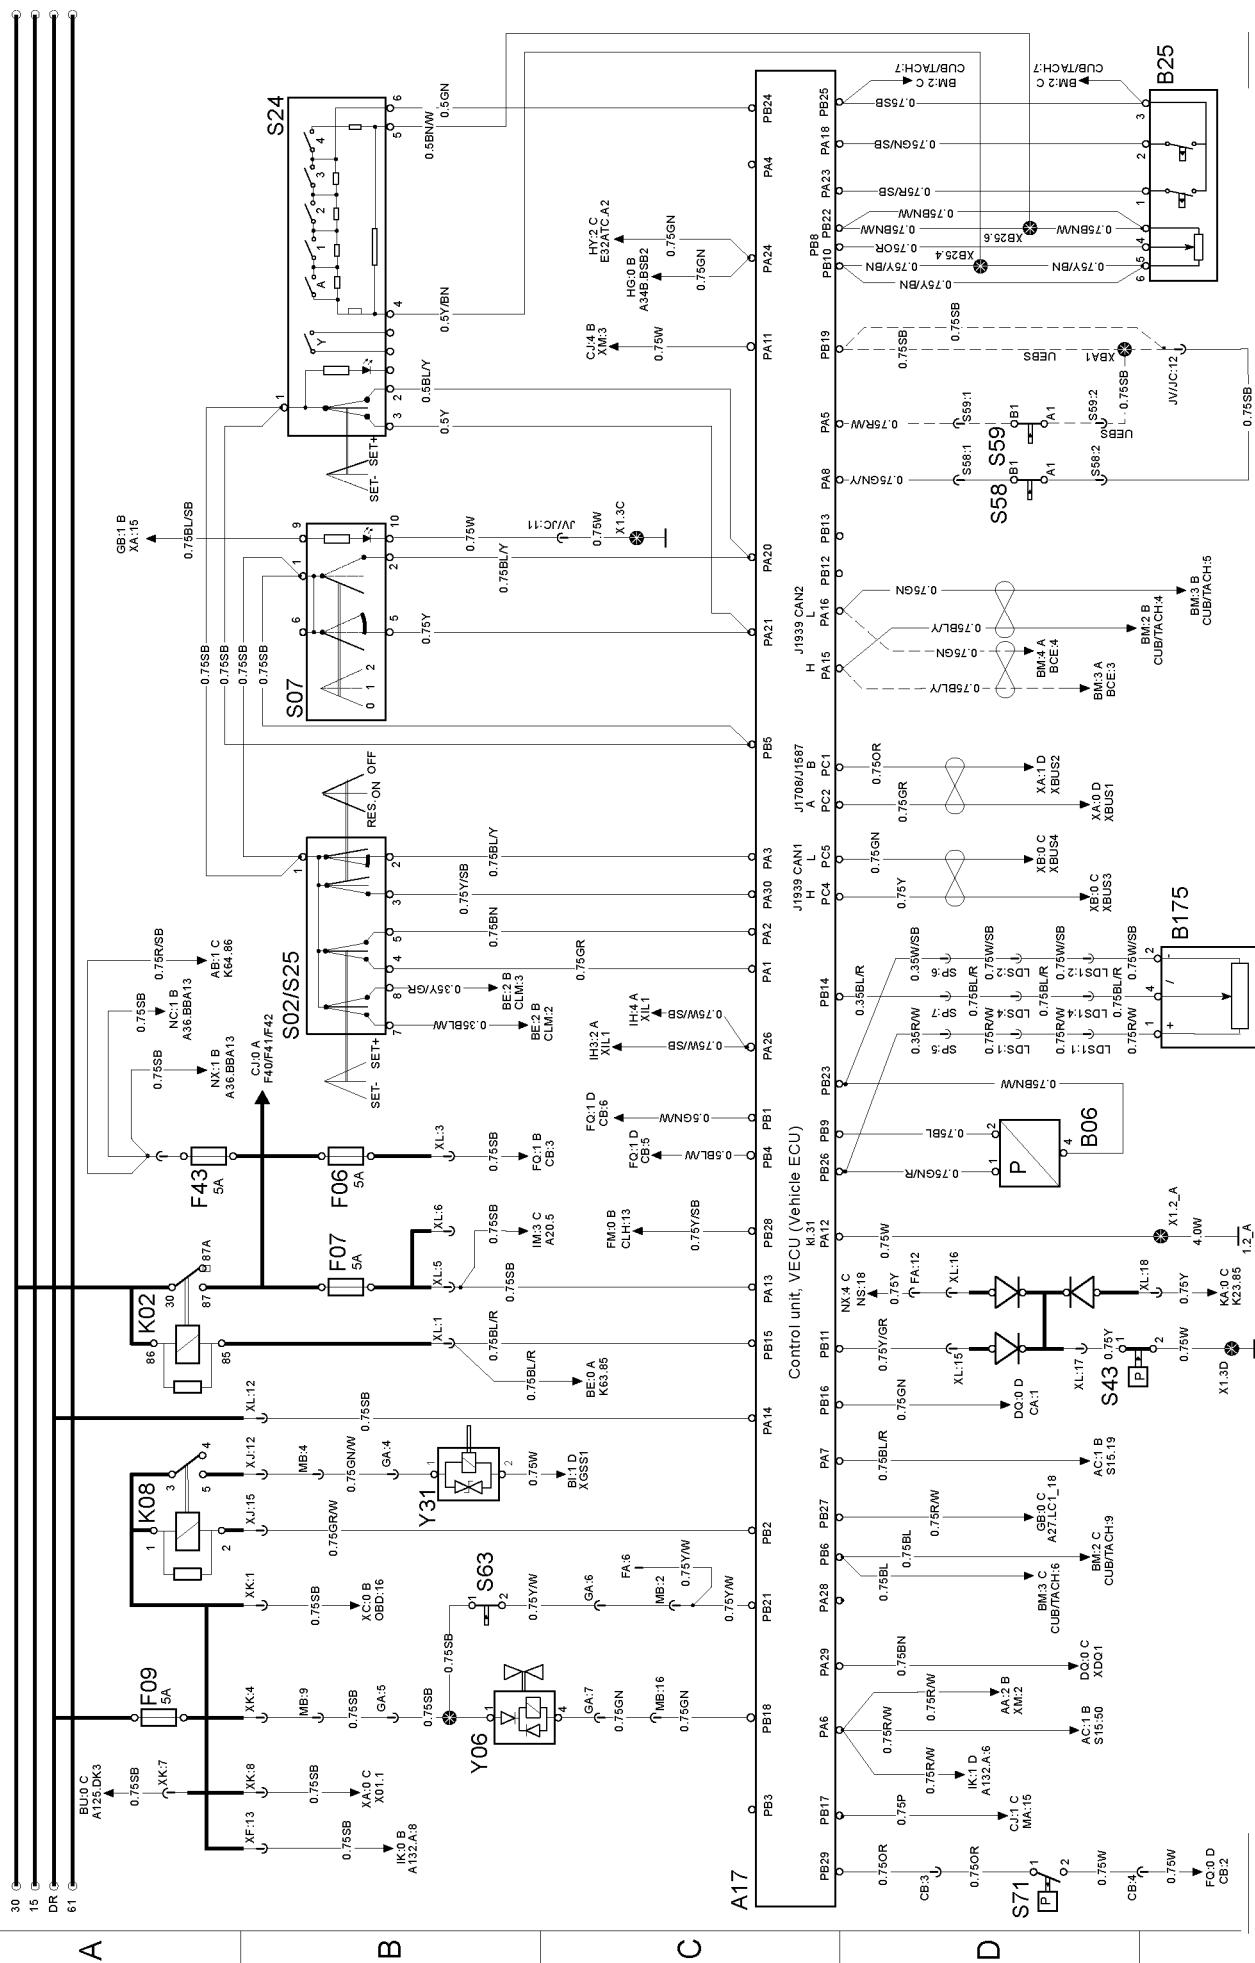


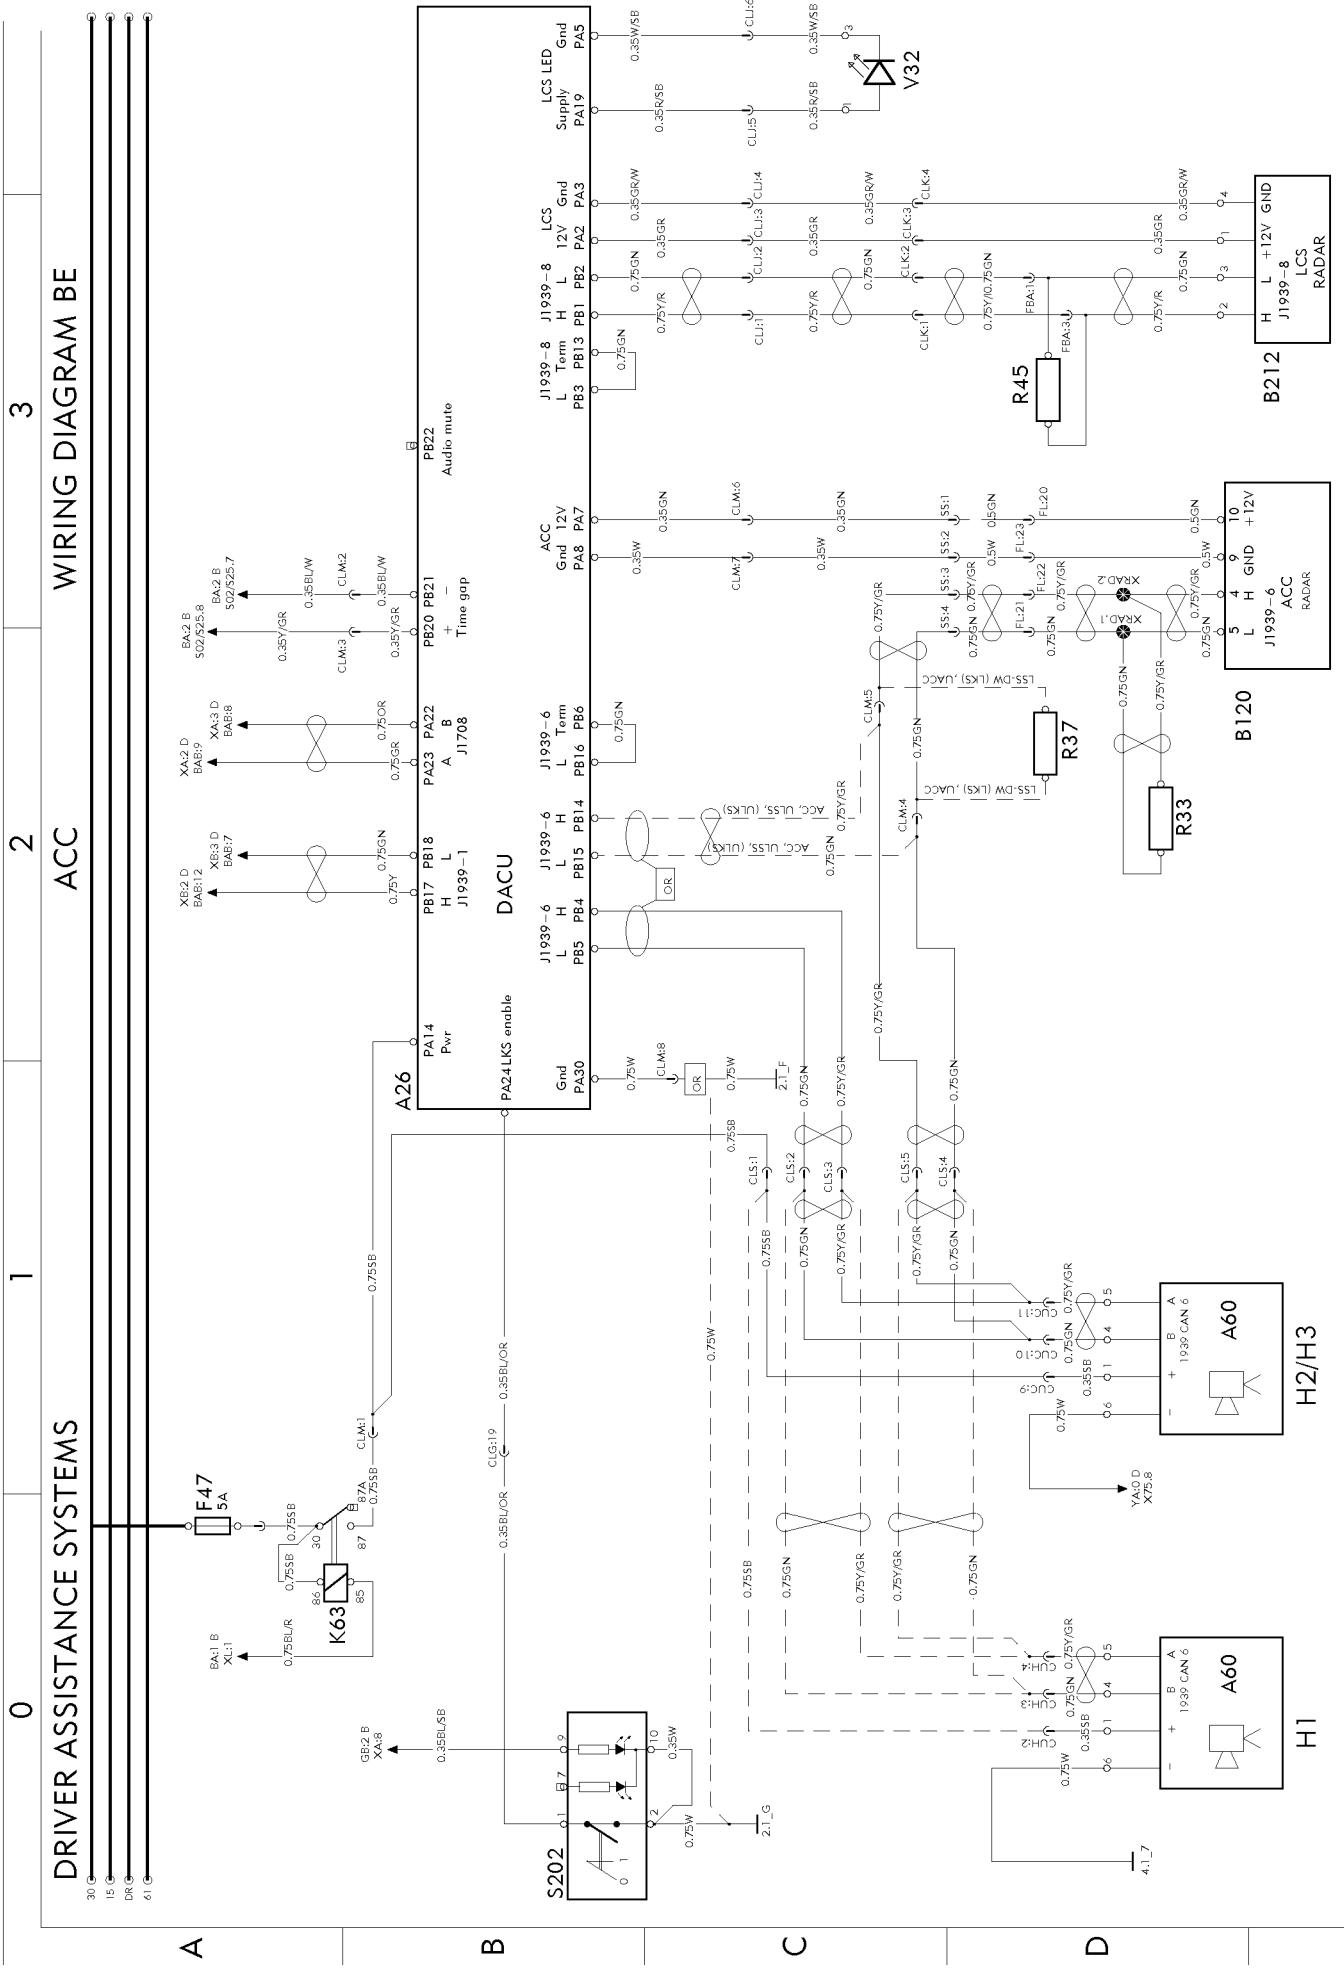


INSTRUMENT CLUSTER


16


WIRING DIAGRAM BI

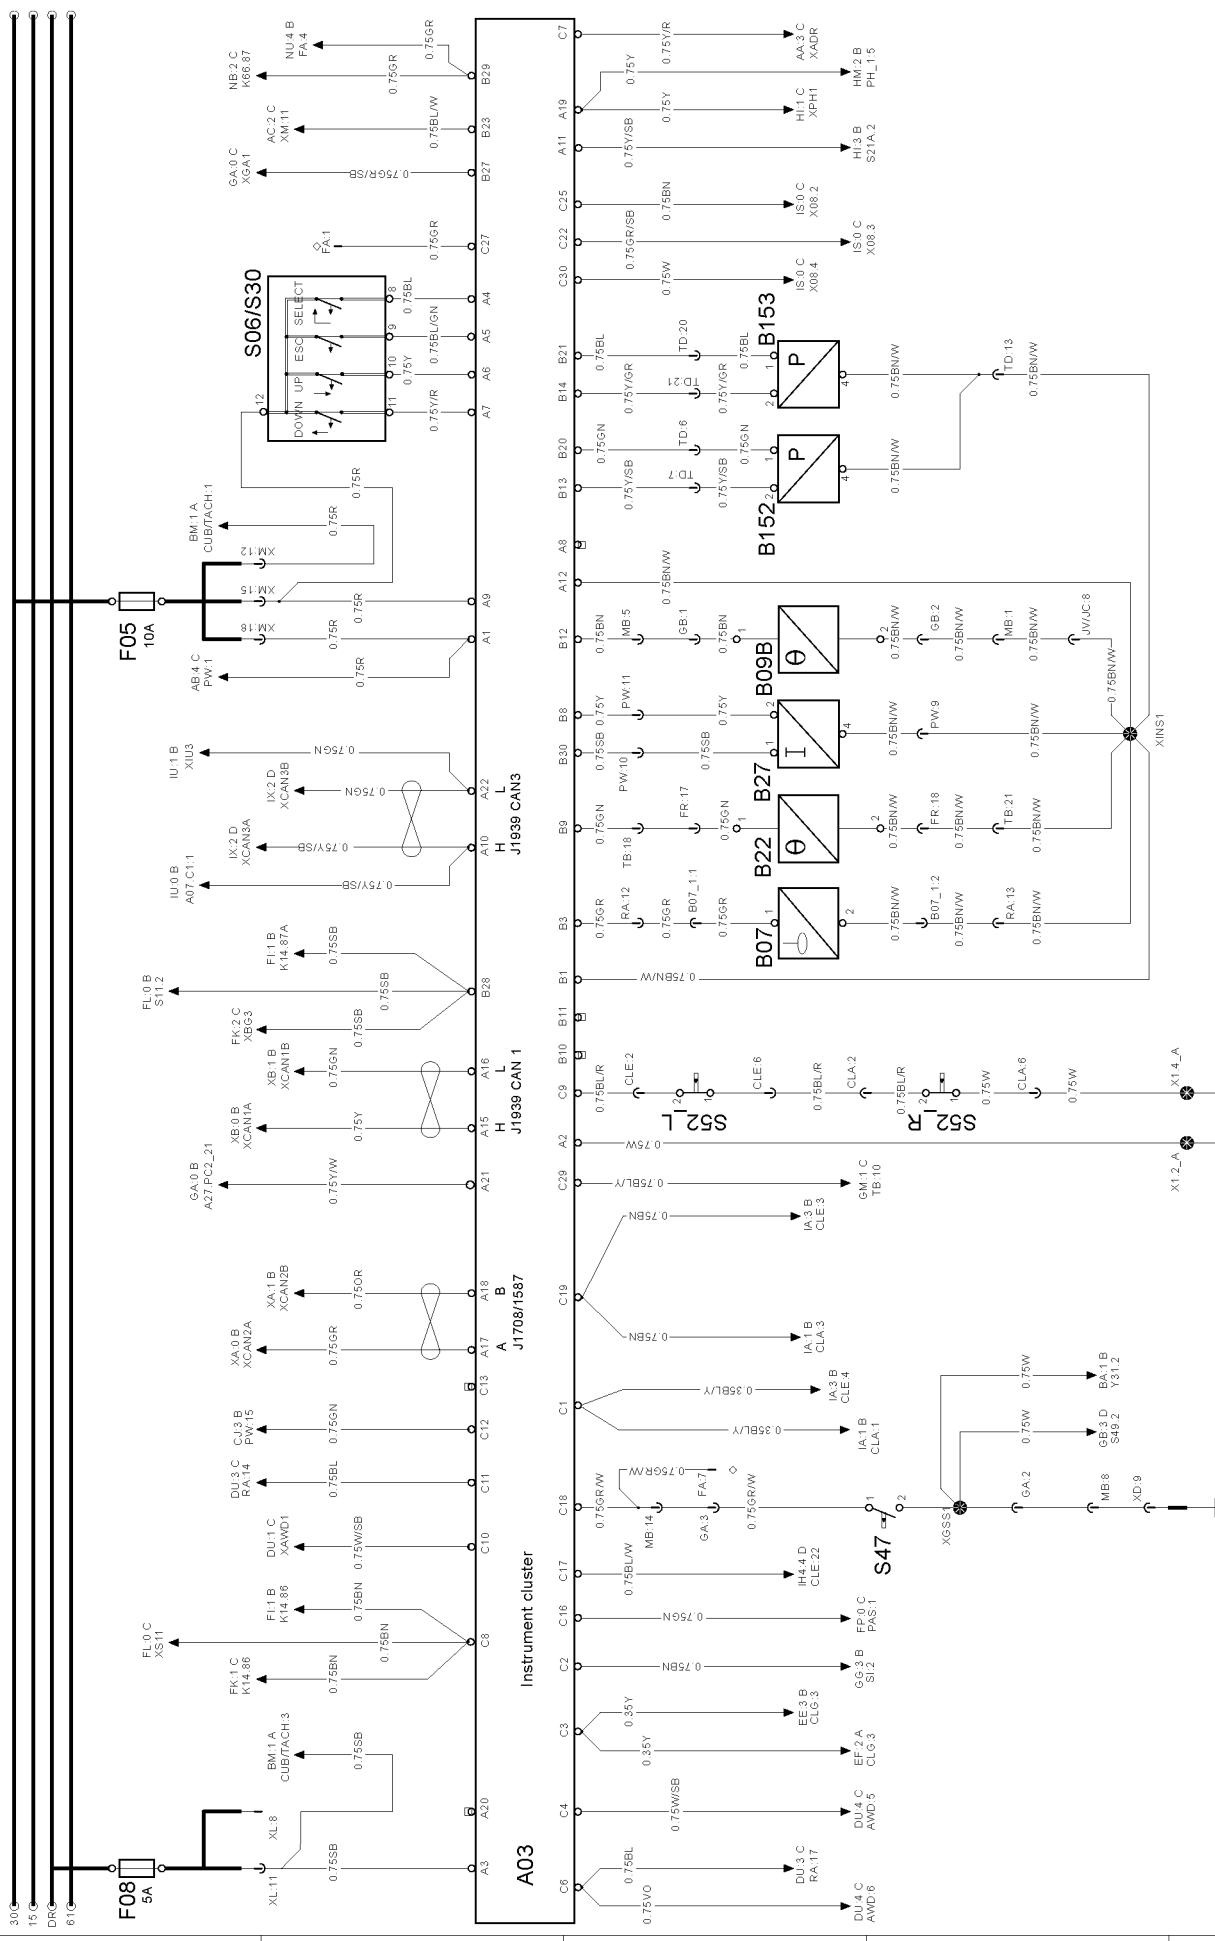


T3059892

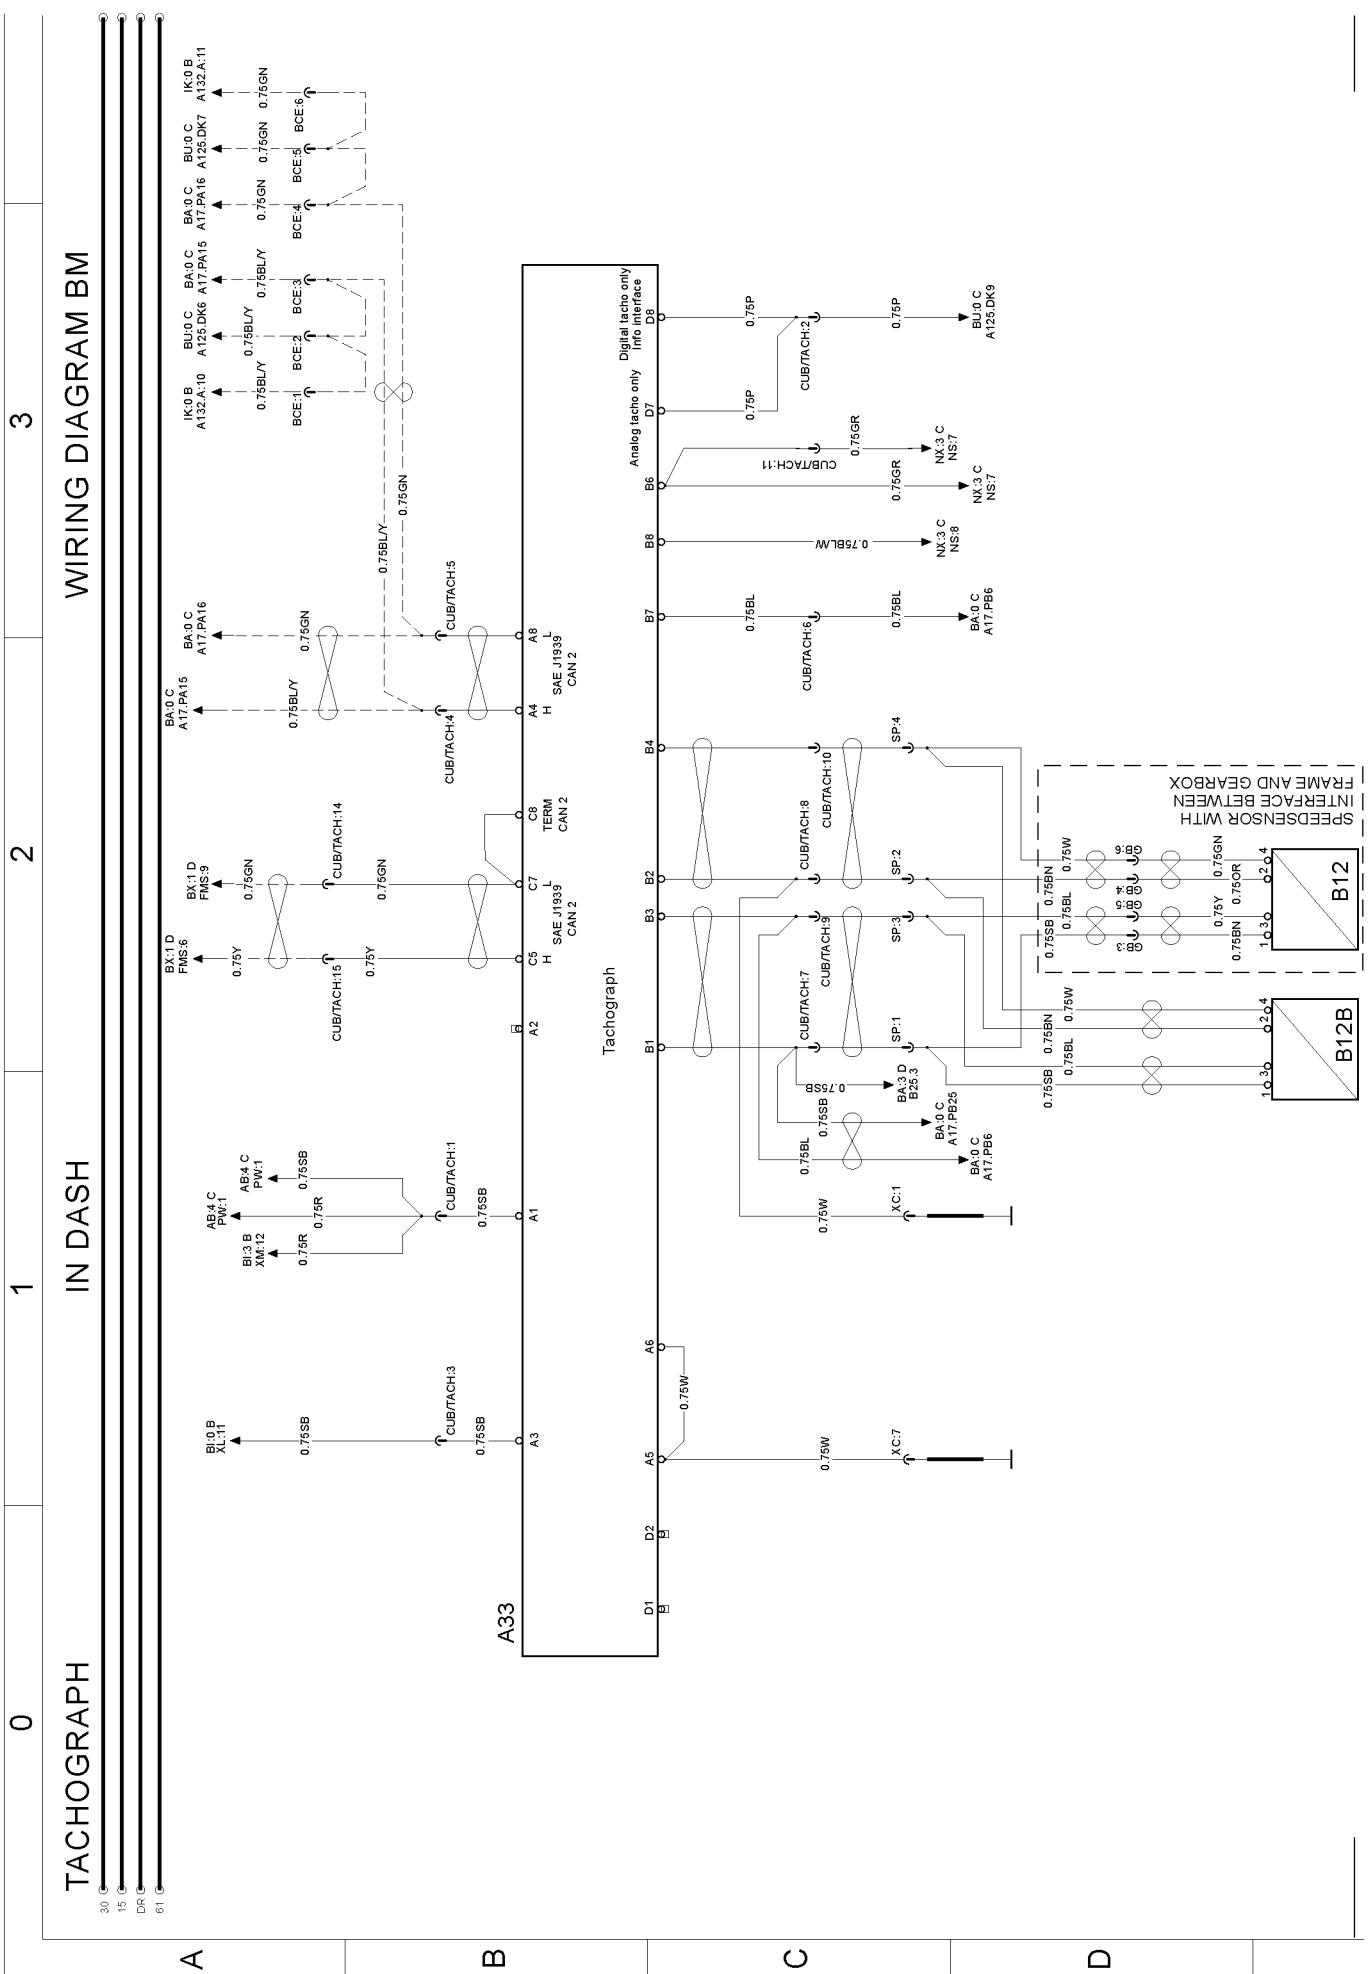


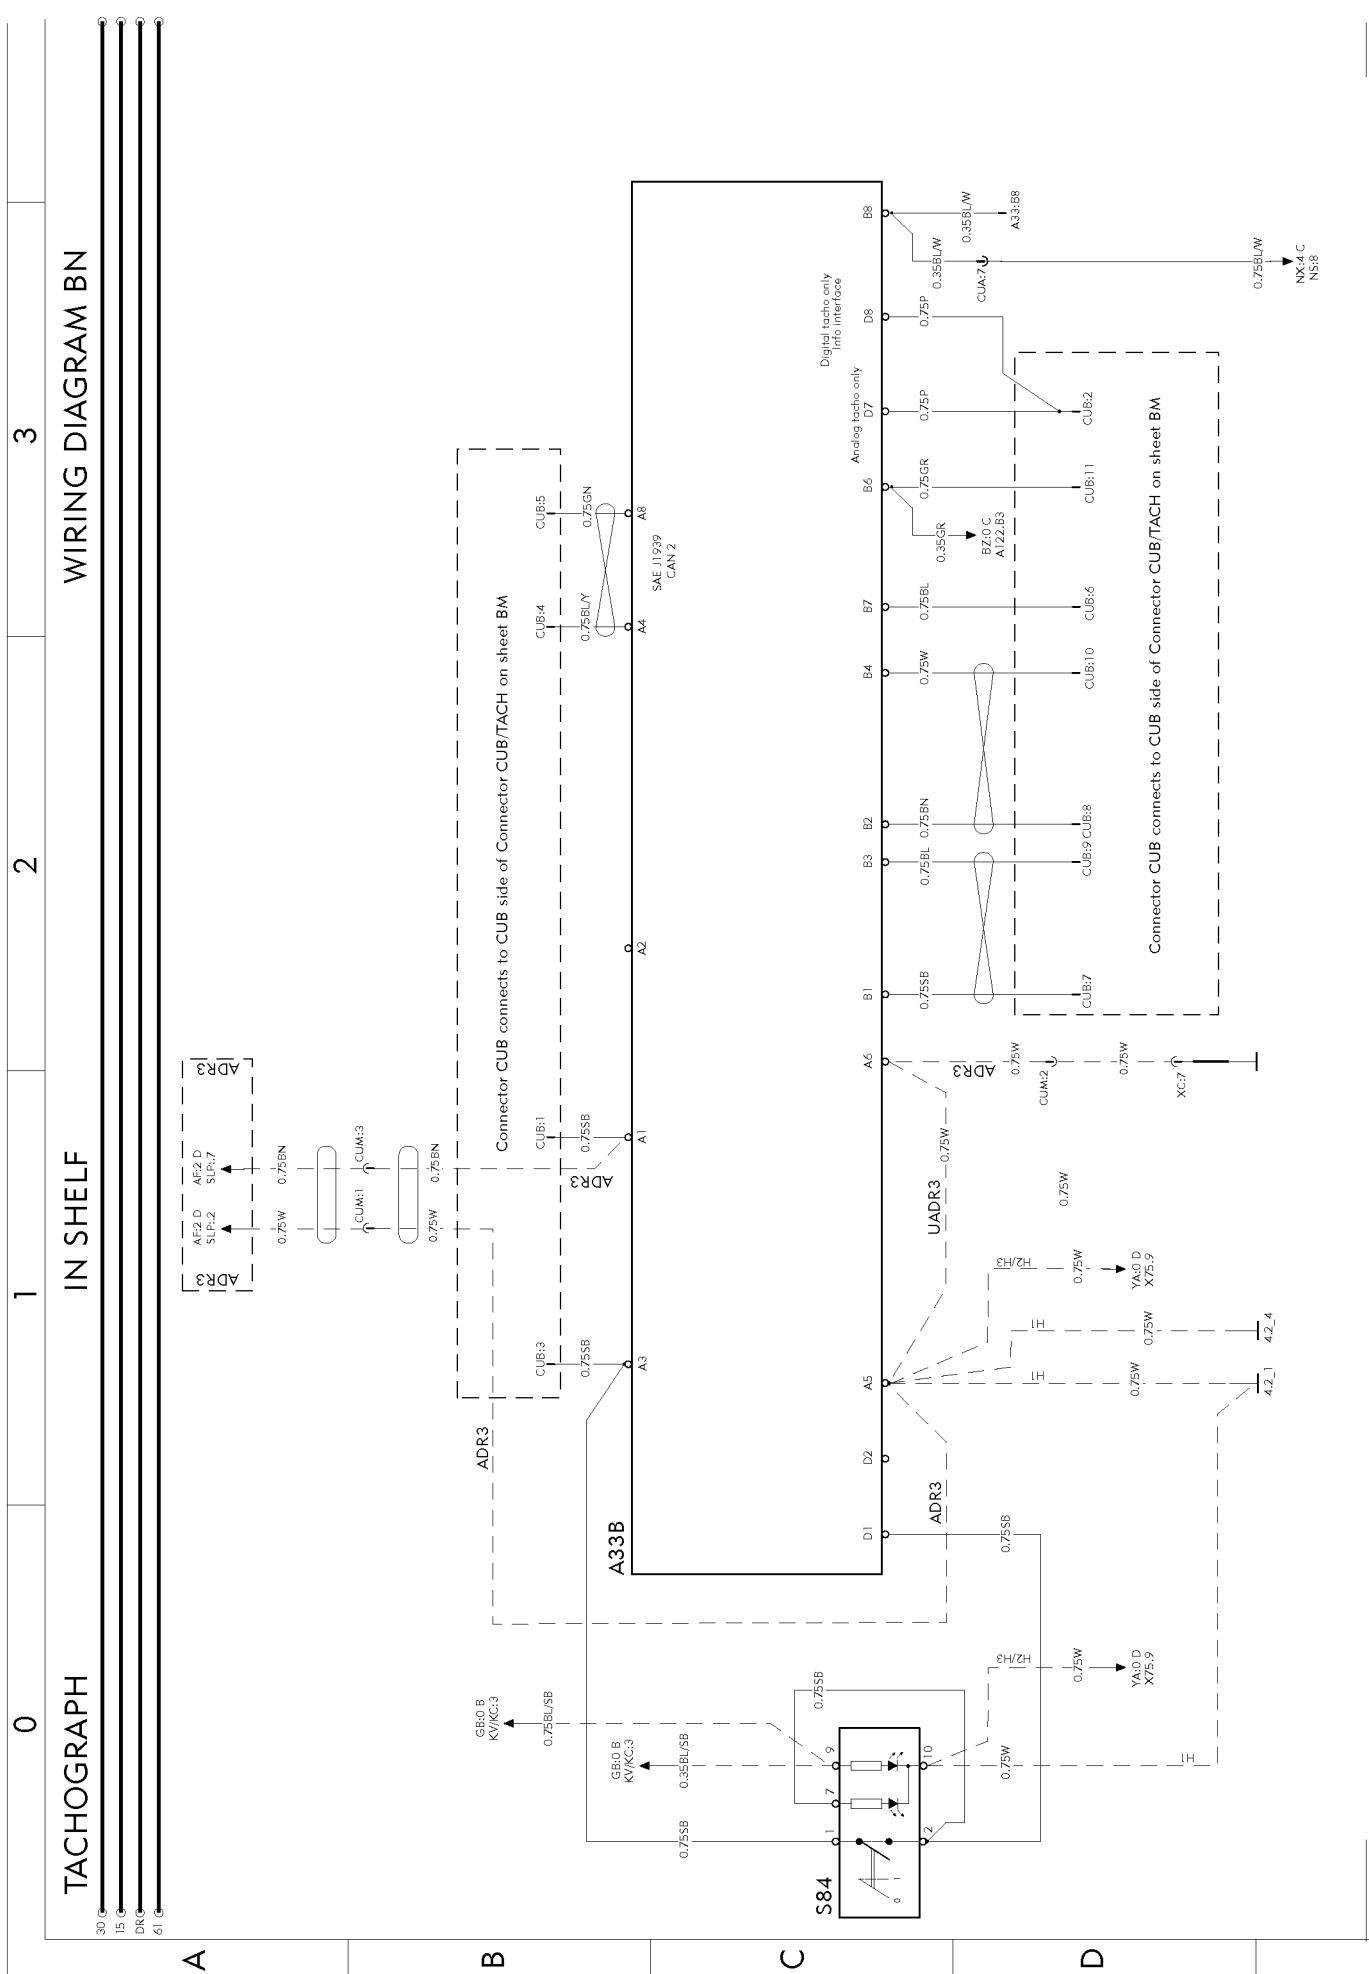

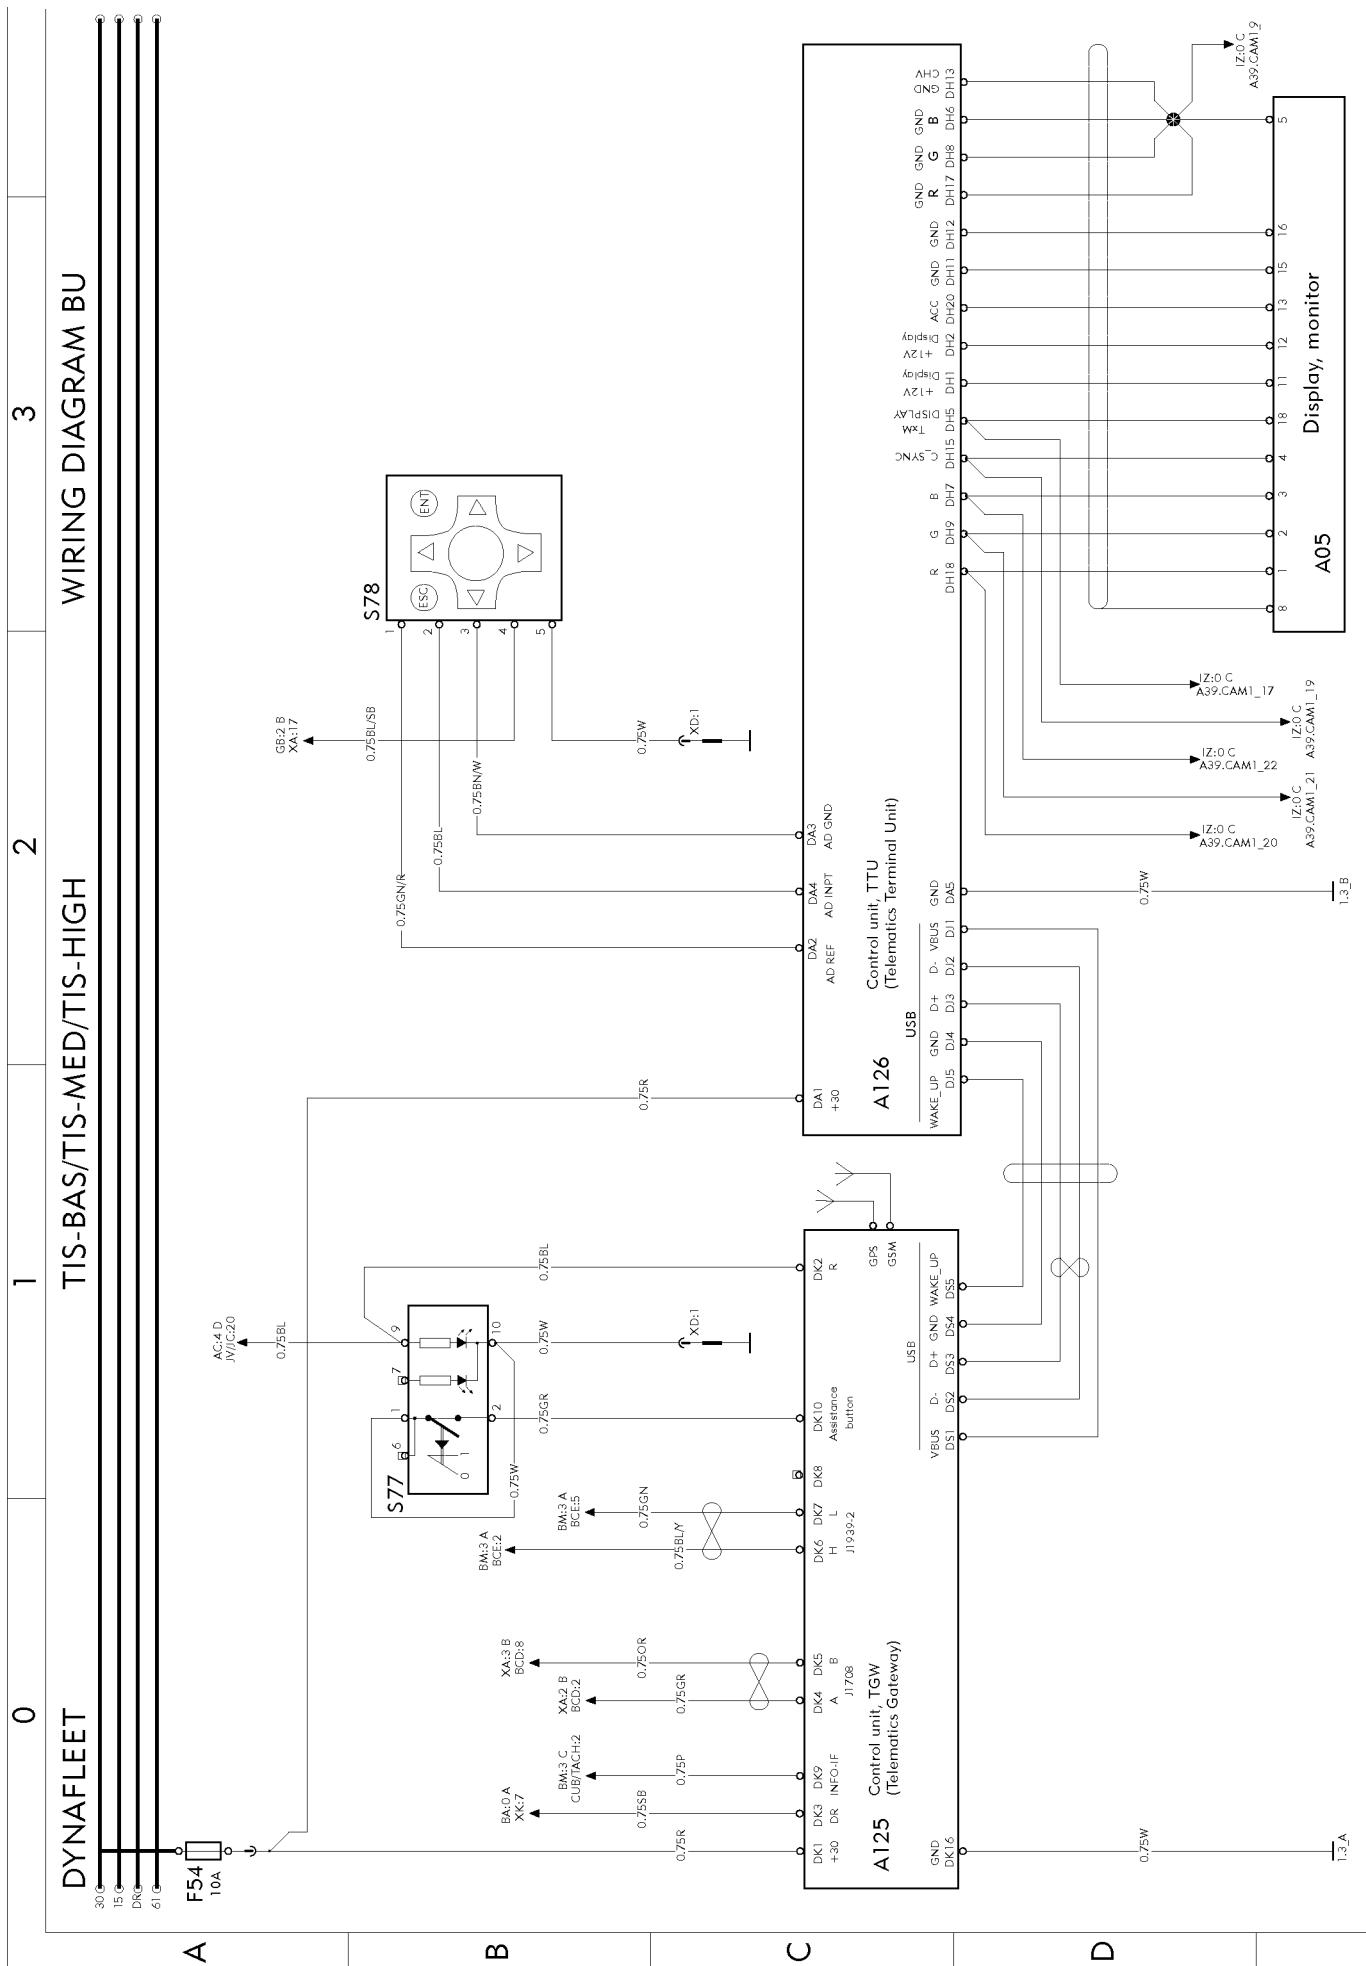



T3021438

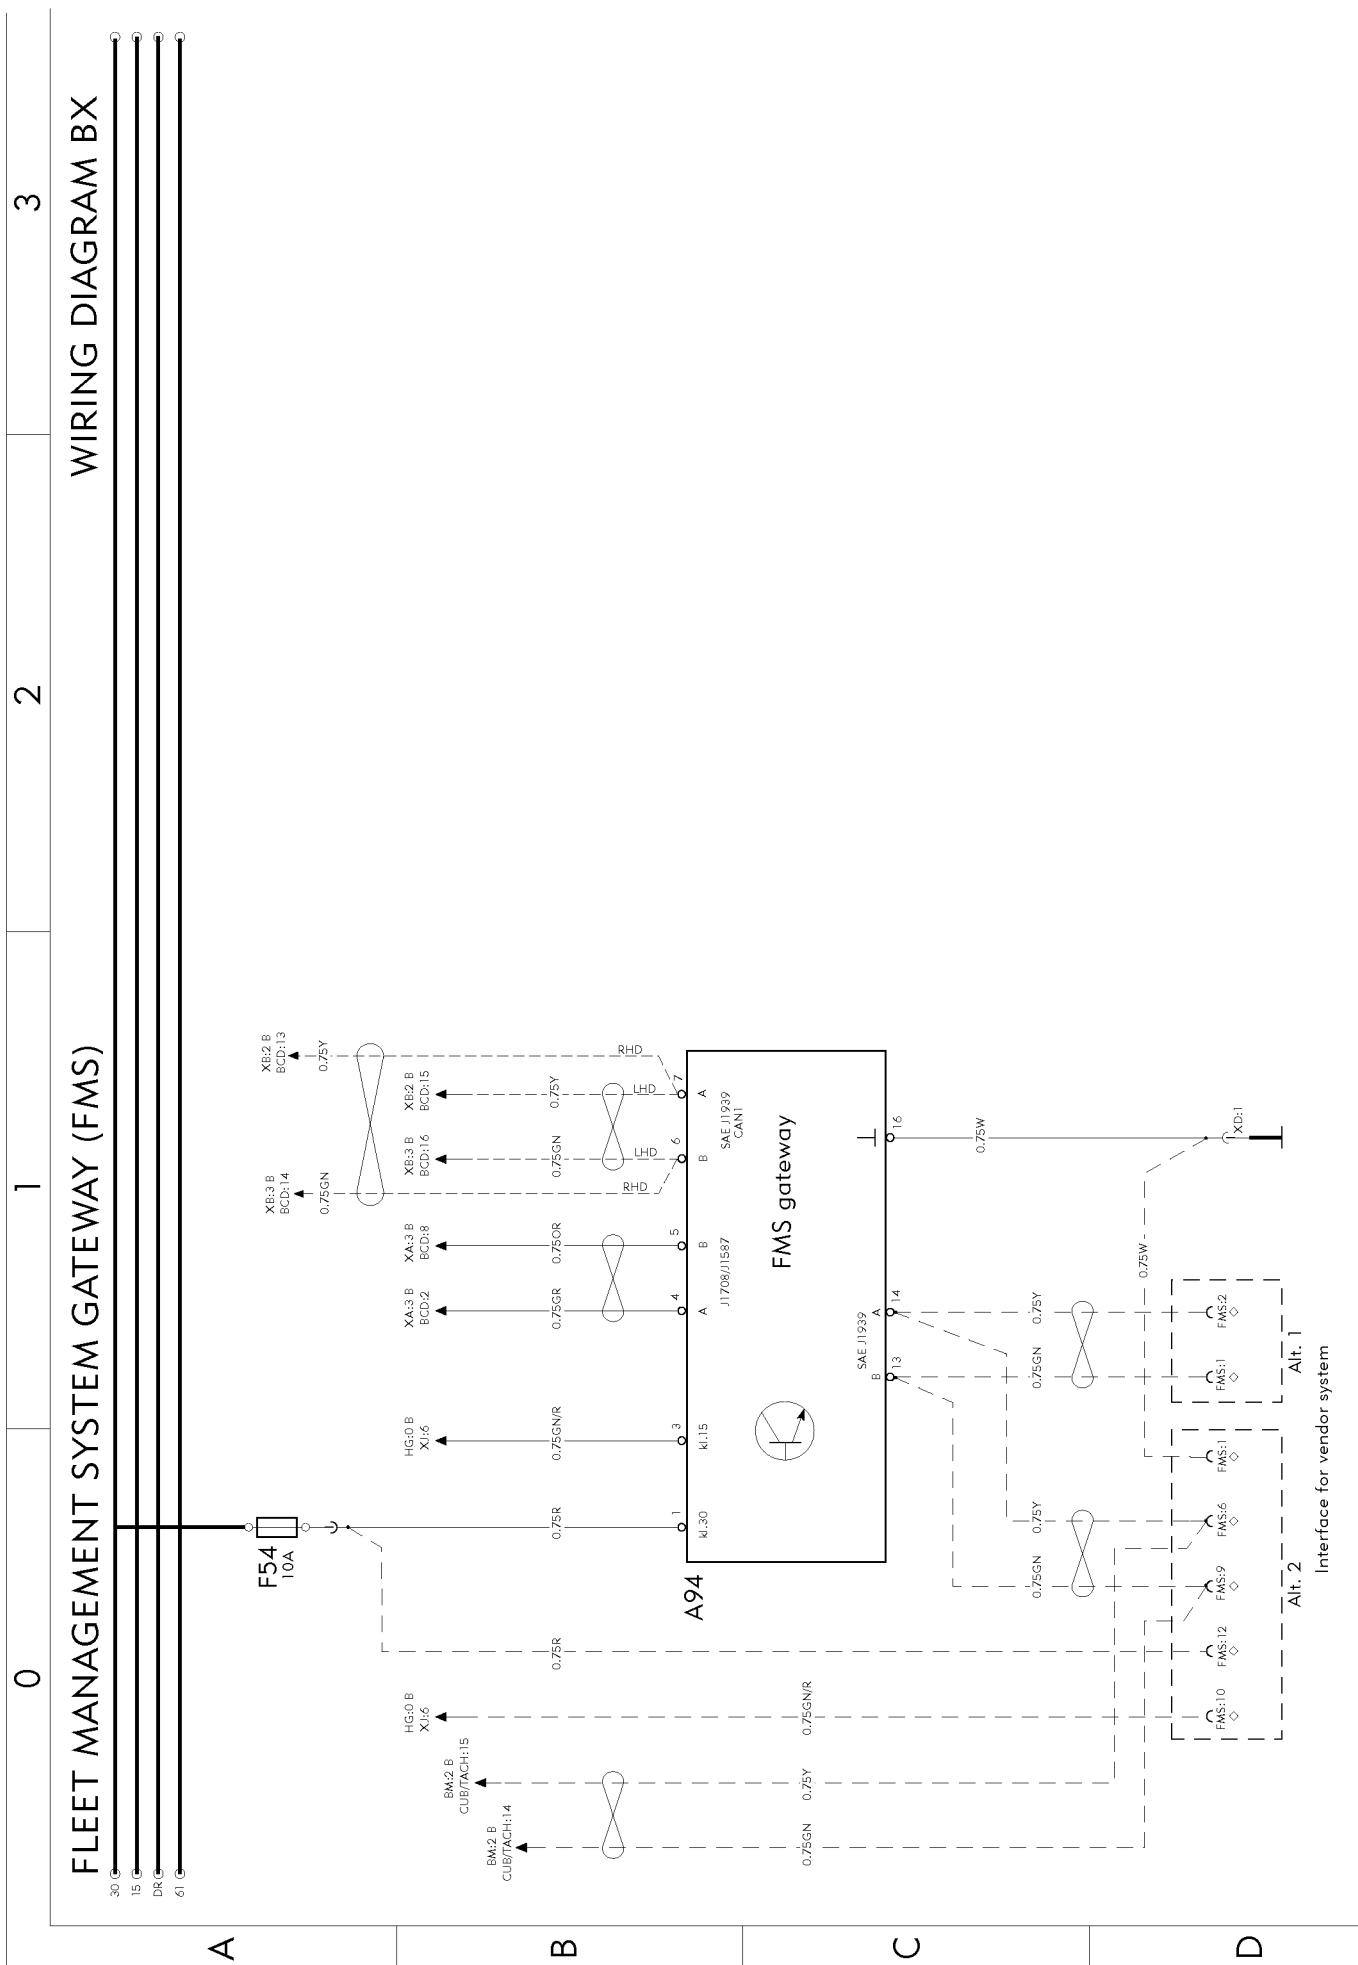


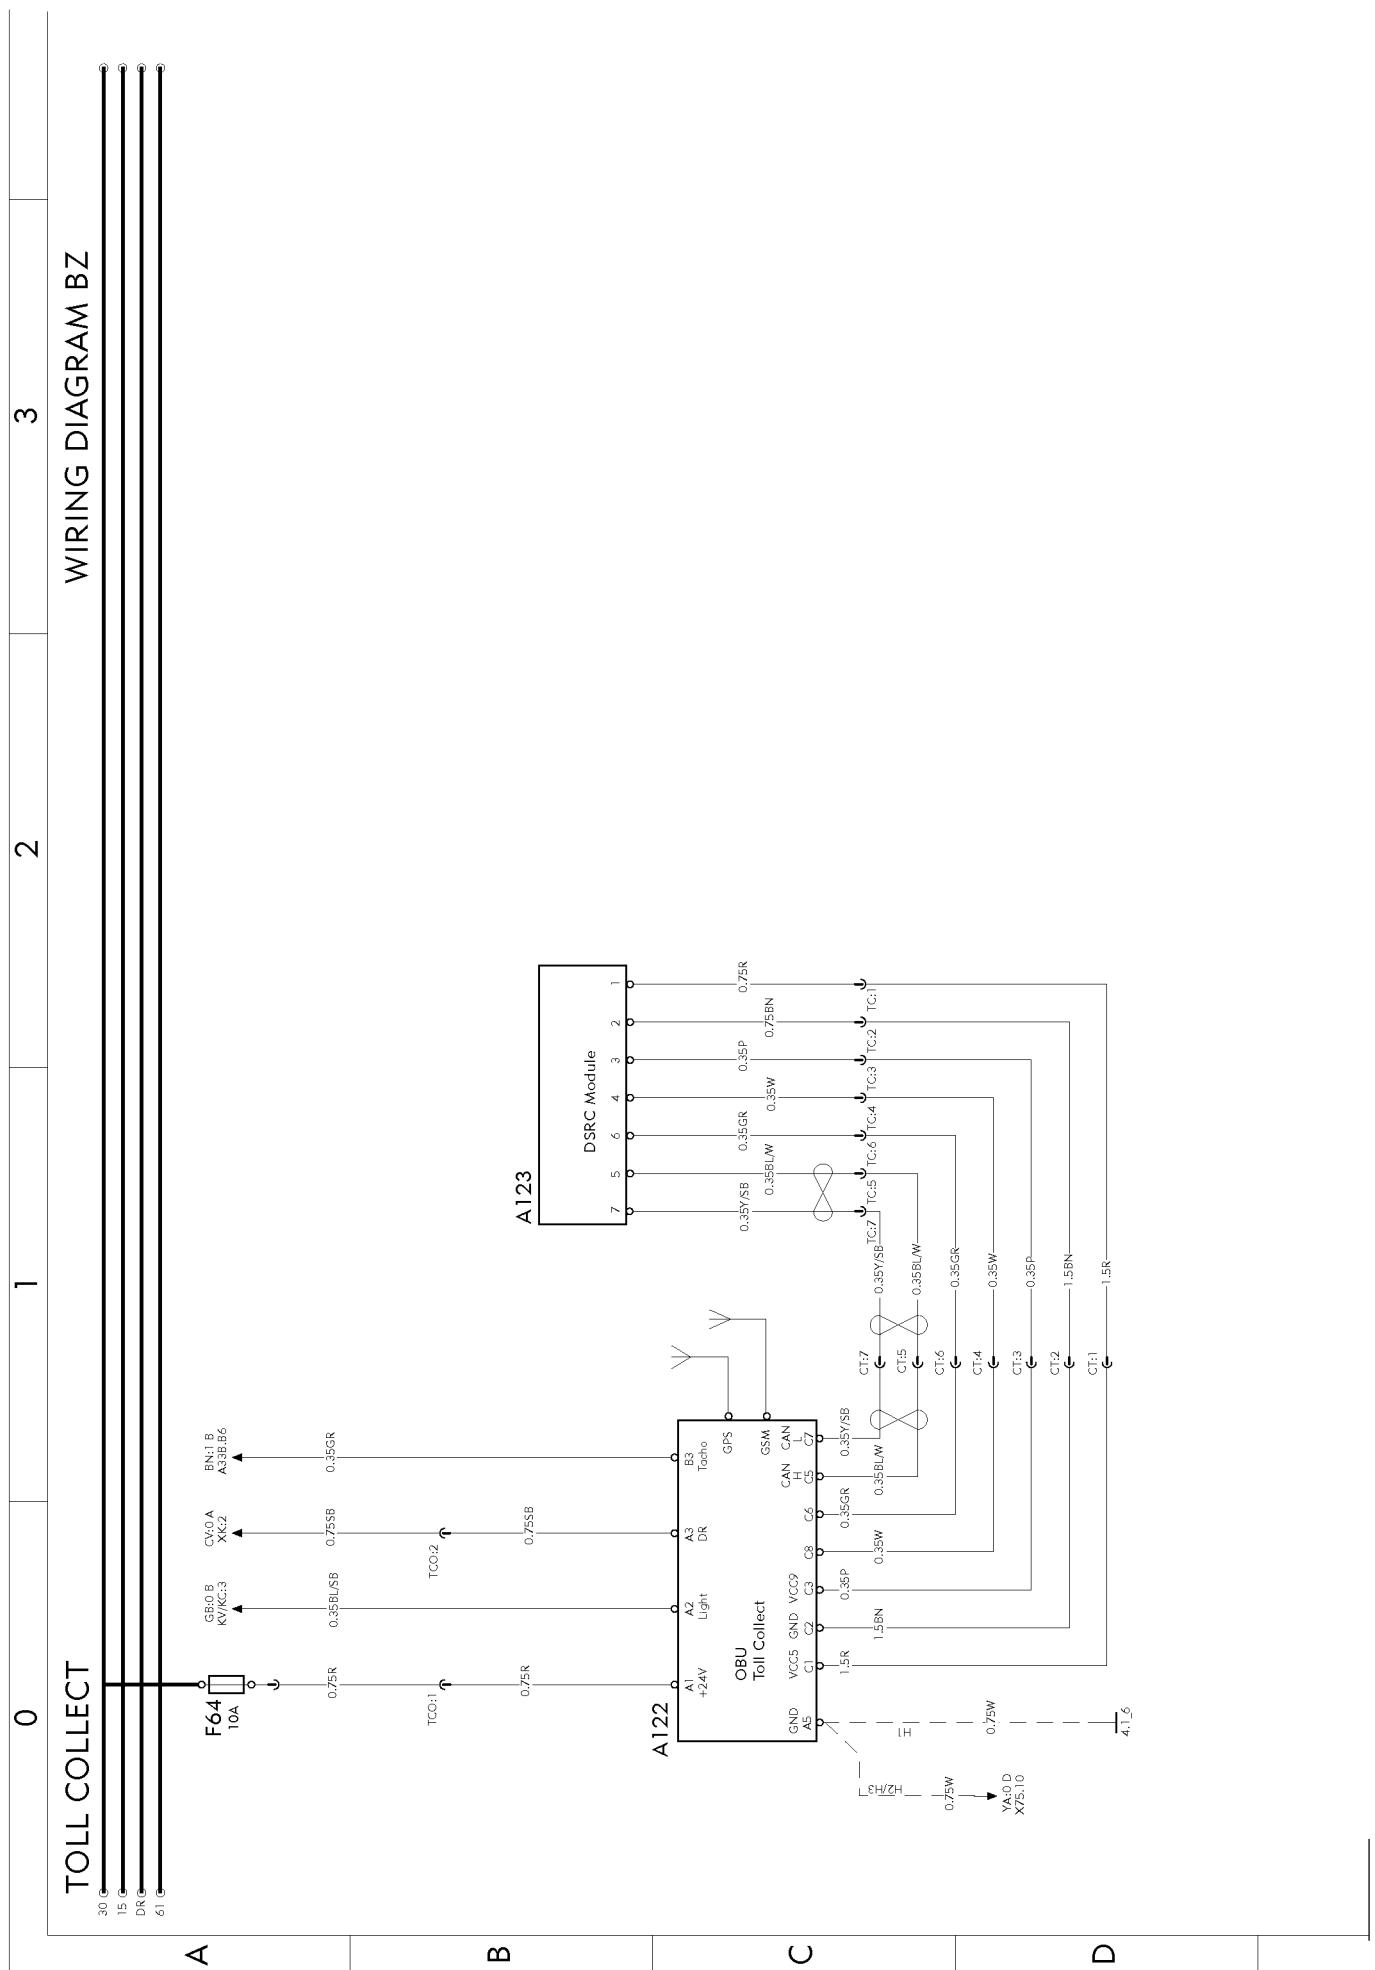



T3056985

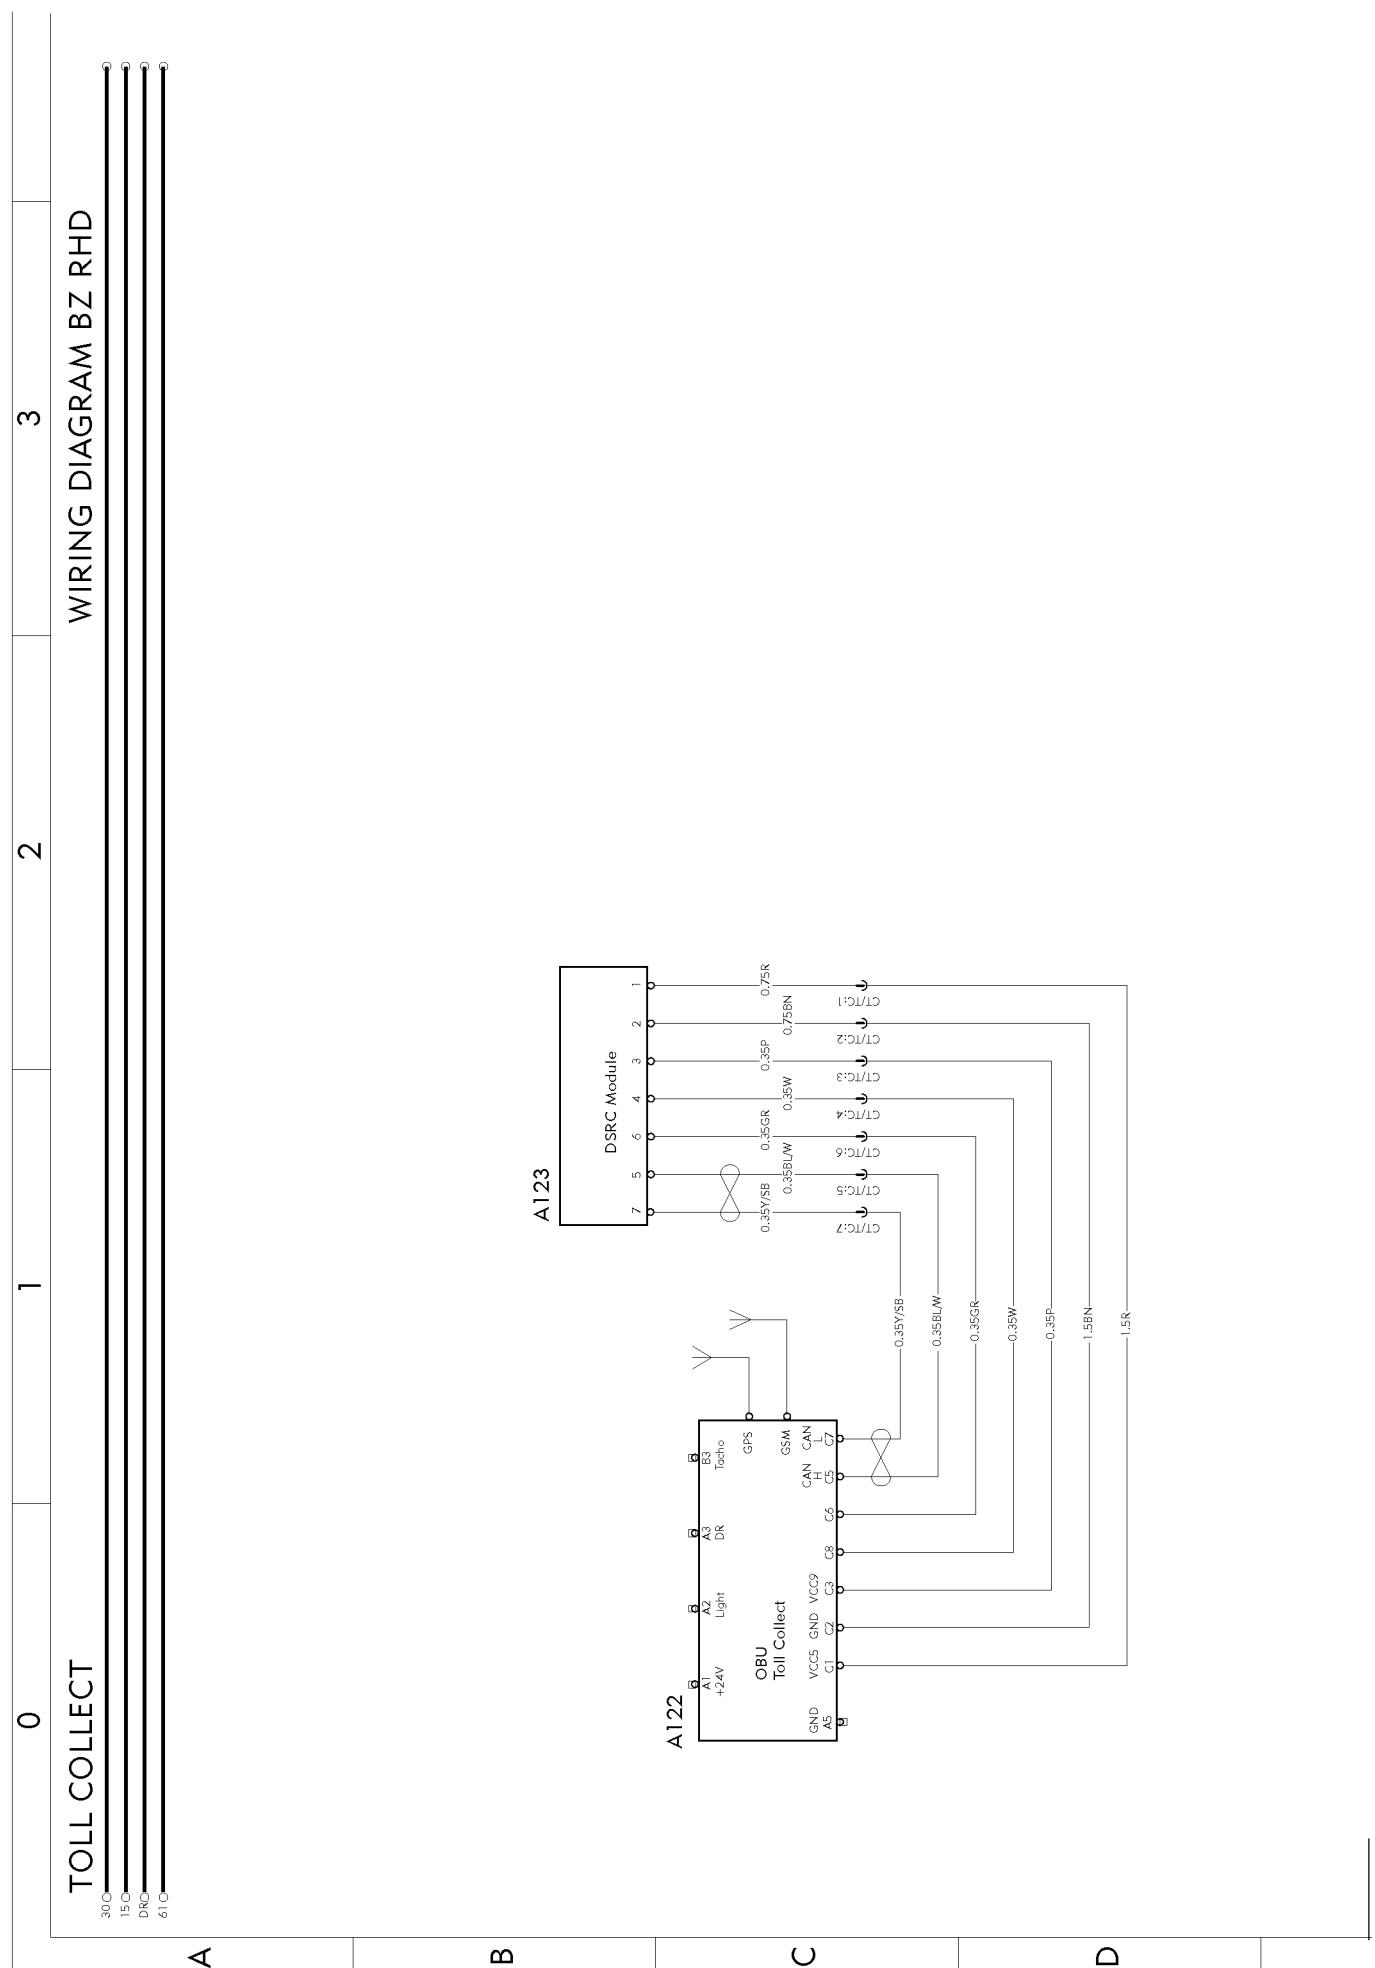

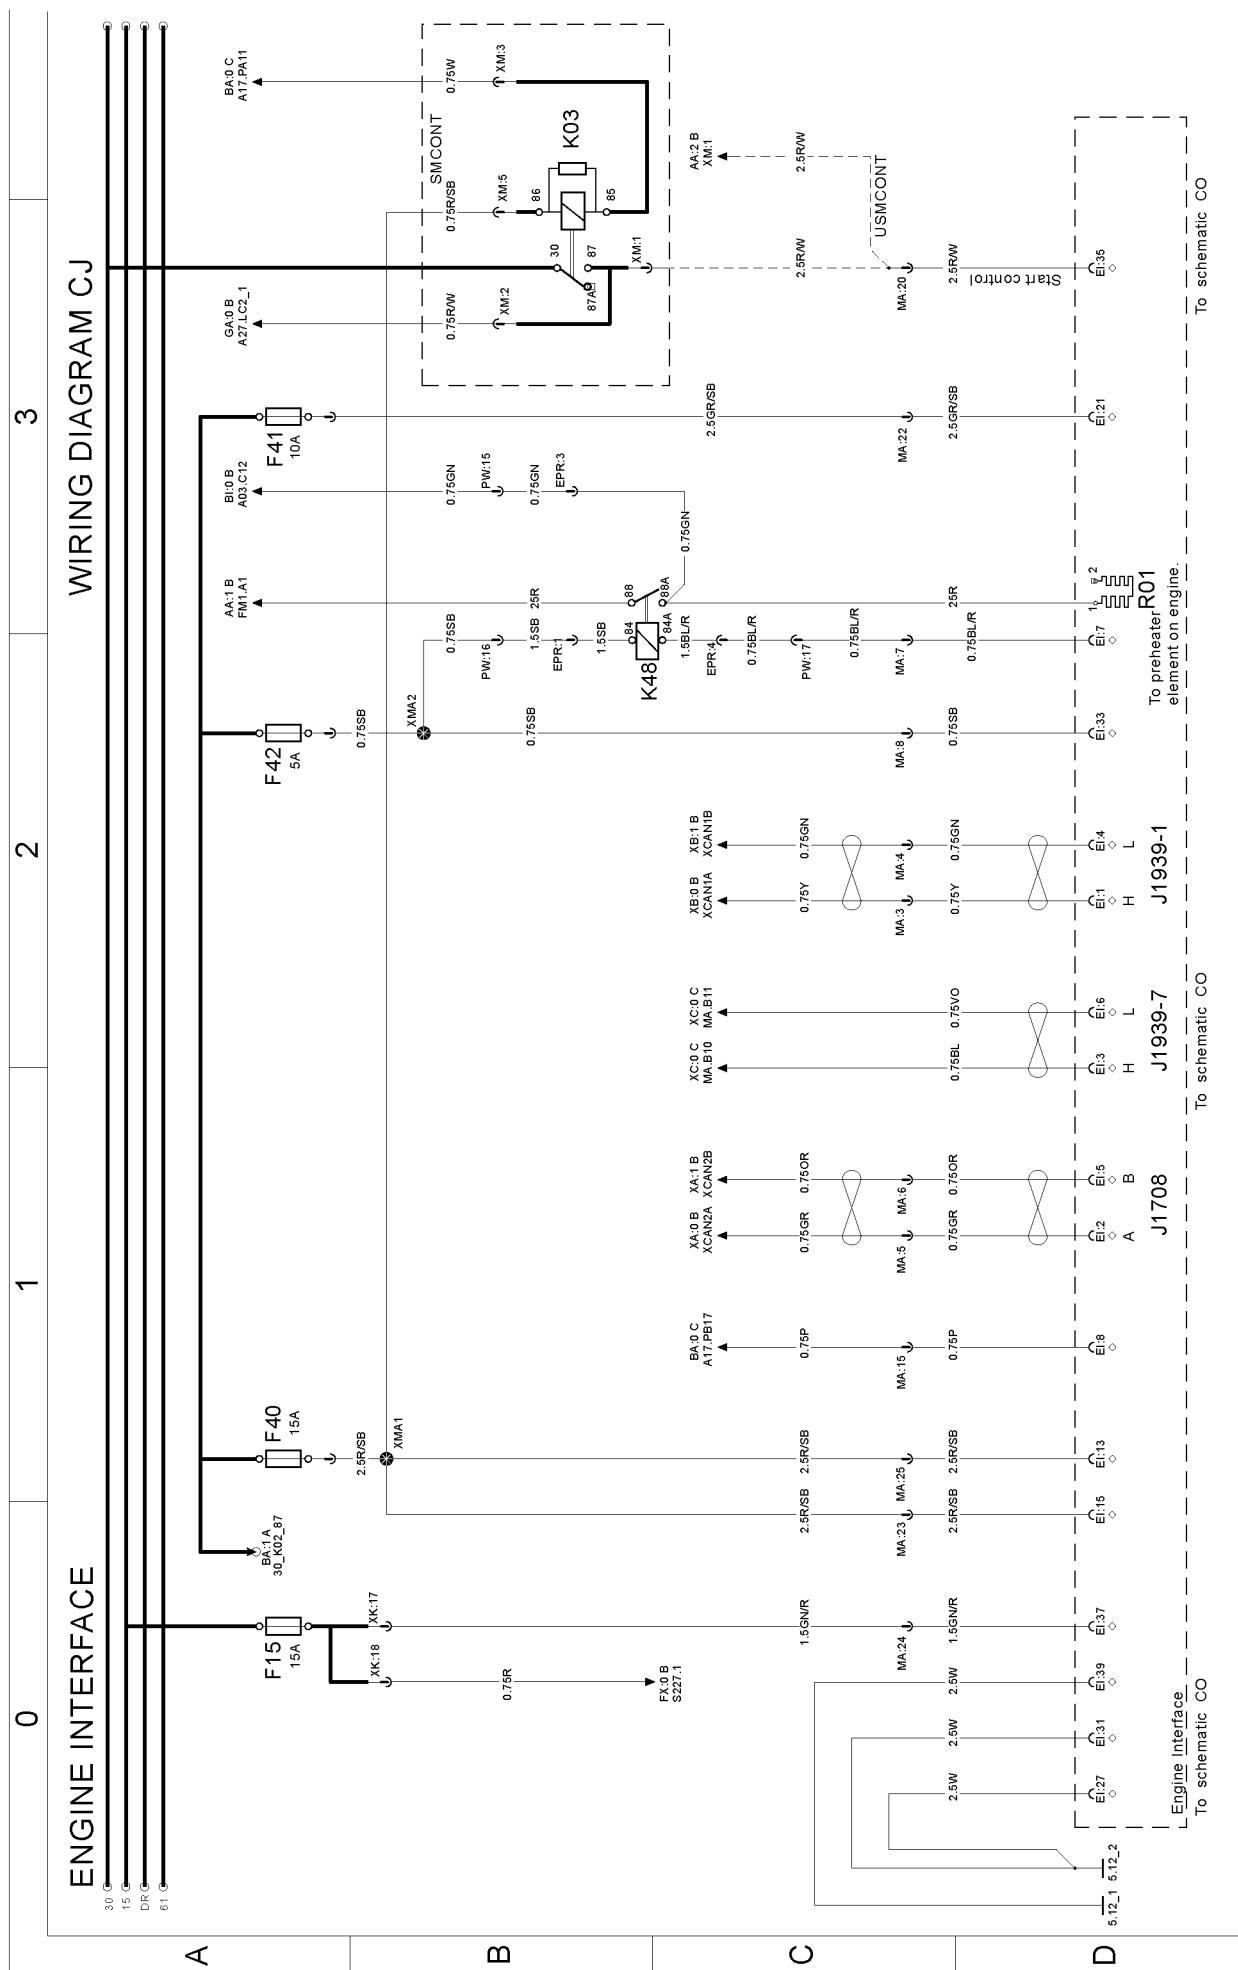


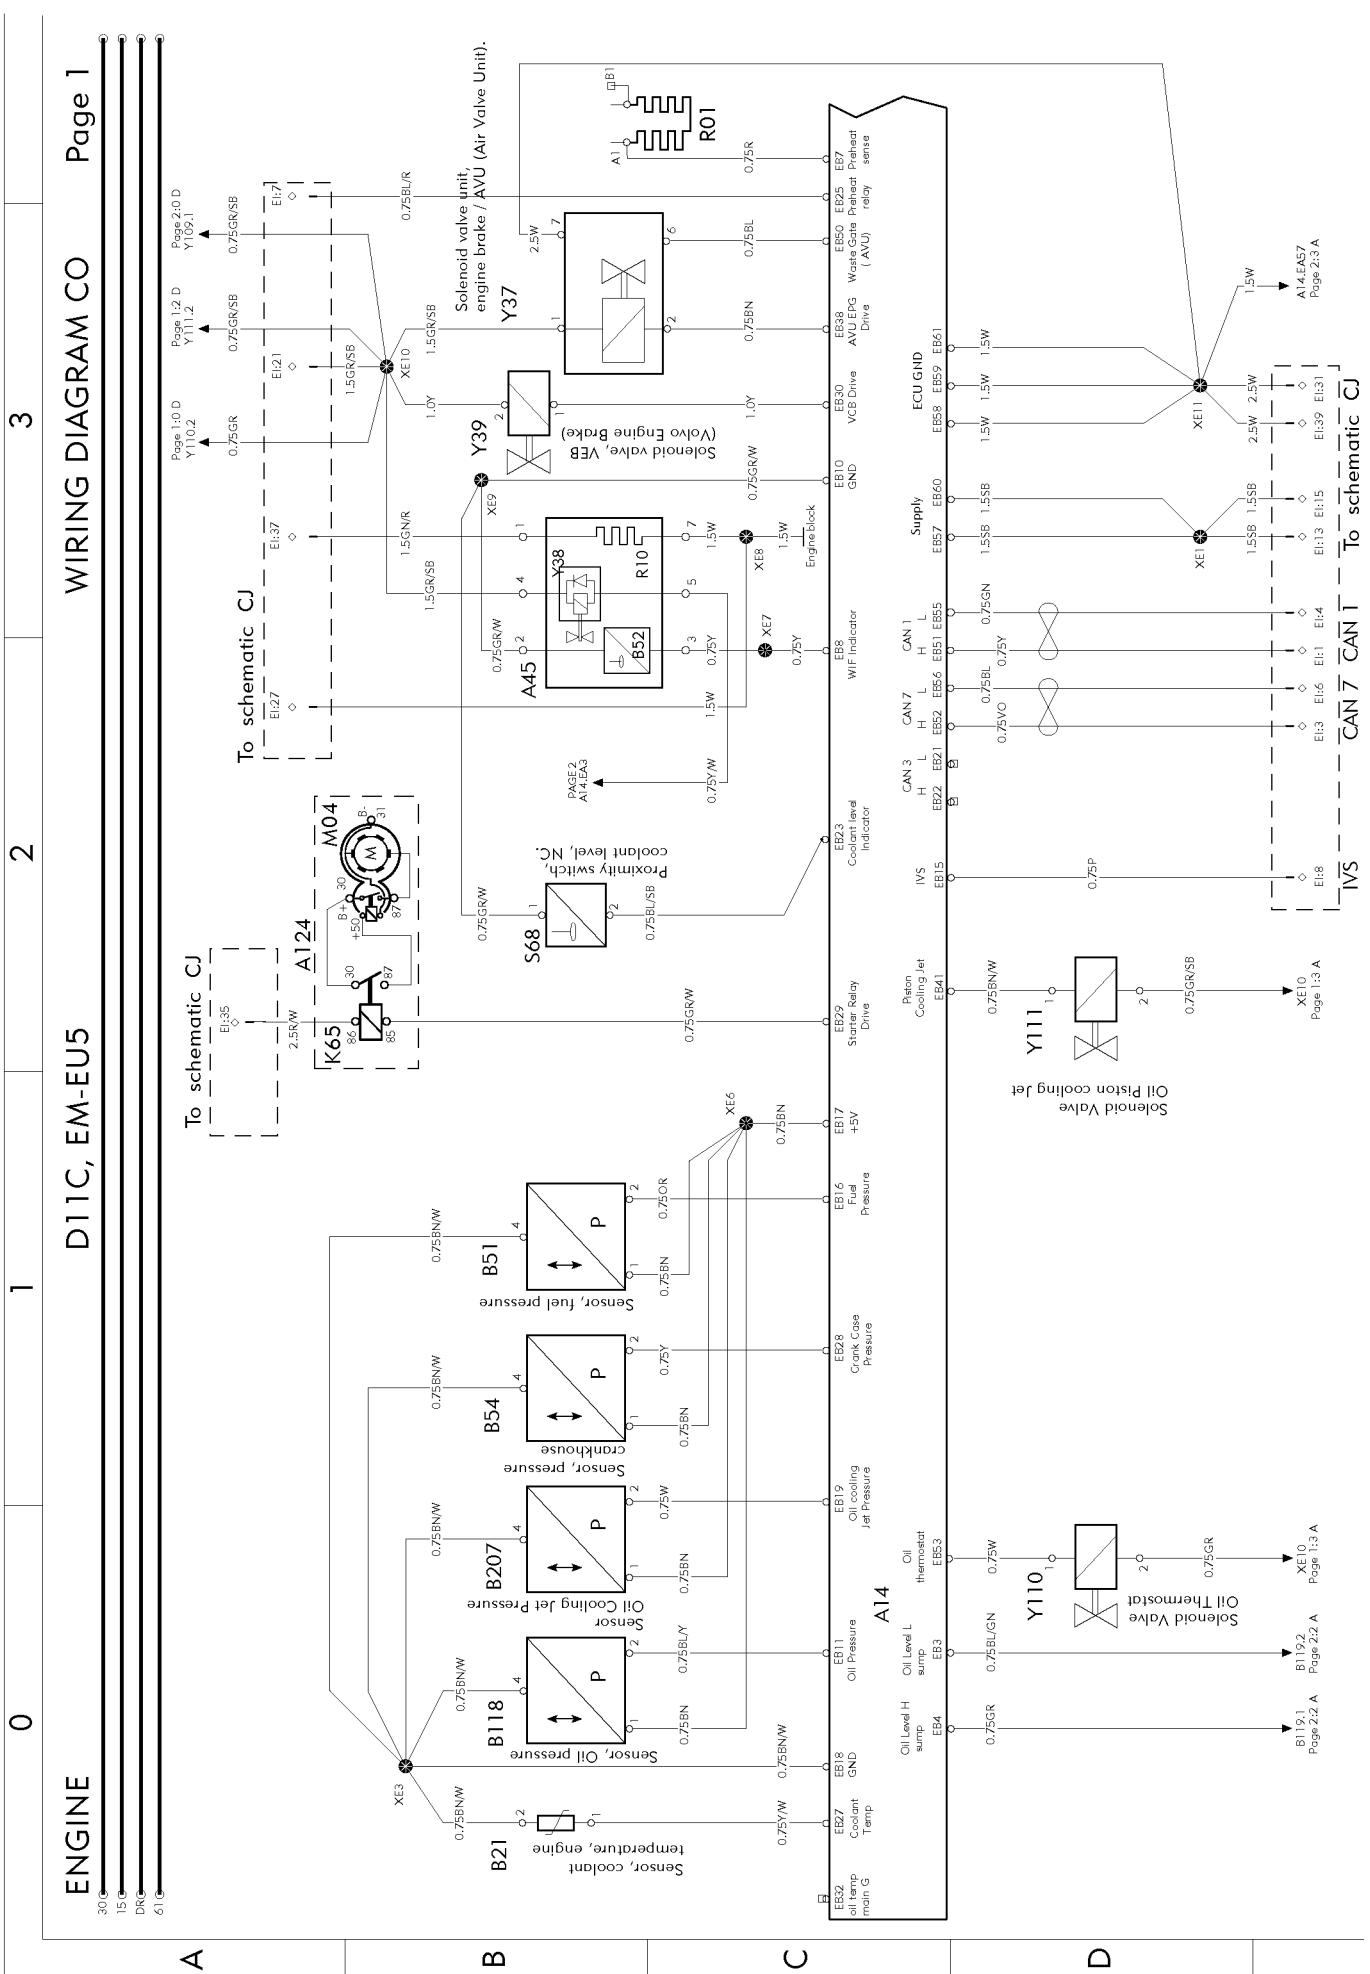


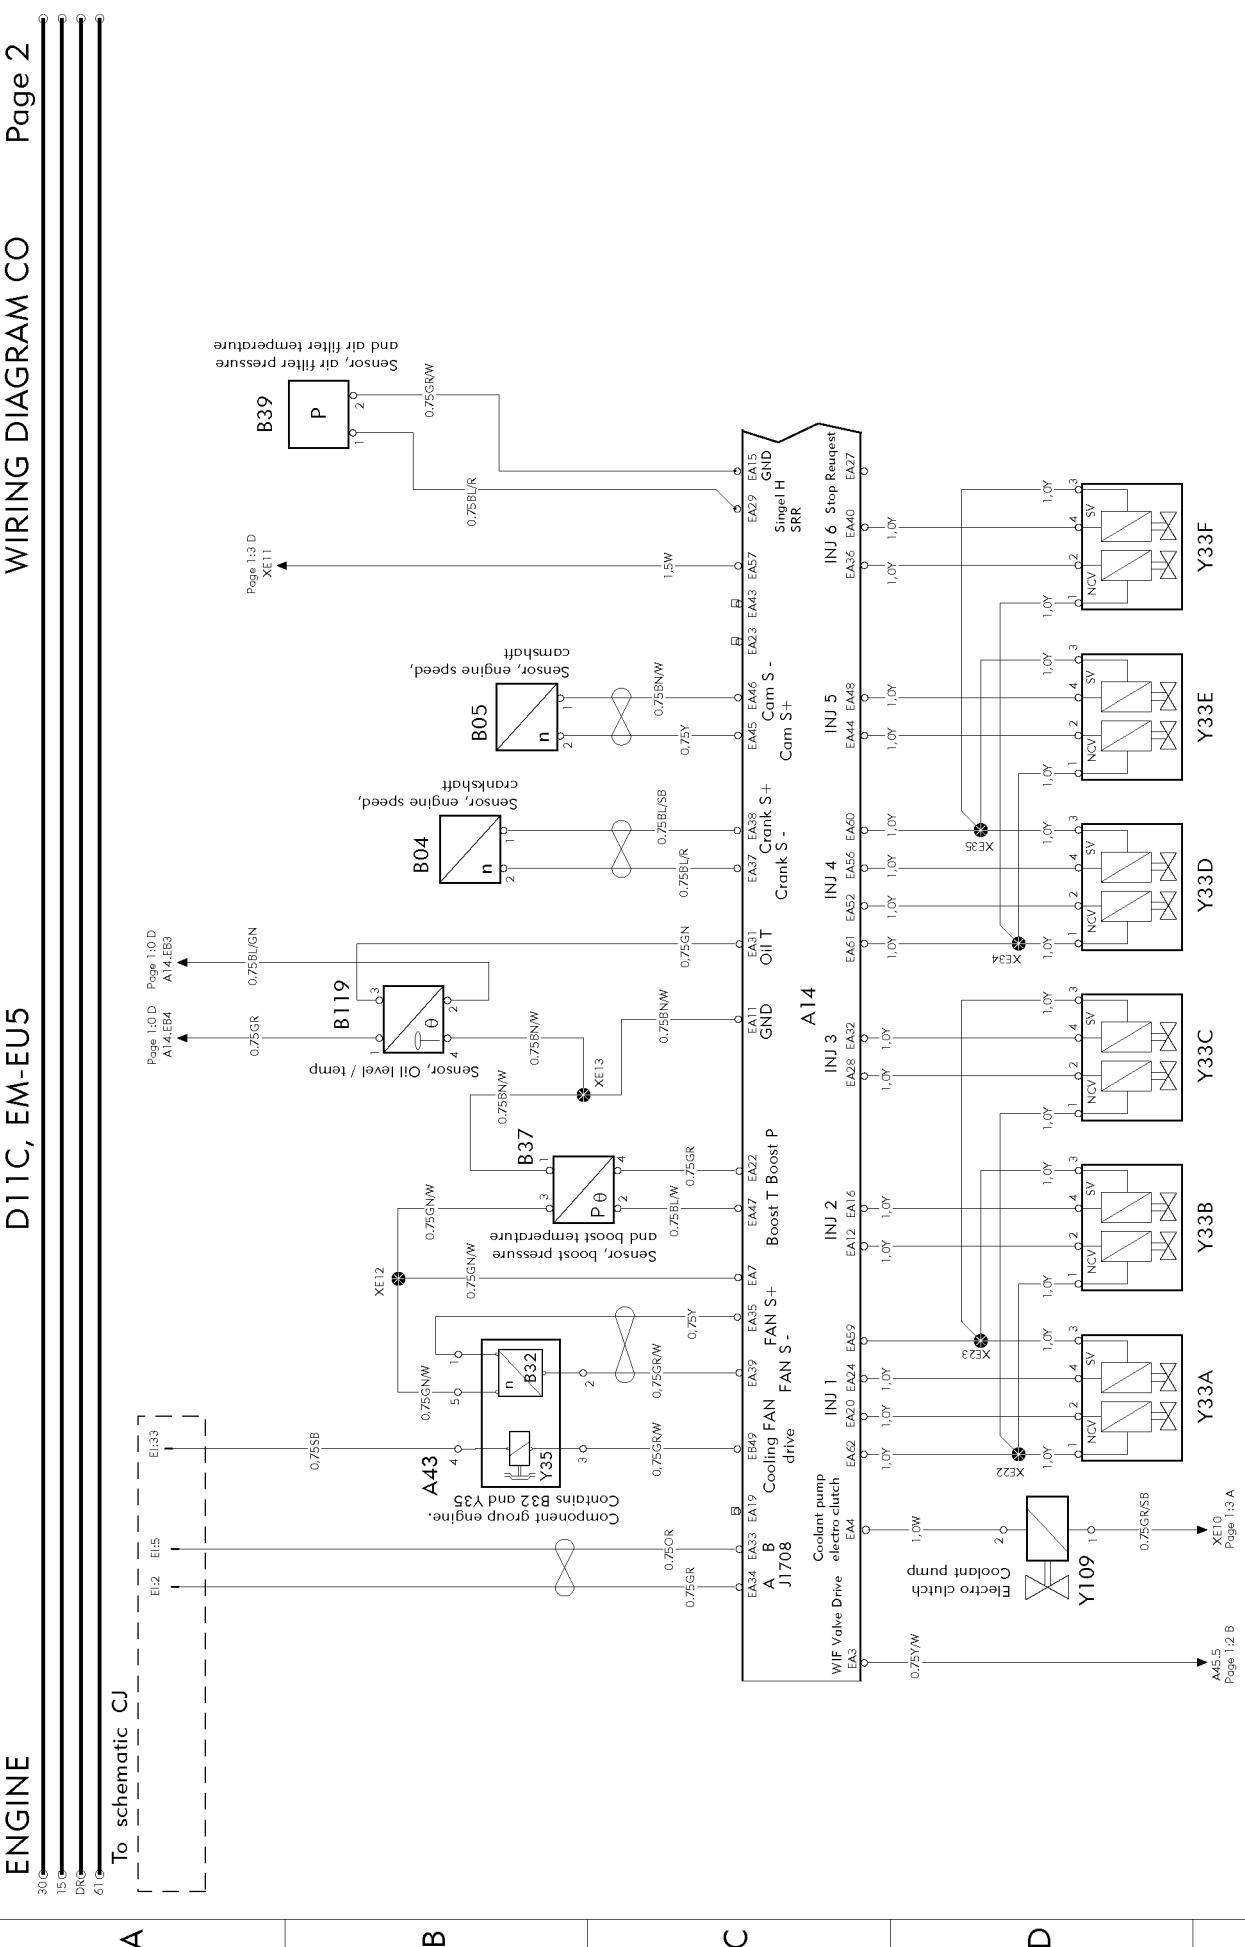


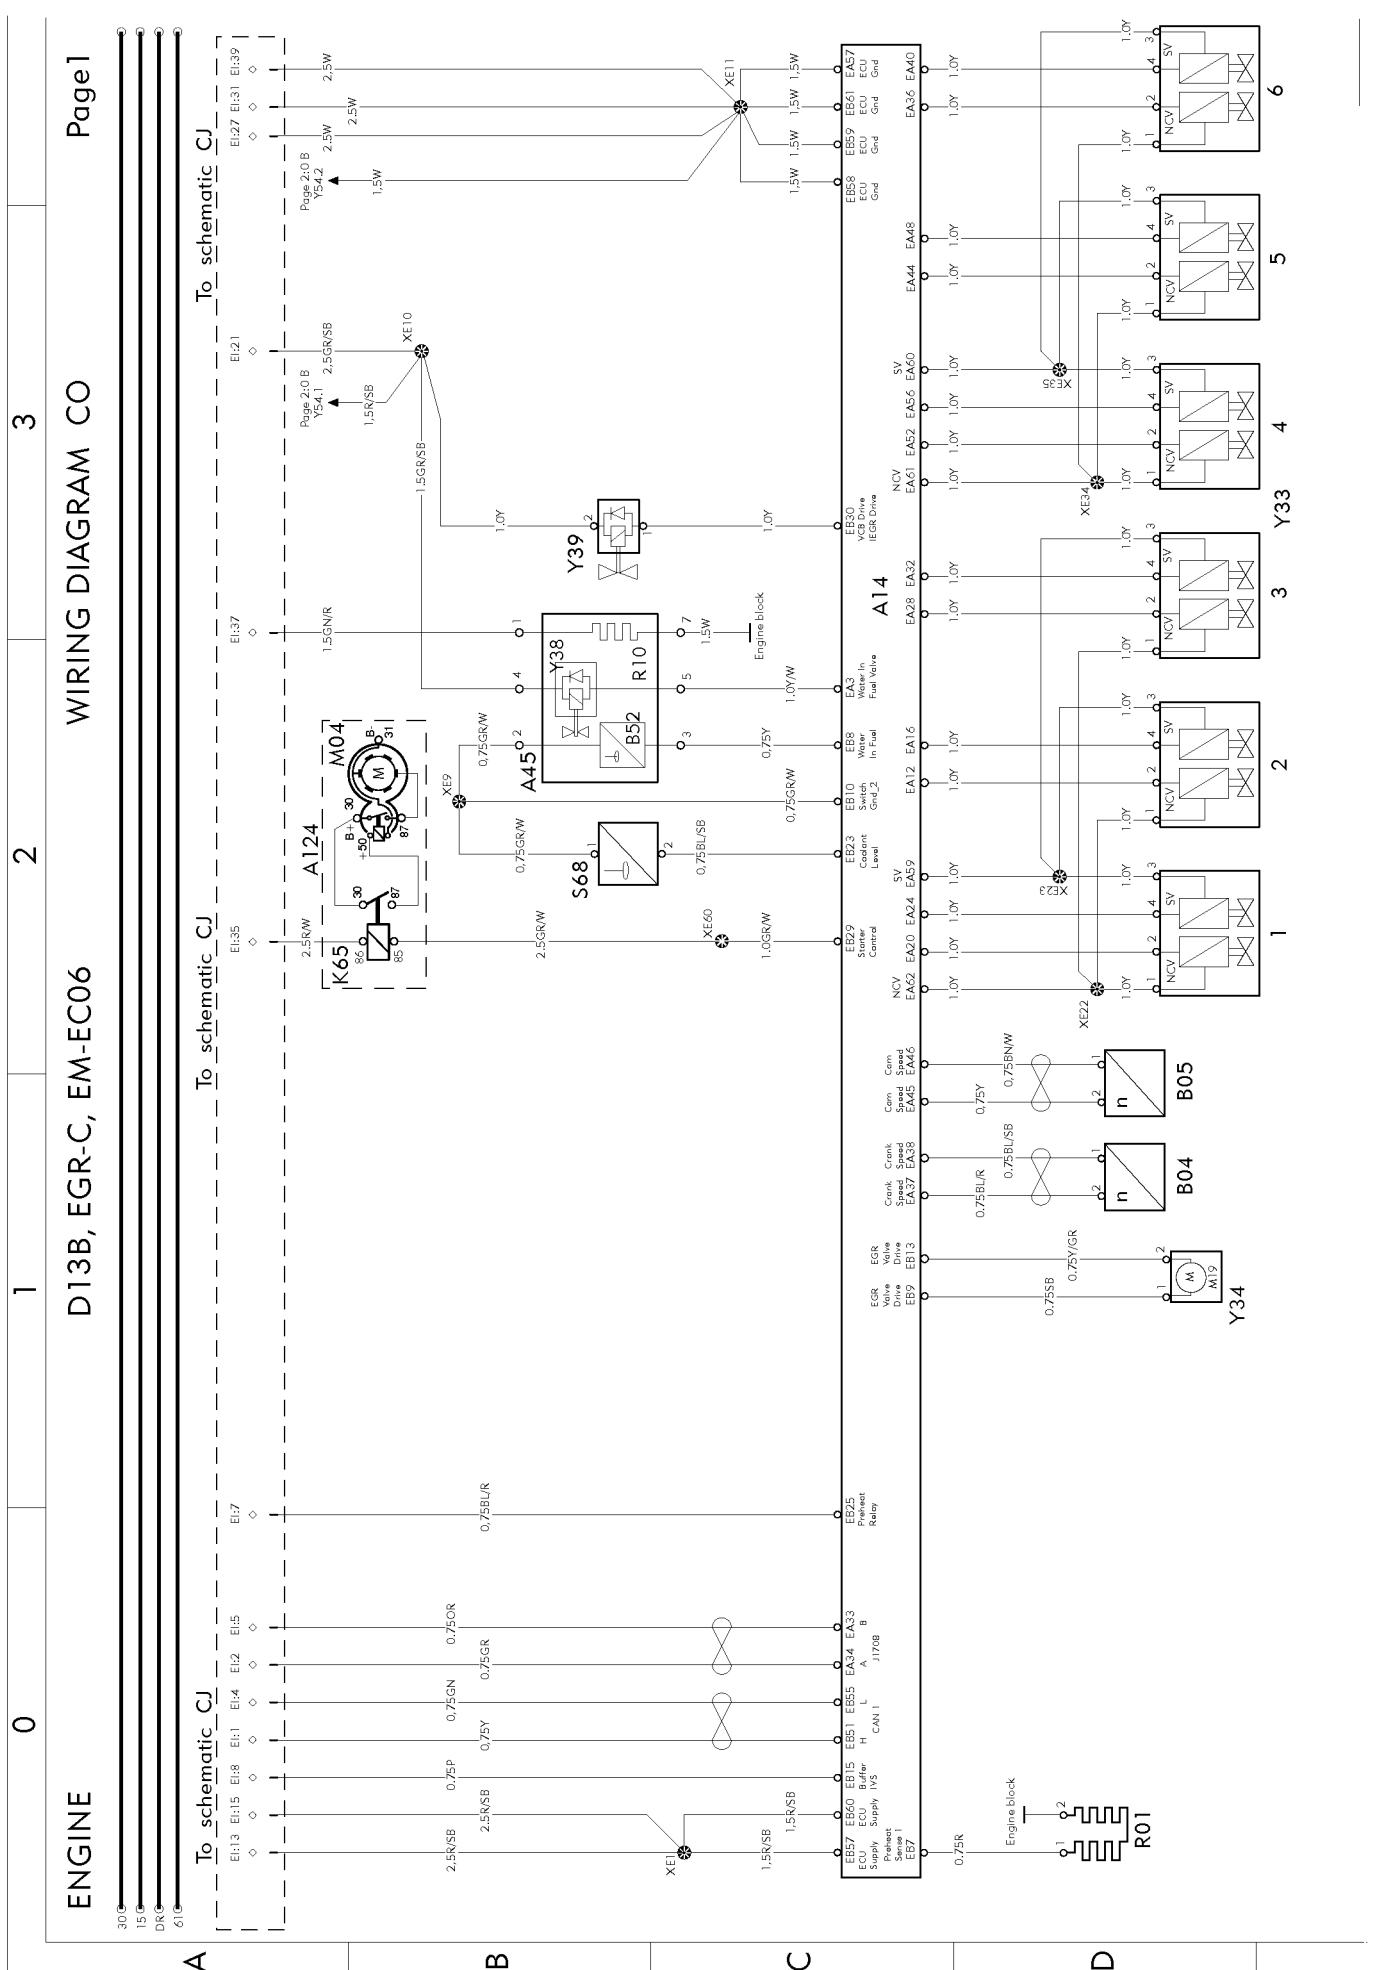


up 37 Wiring diagram FM

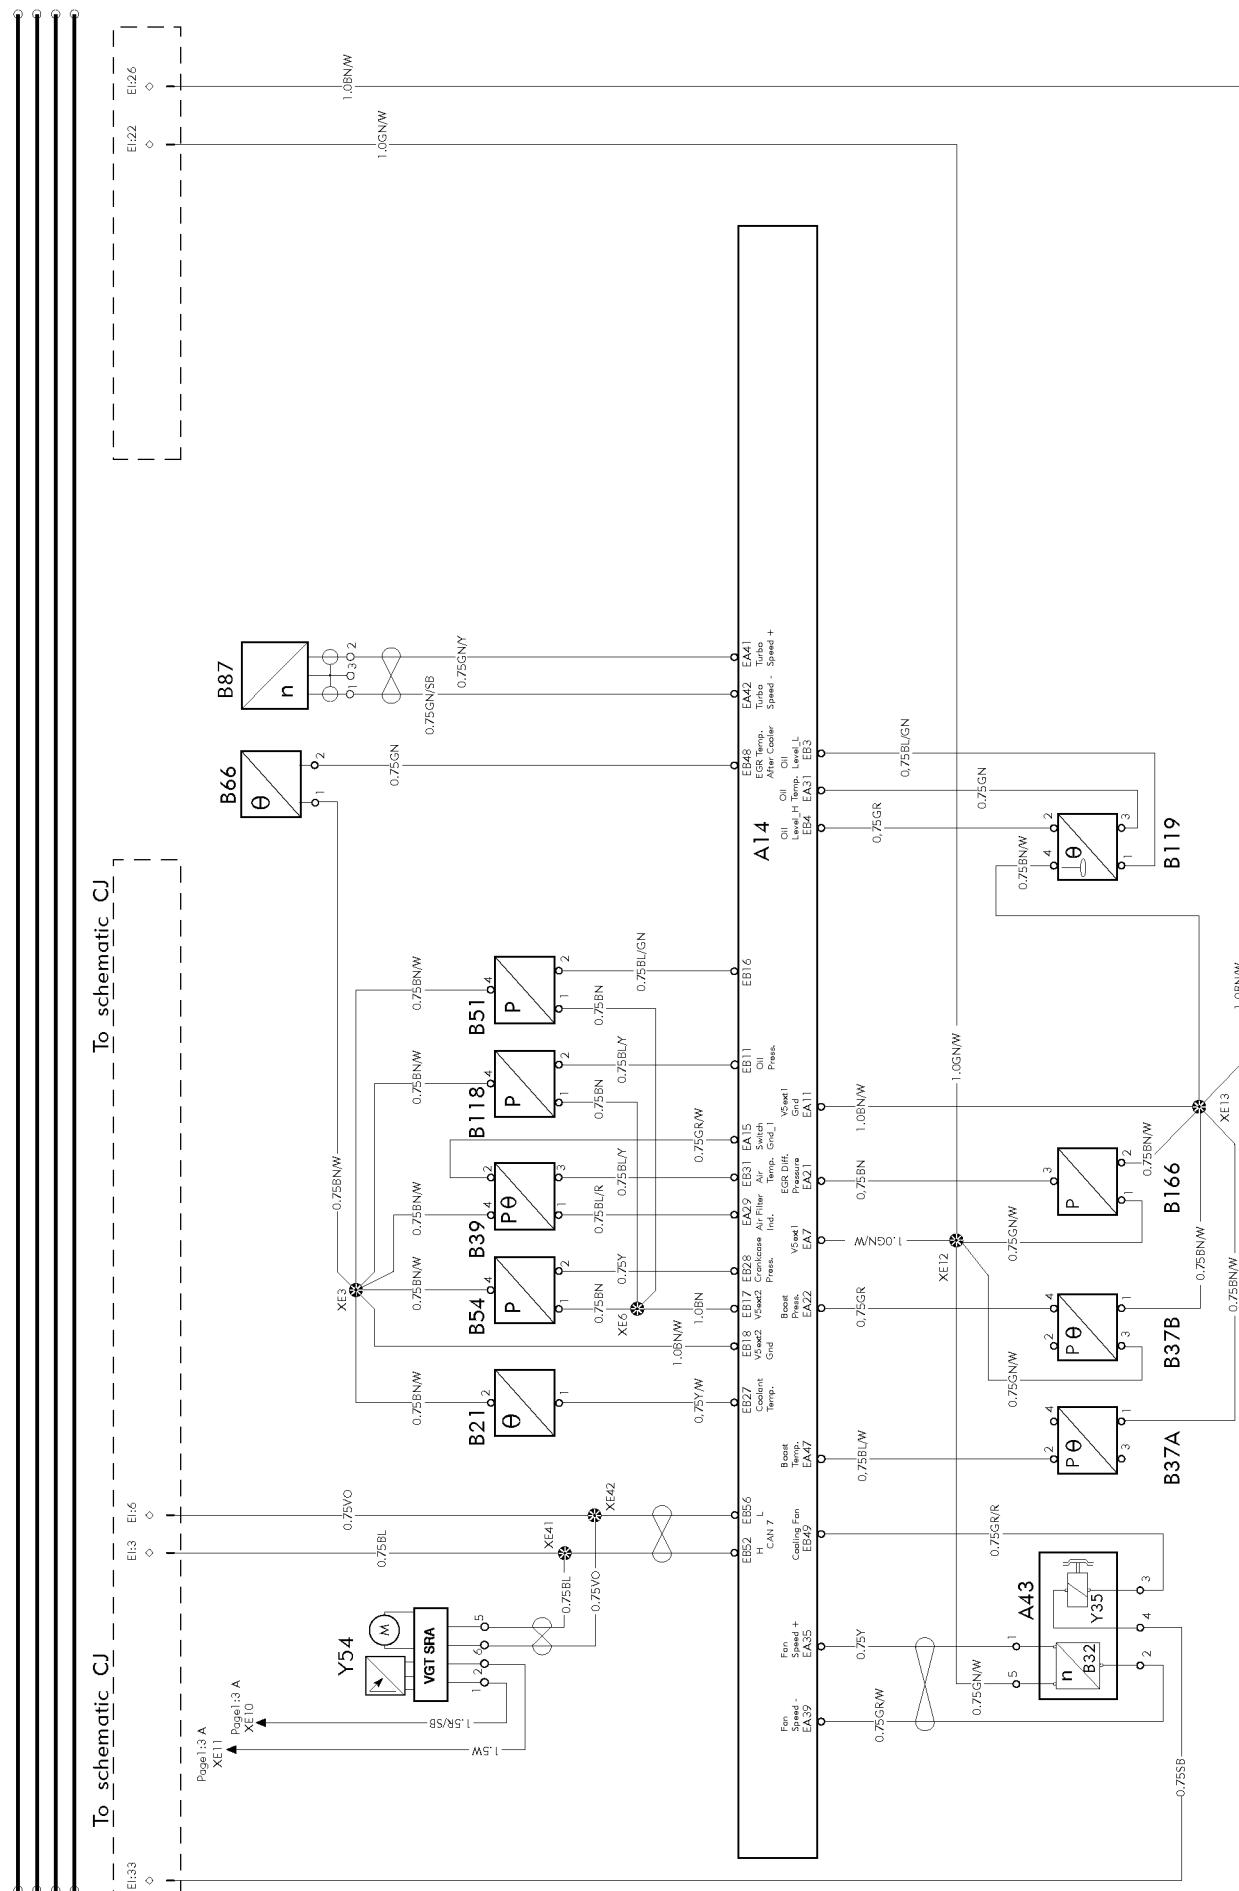

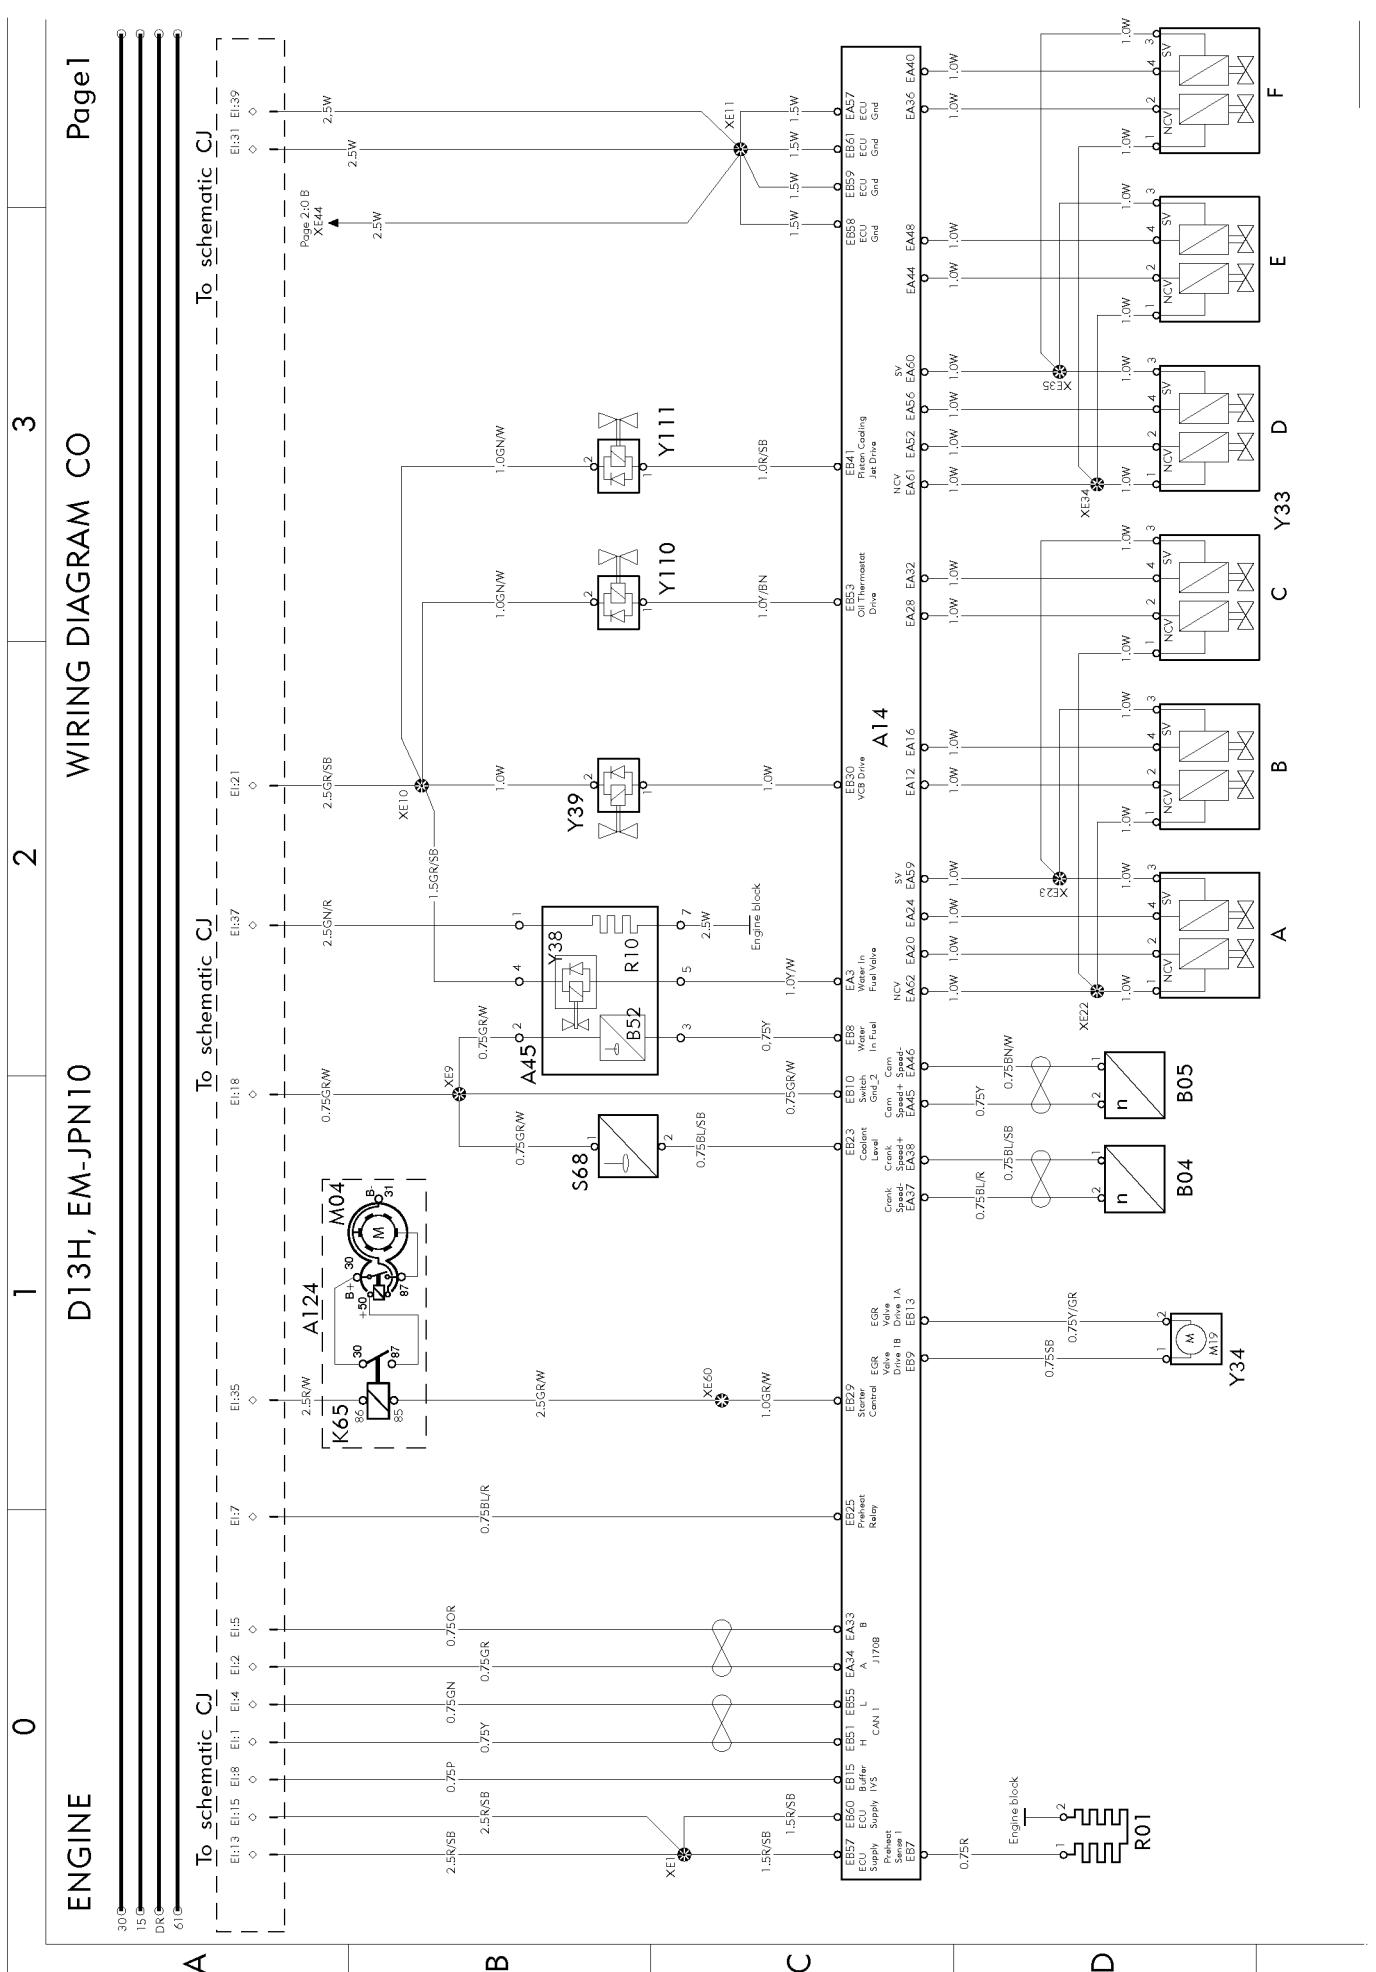

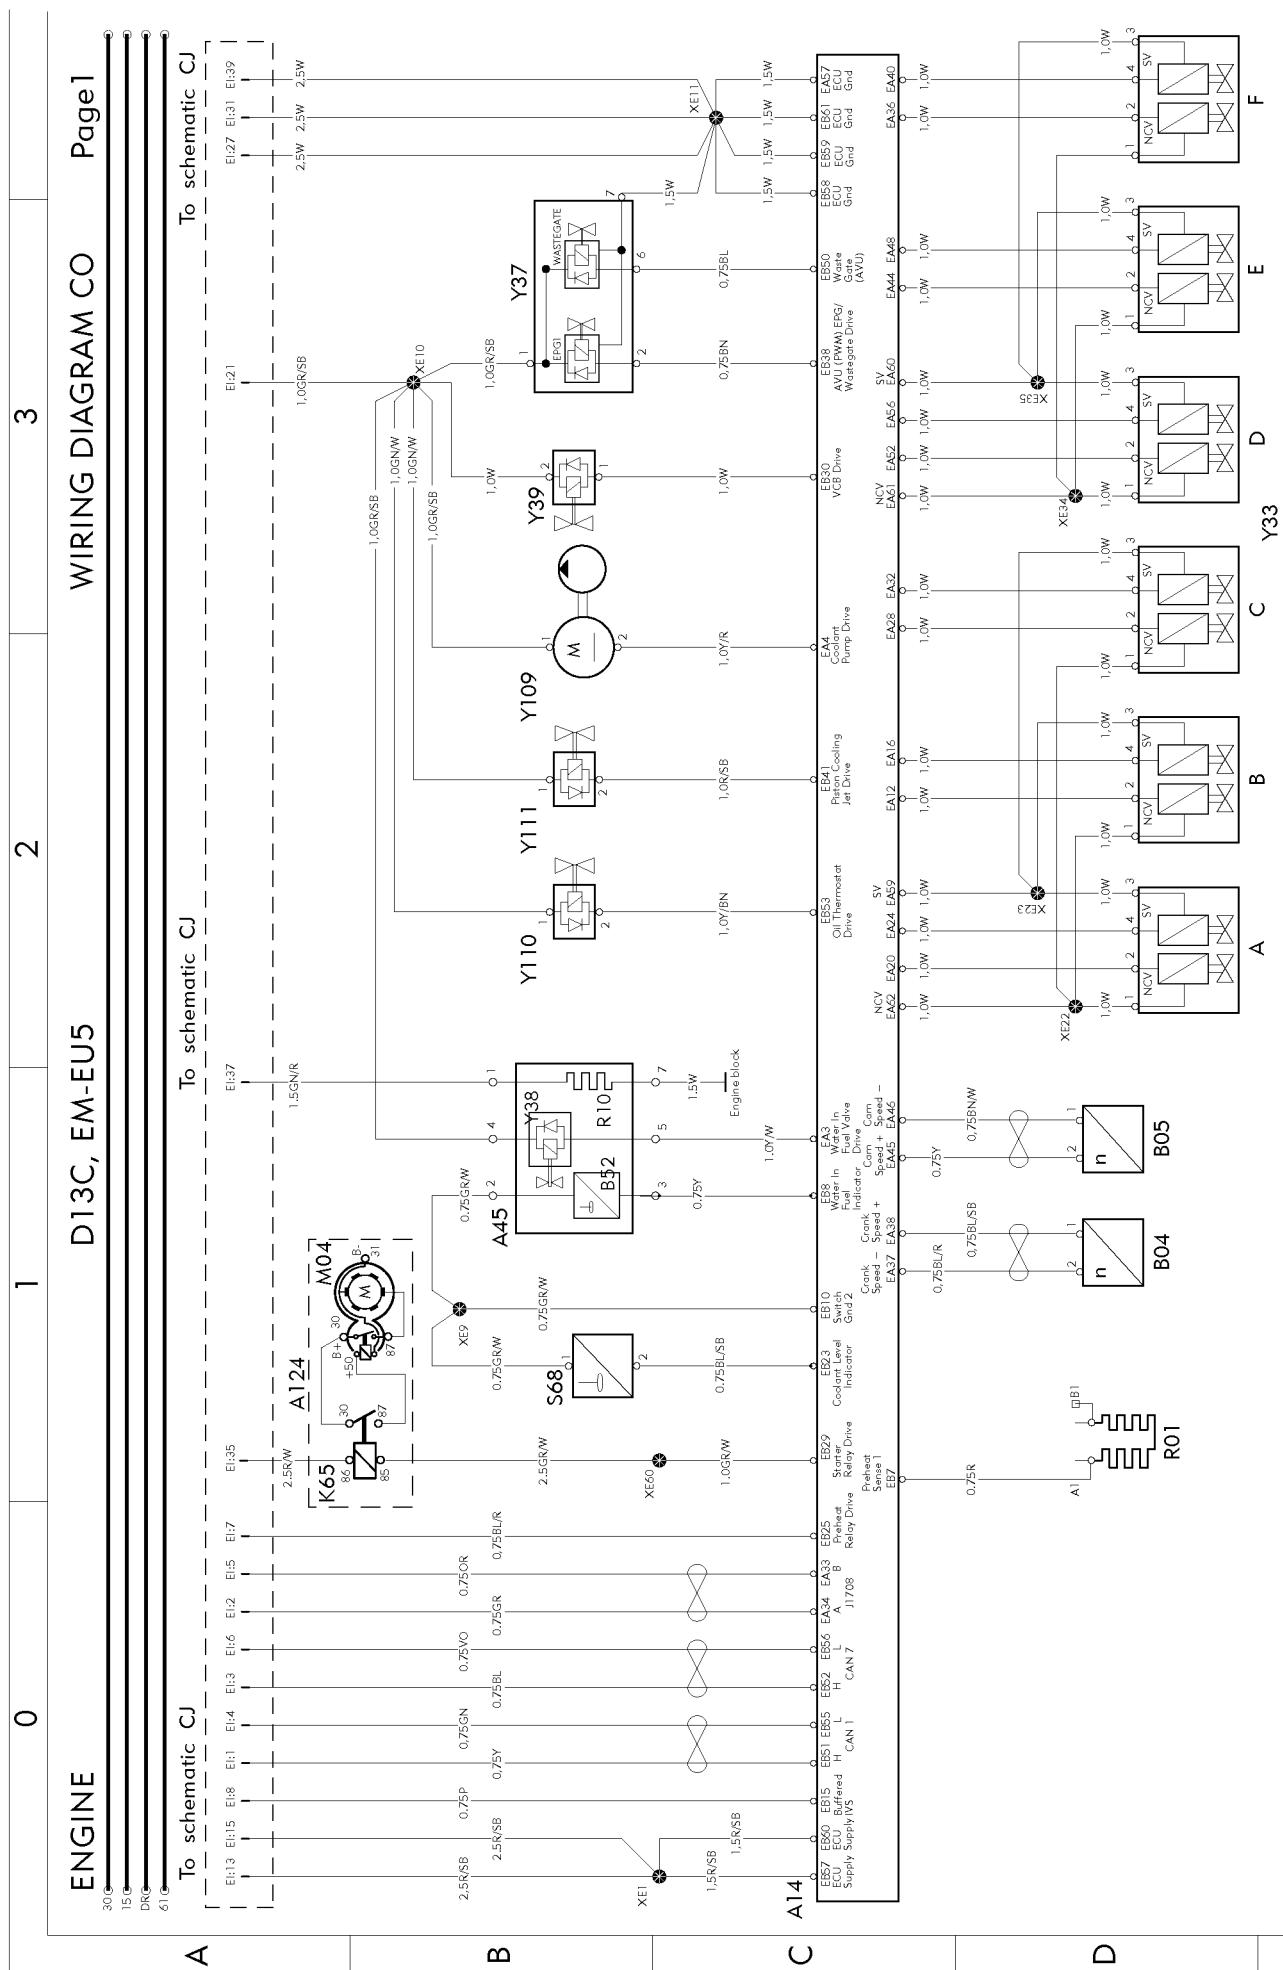

ENGINE

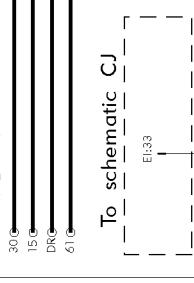




D13C, EM-EU5







0

2


3

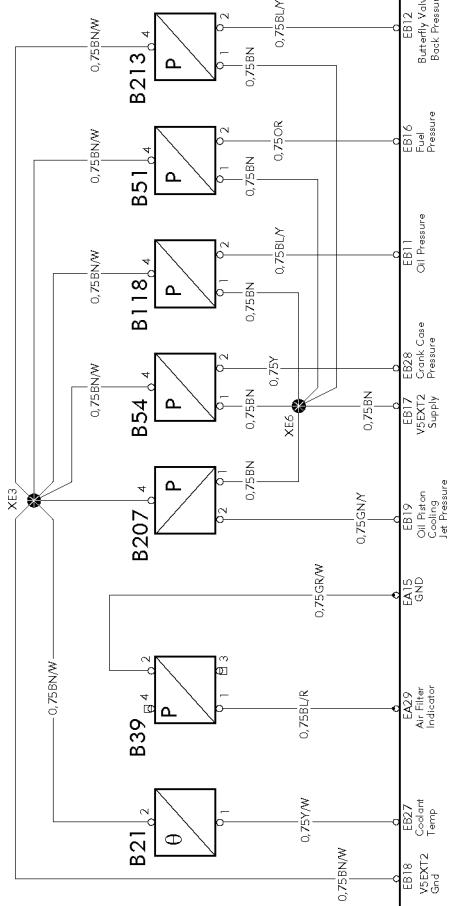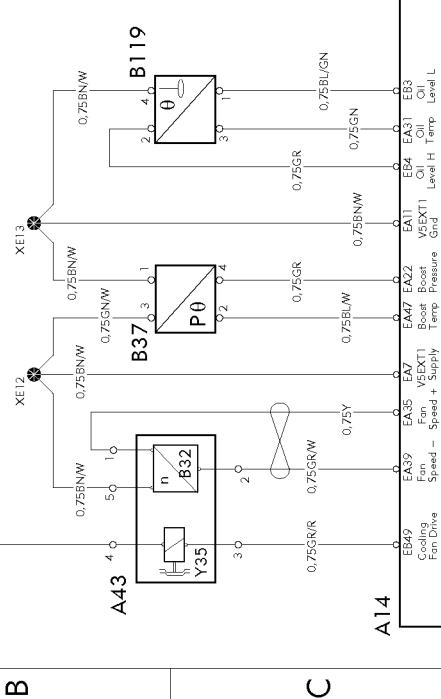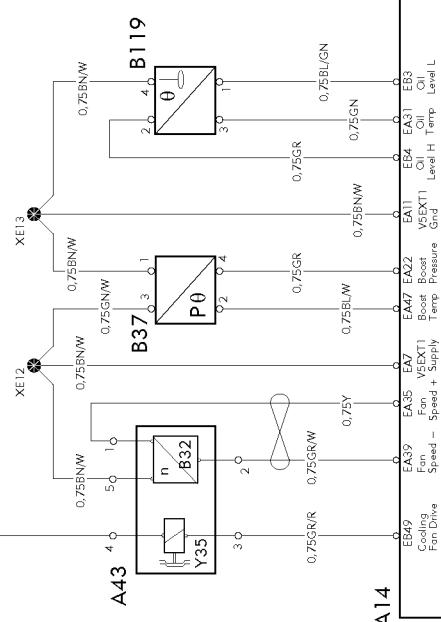


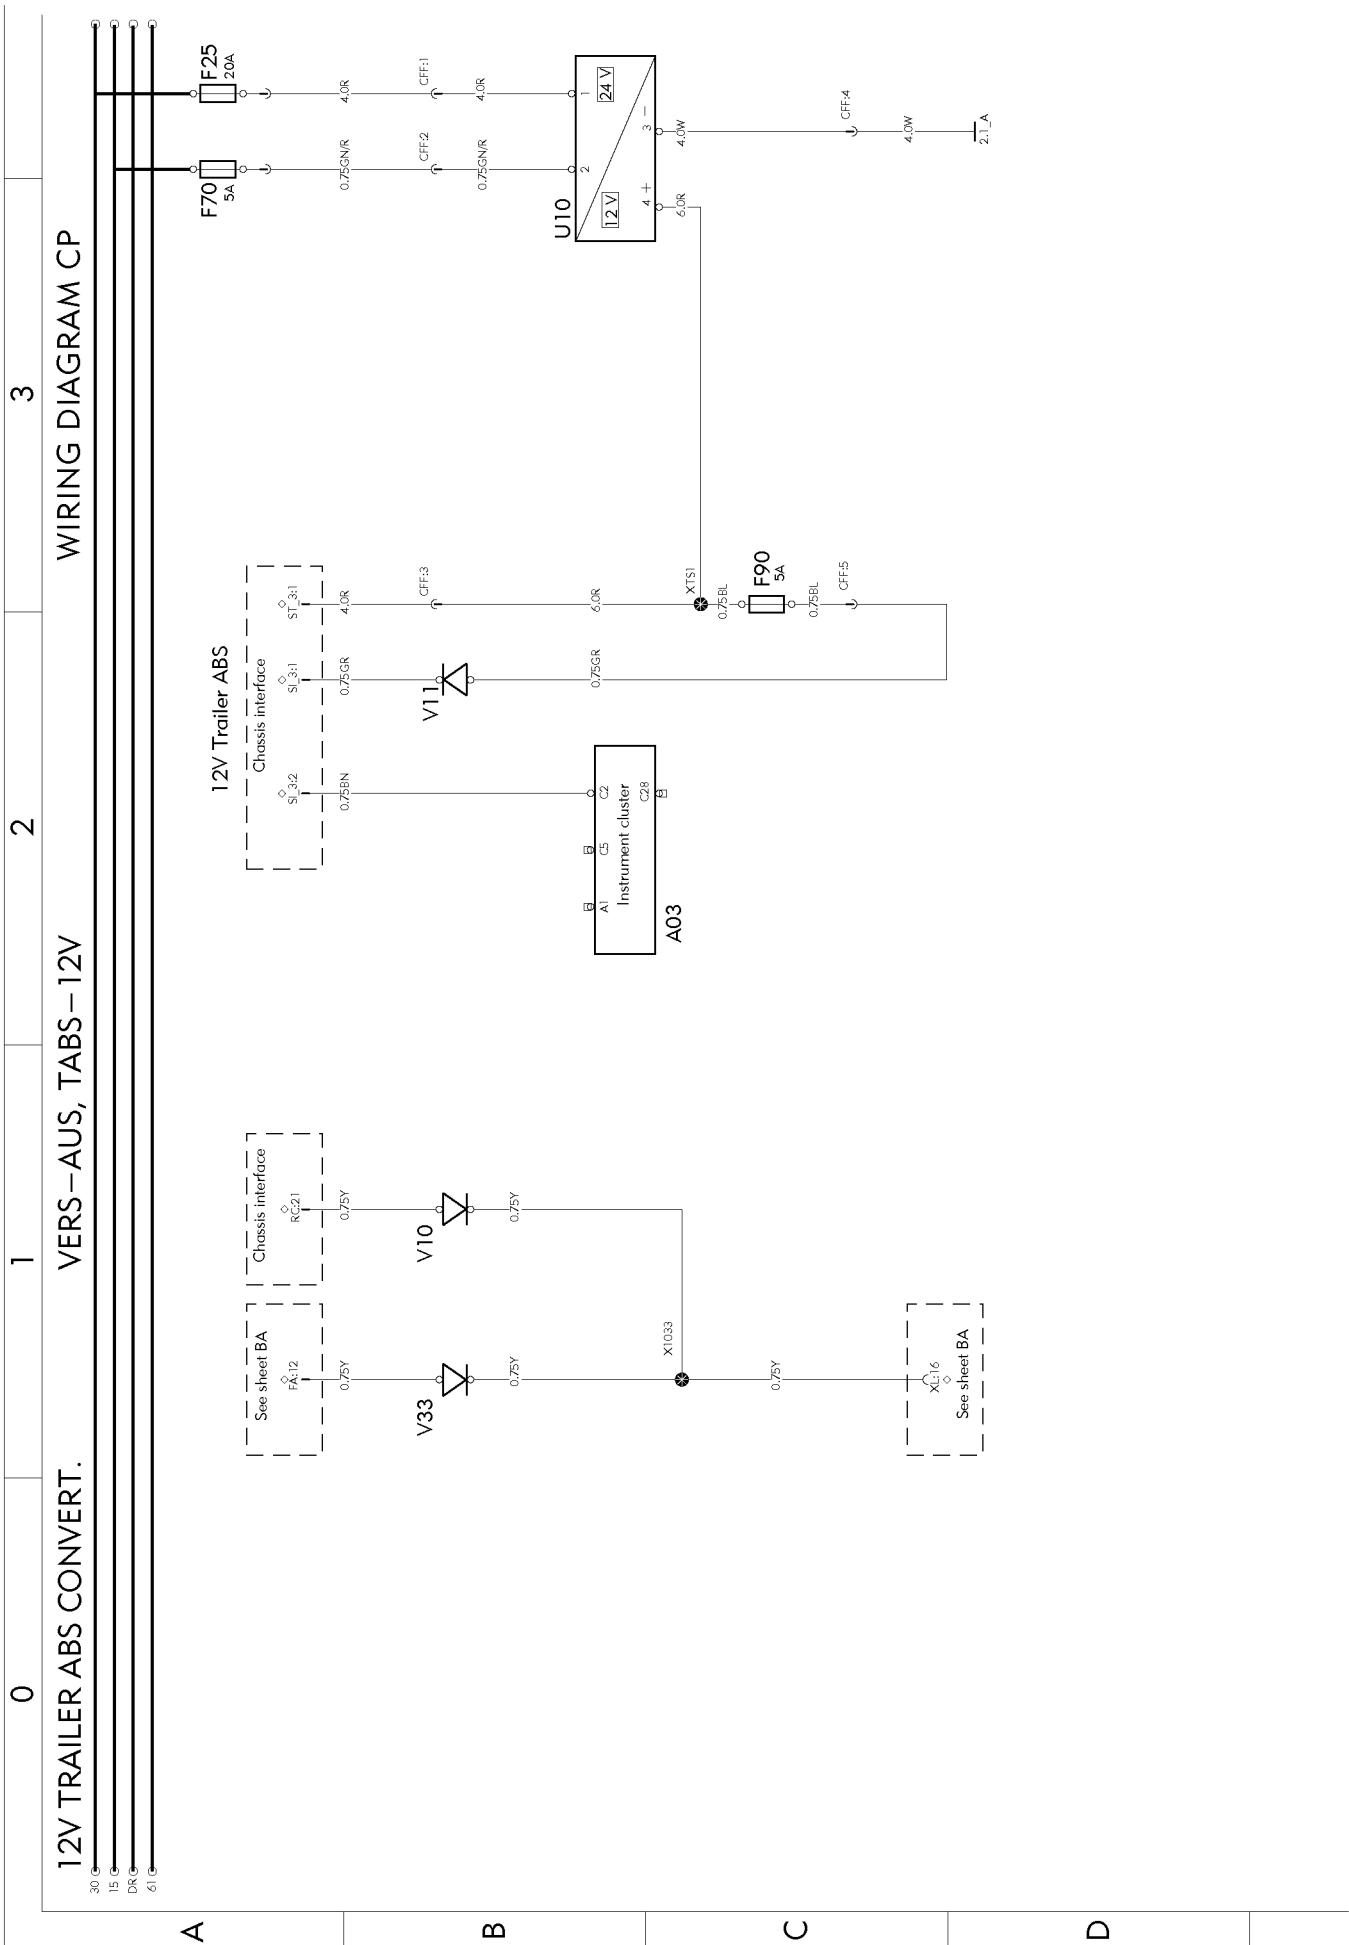


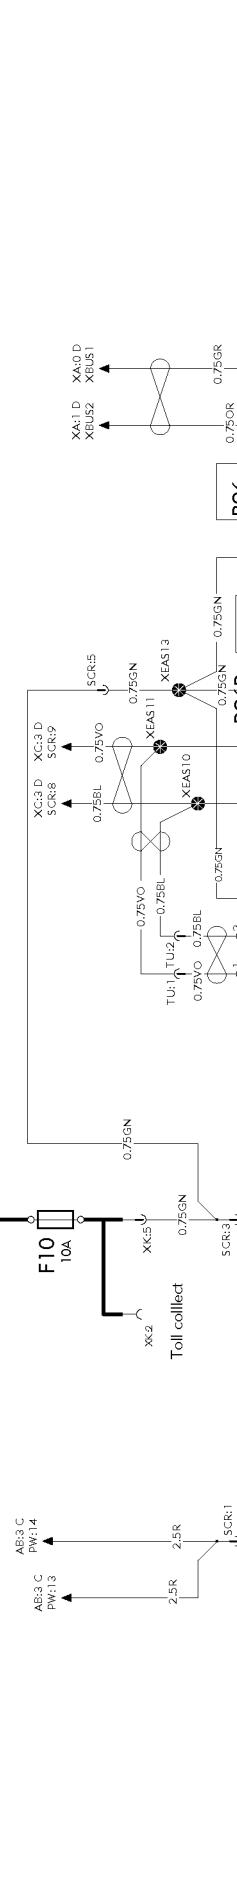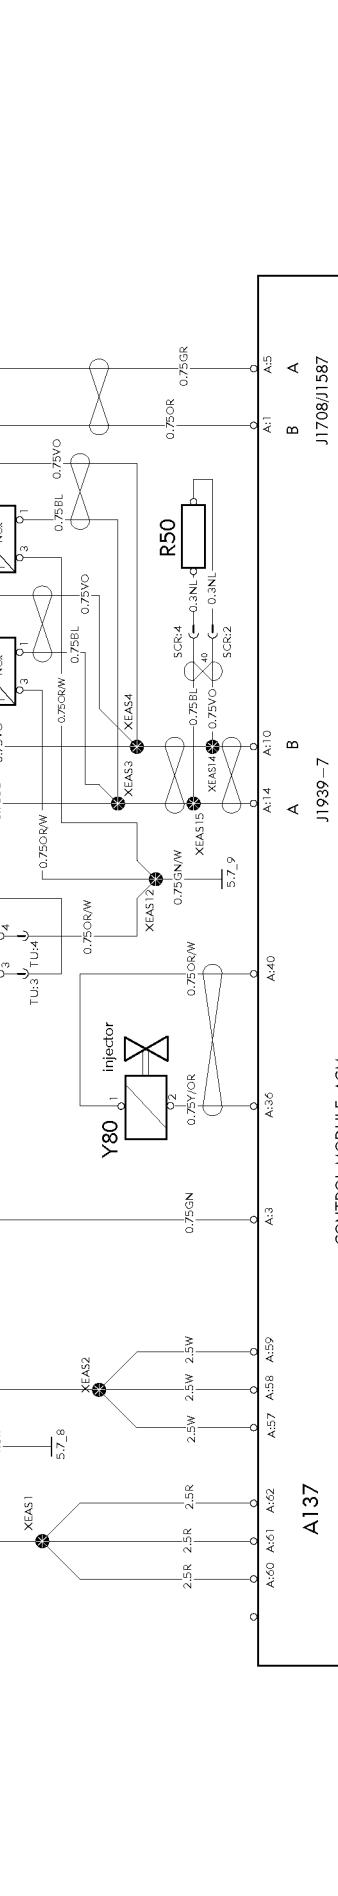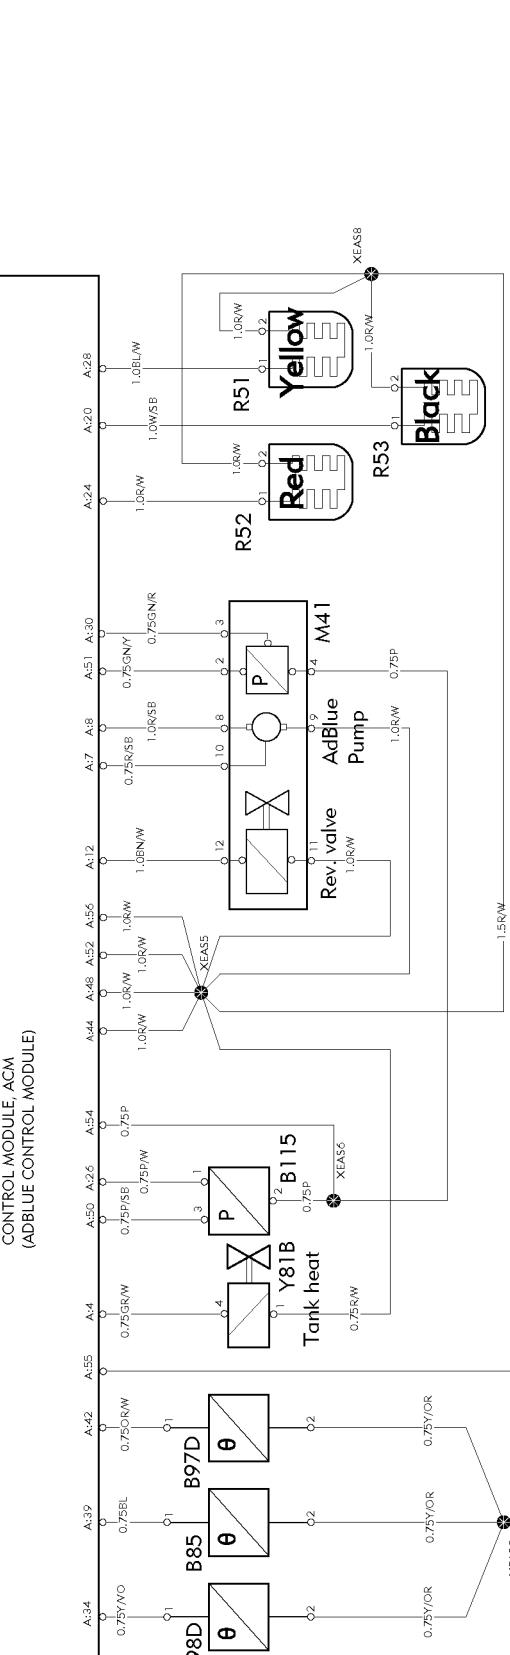
SCR+DPF**A****EM-JPN10****B****WIRING DIAGRAM CR****C****CONTROL MODULE ACM
(ADBBLUE CONTROL MODULE)****D**


Temp sensor Deutch:
B98 code B
B85 code C
B97 code A

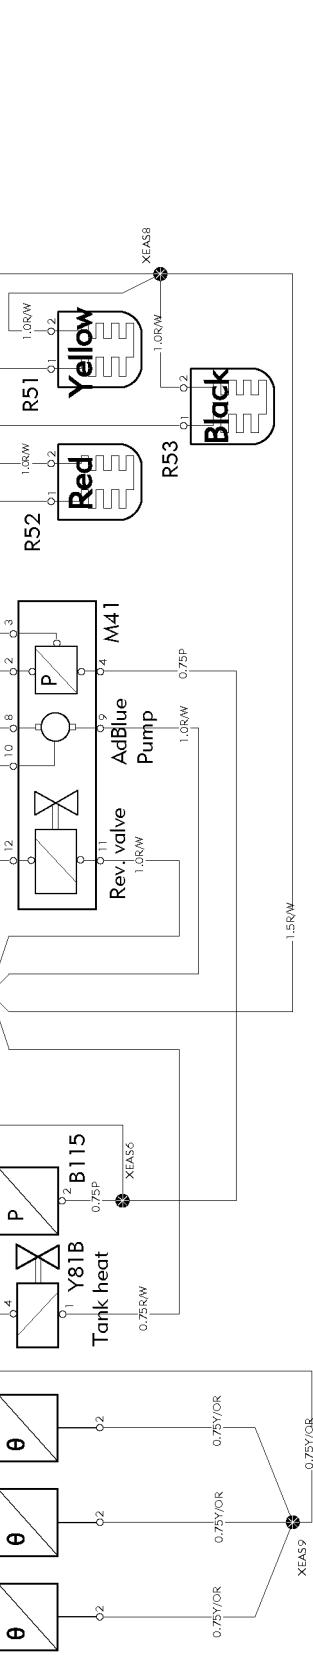


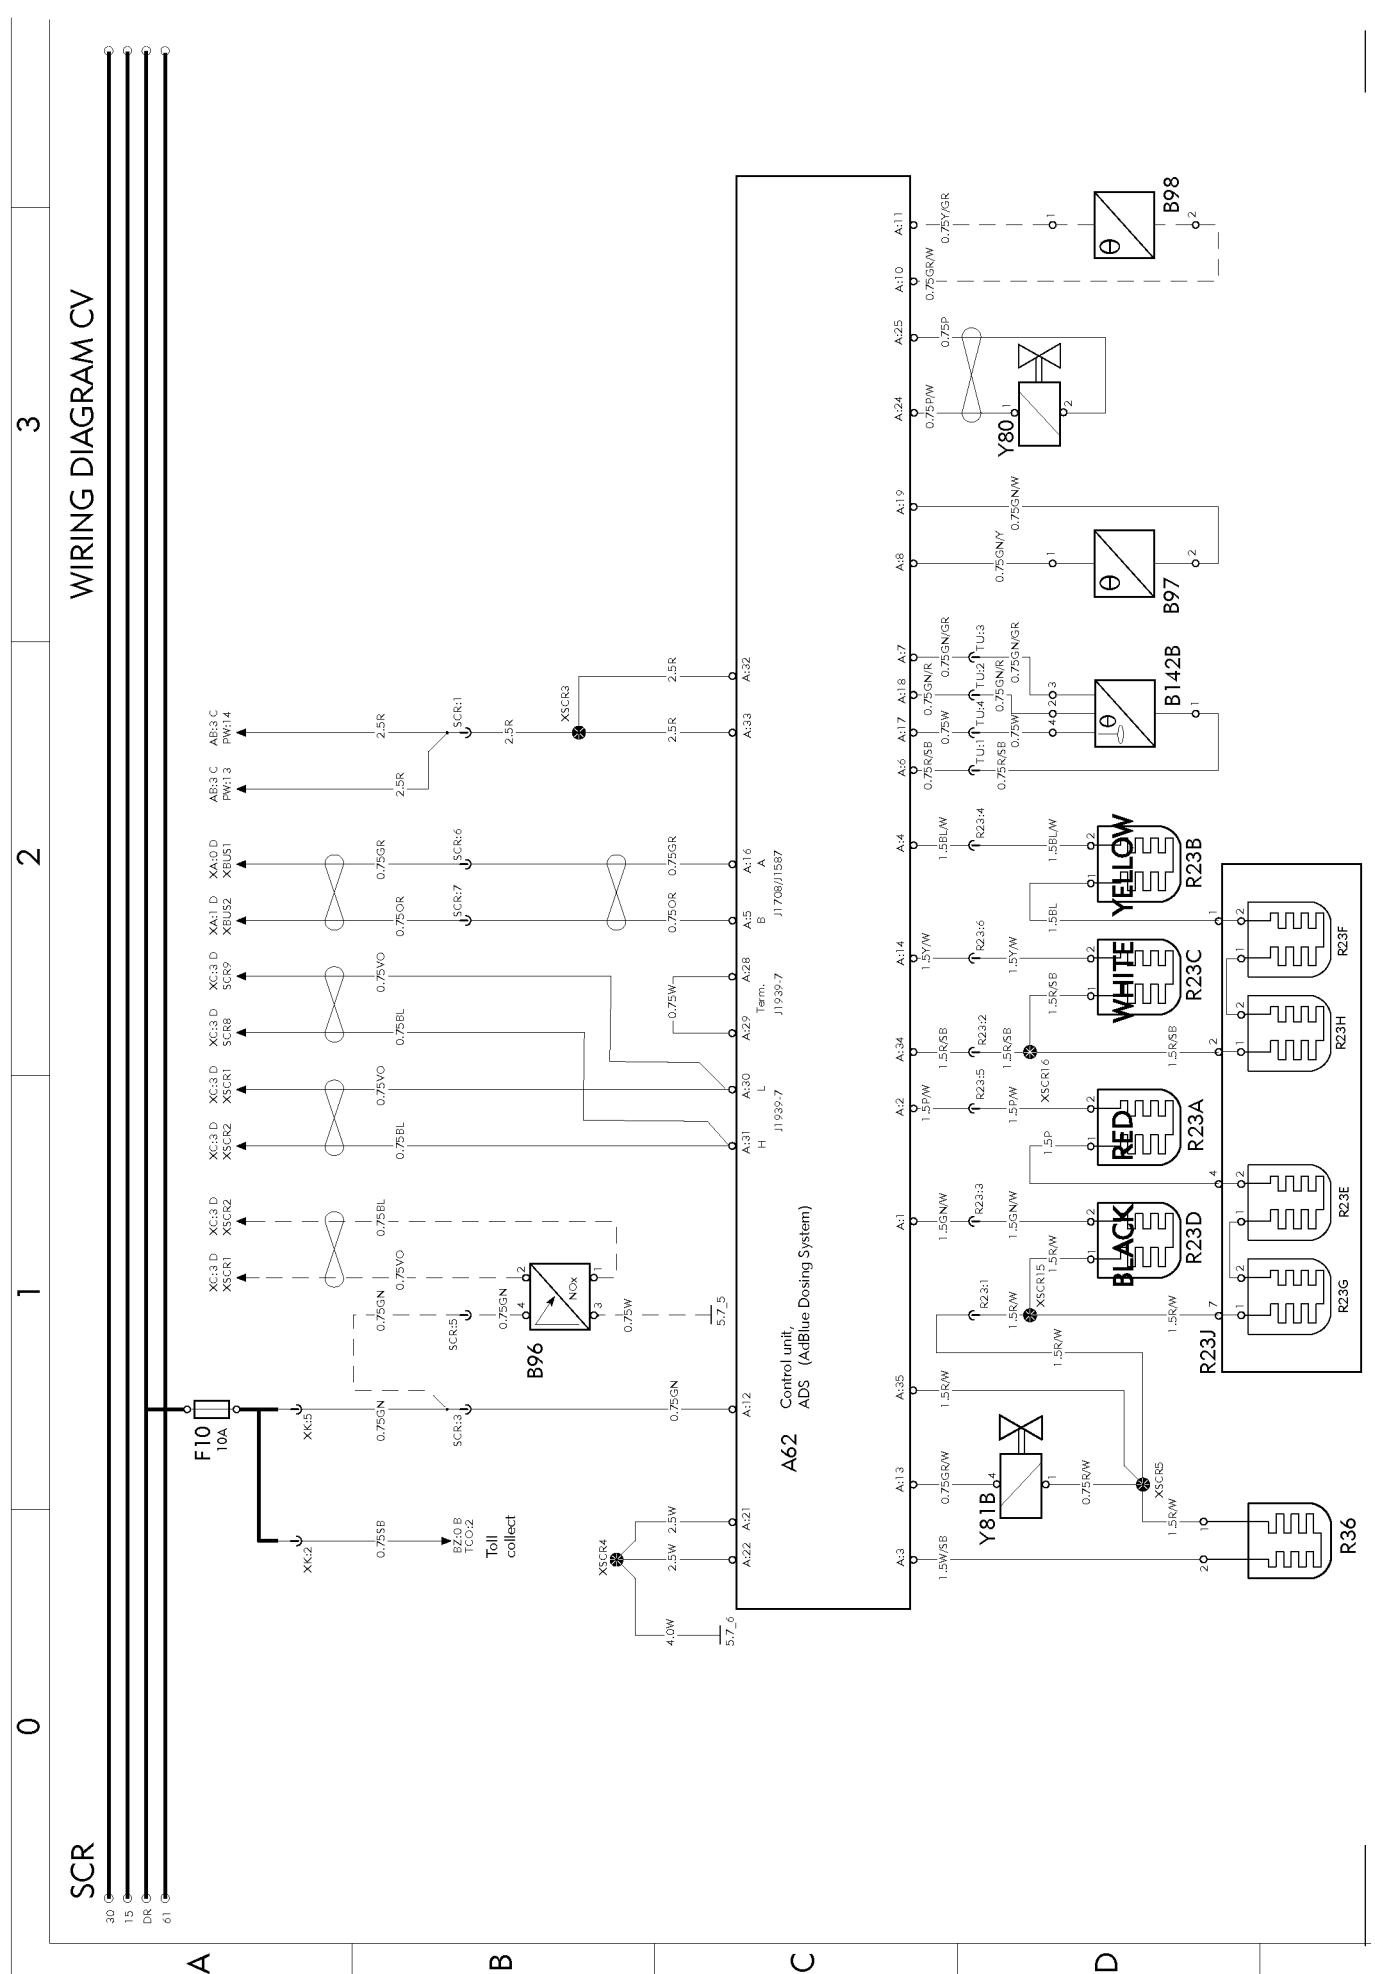


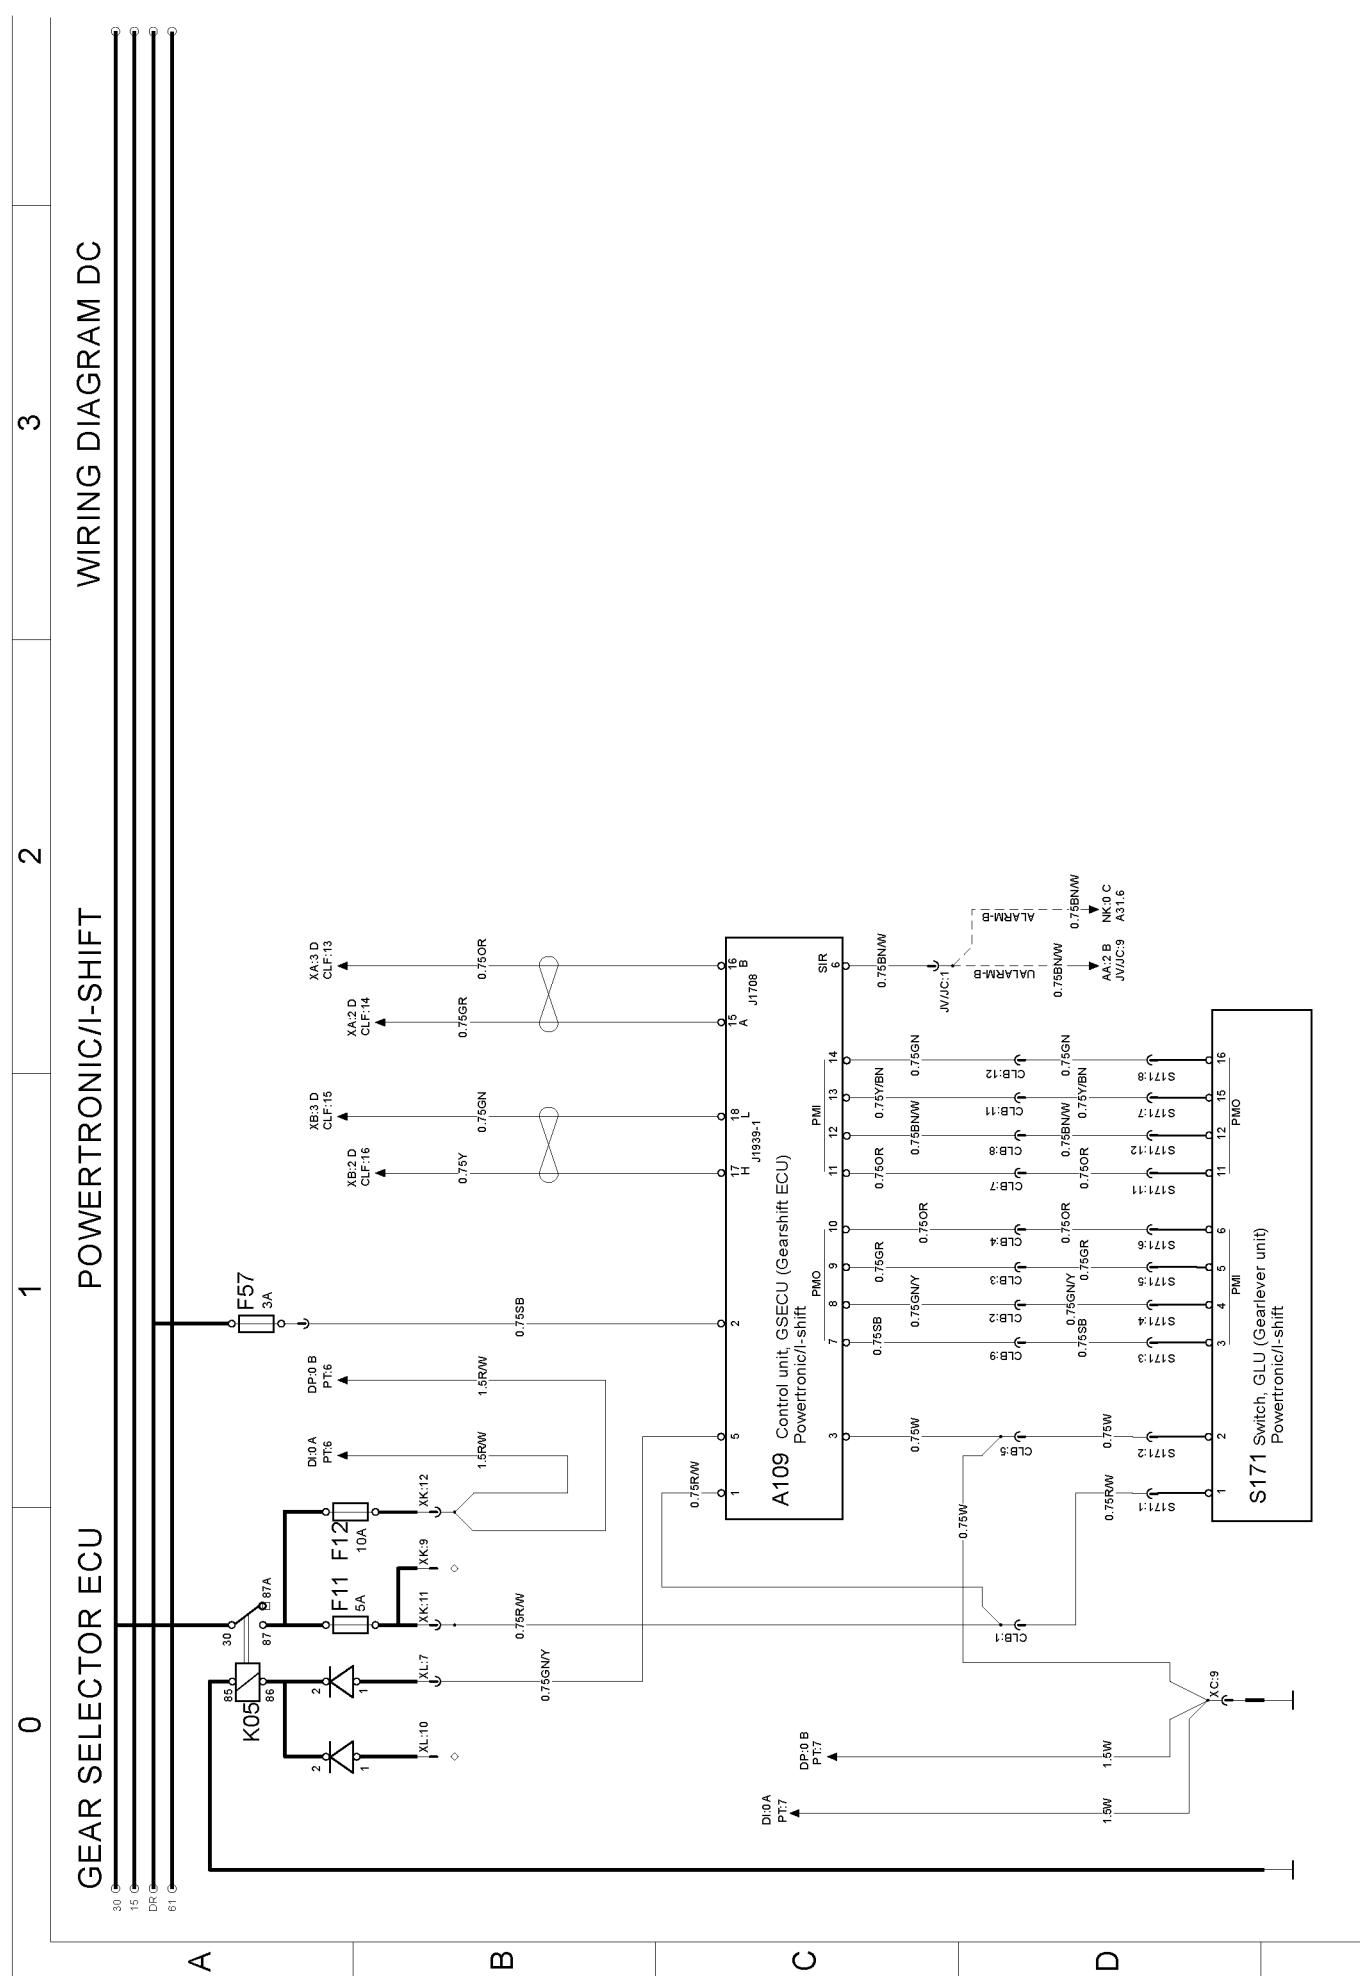


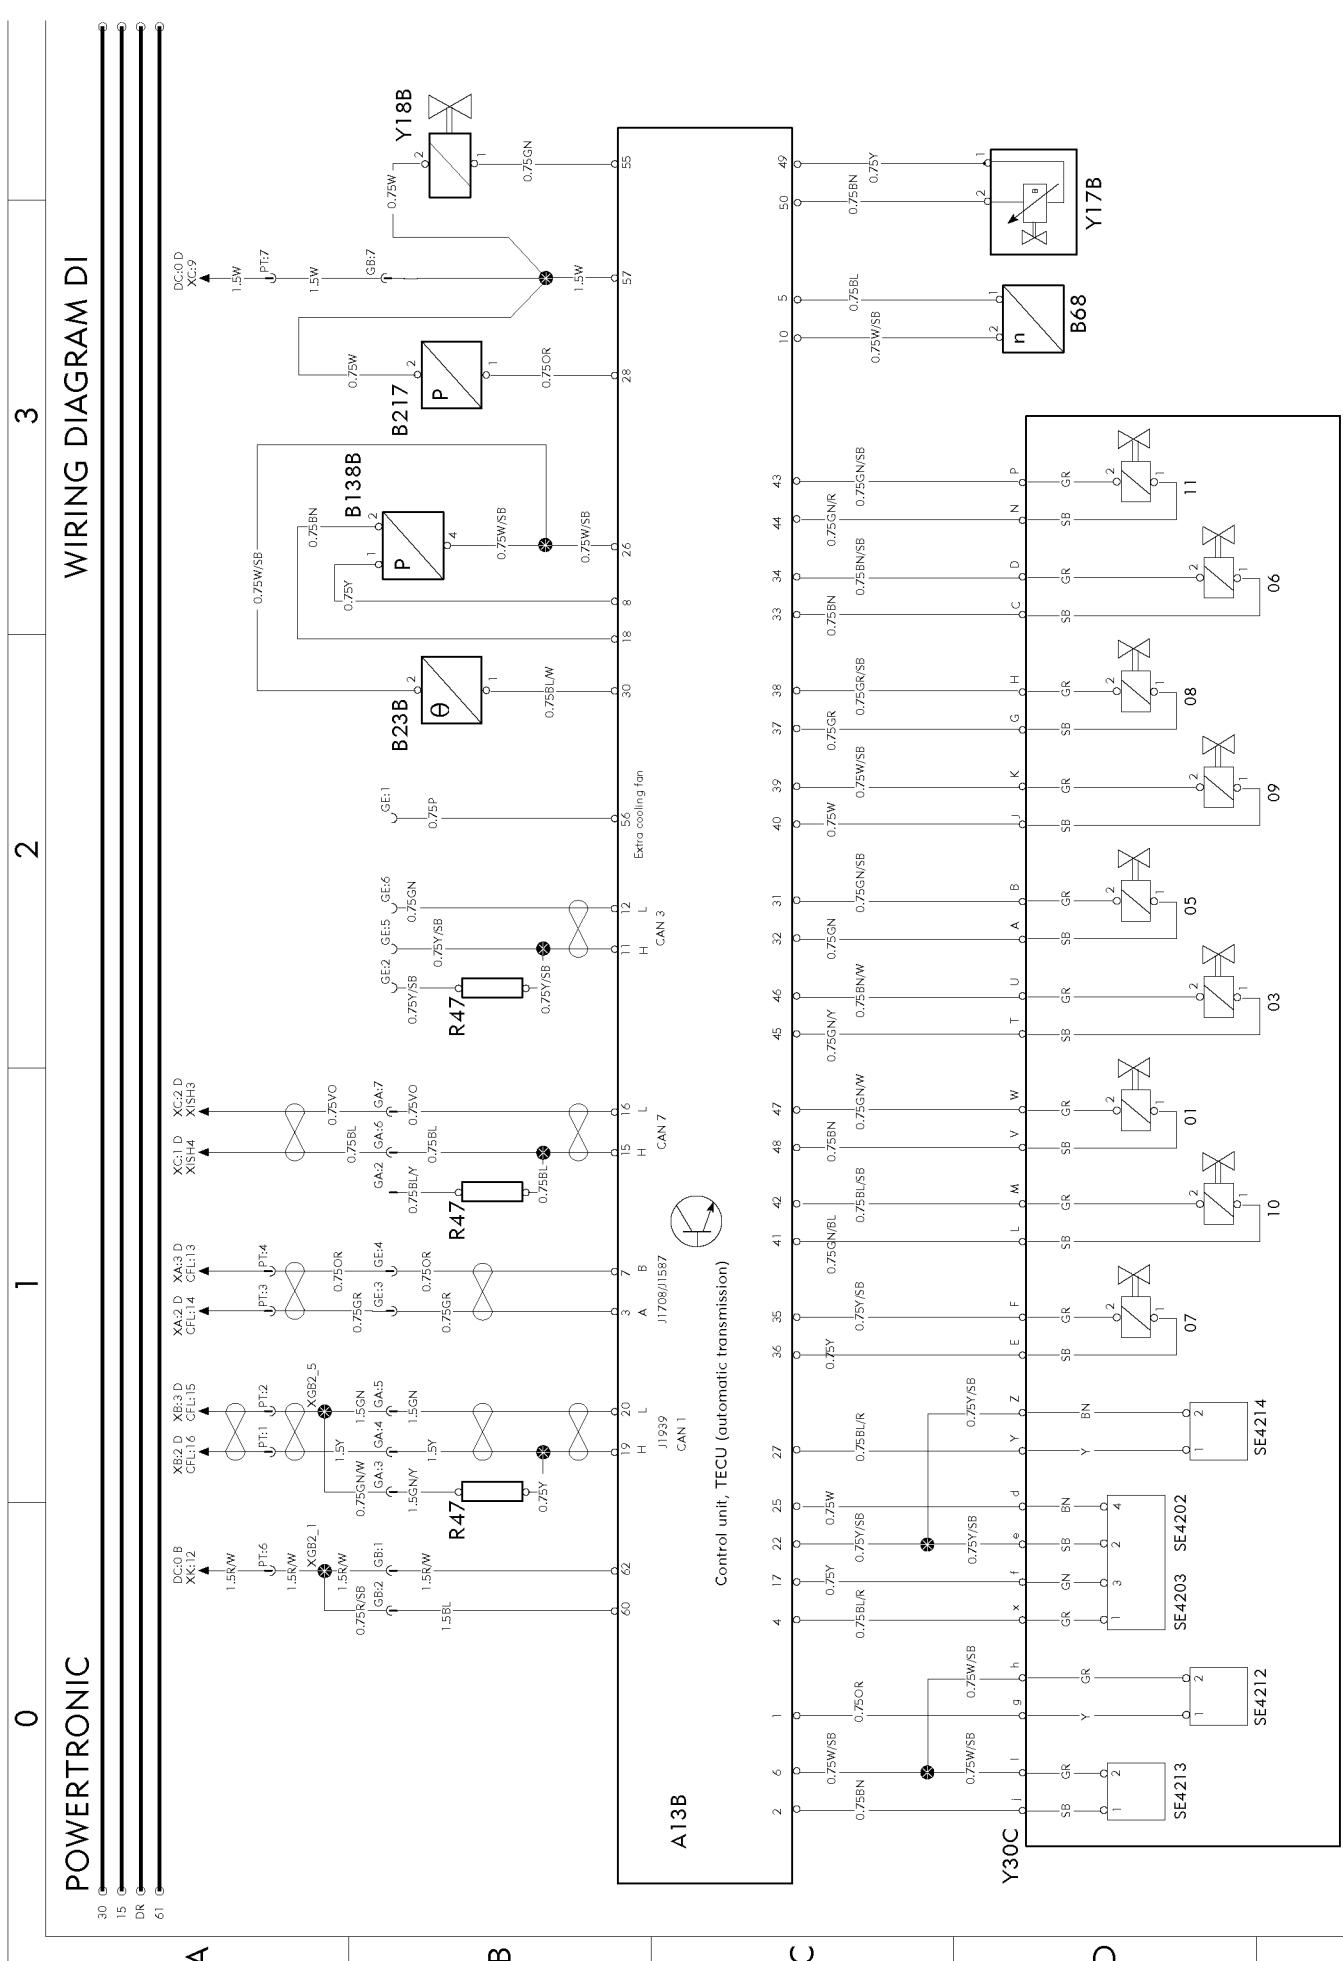


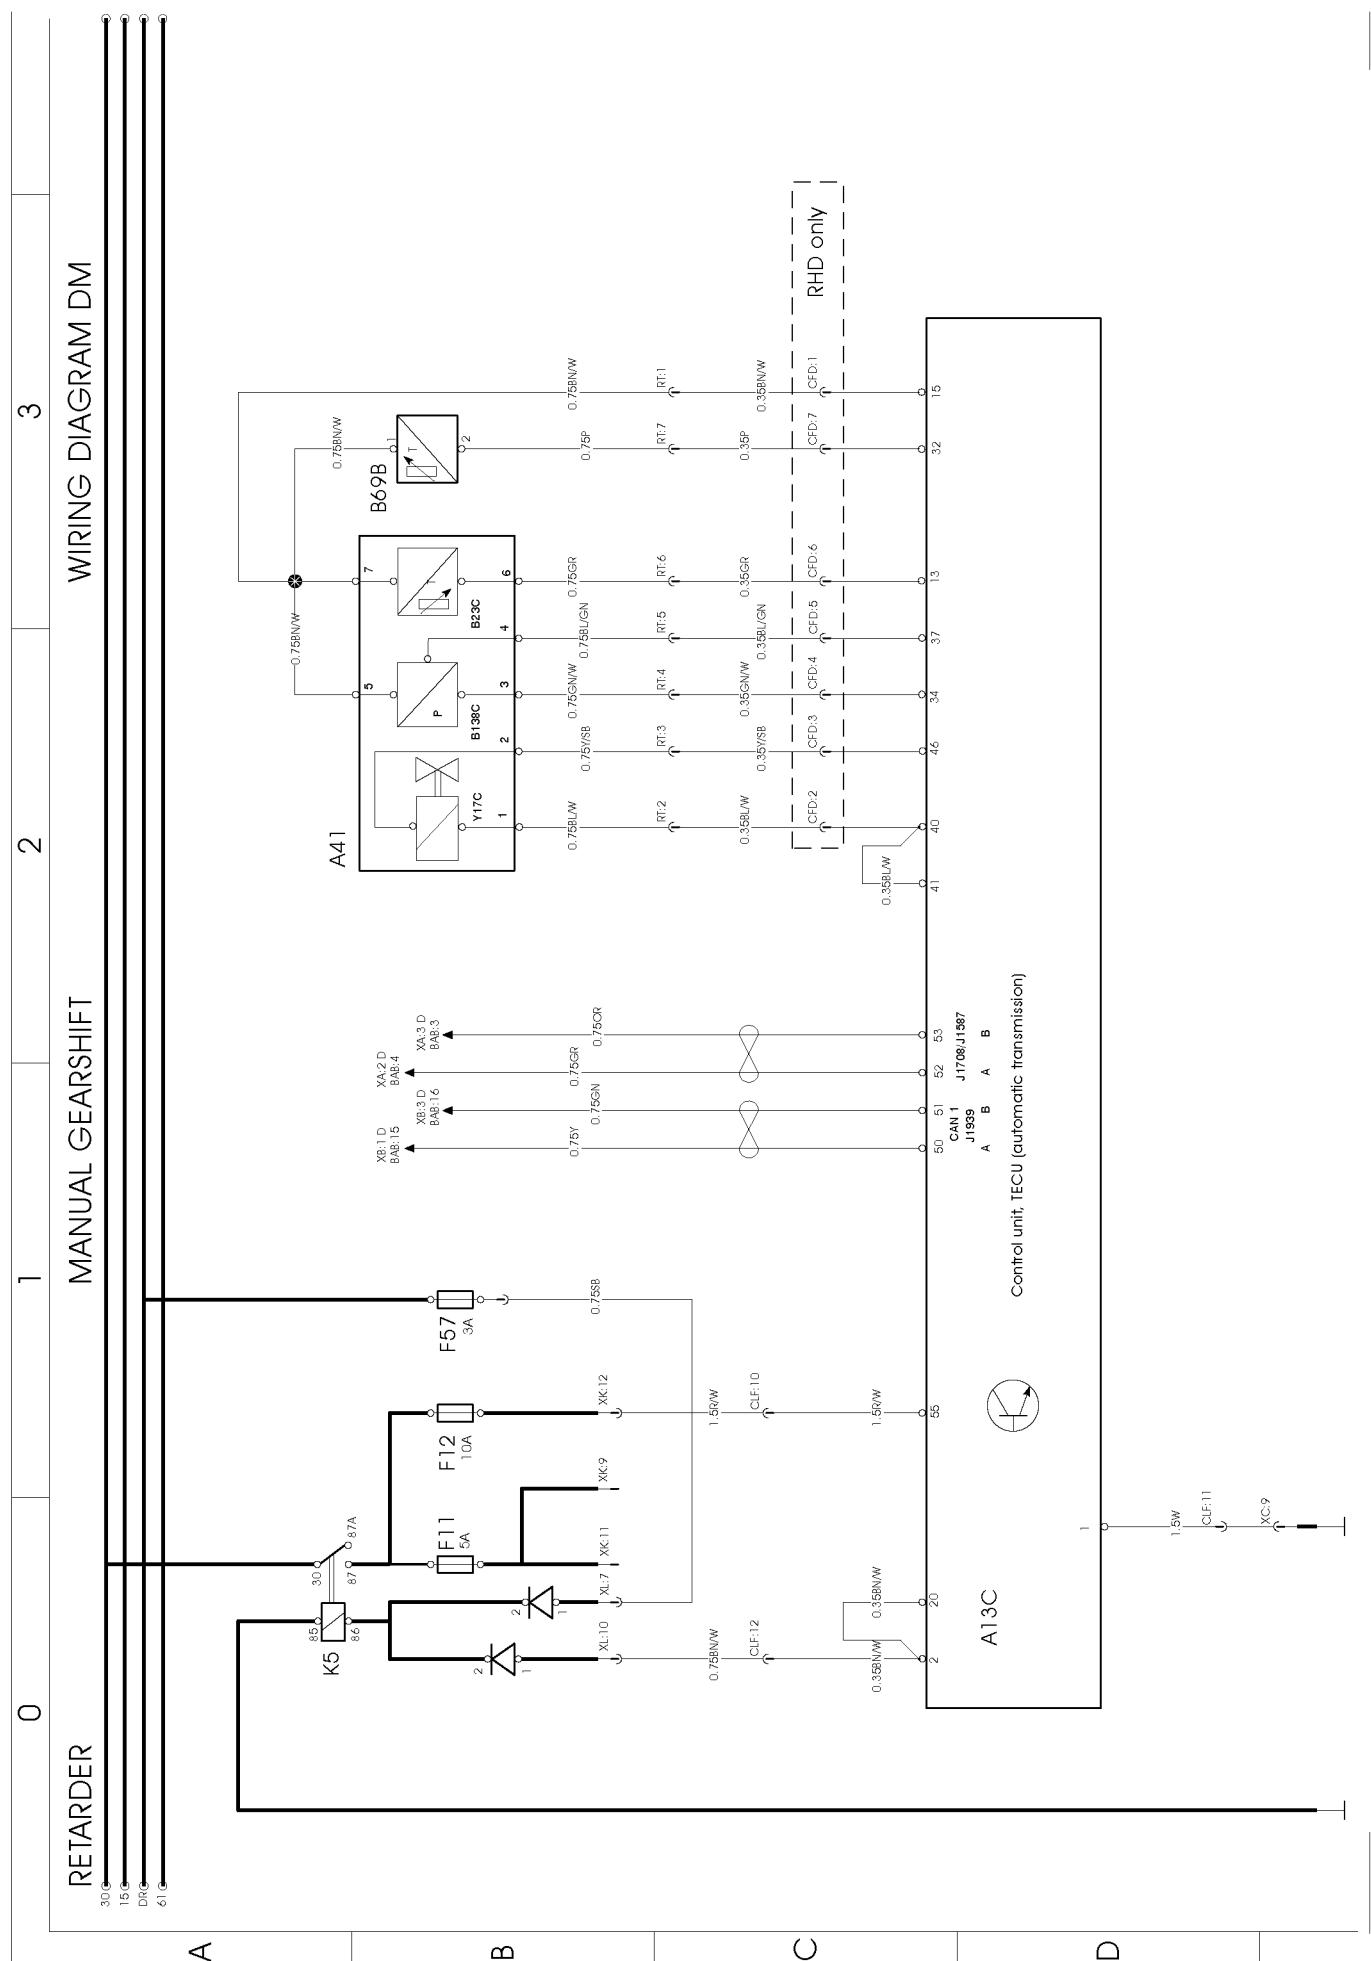


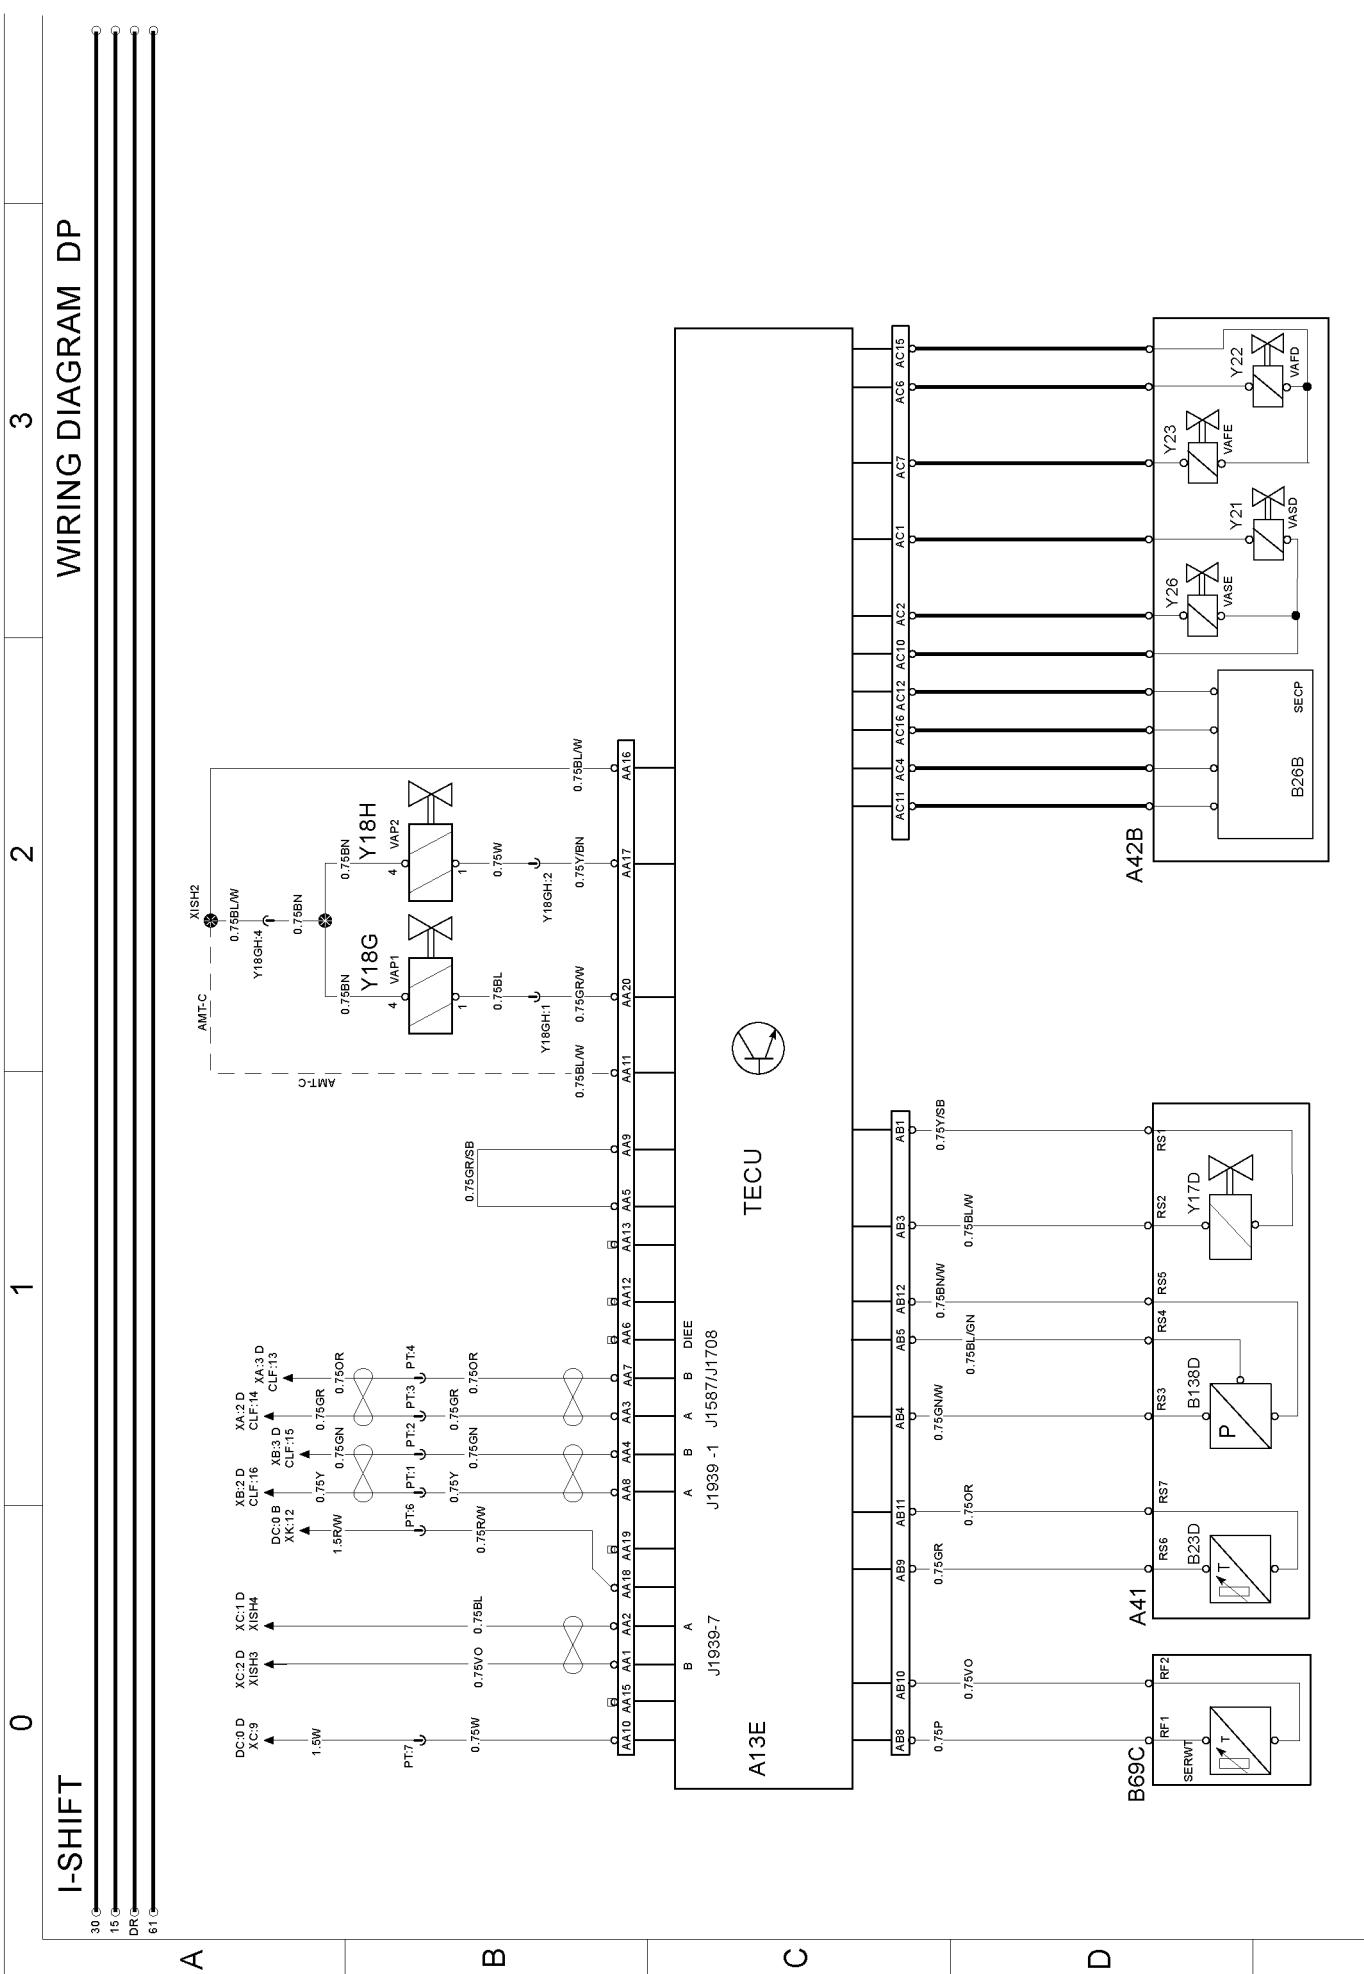

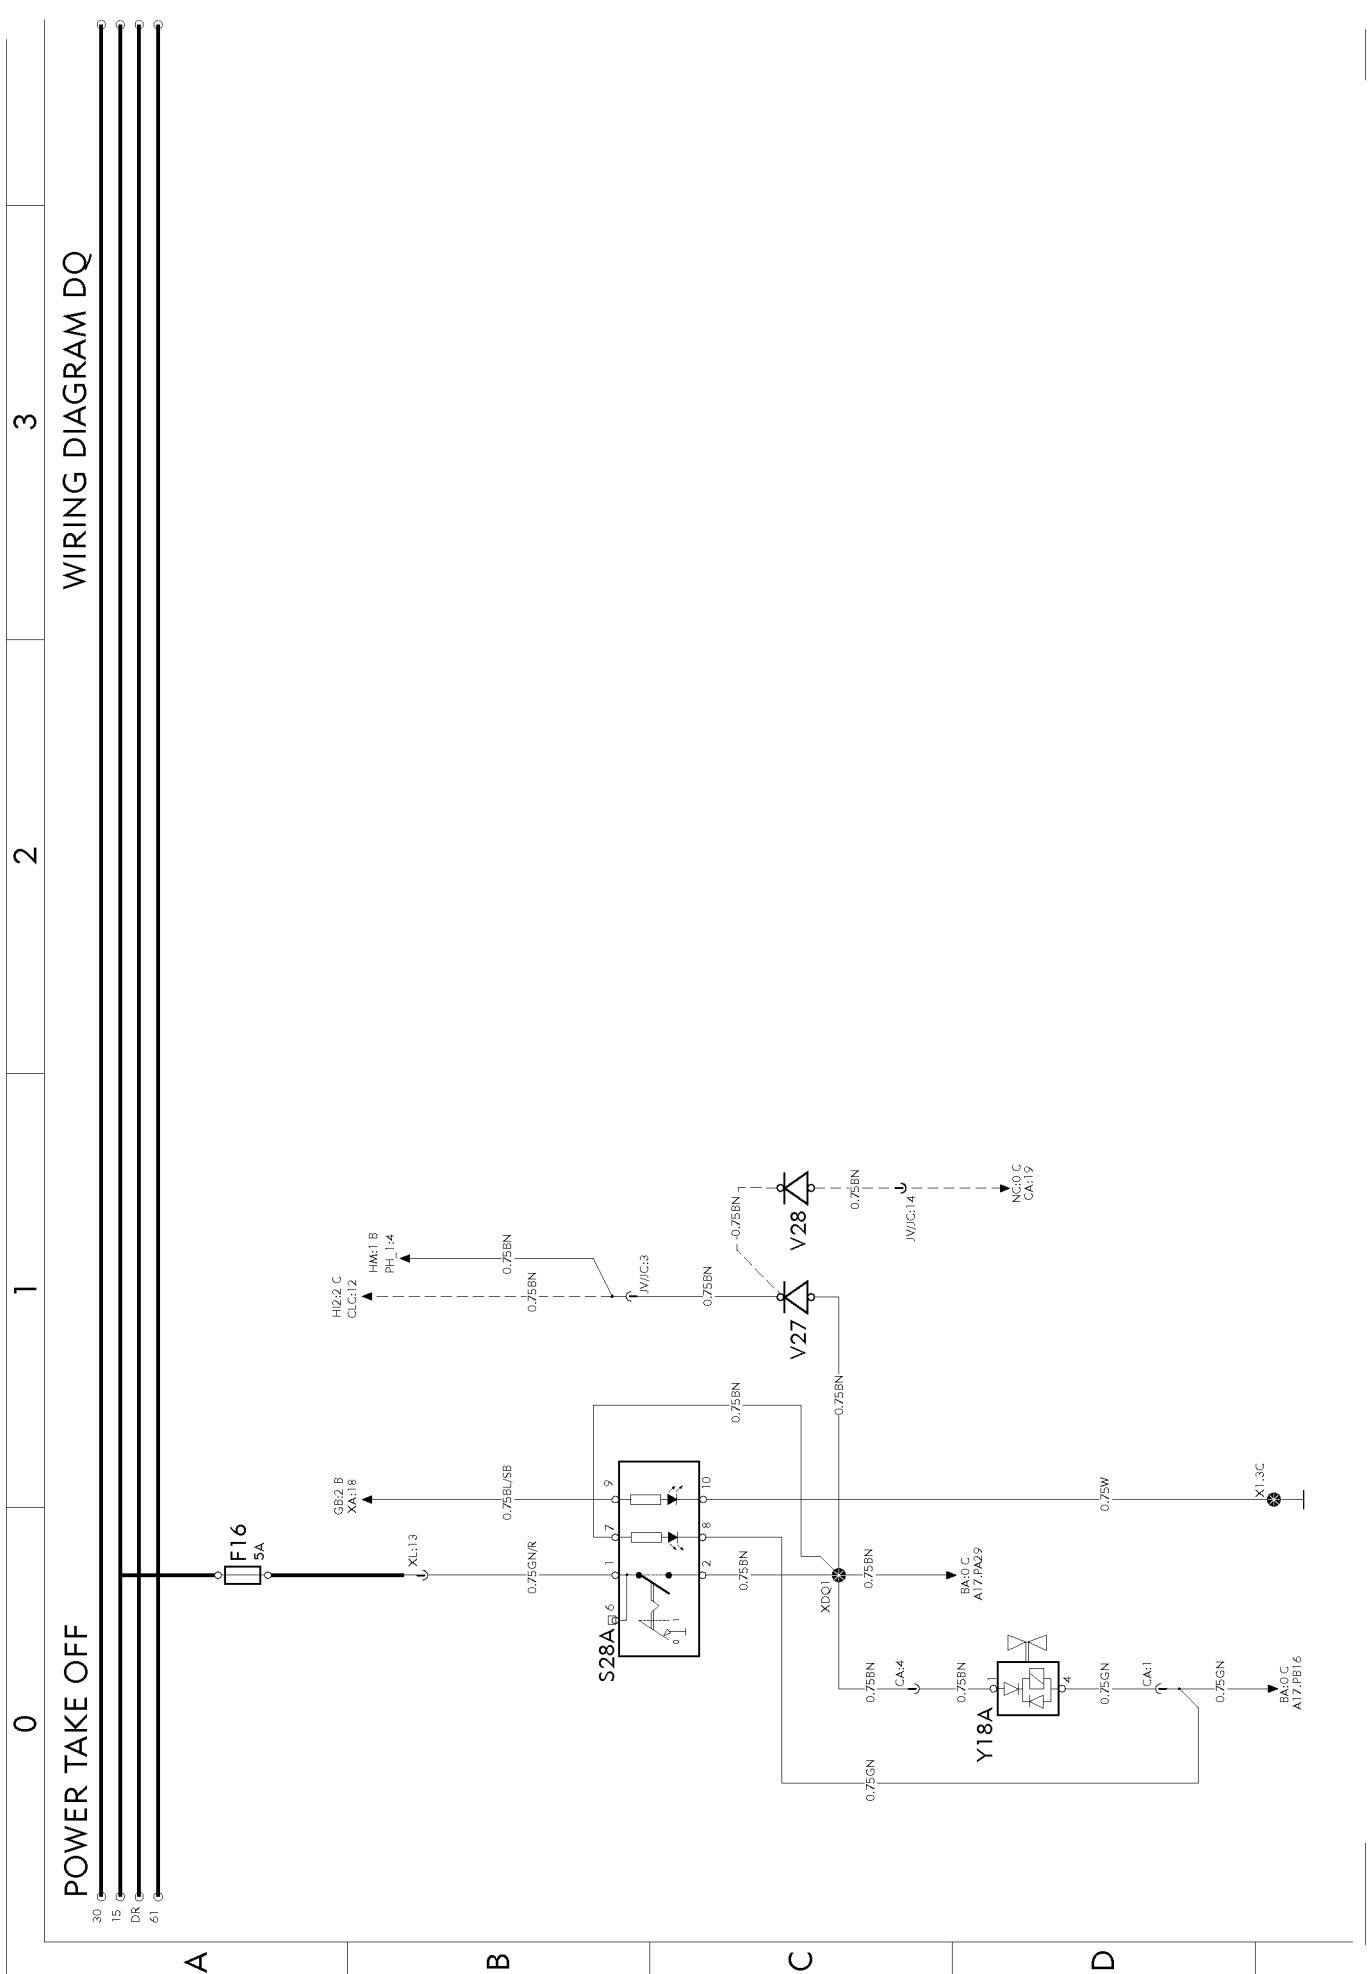

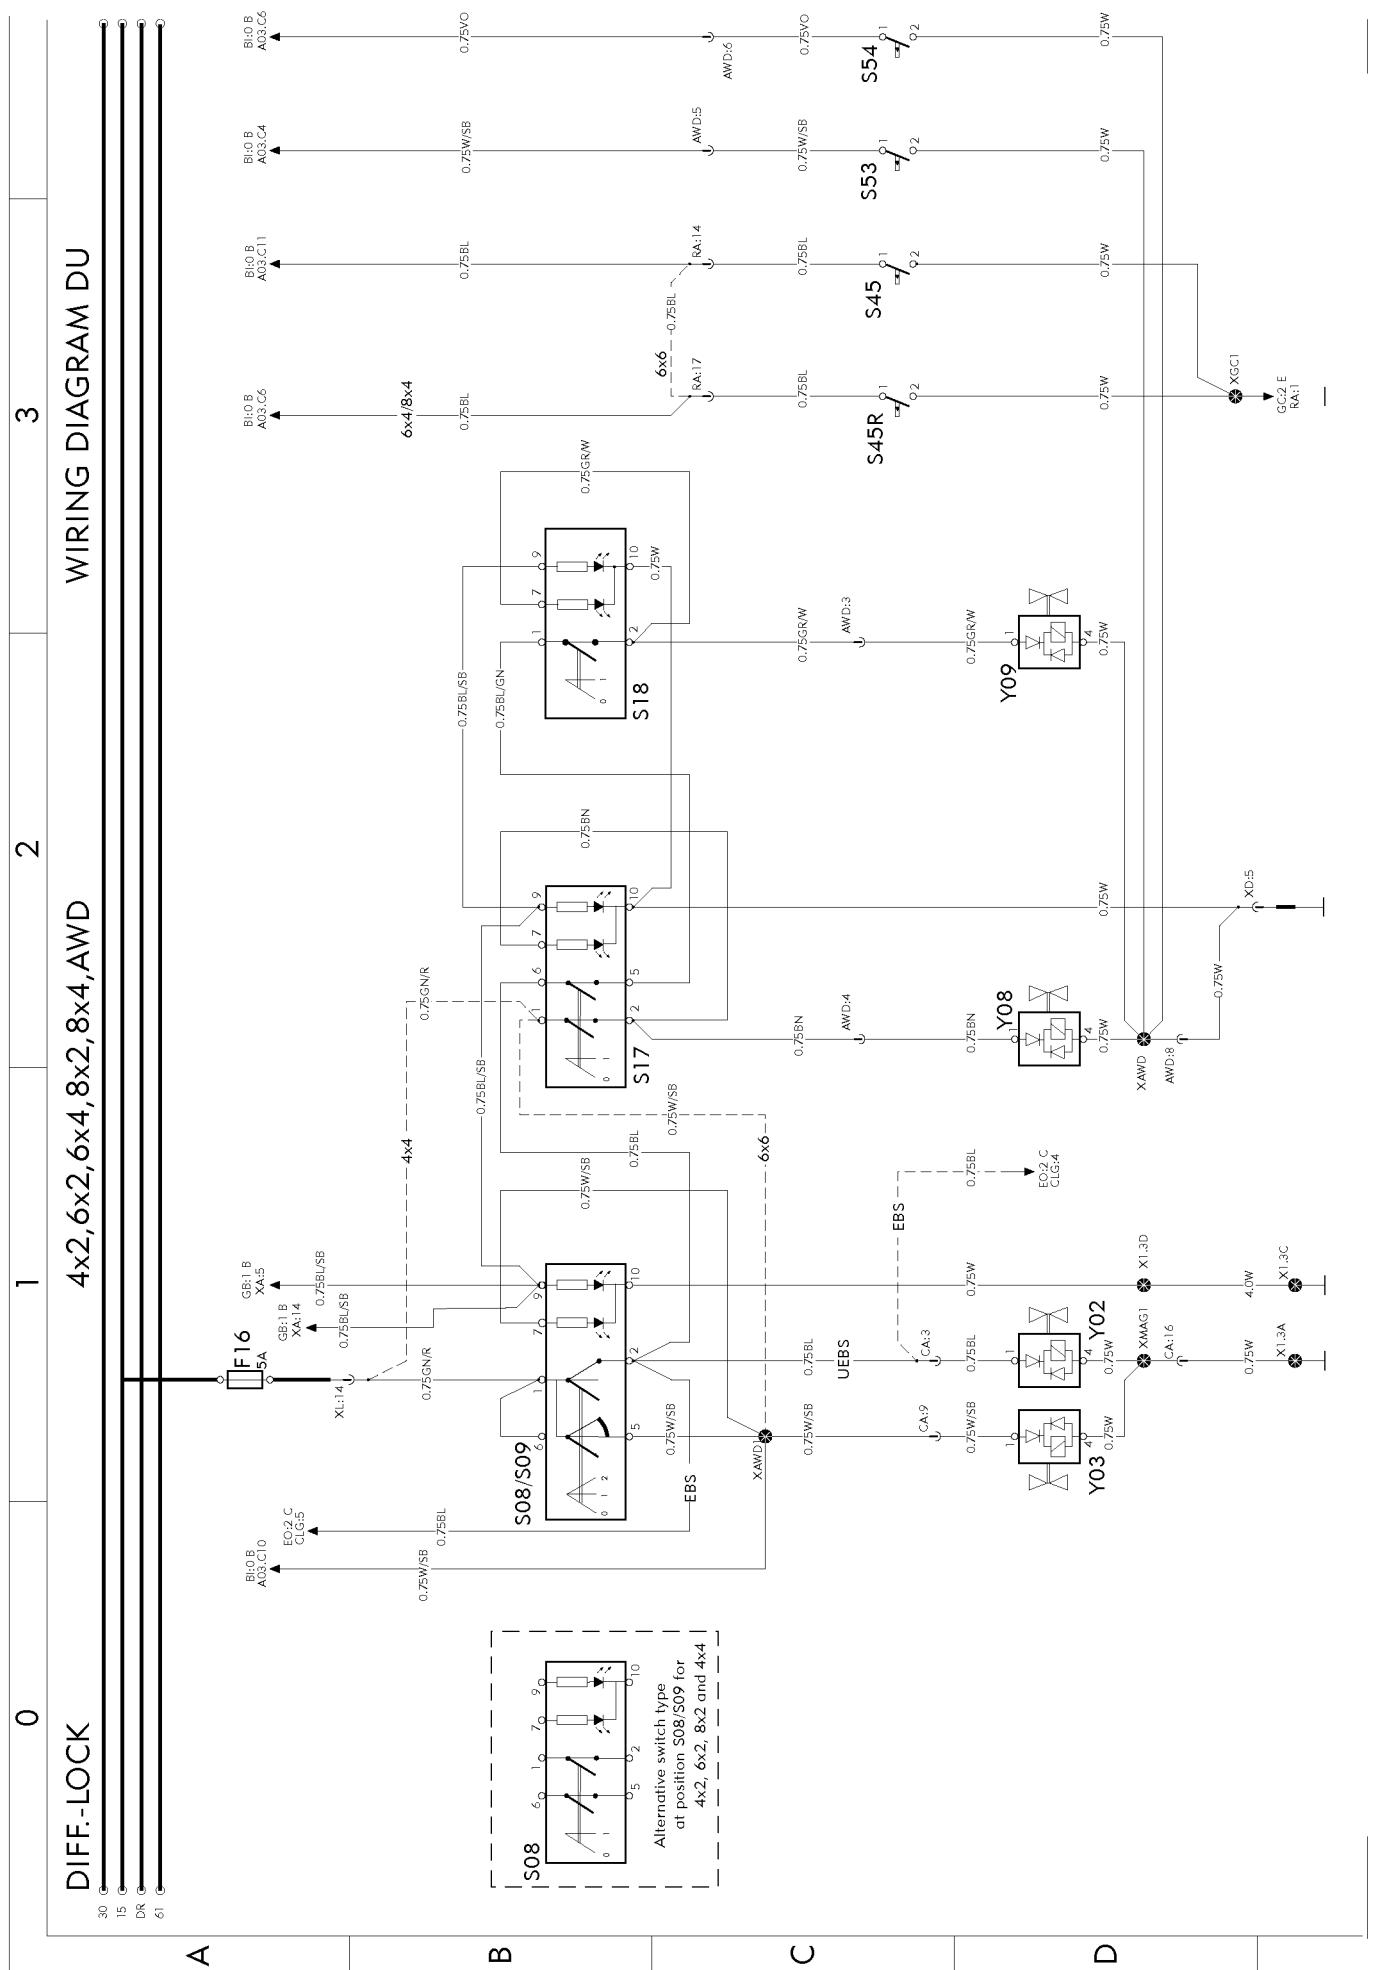


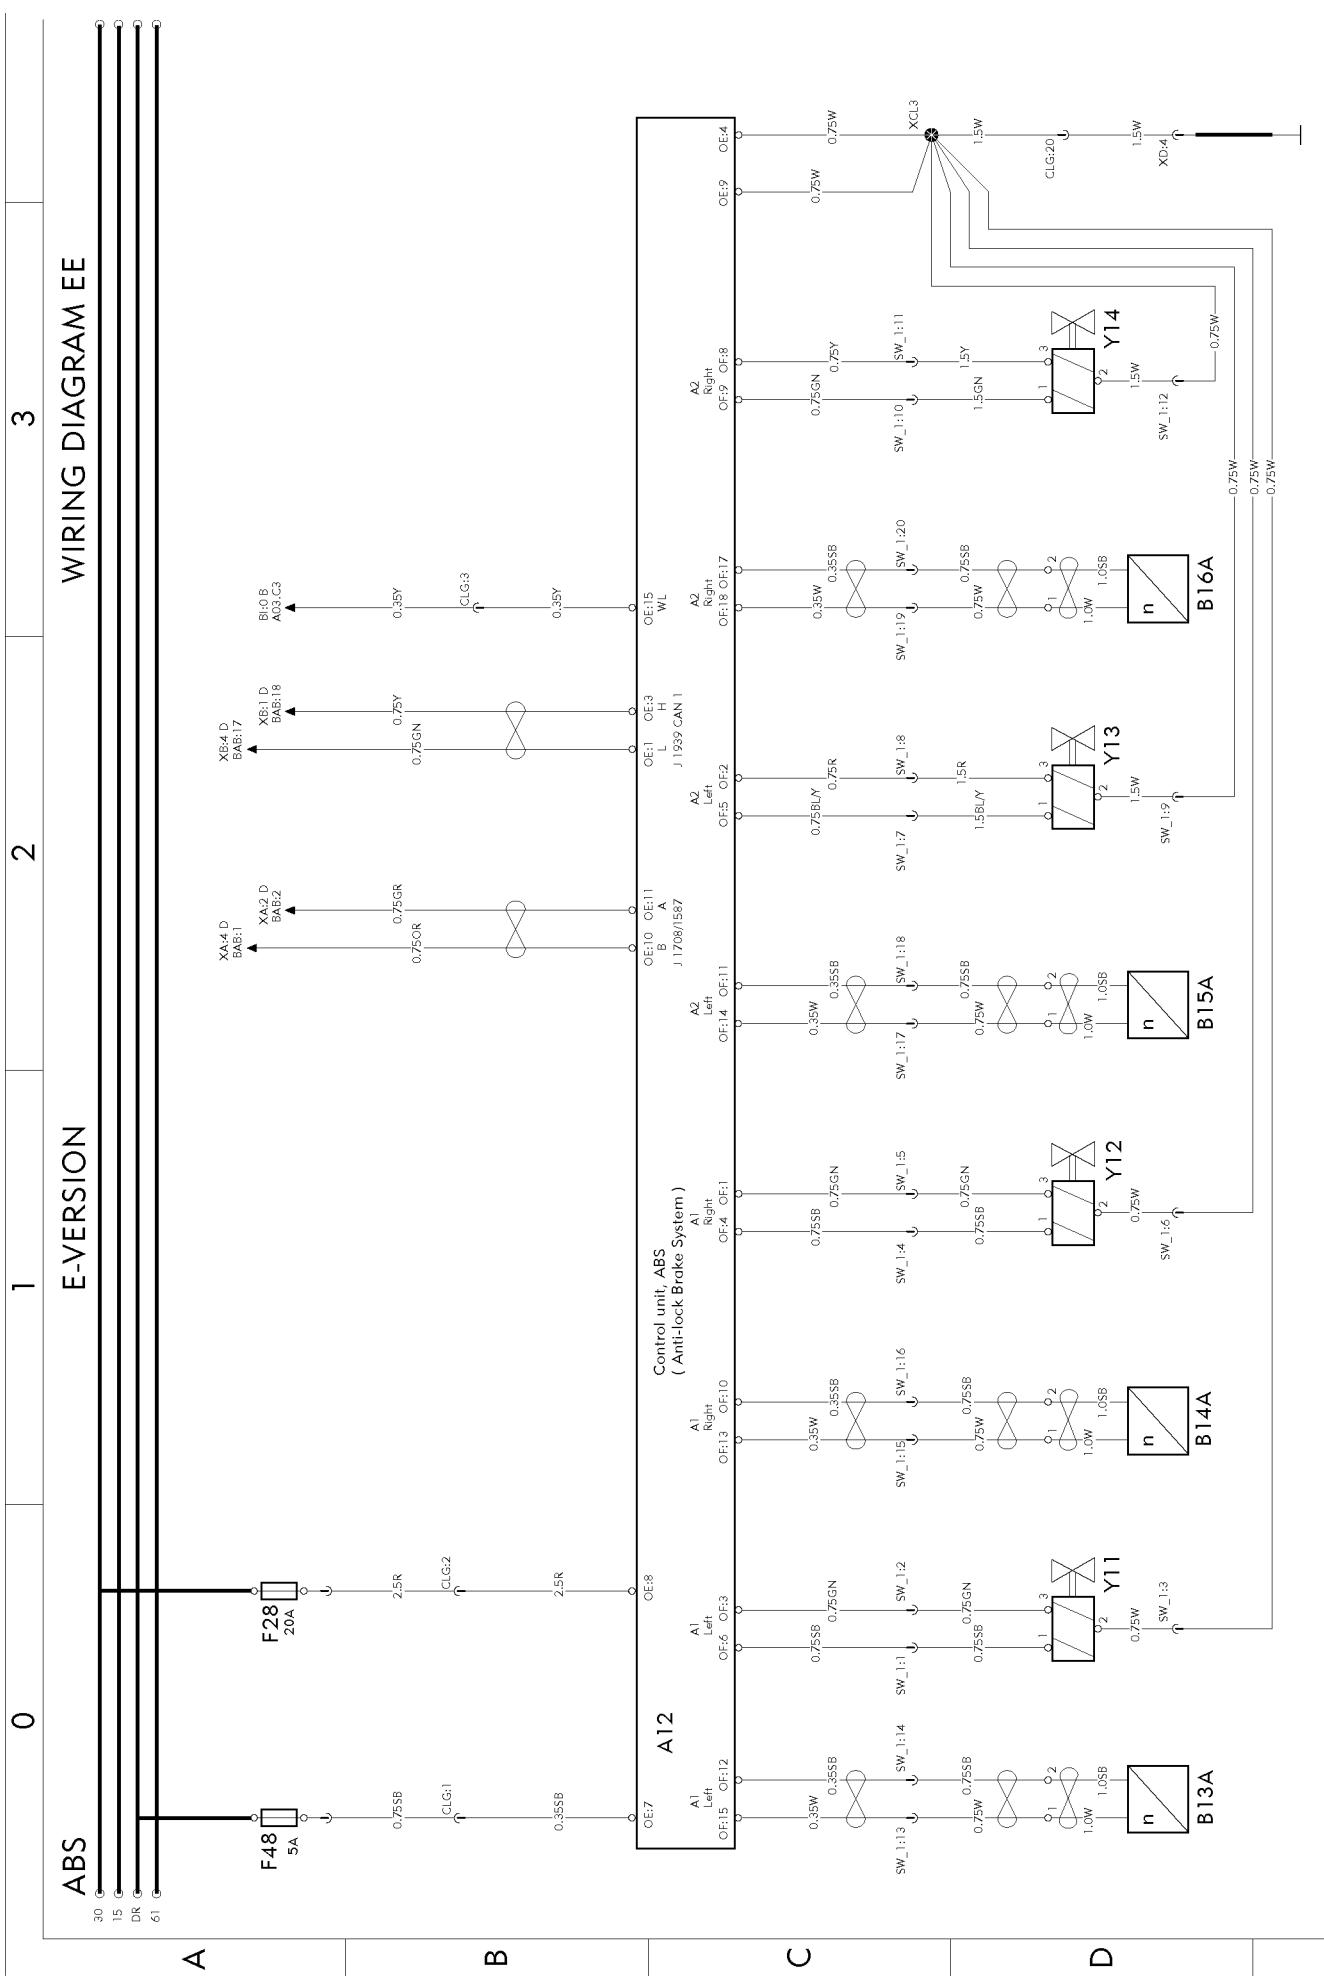

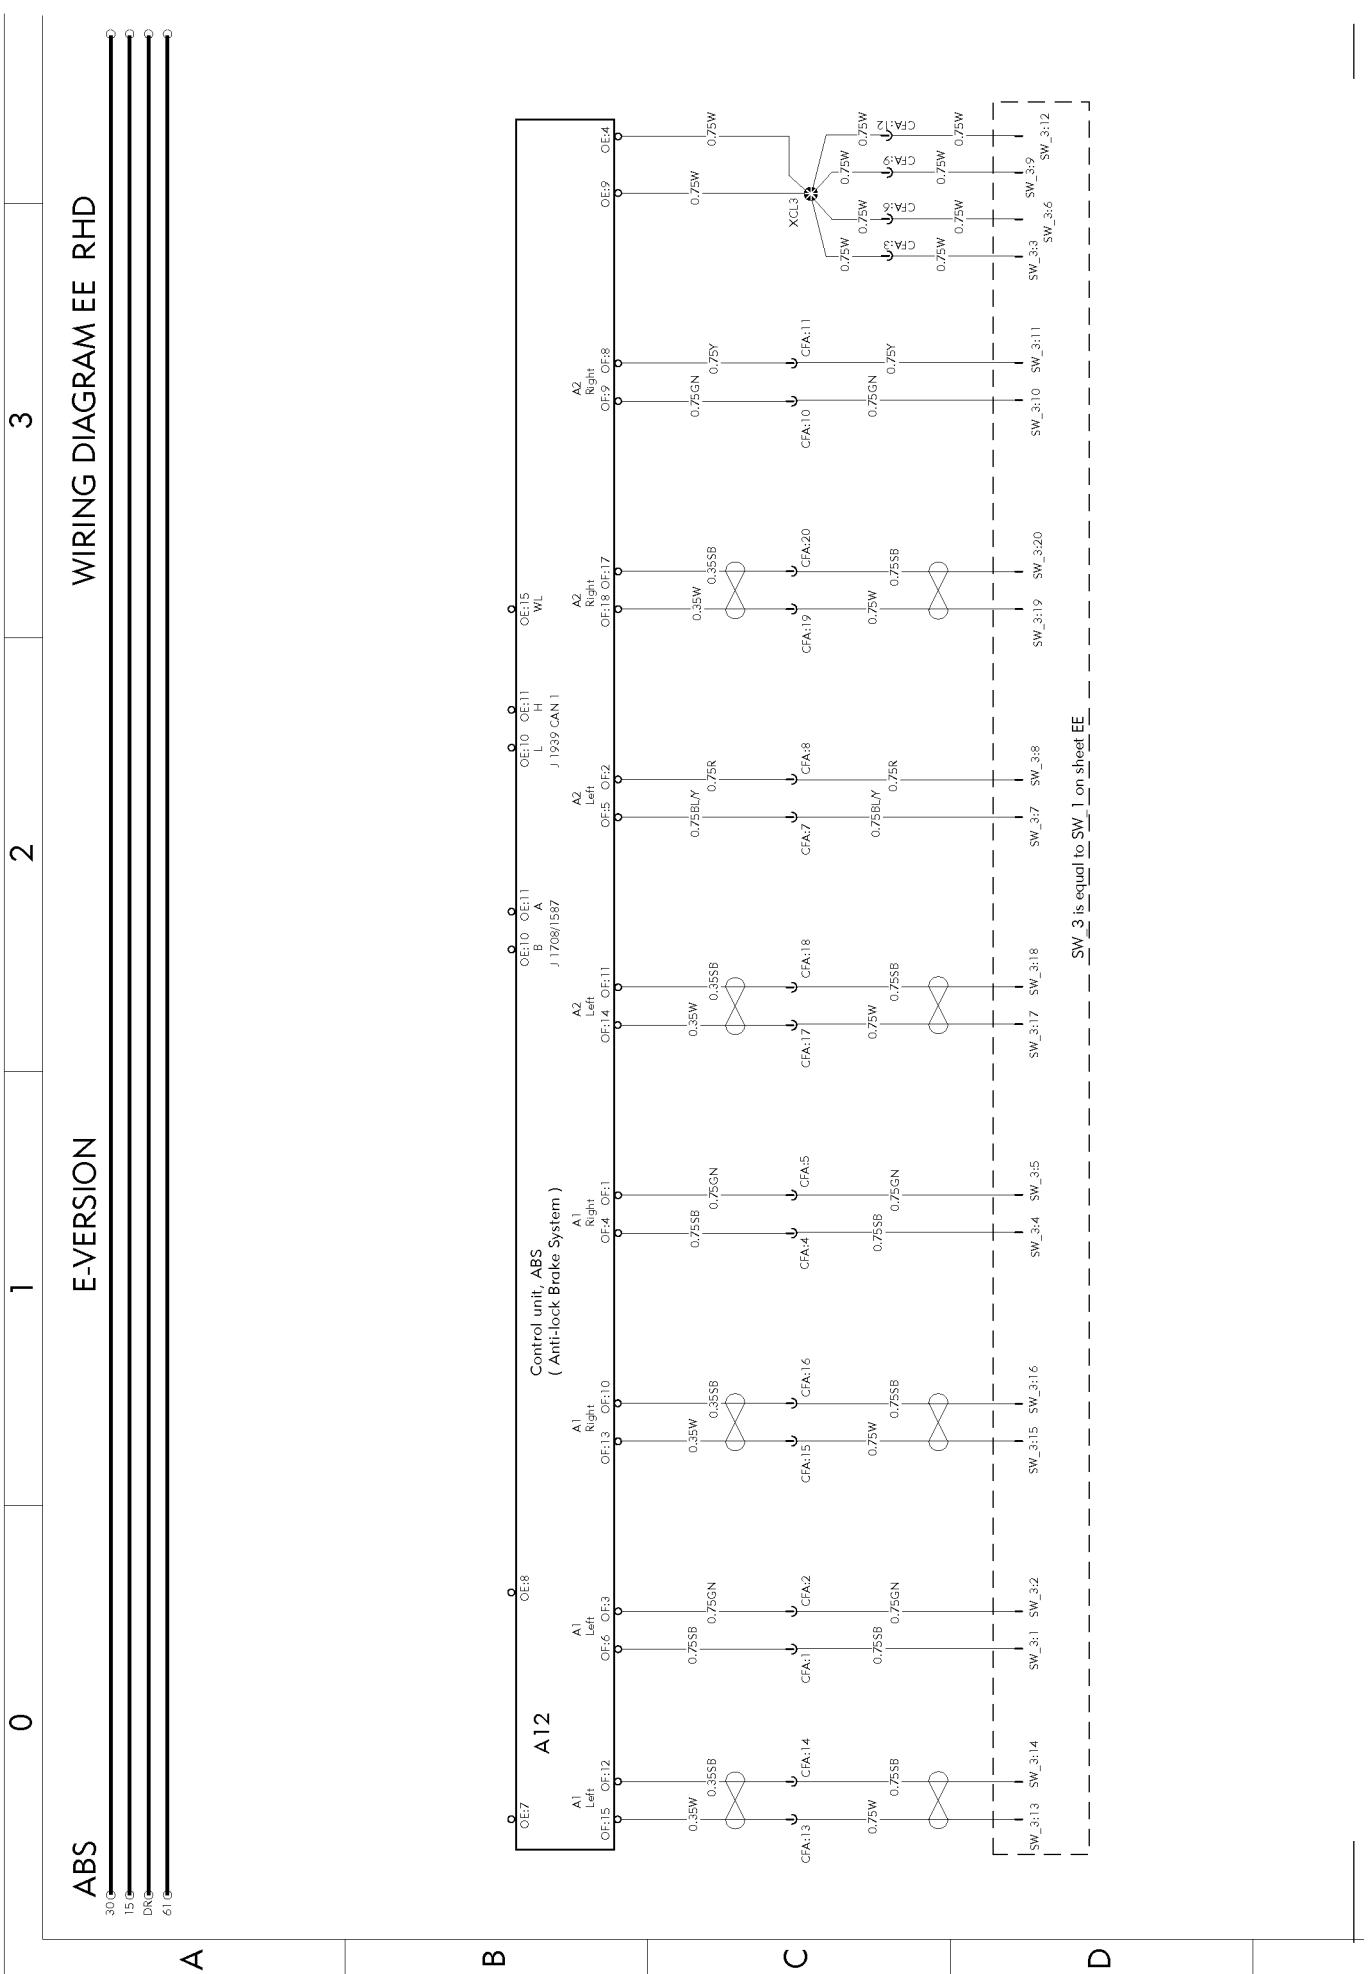



3


ABS 6x2 VERS-SAM MECH./AUTOMATIC GEARBOX

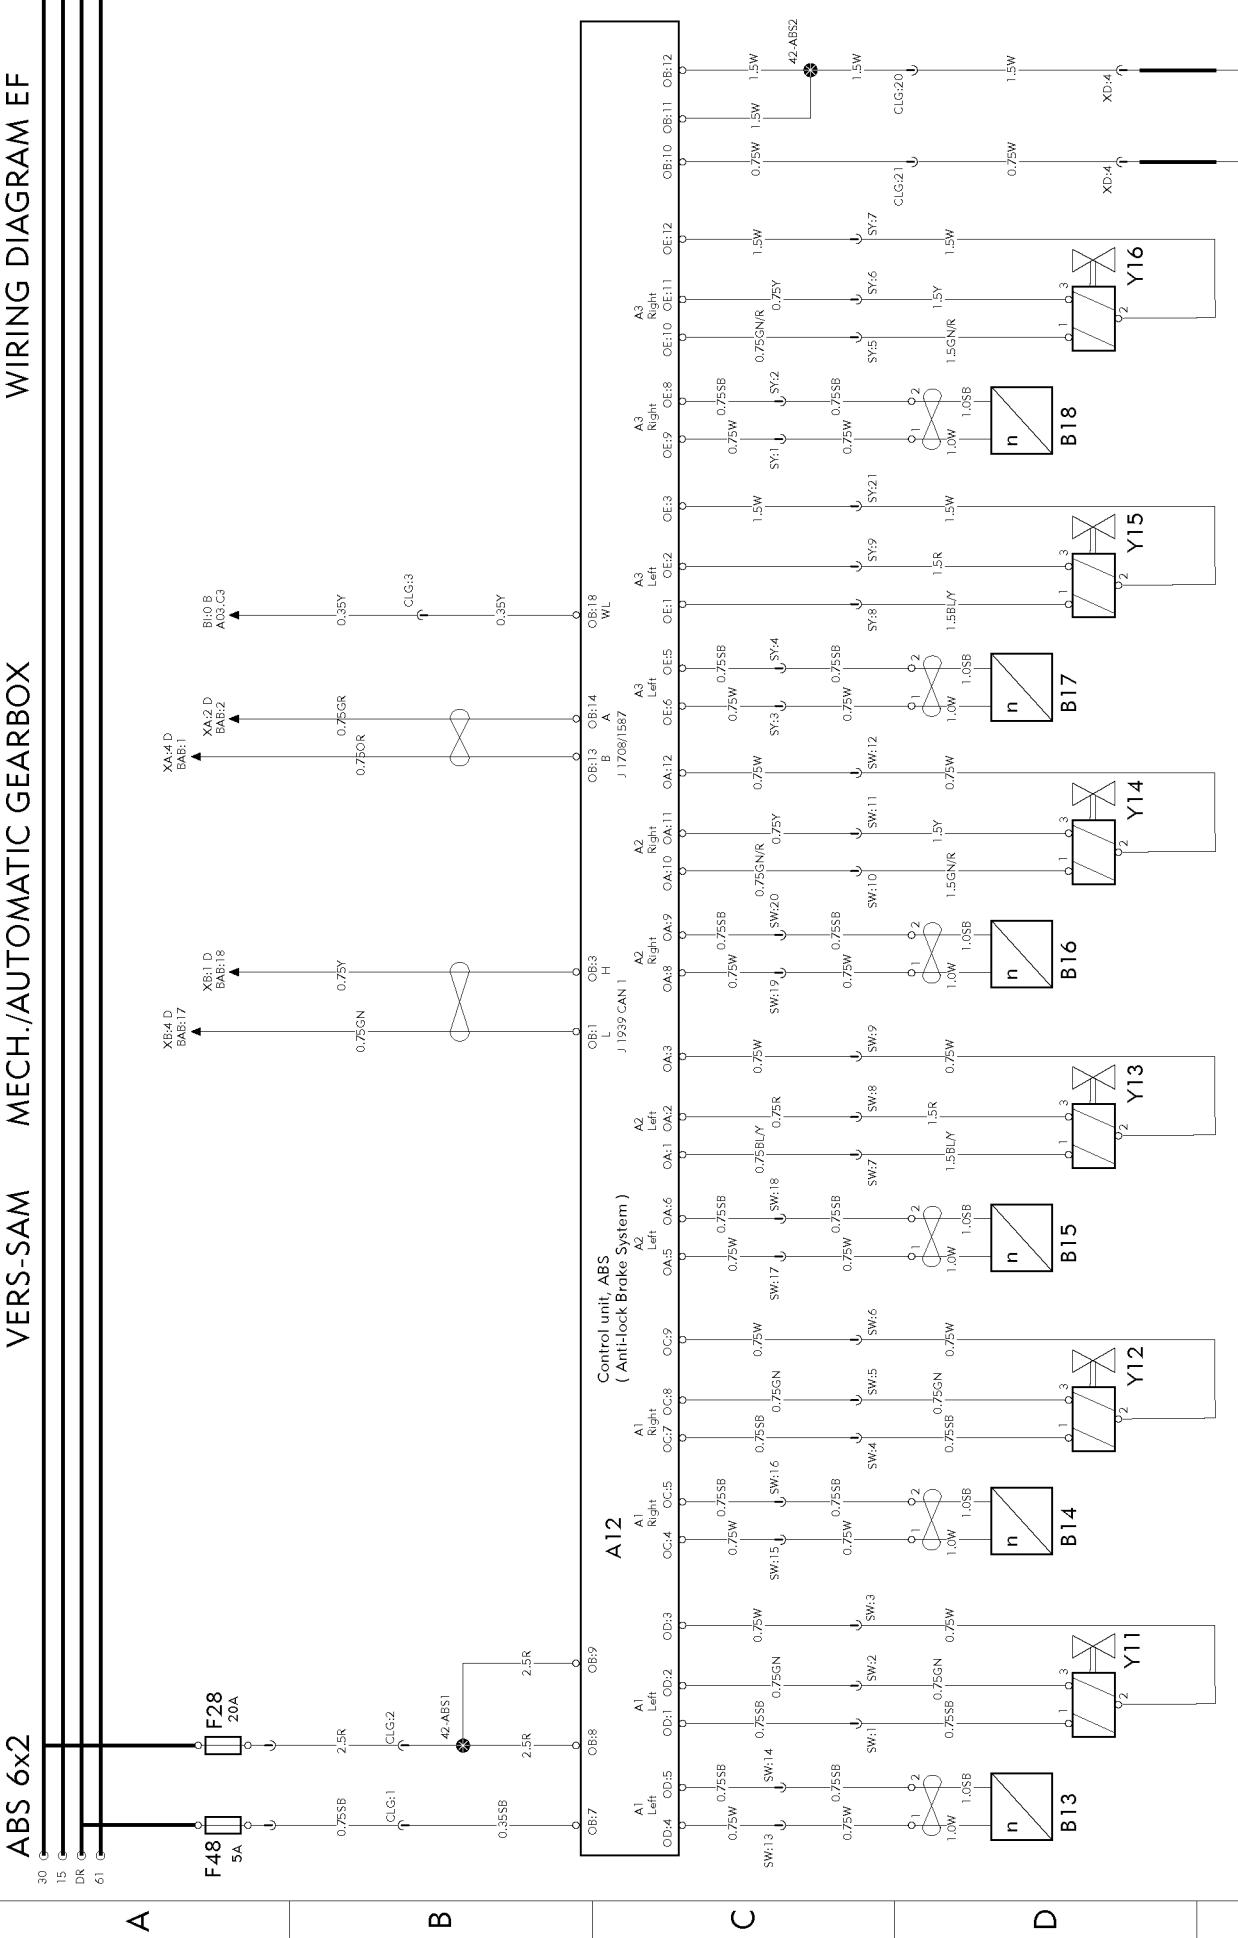

T3020581

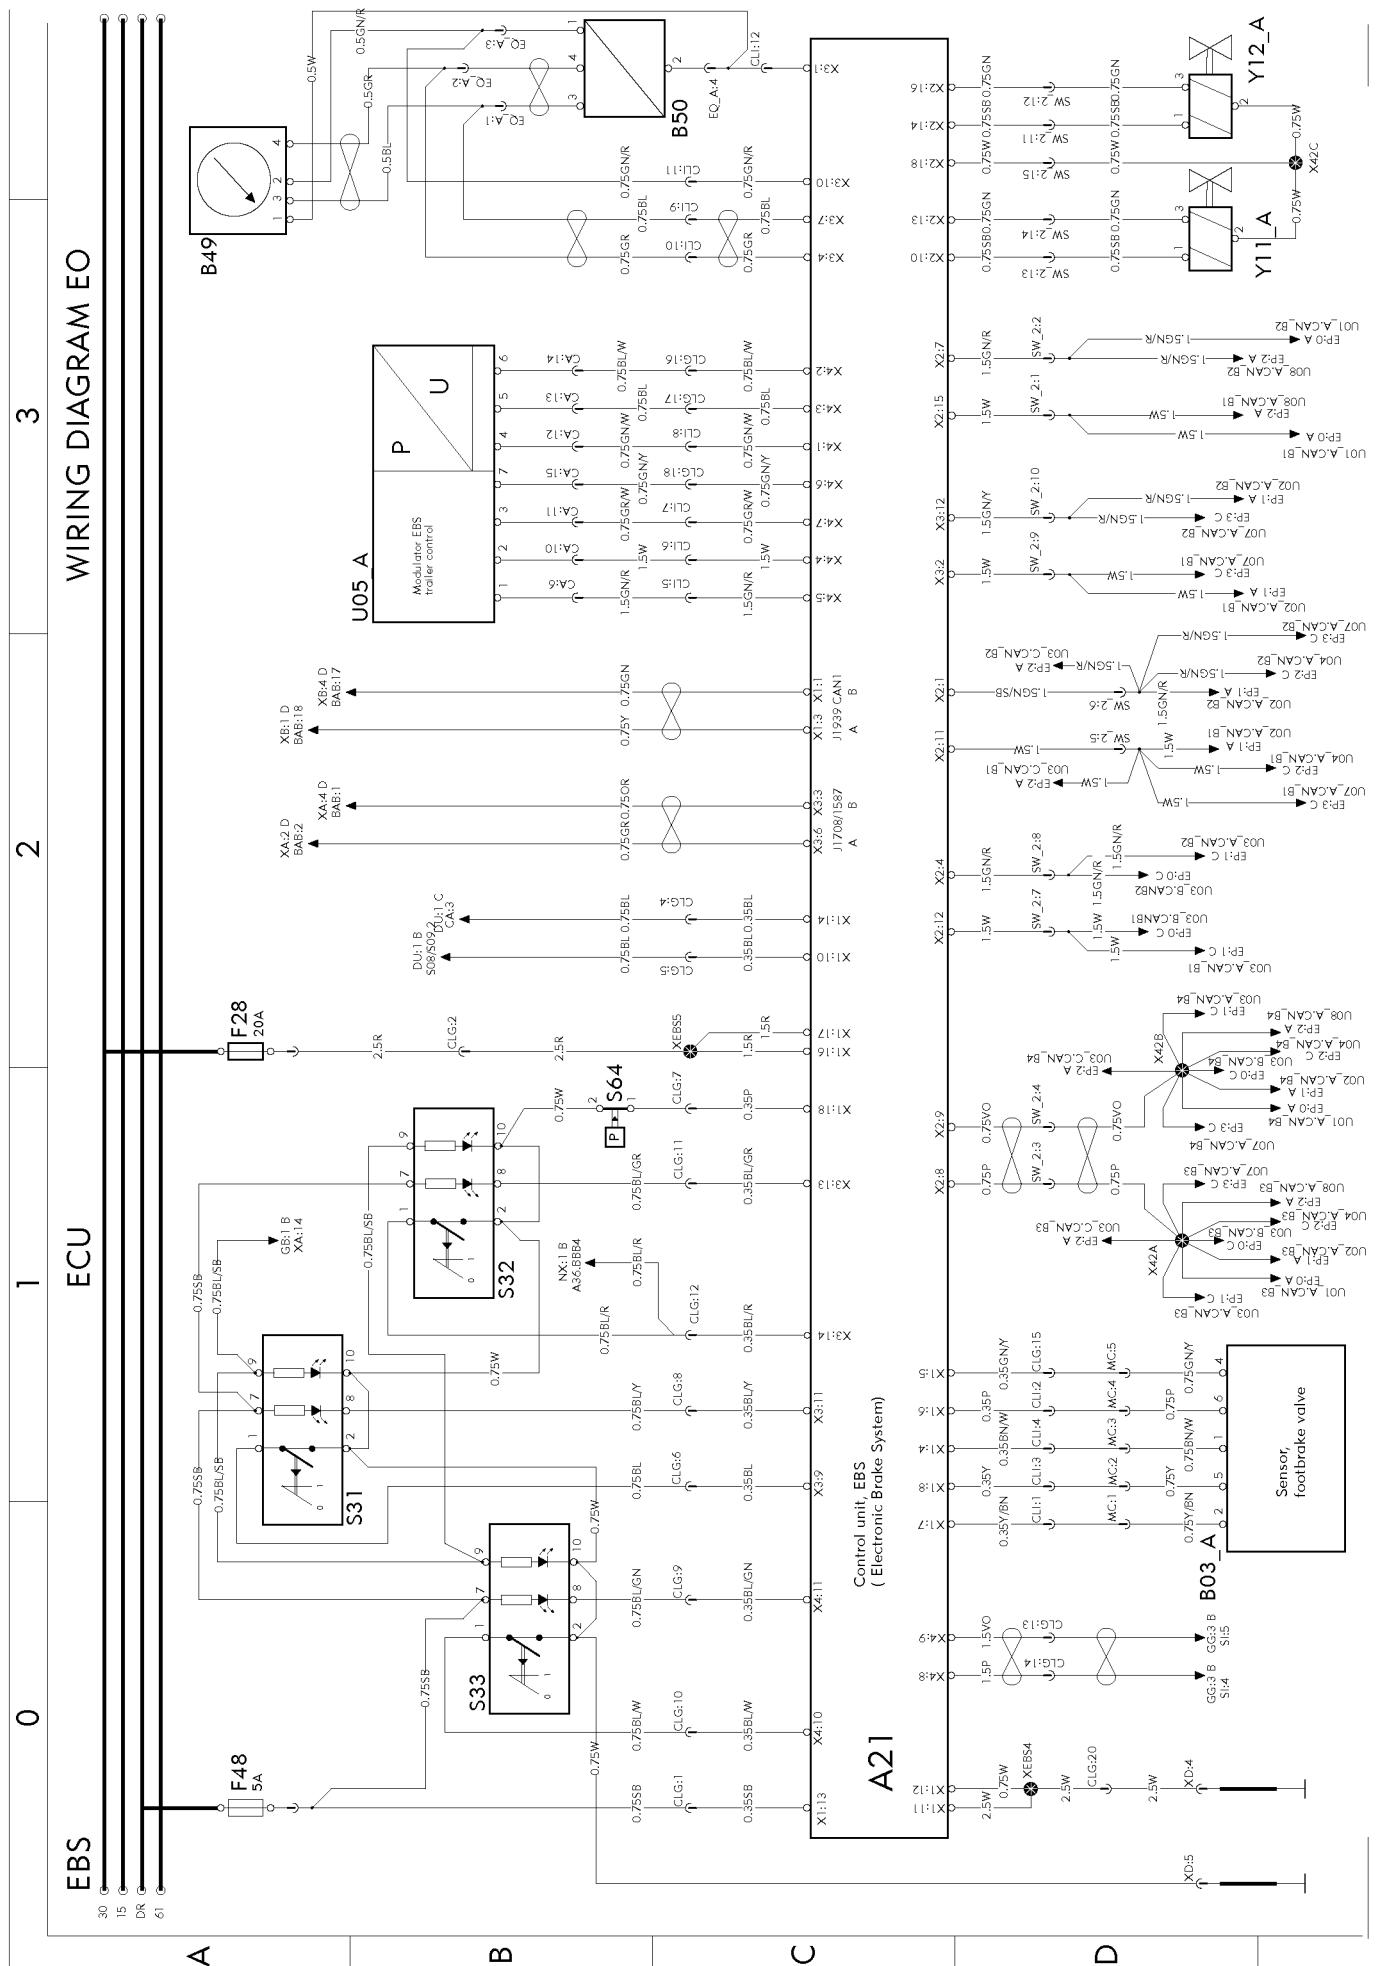

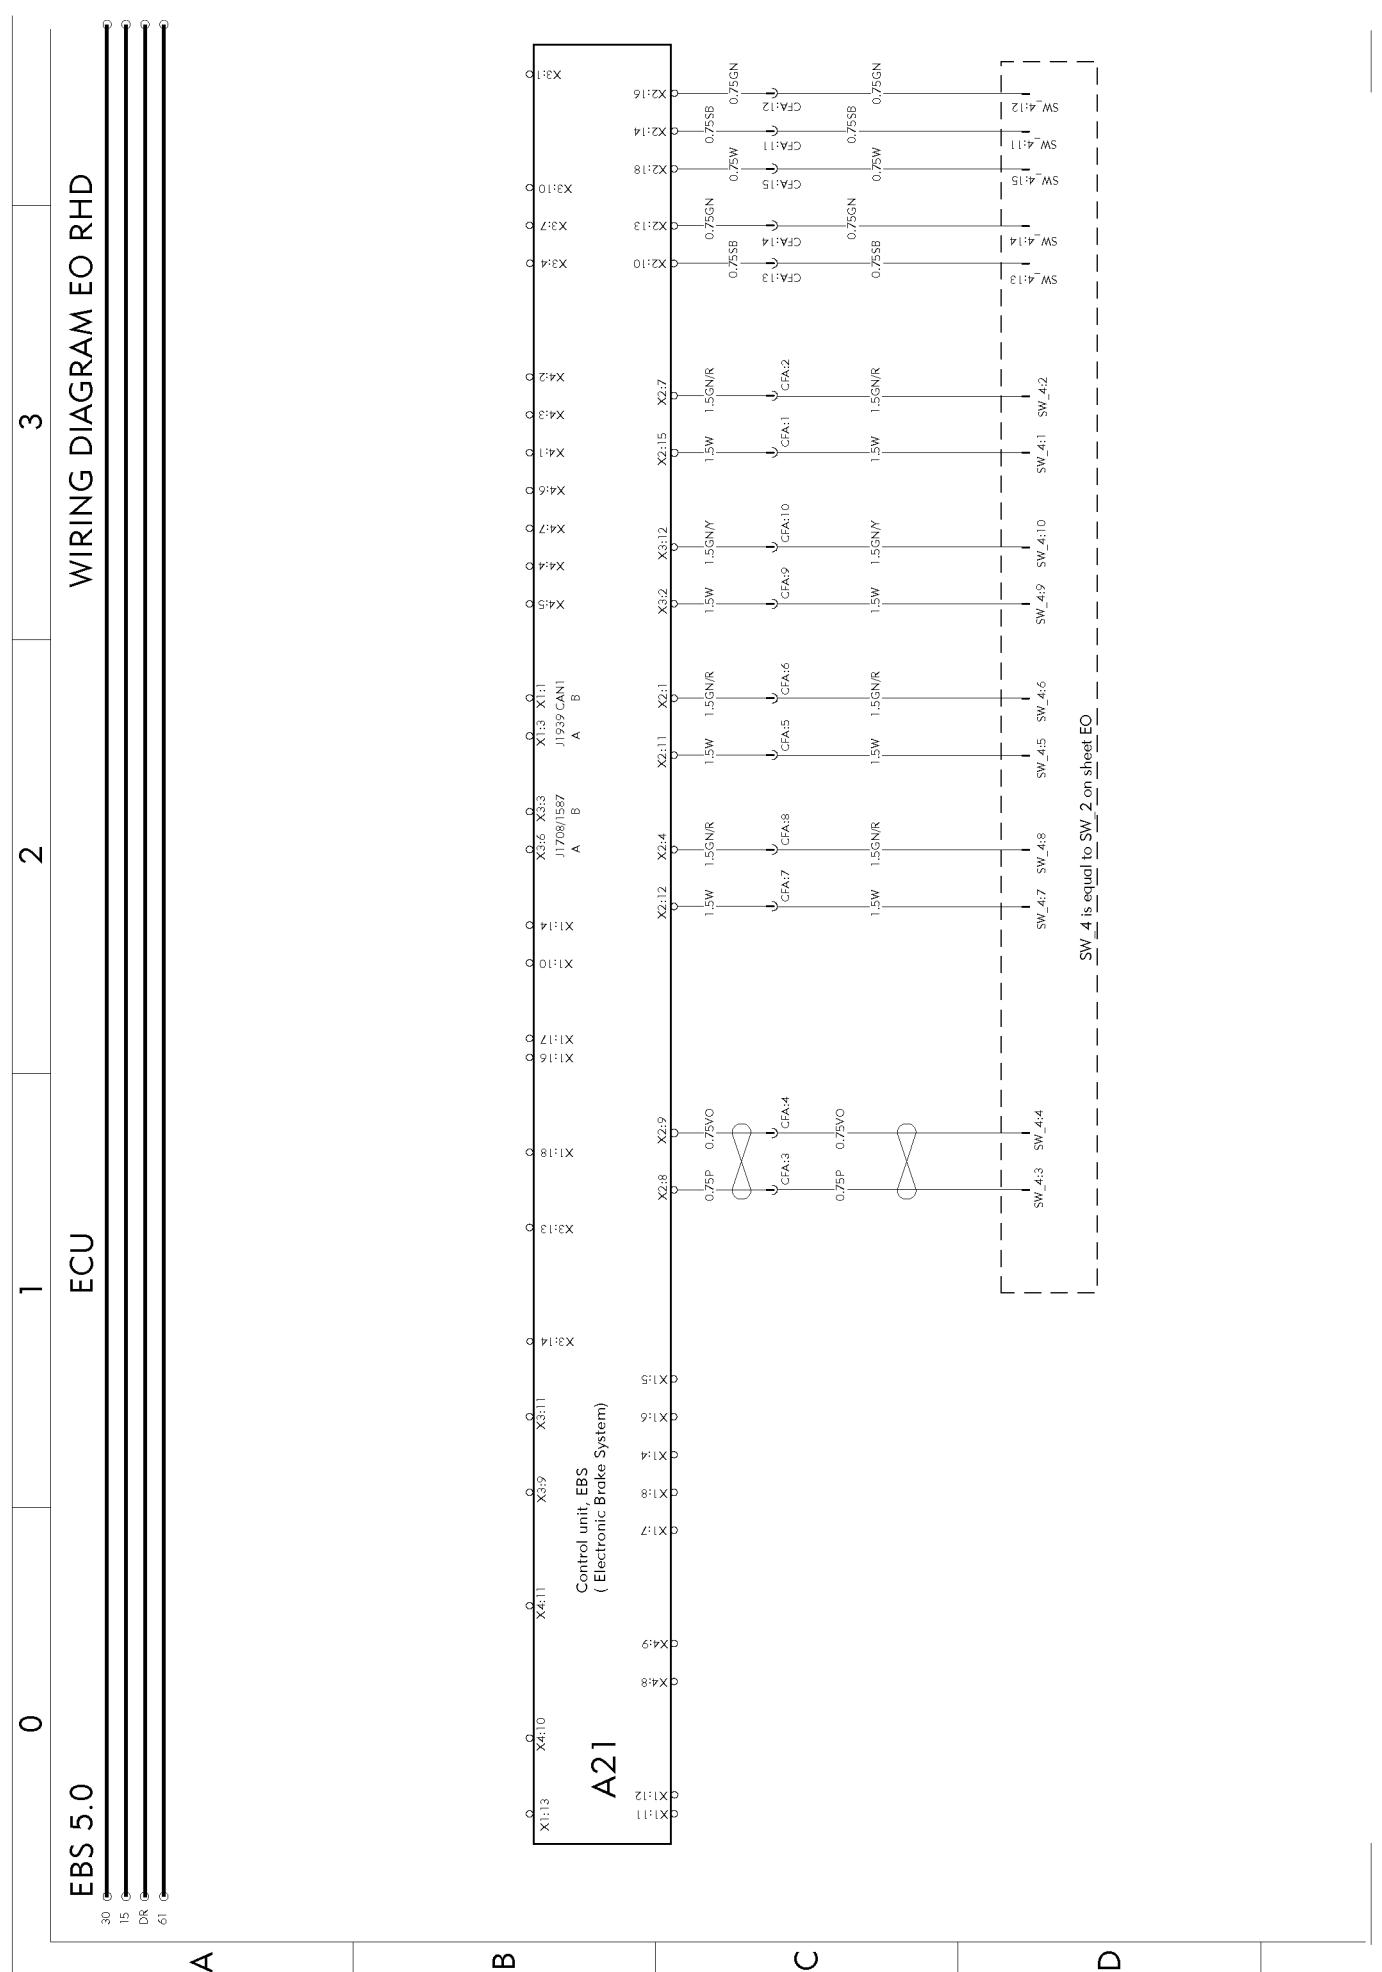

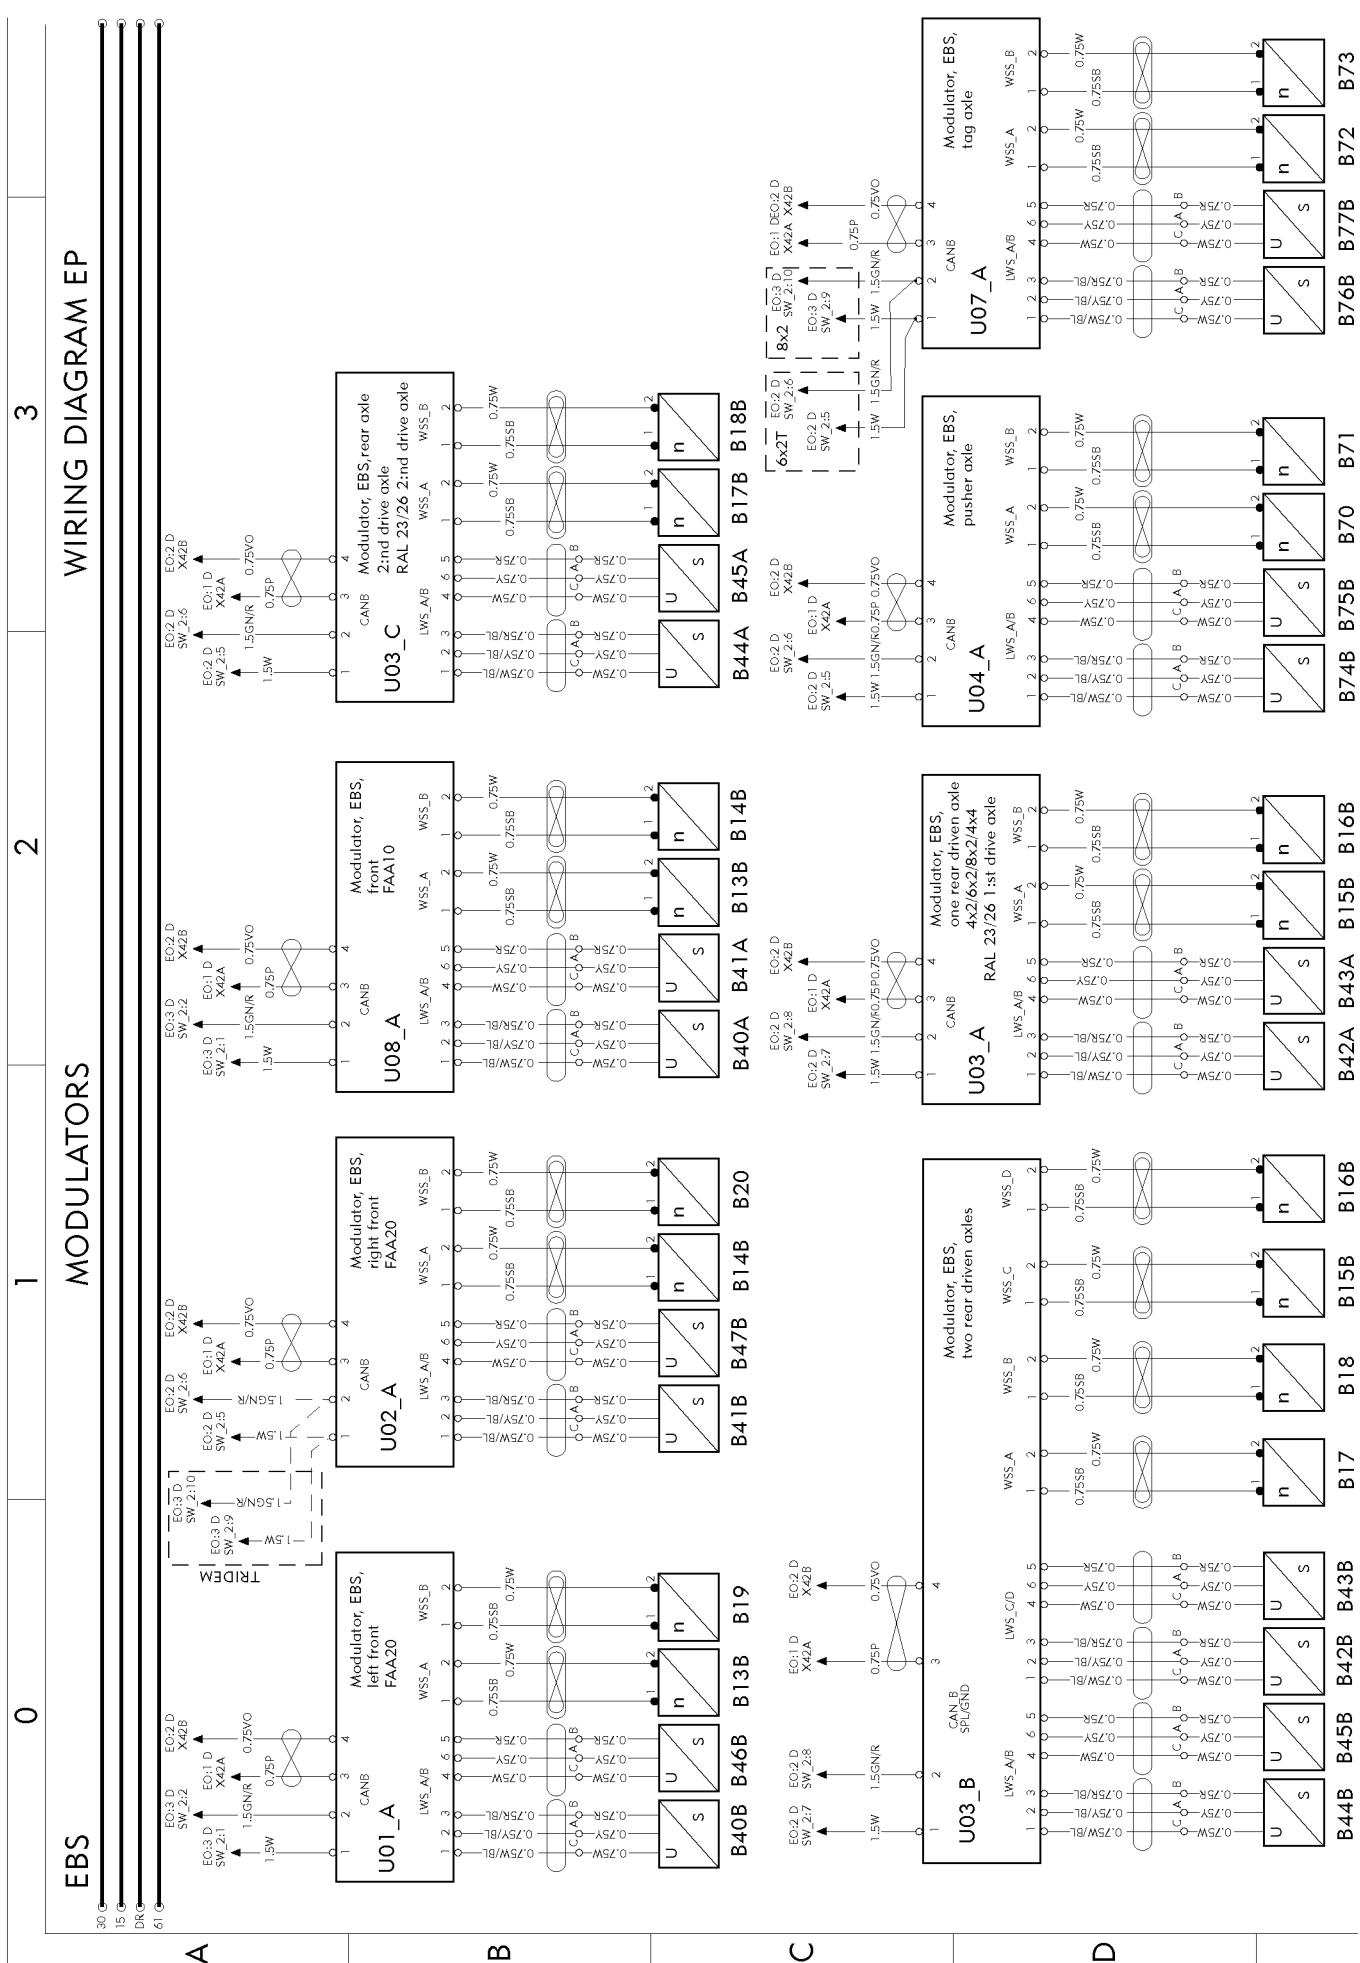

T3028414

3


2

1


0

AIR SUSPENSION


WIRING DIAGRAM FA

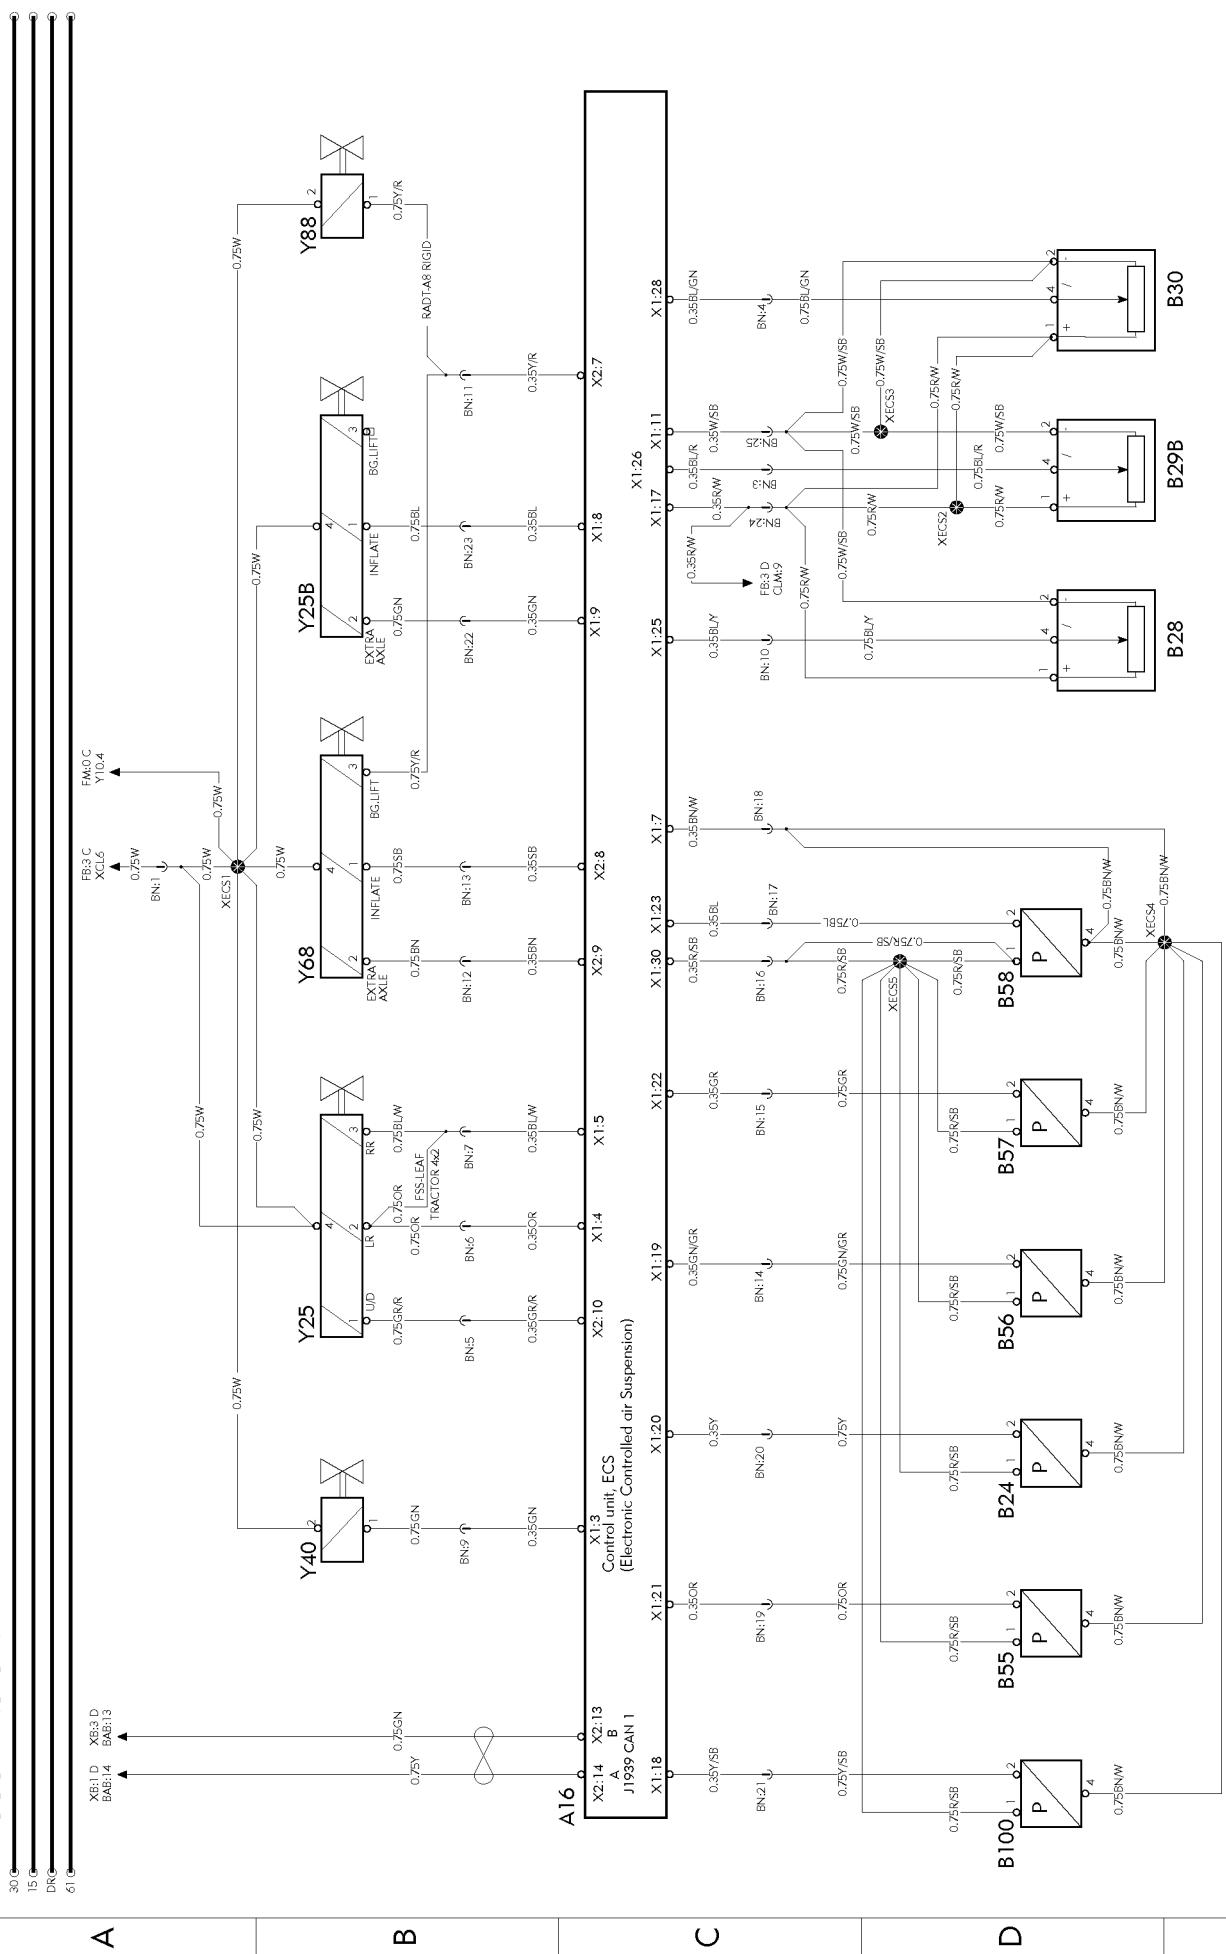



T3028871

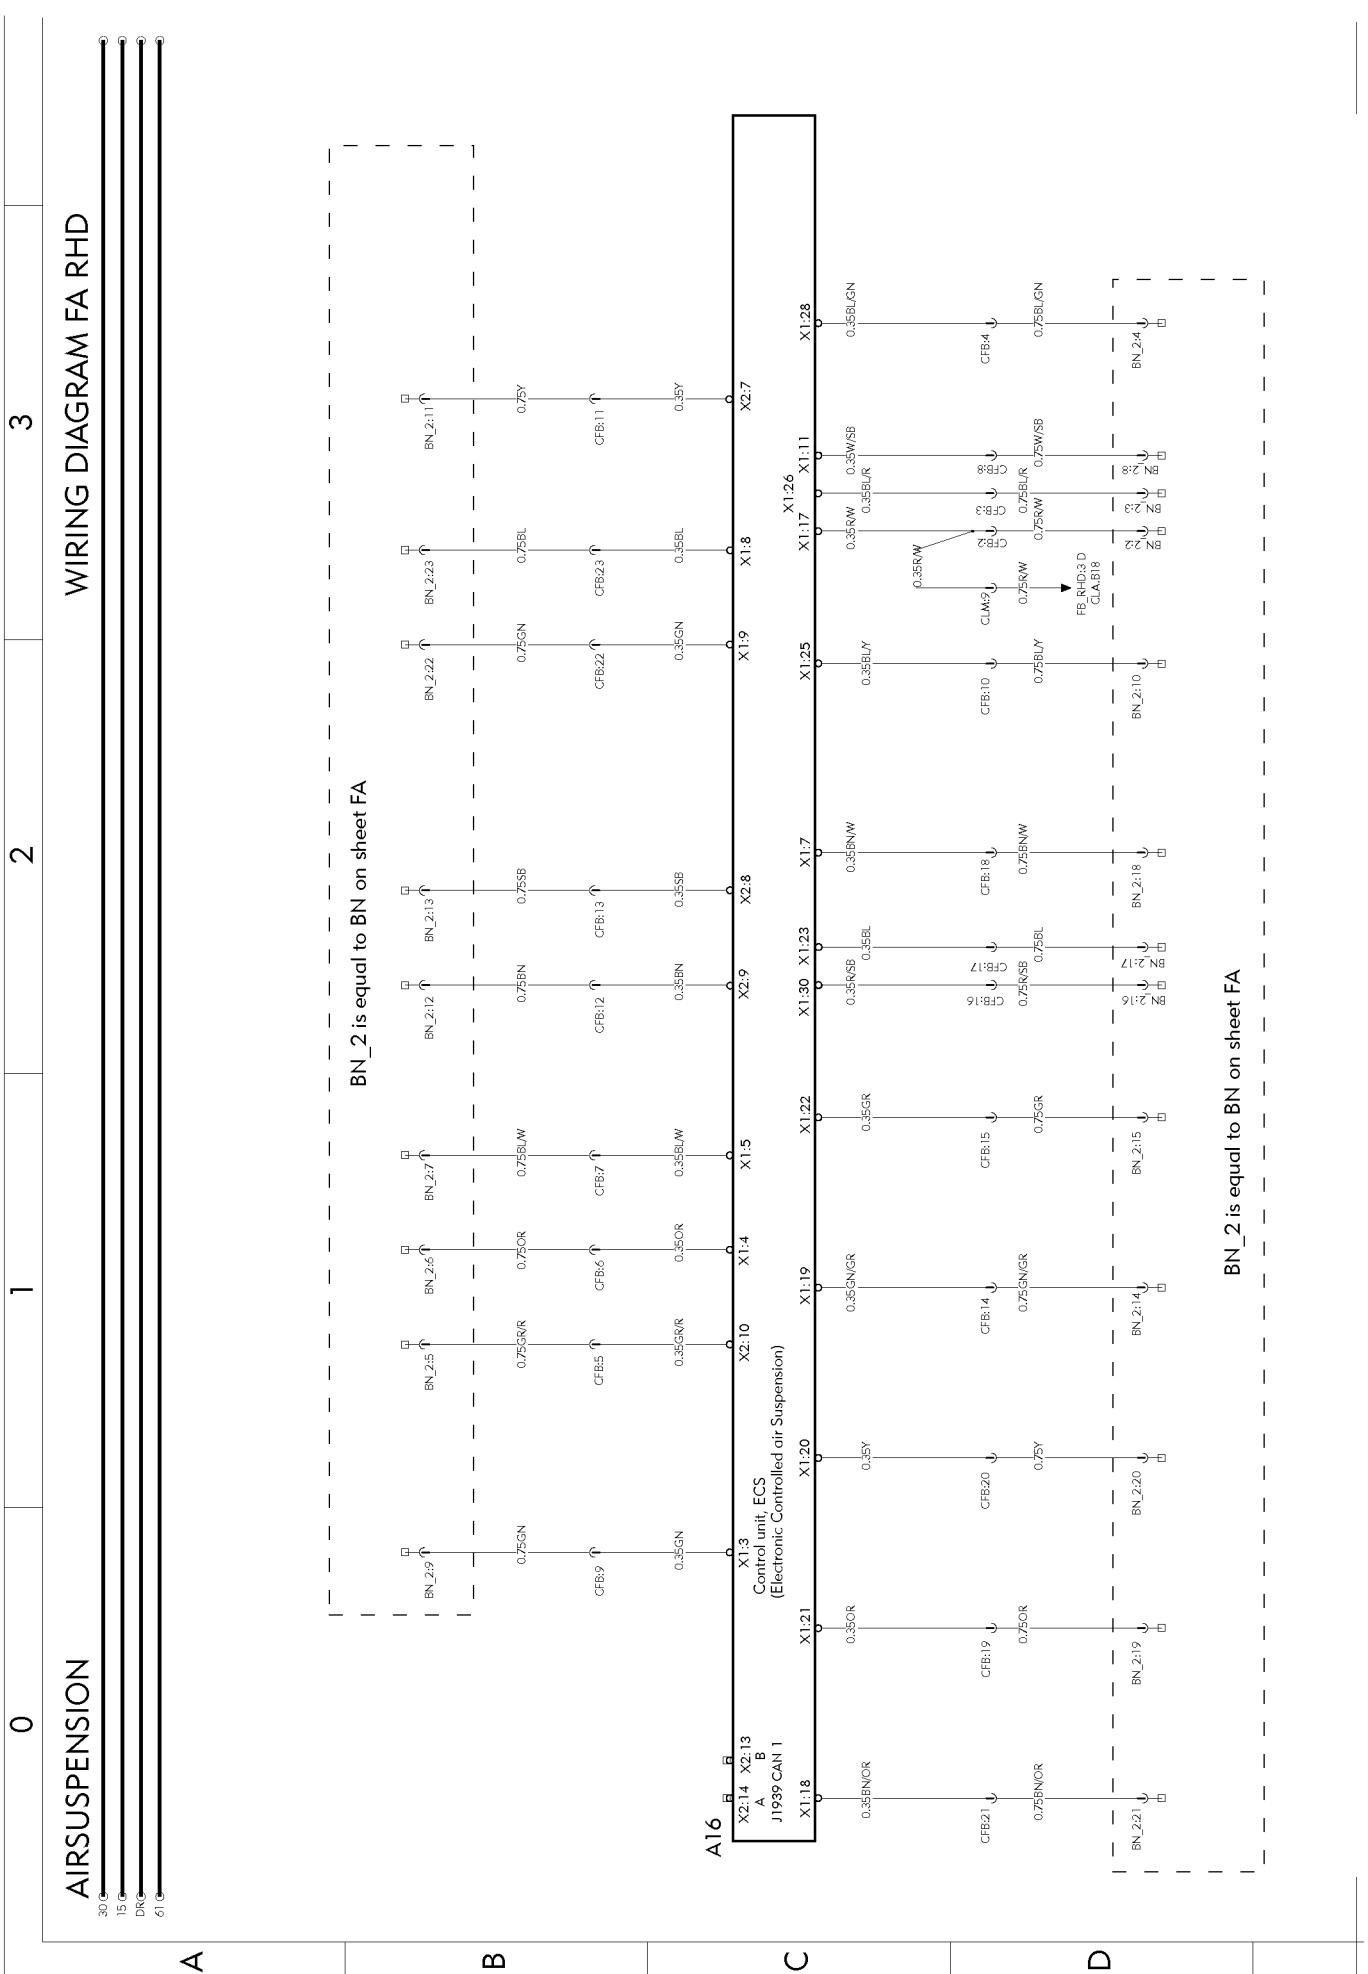



T3028872

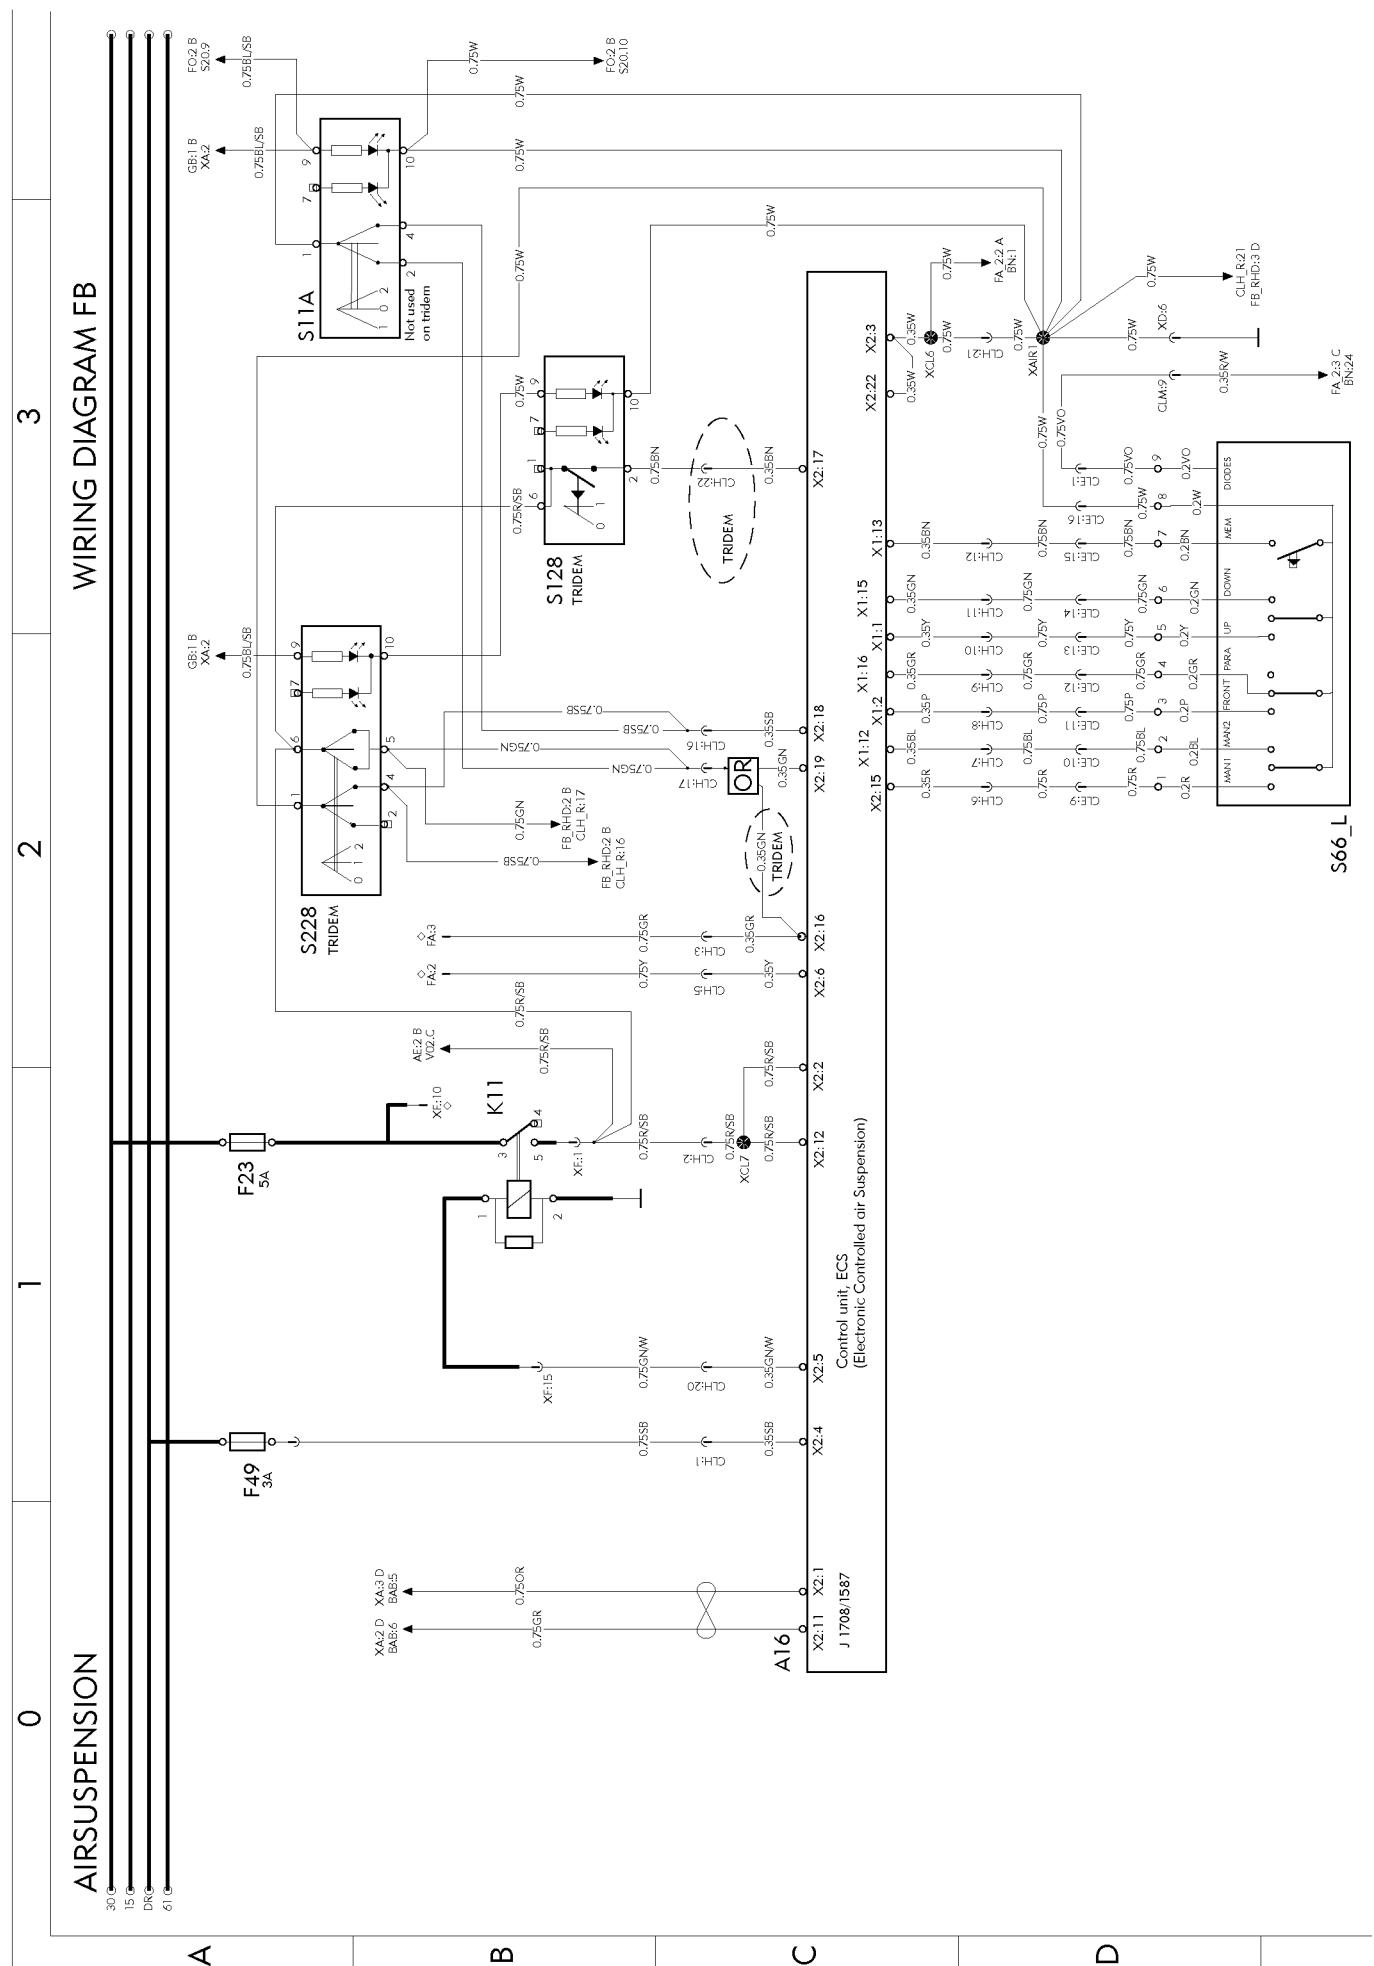


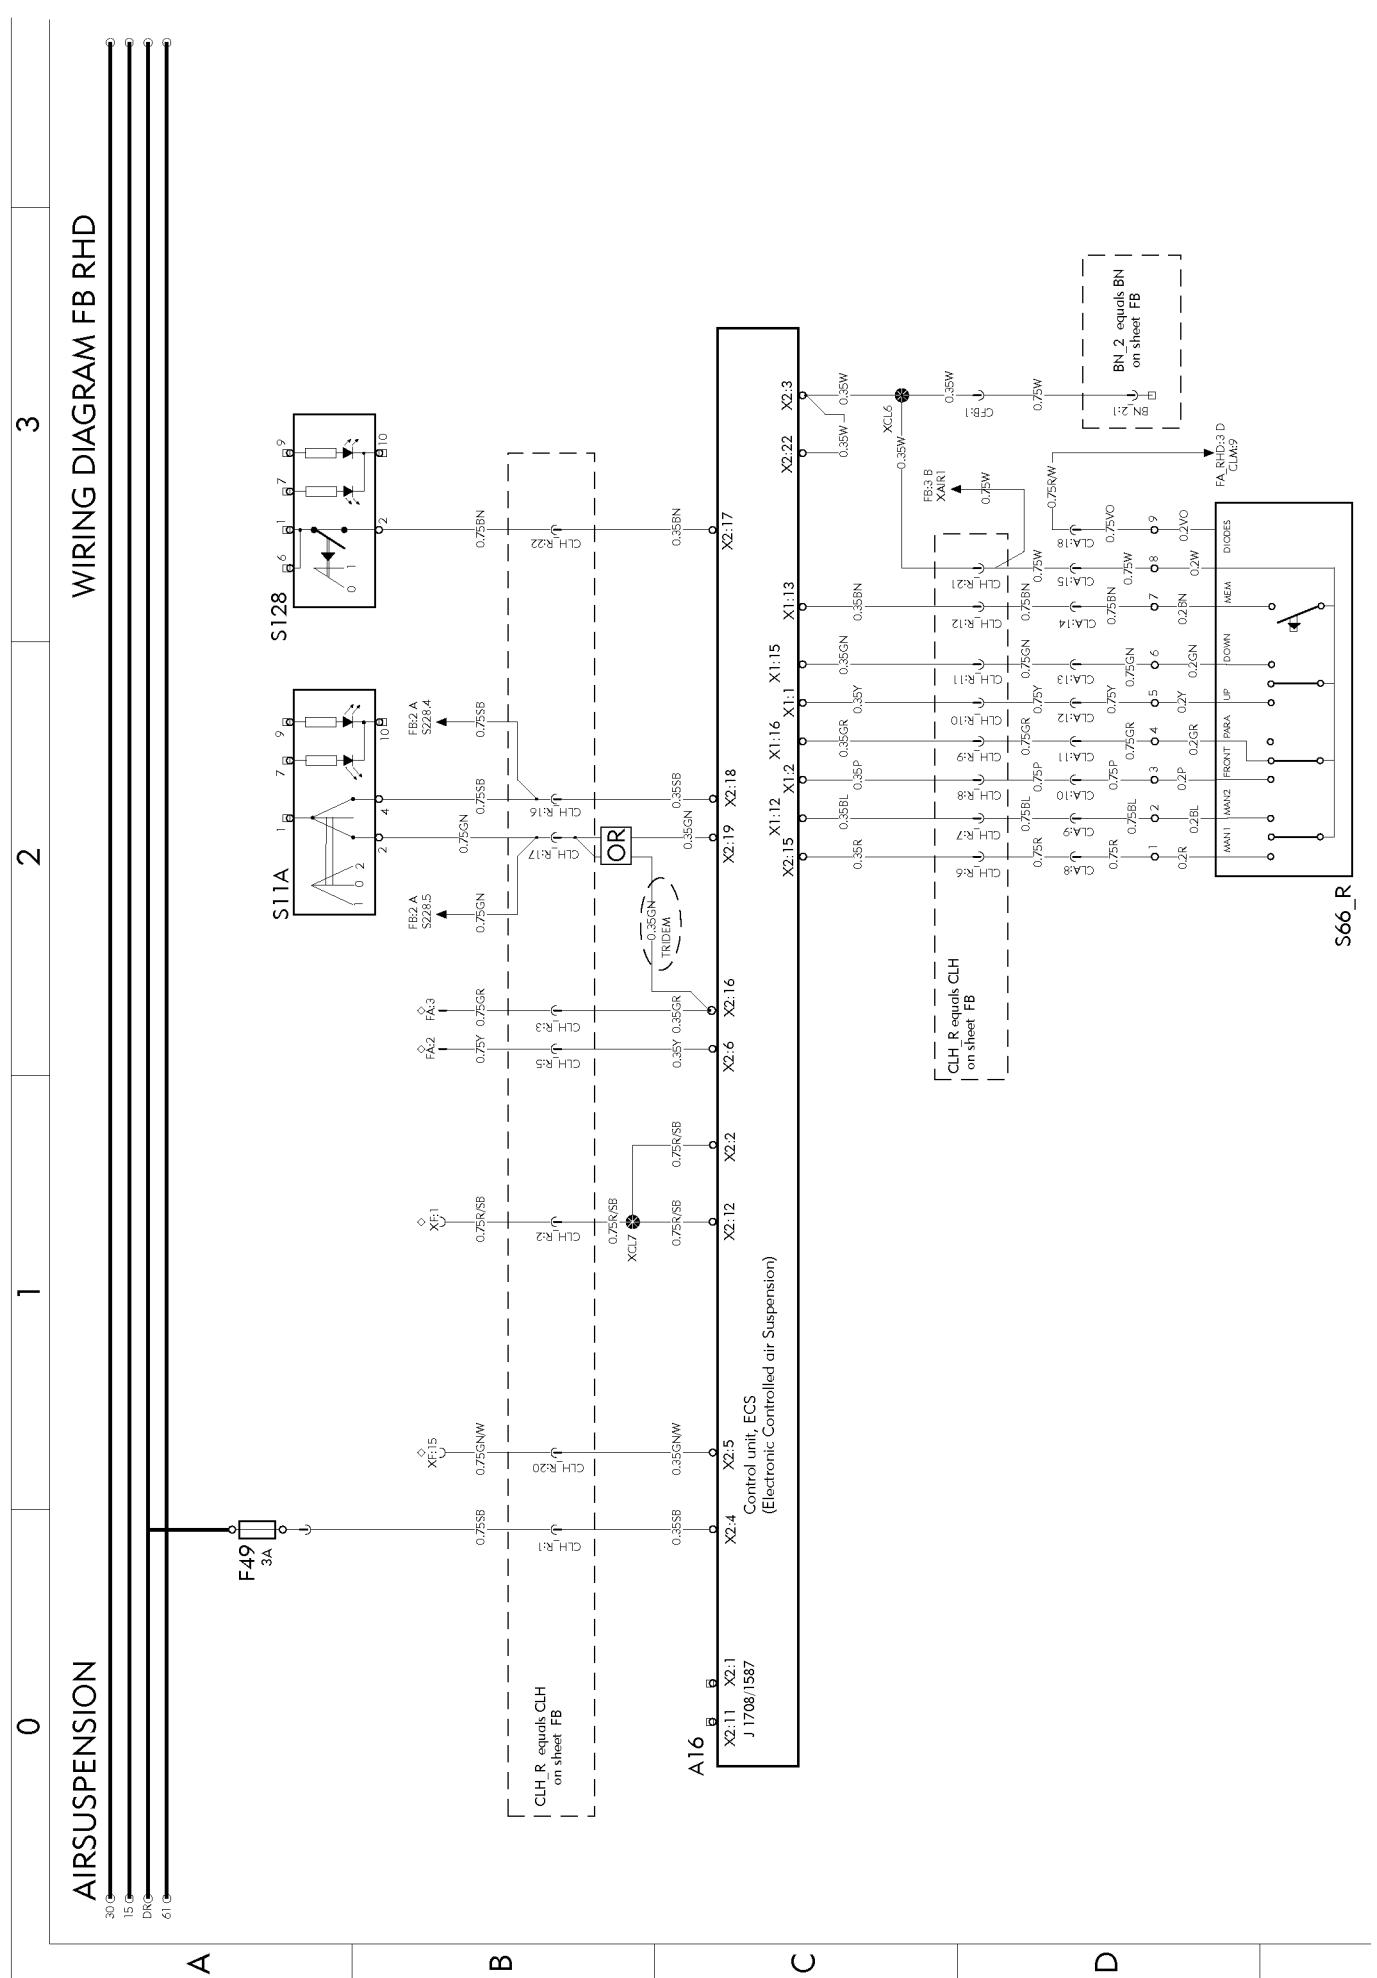


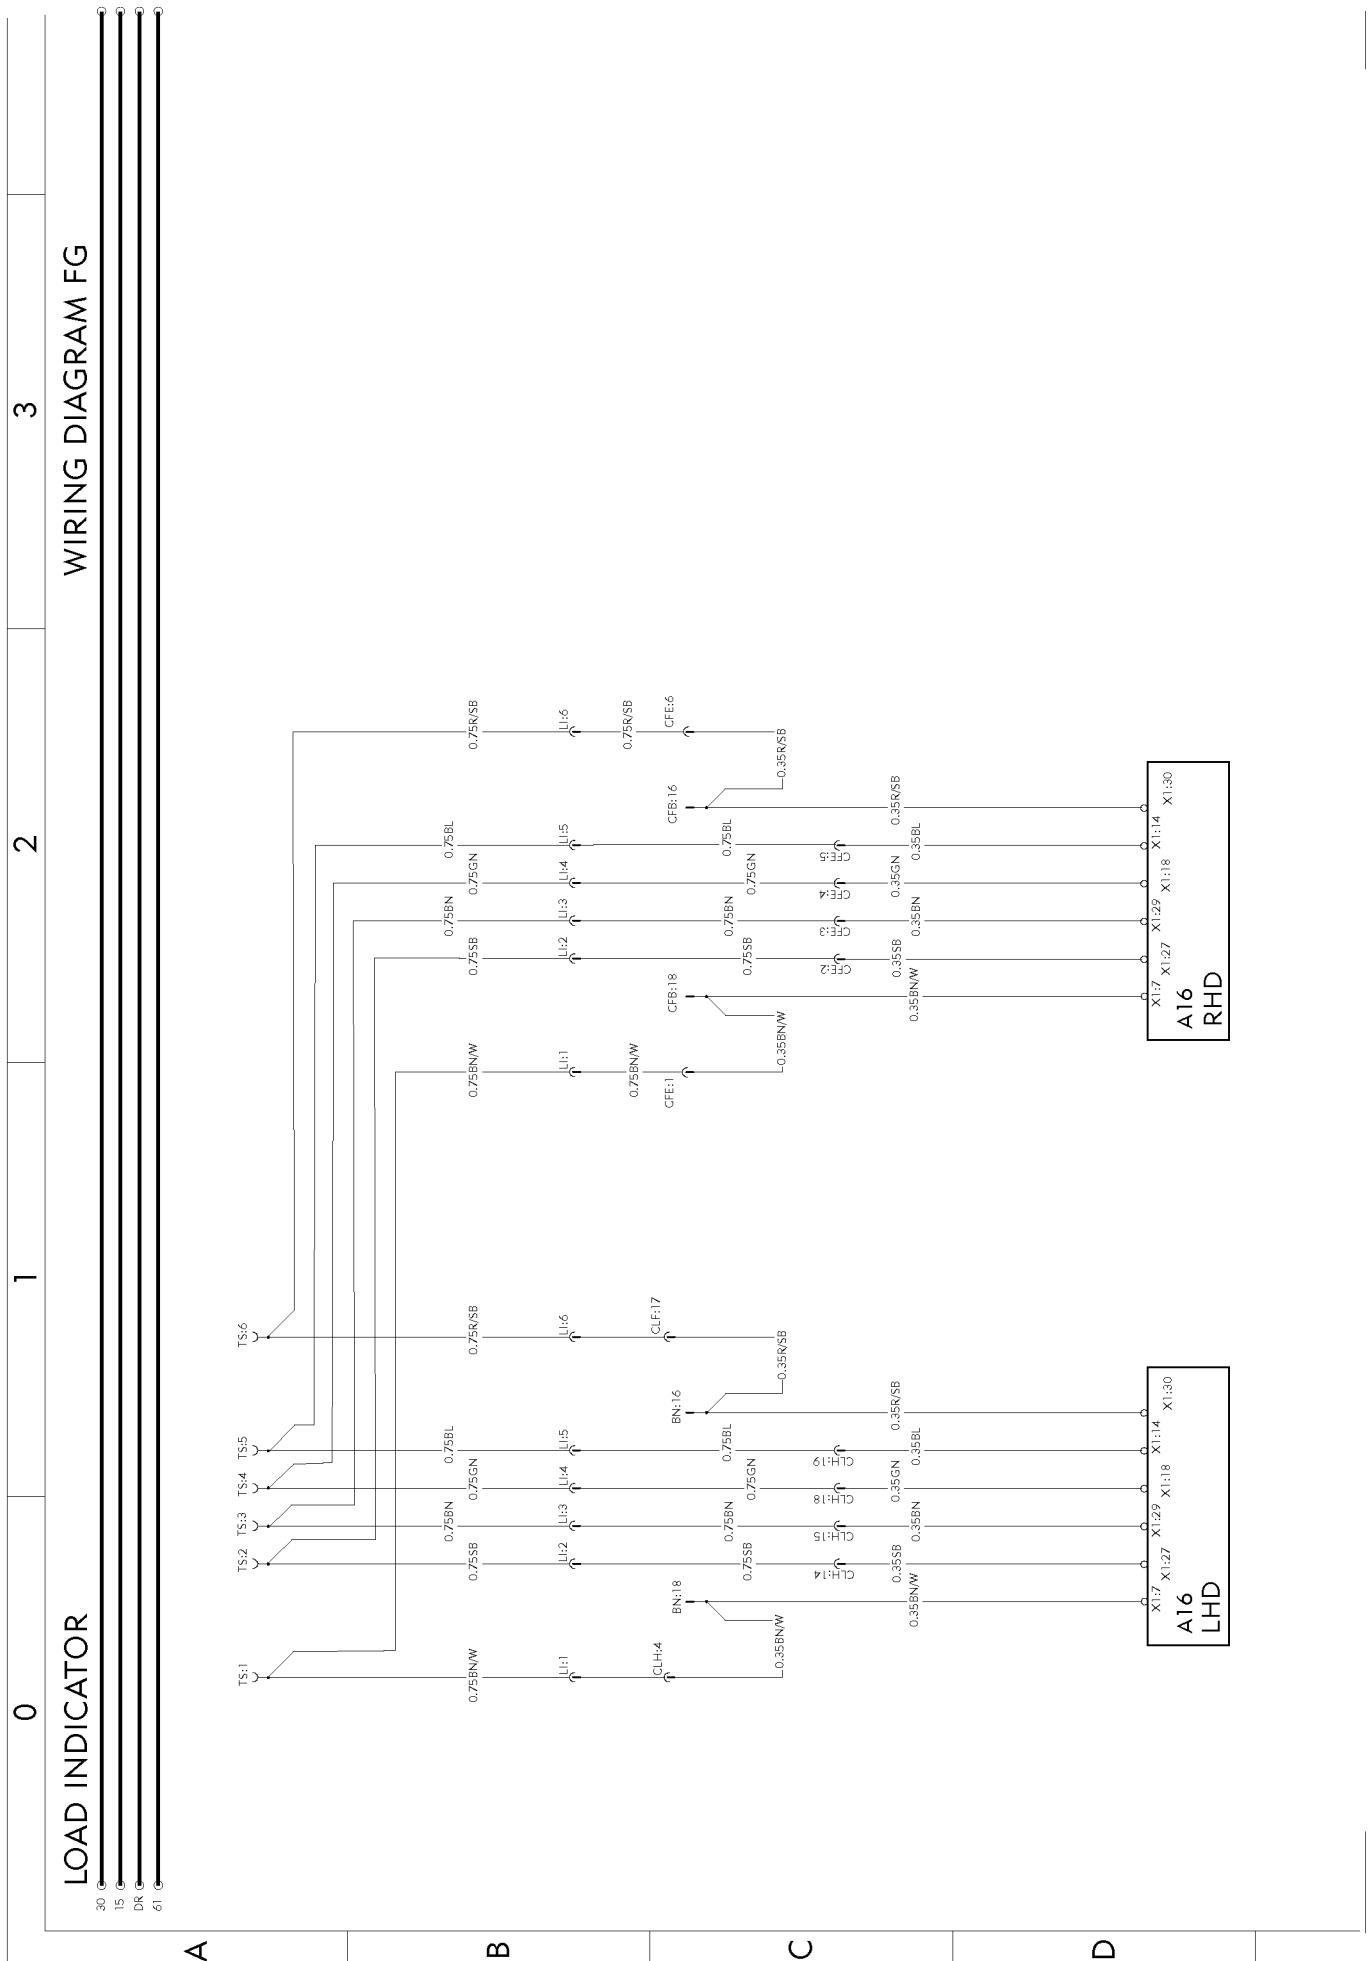


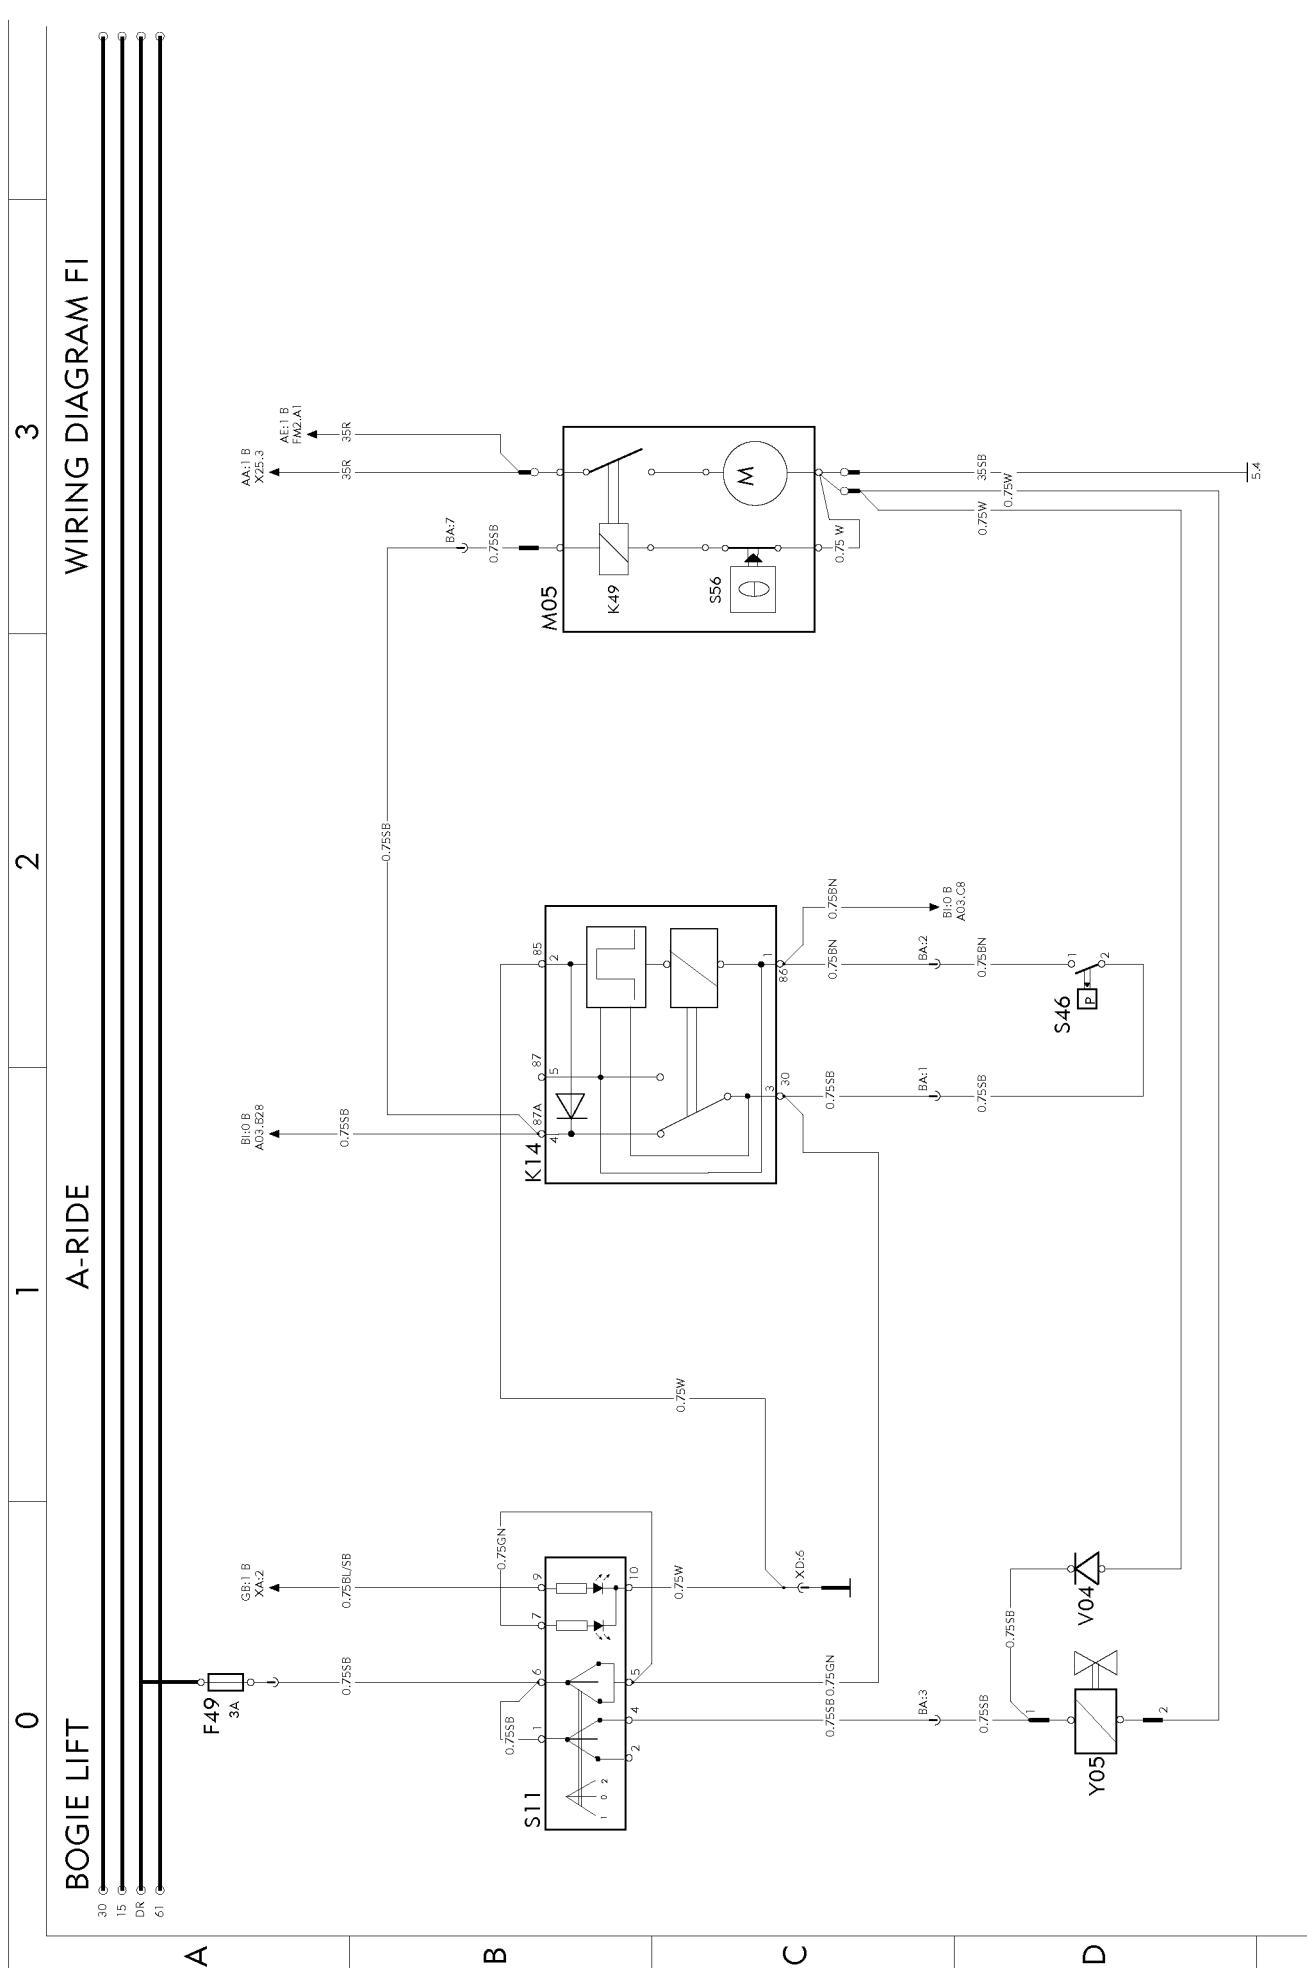


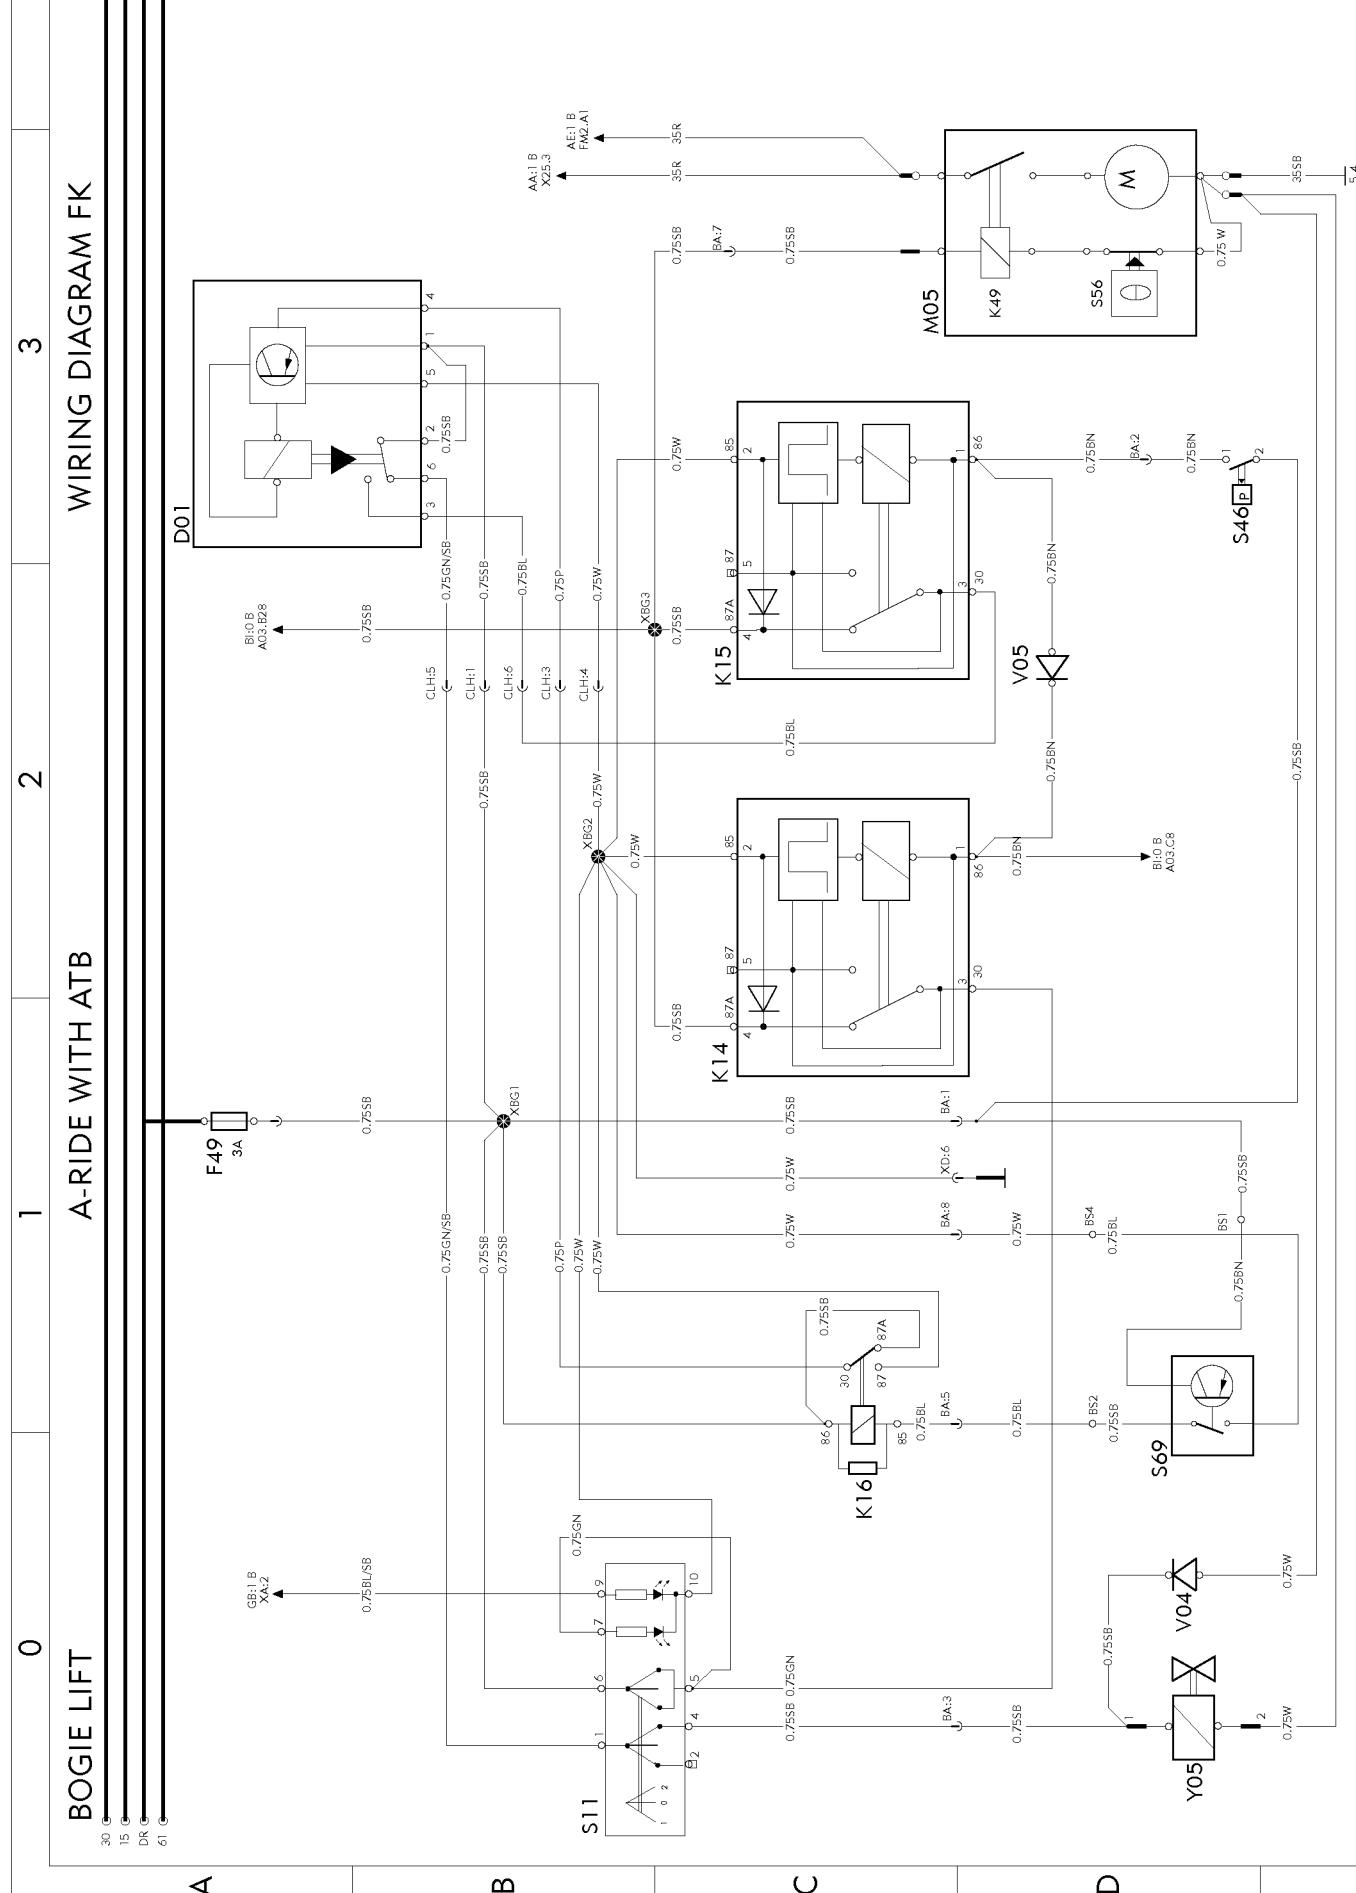


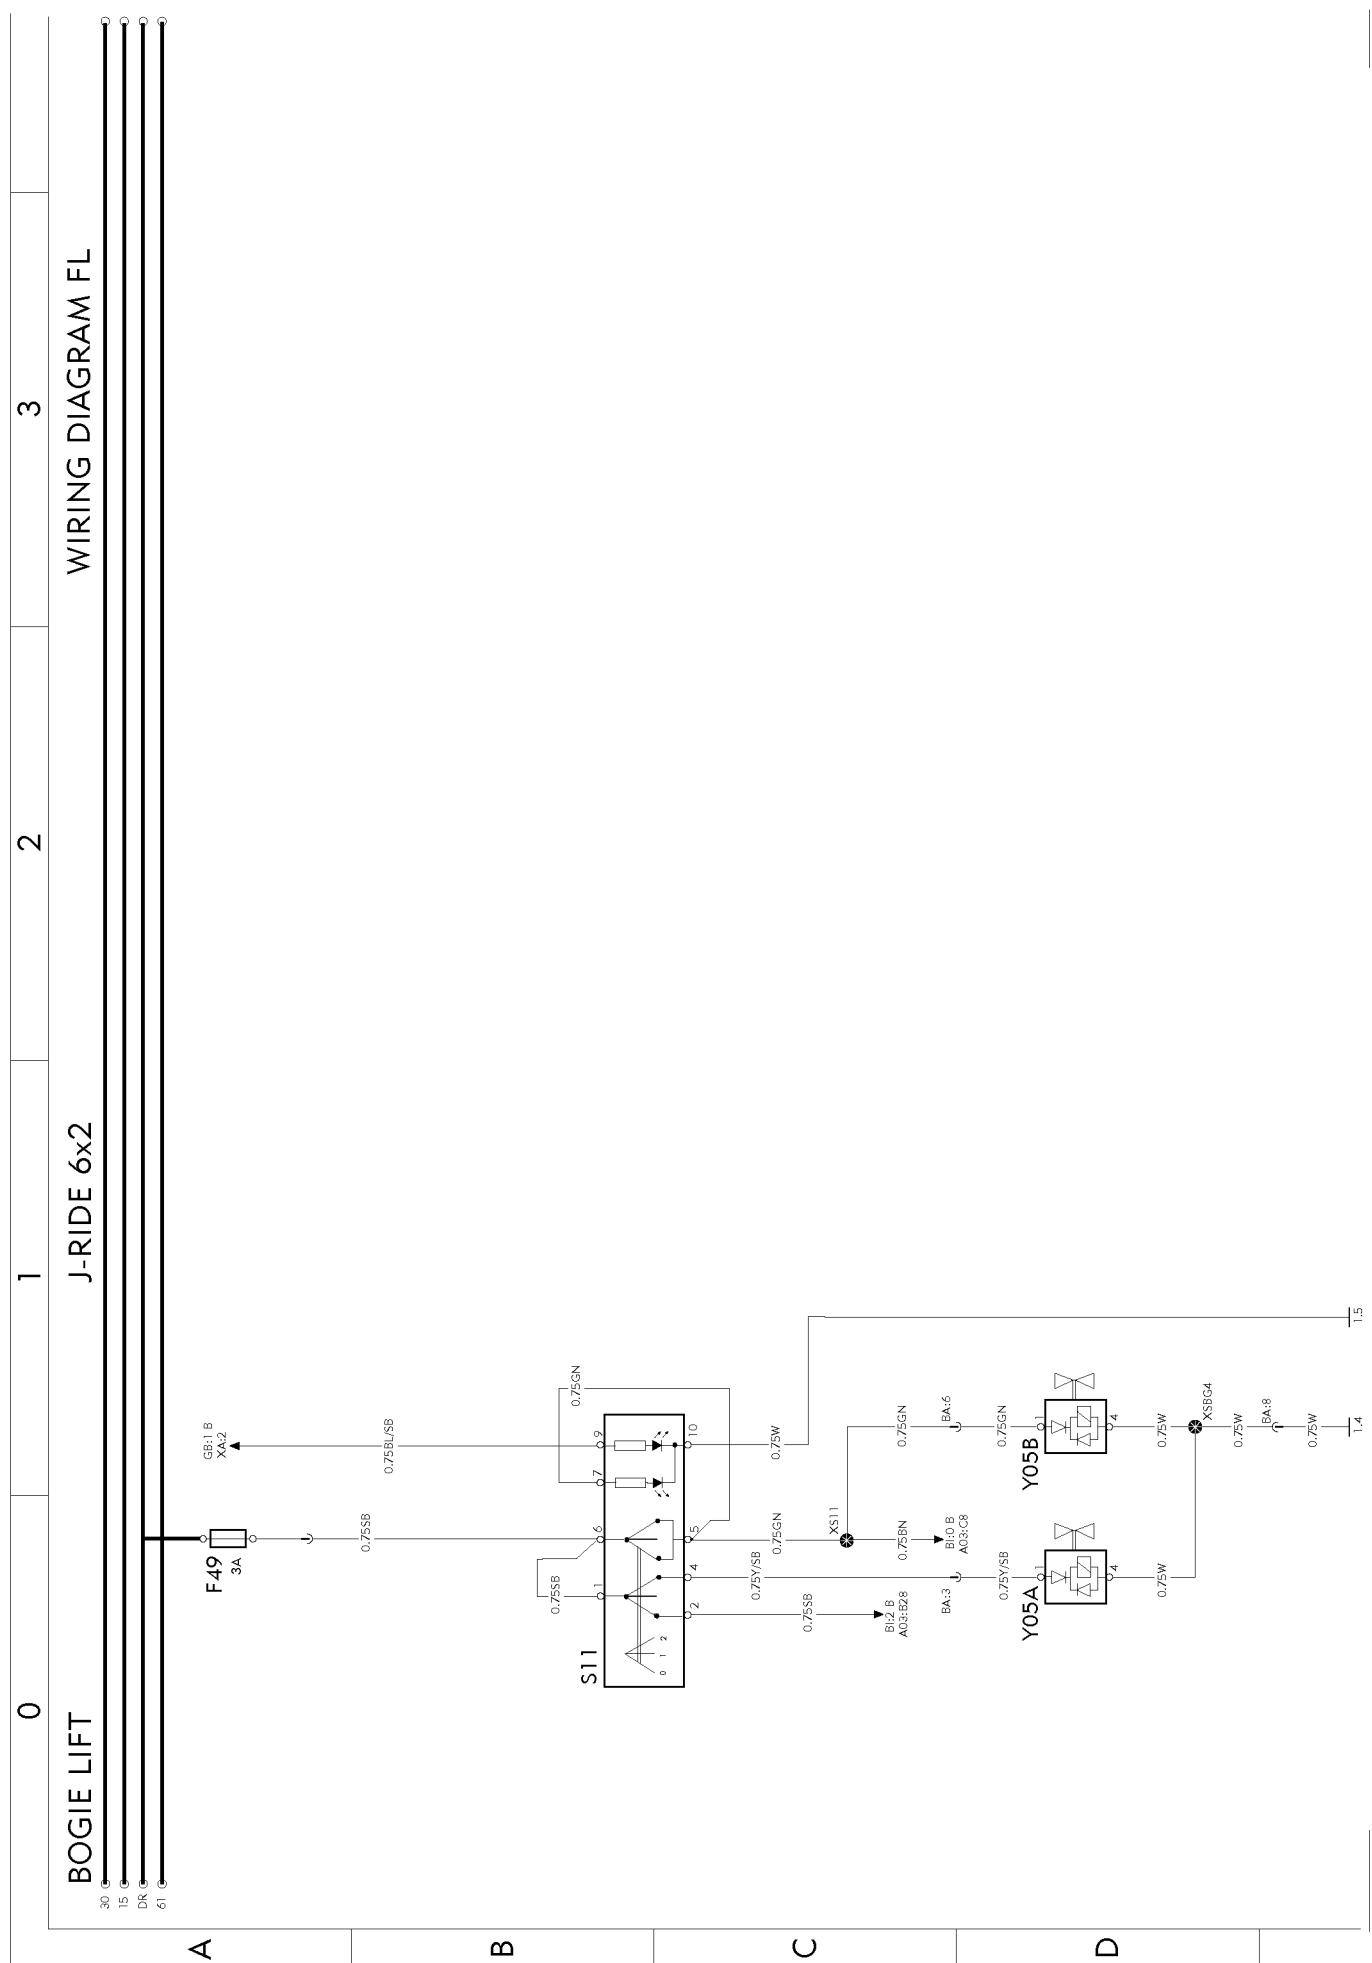


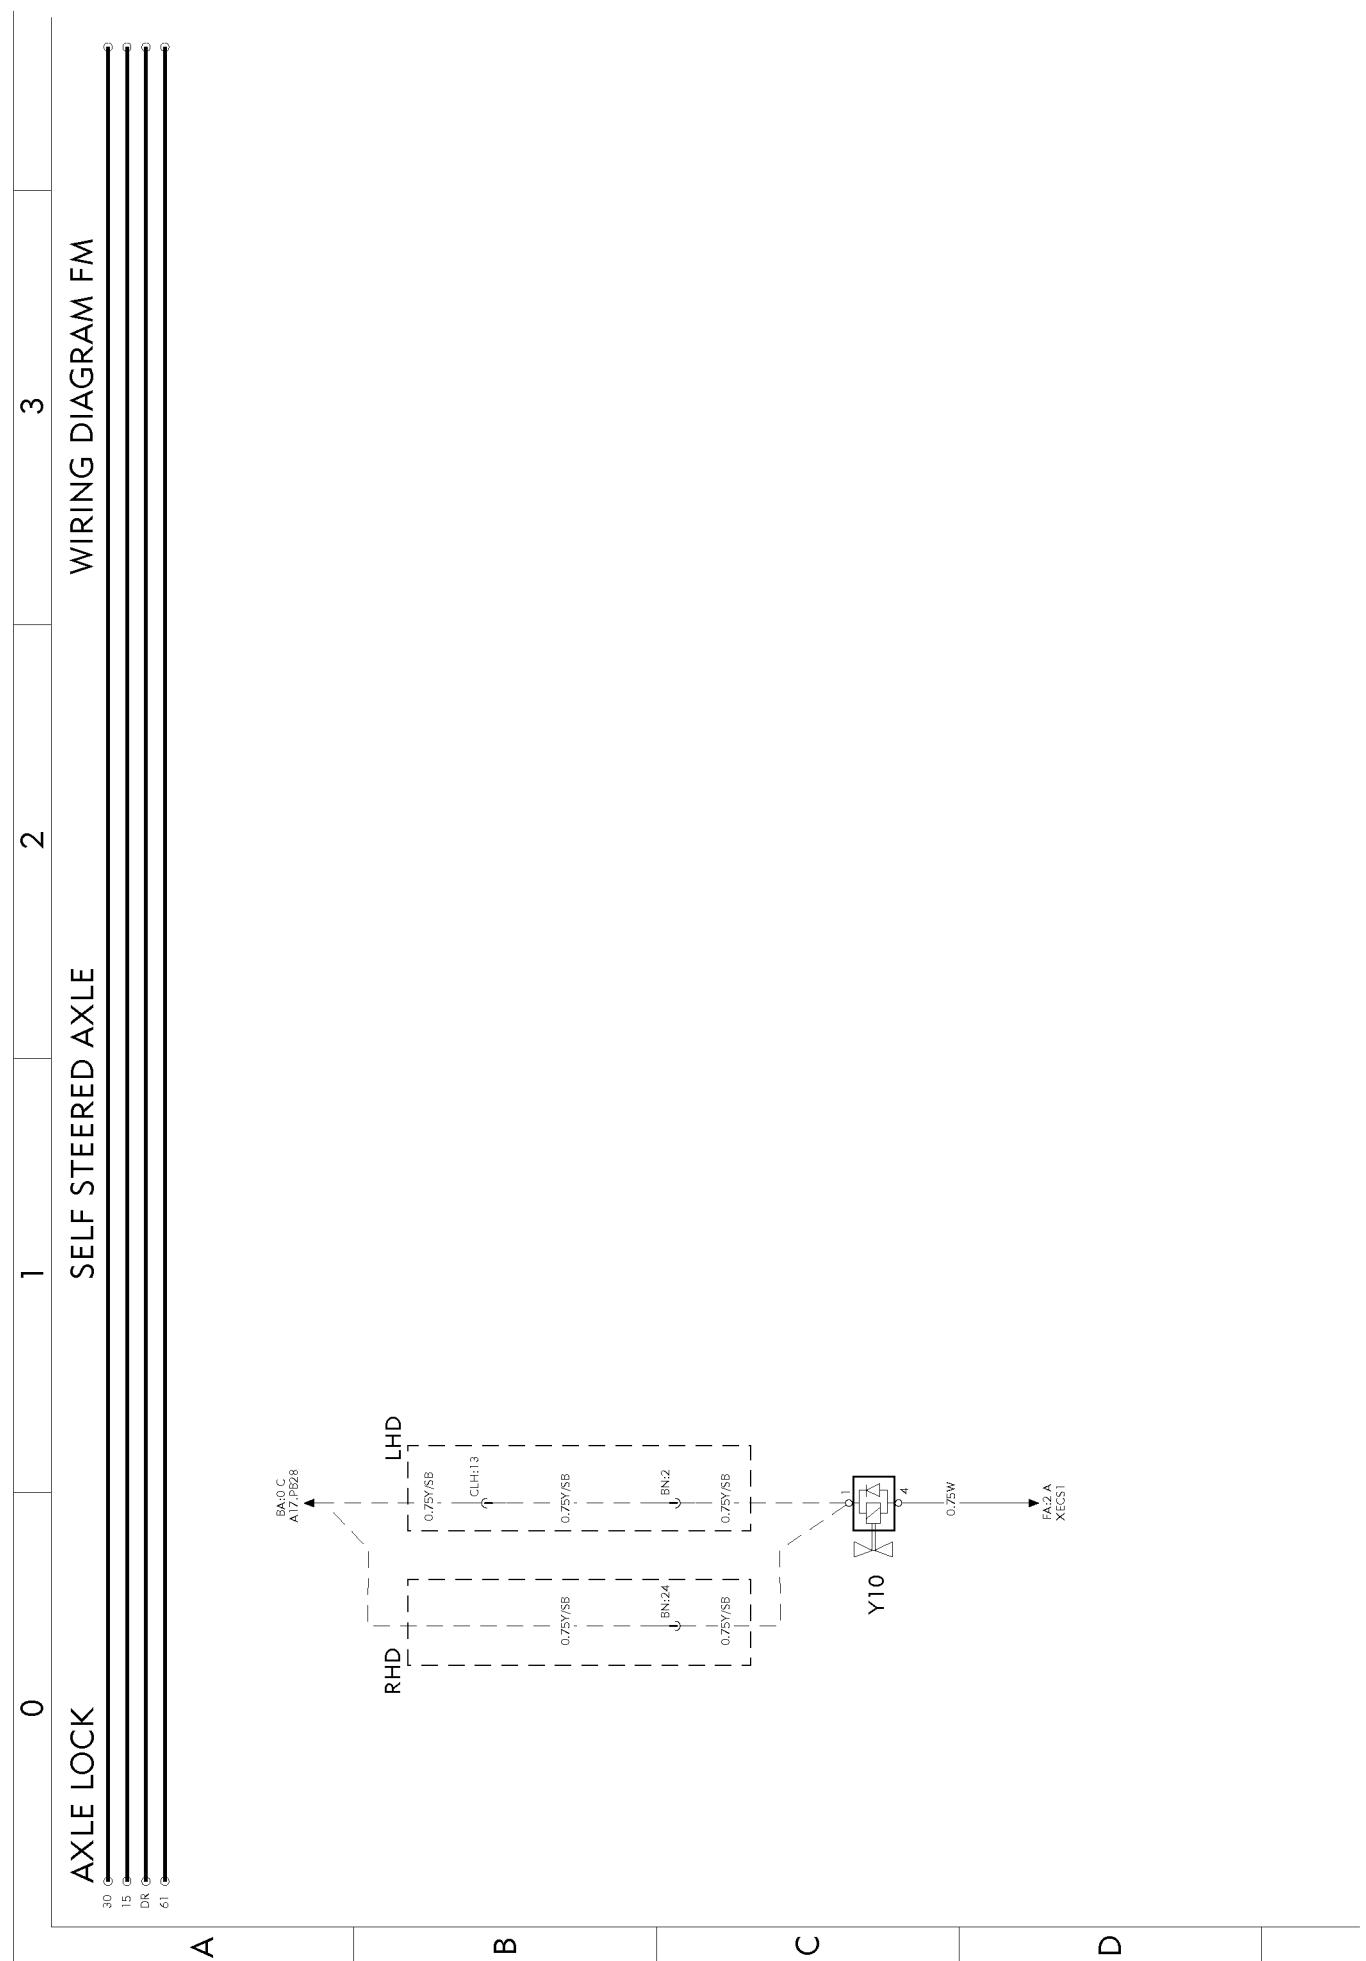


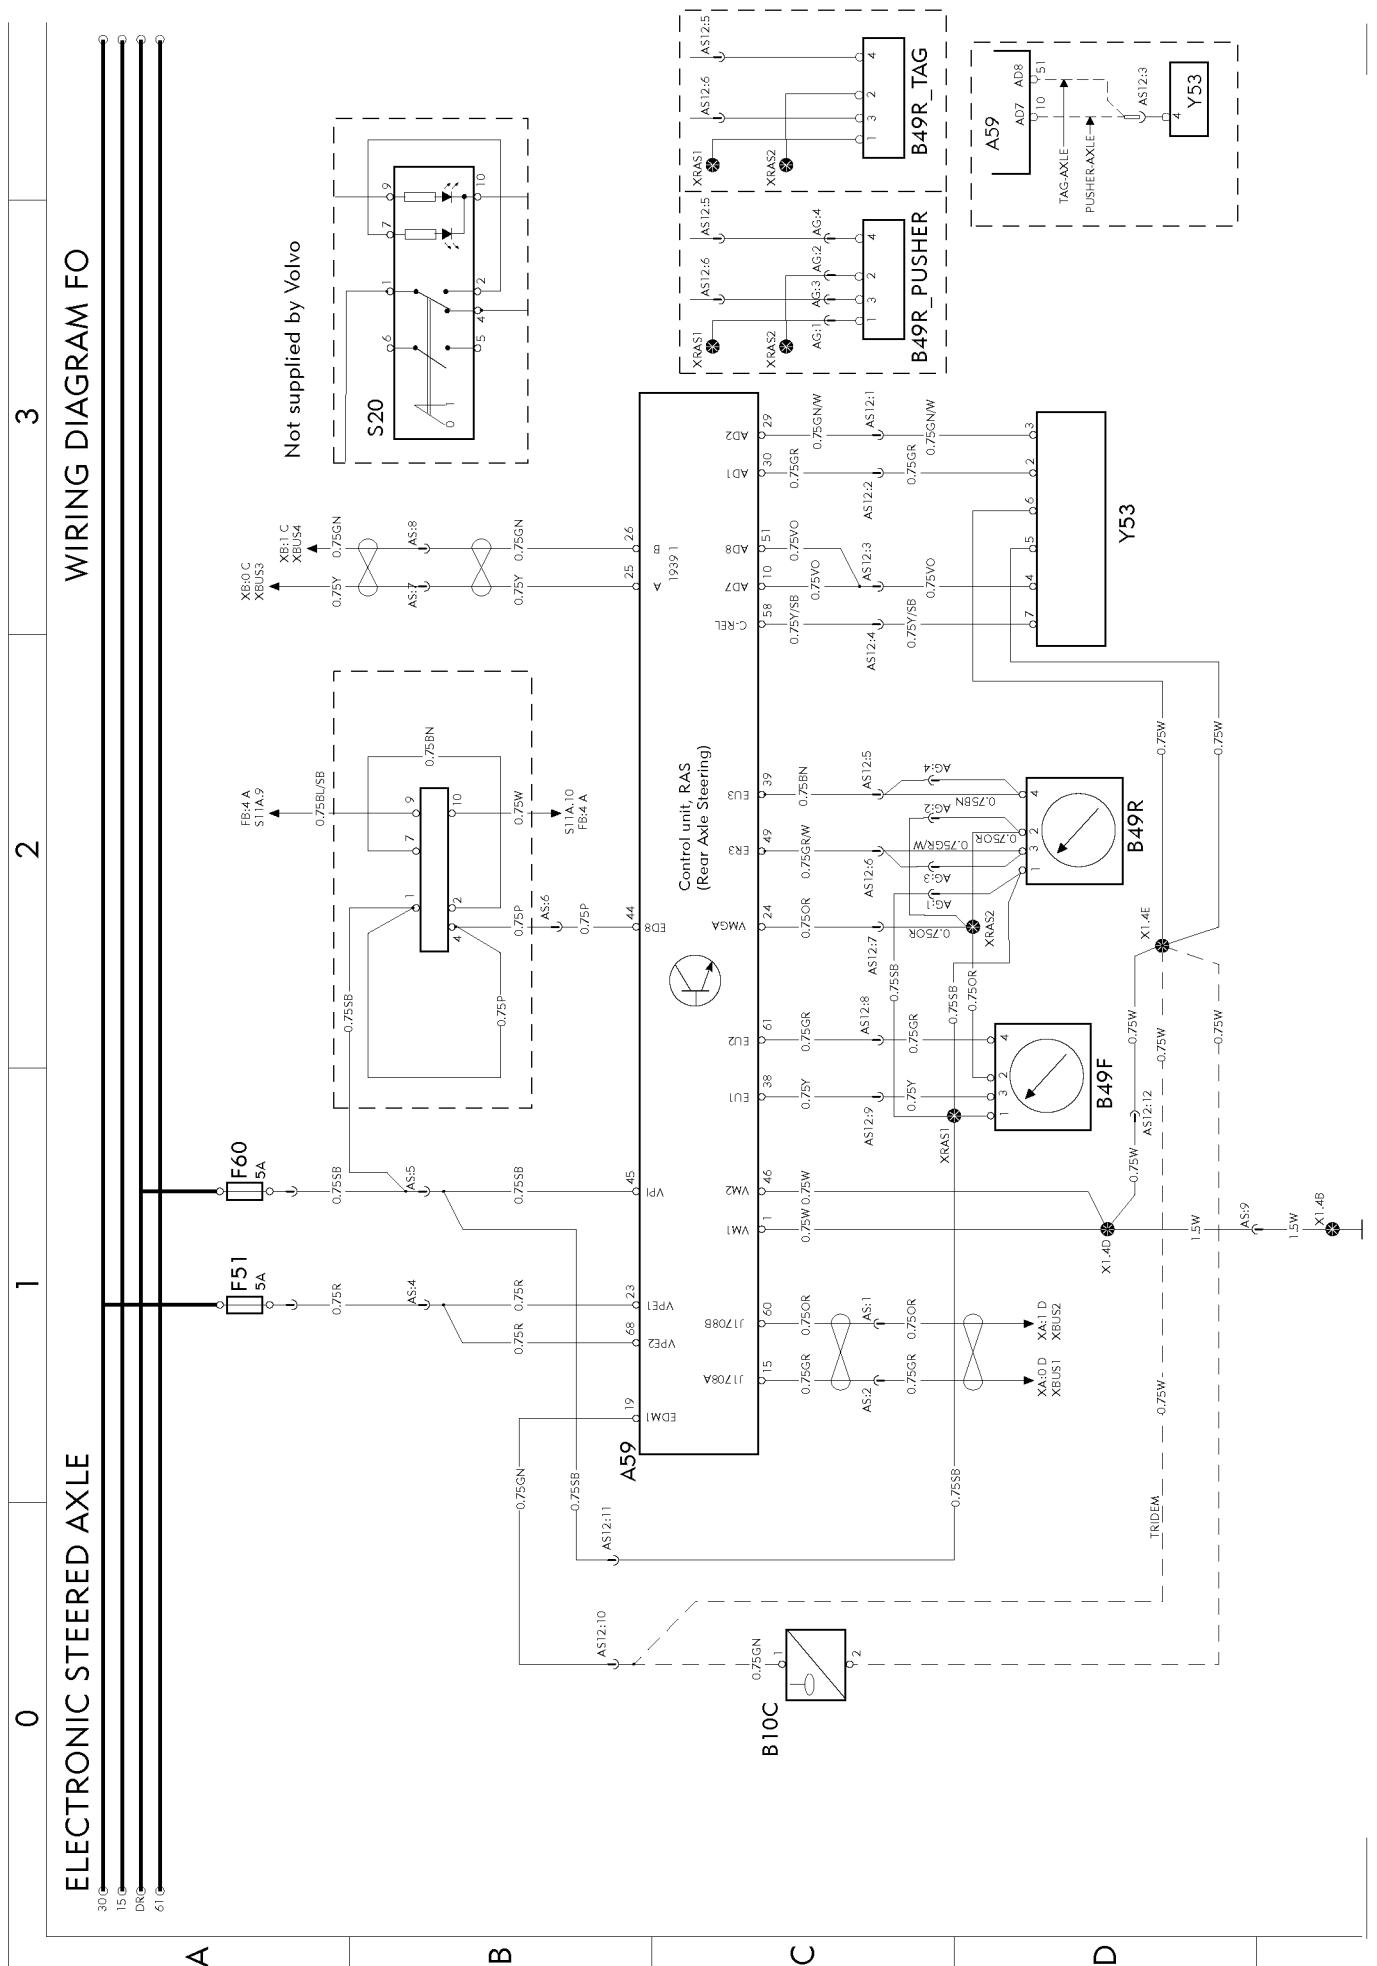


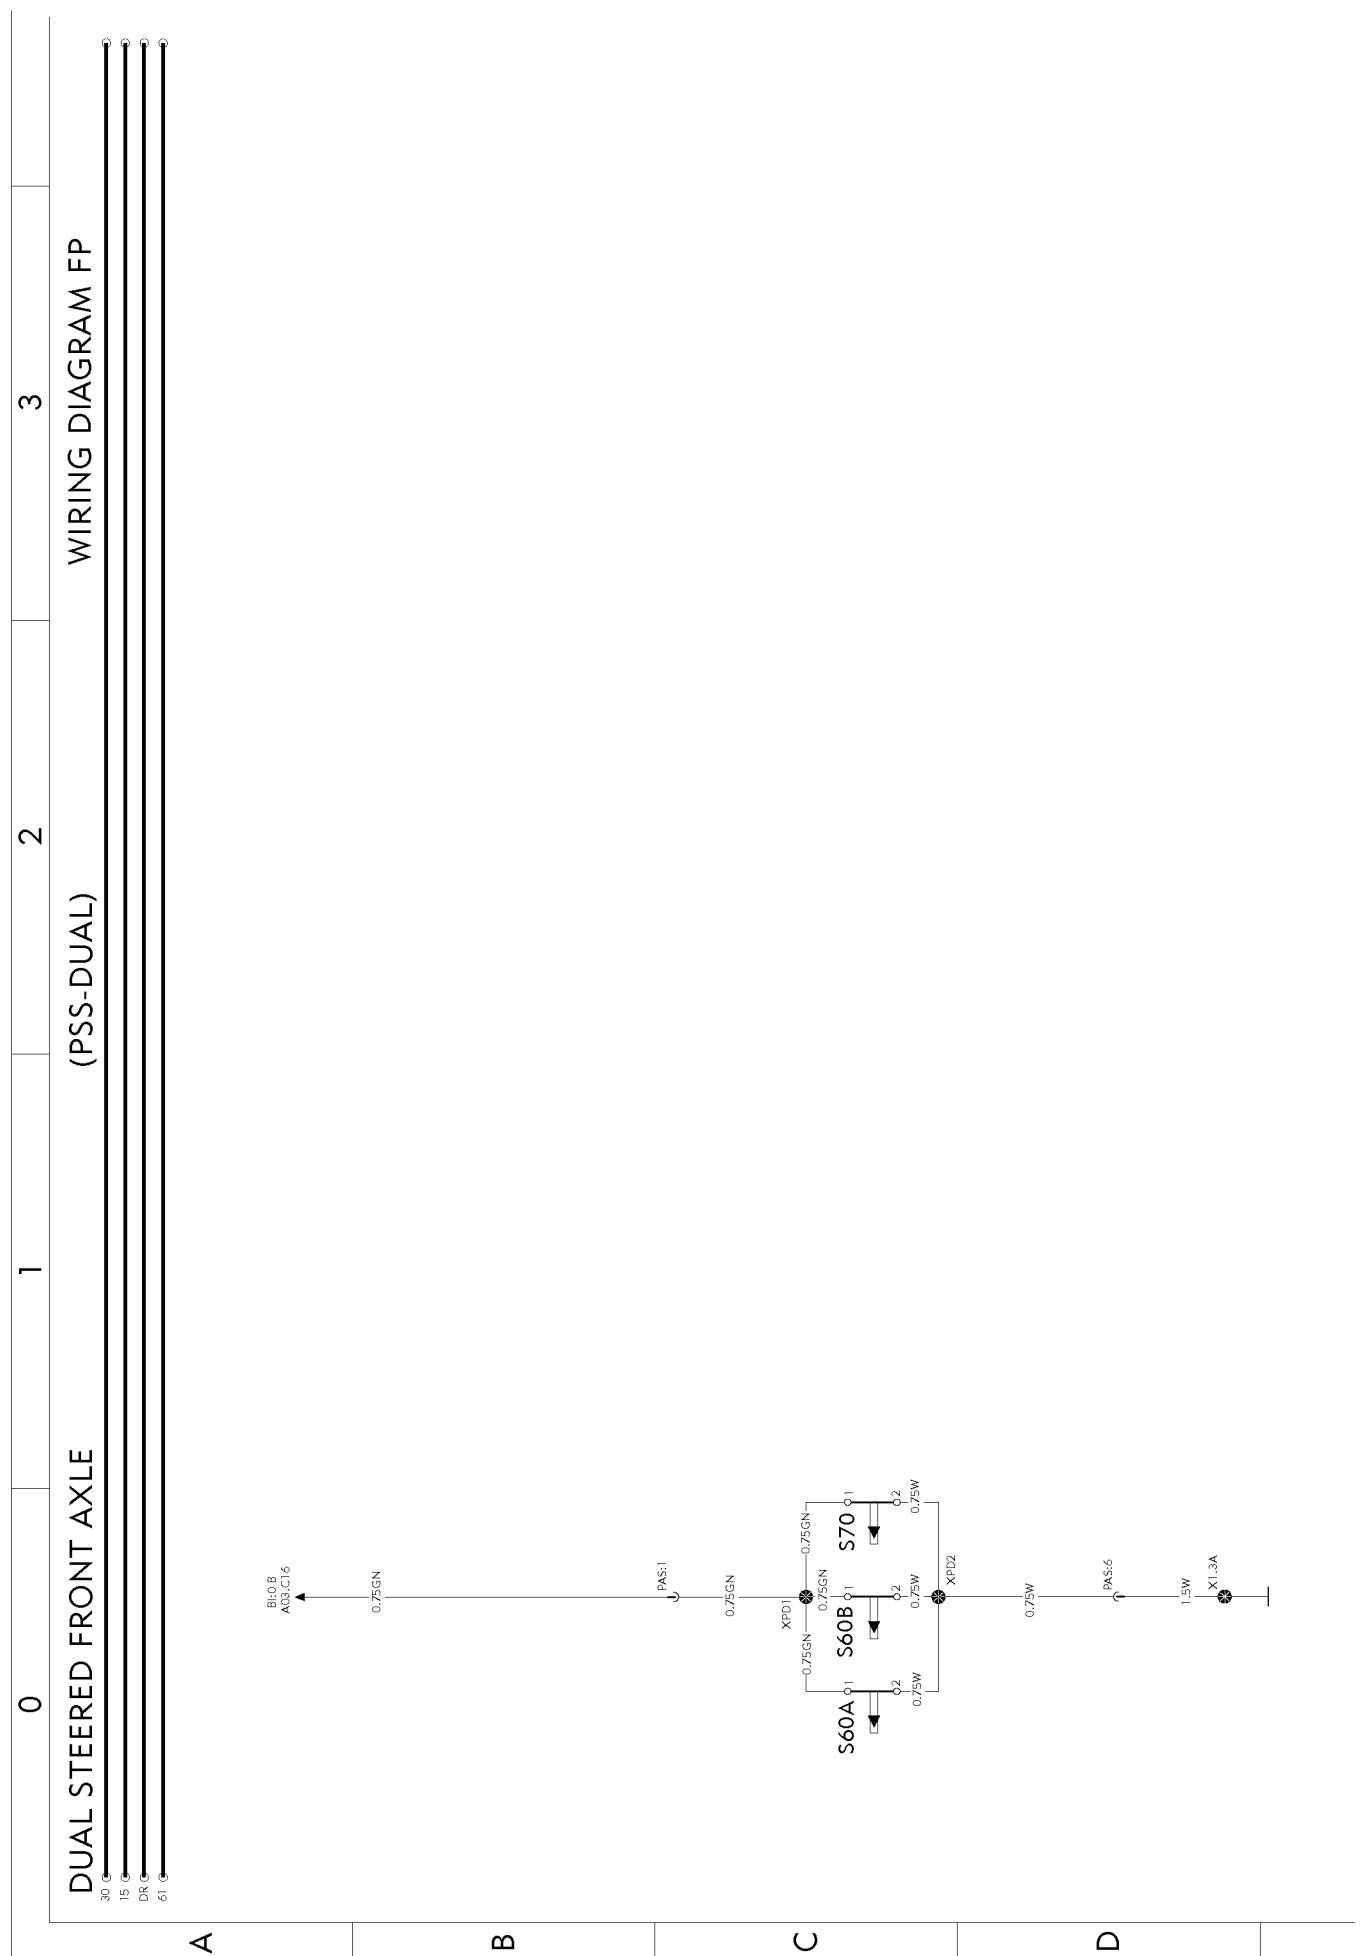


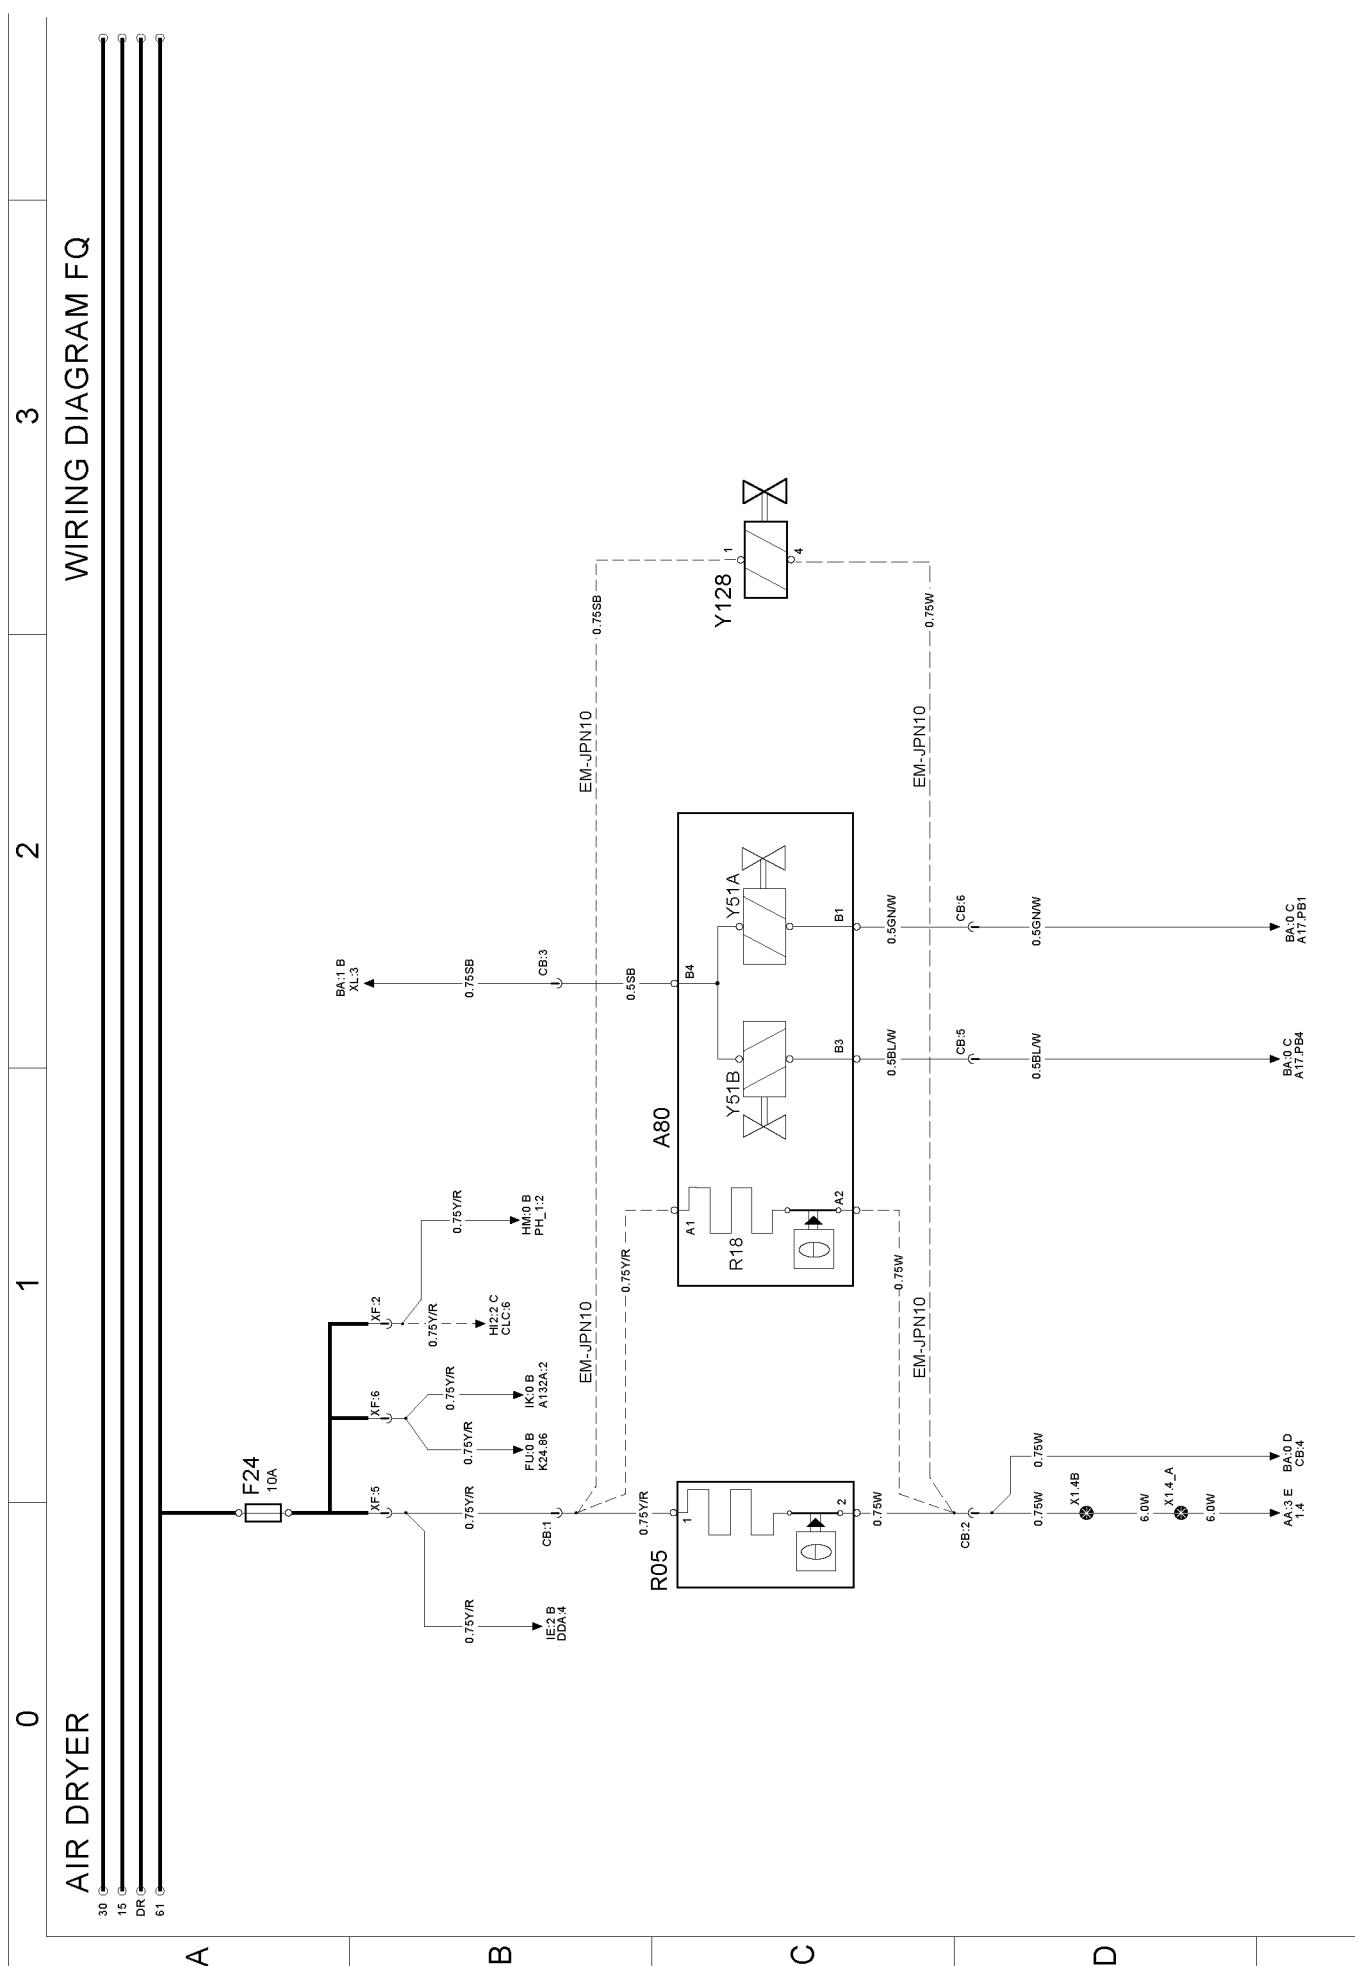

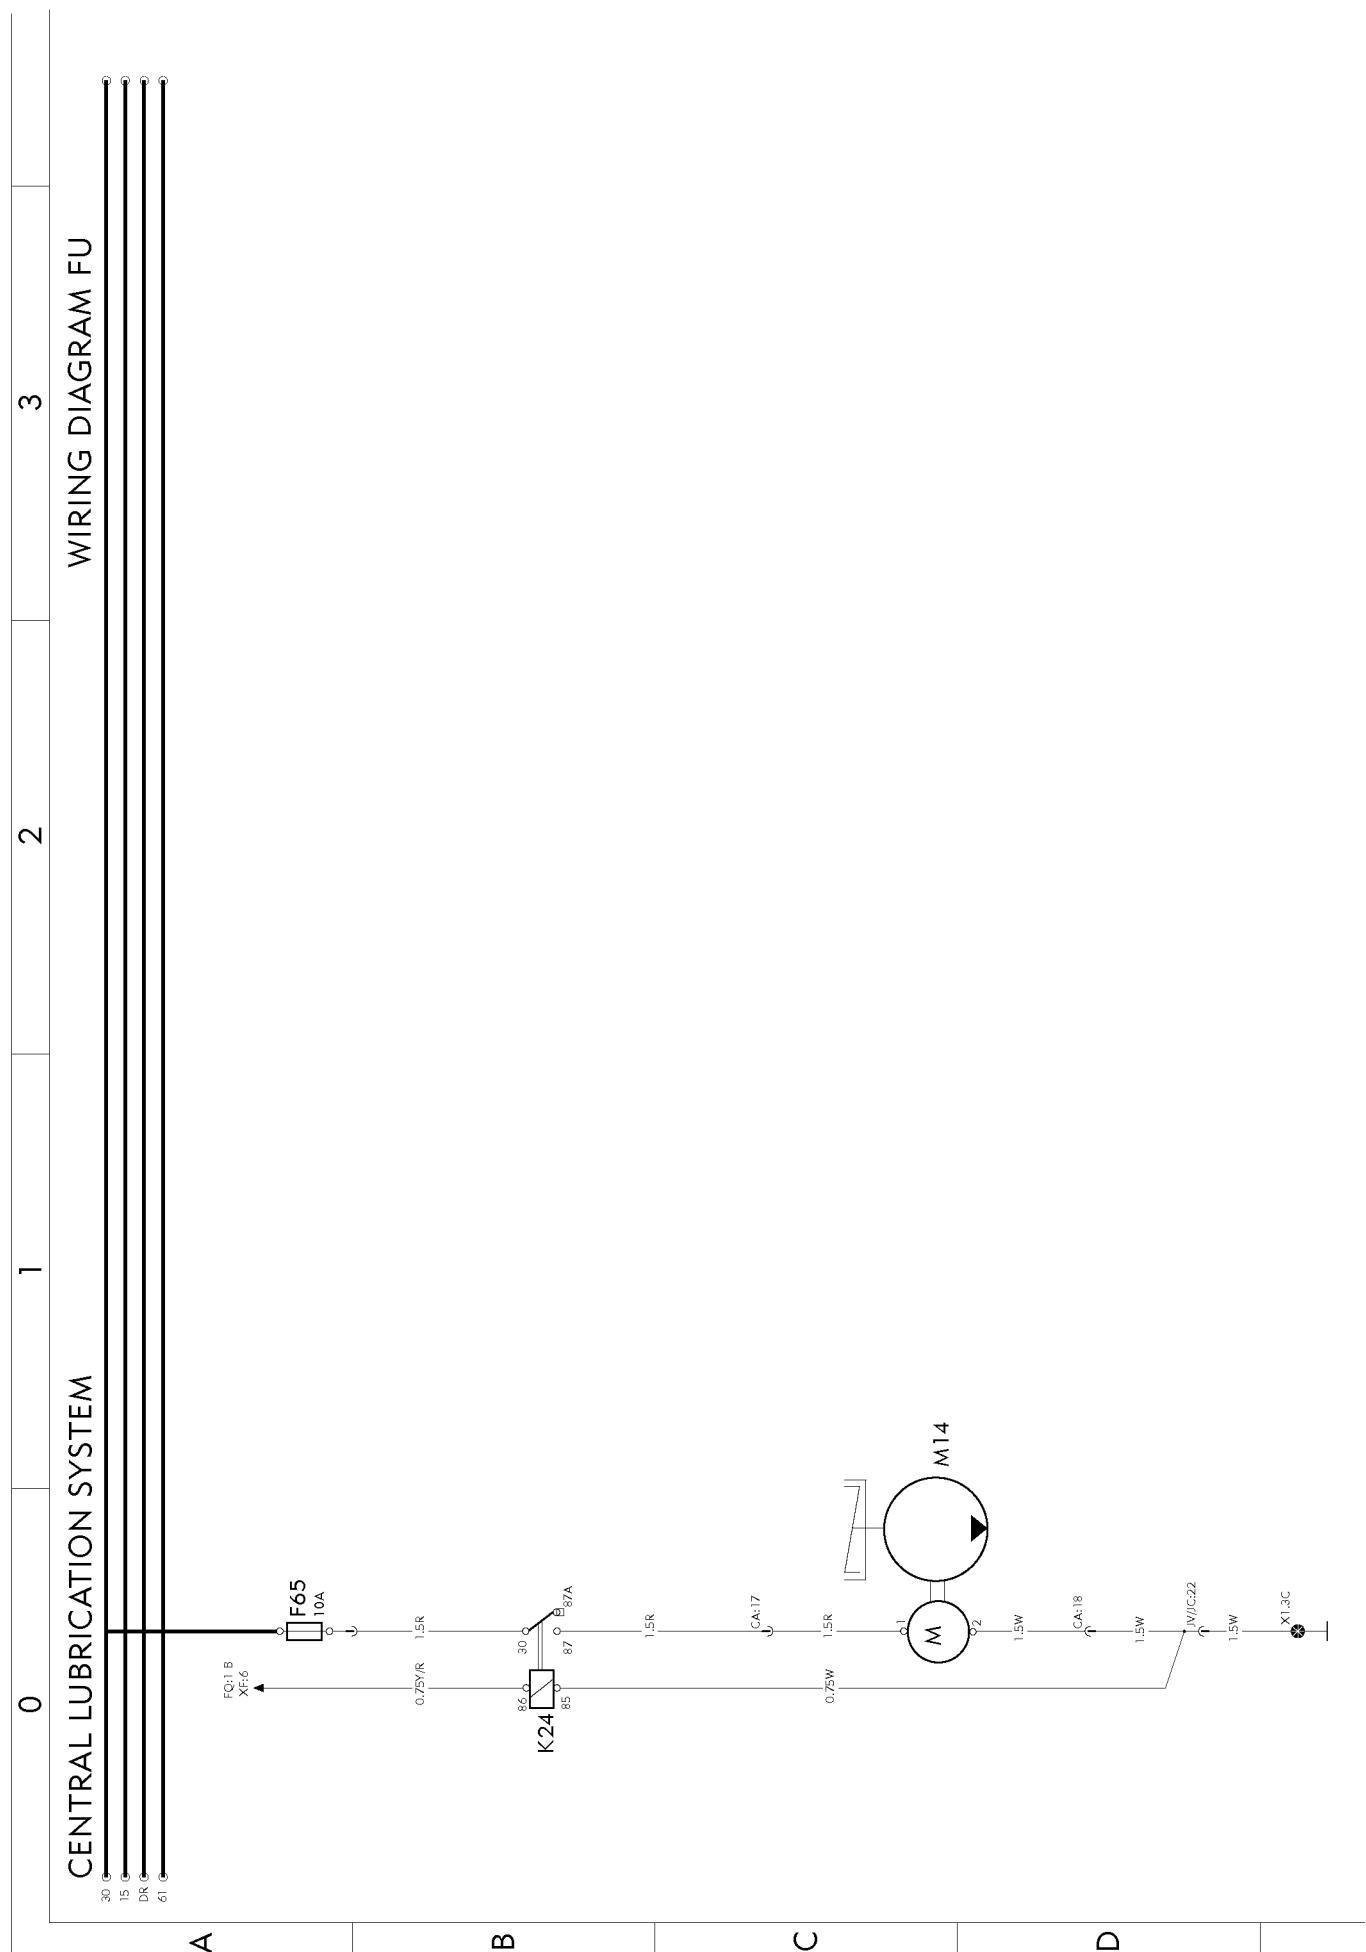


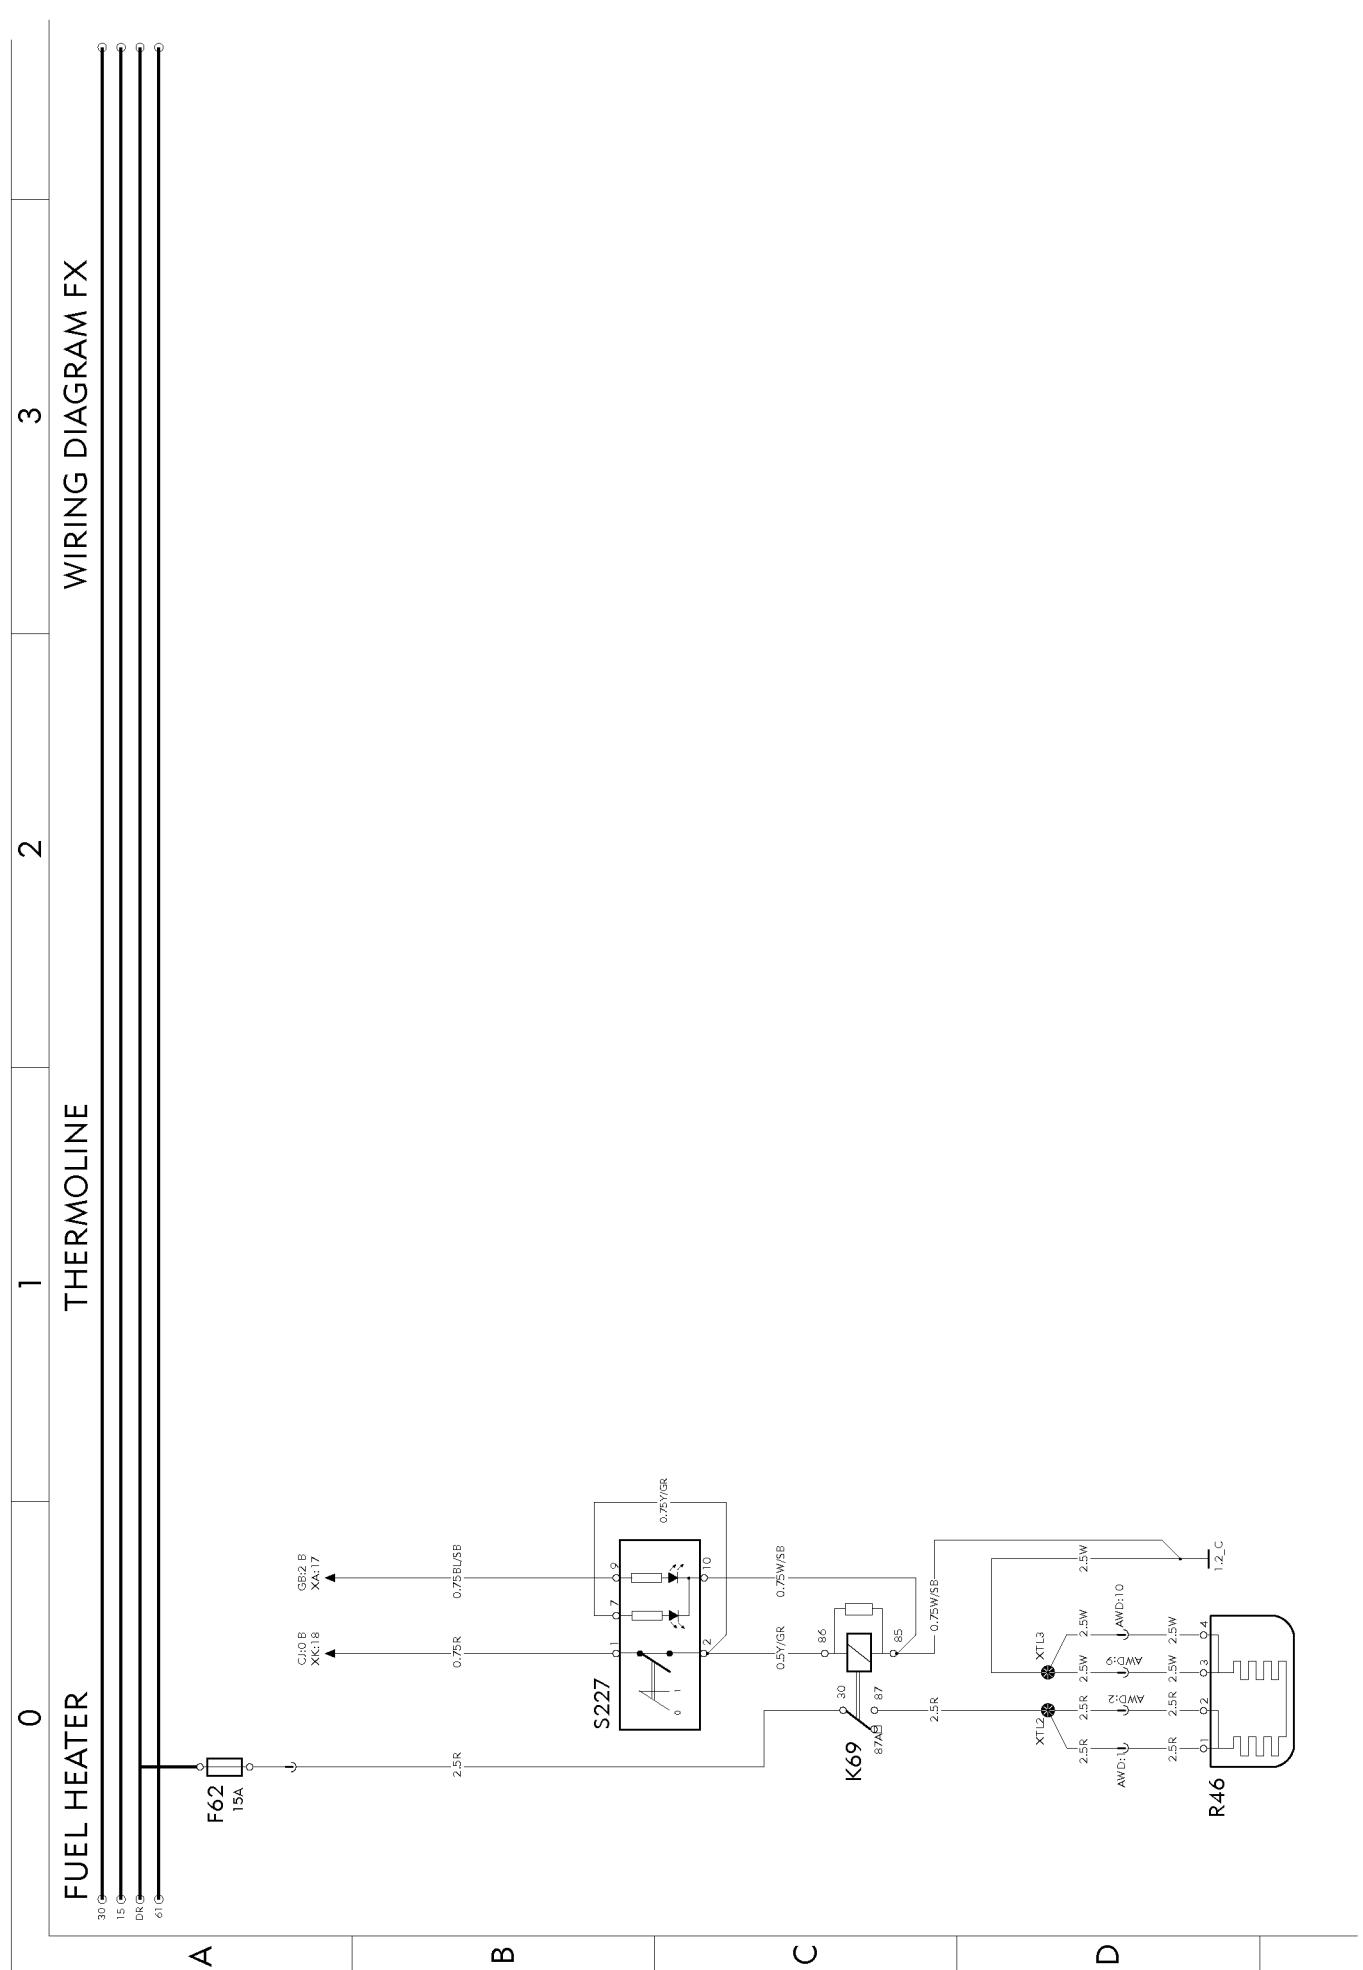


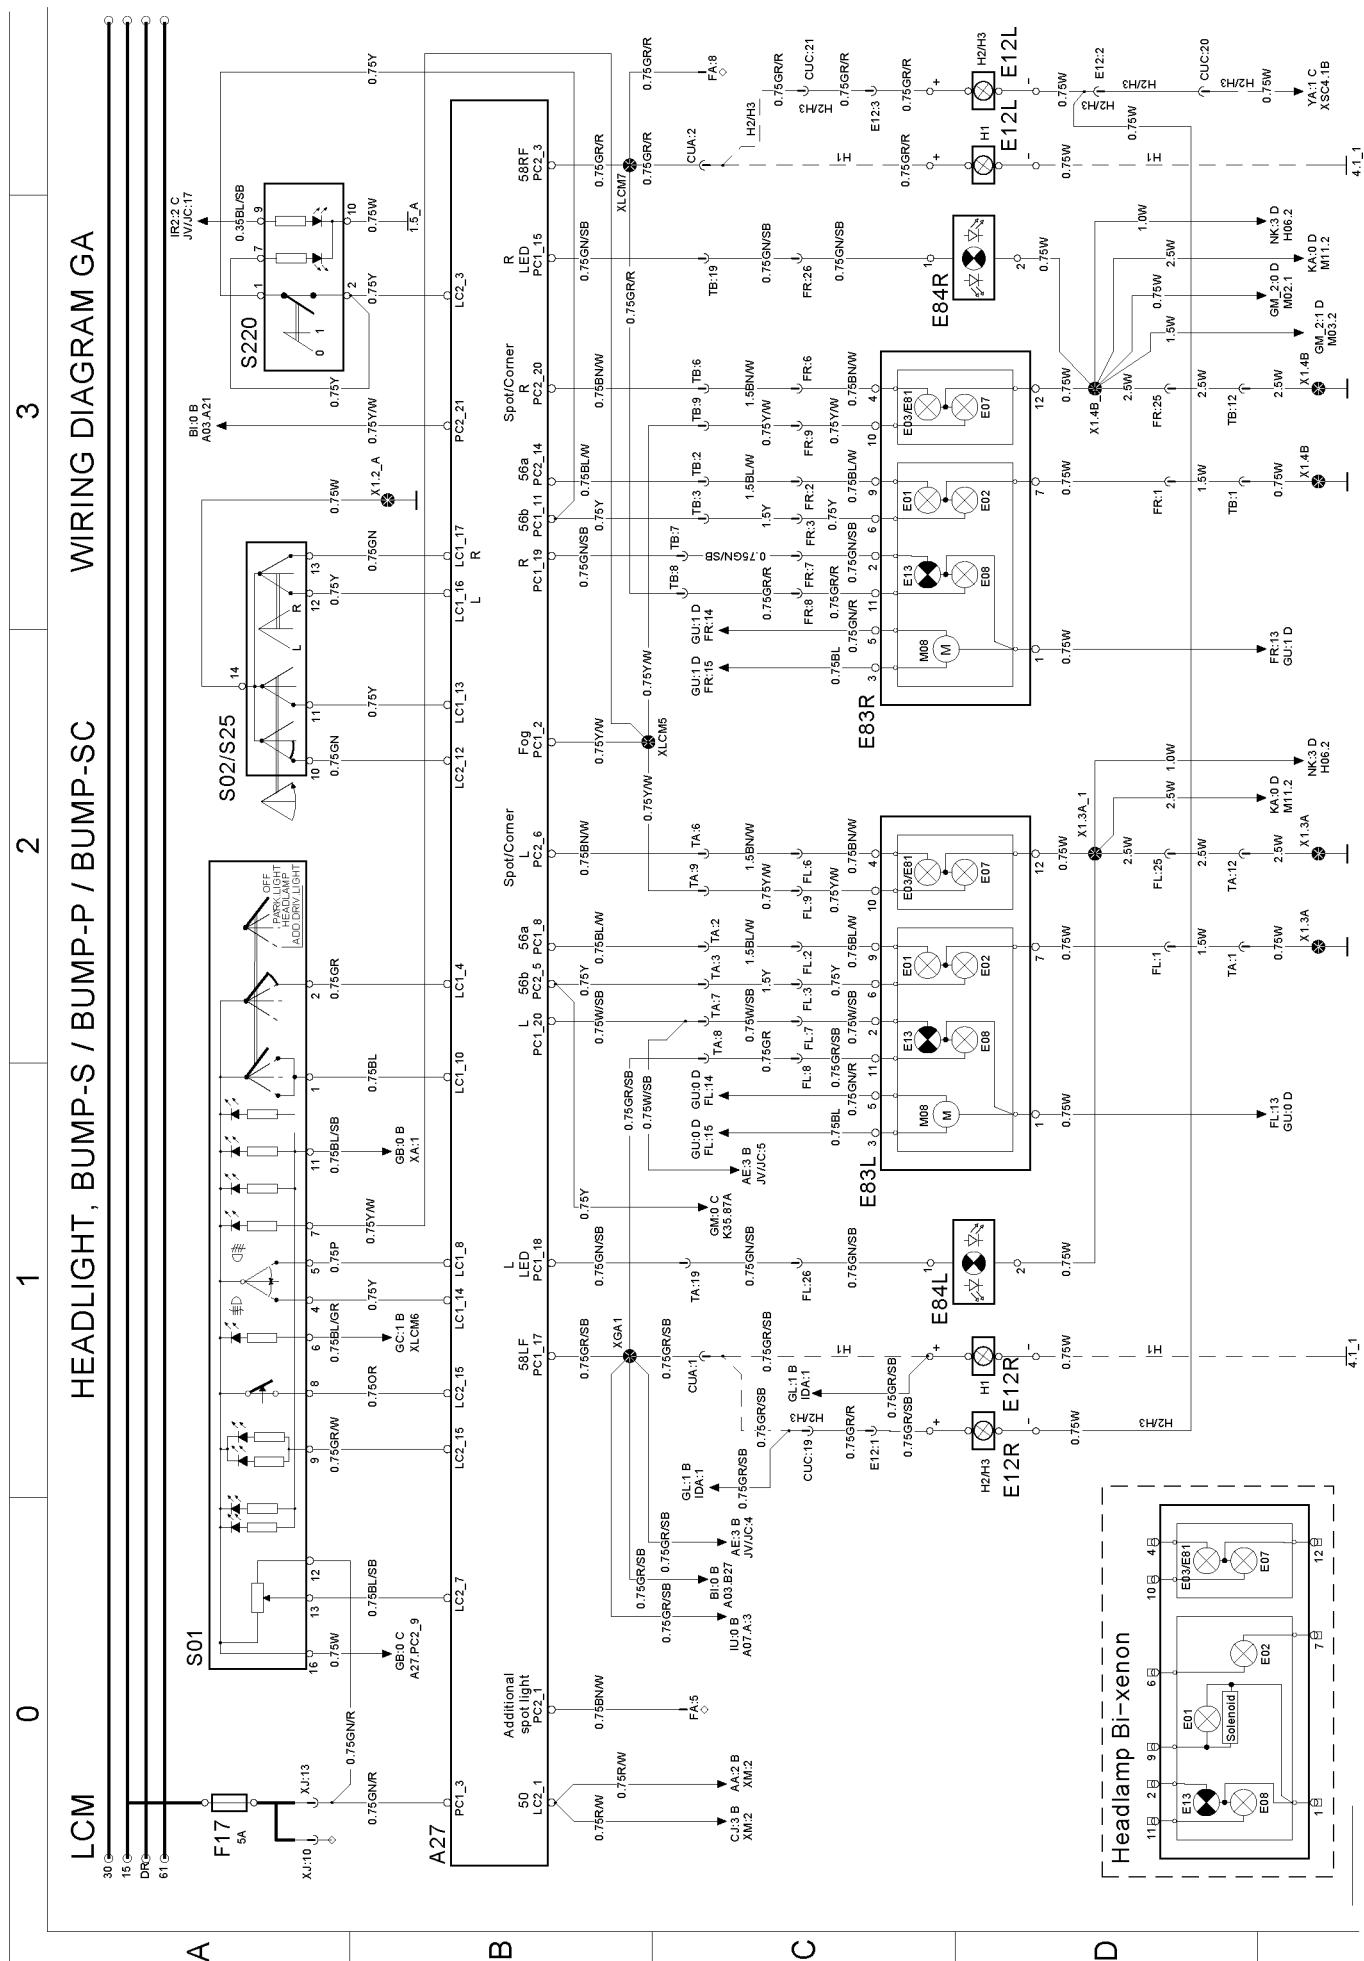


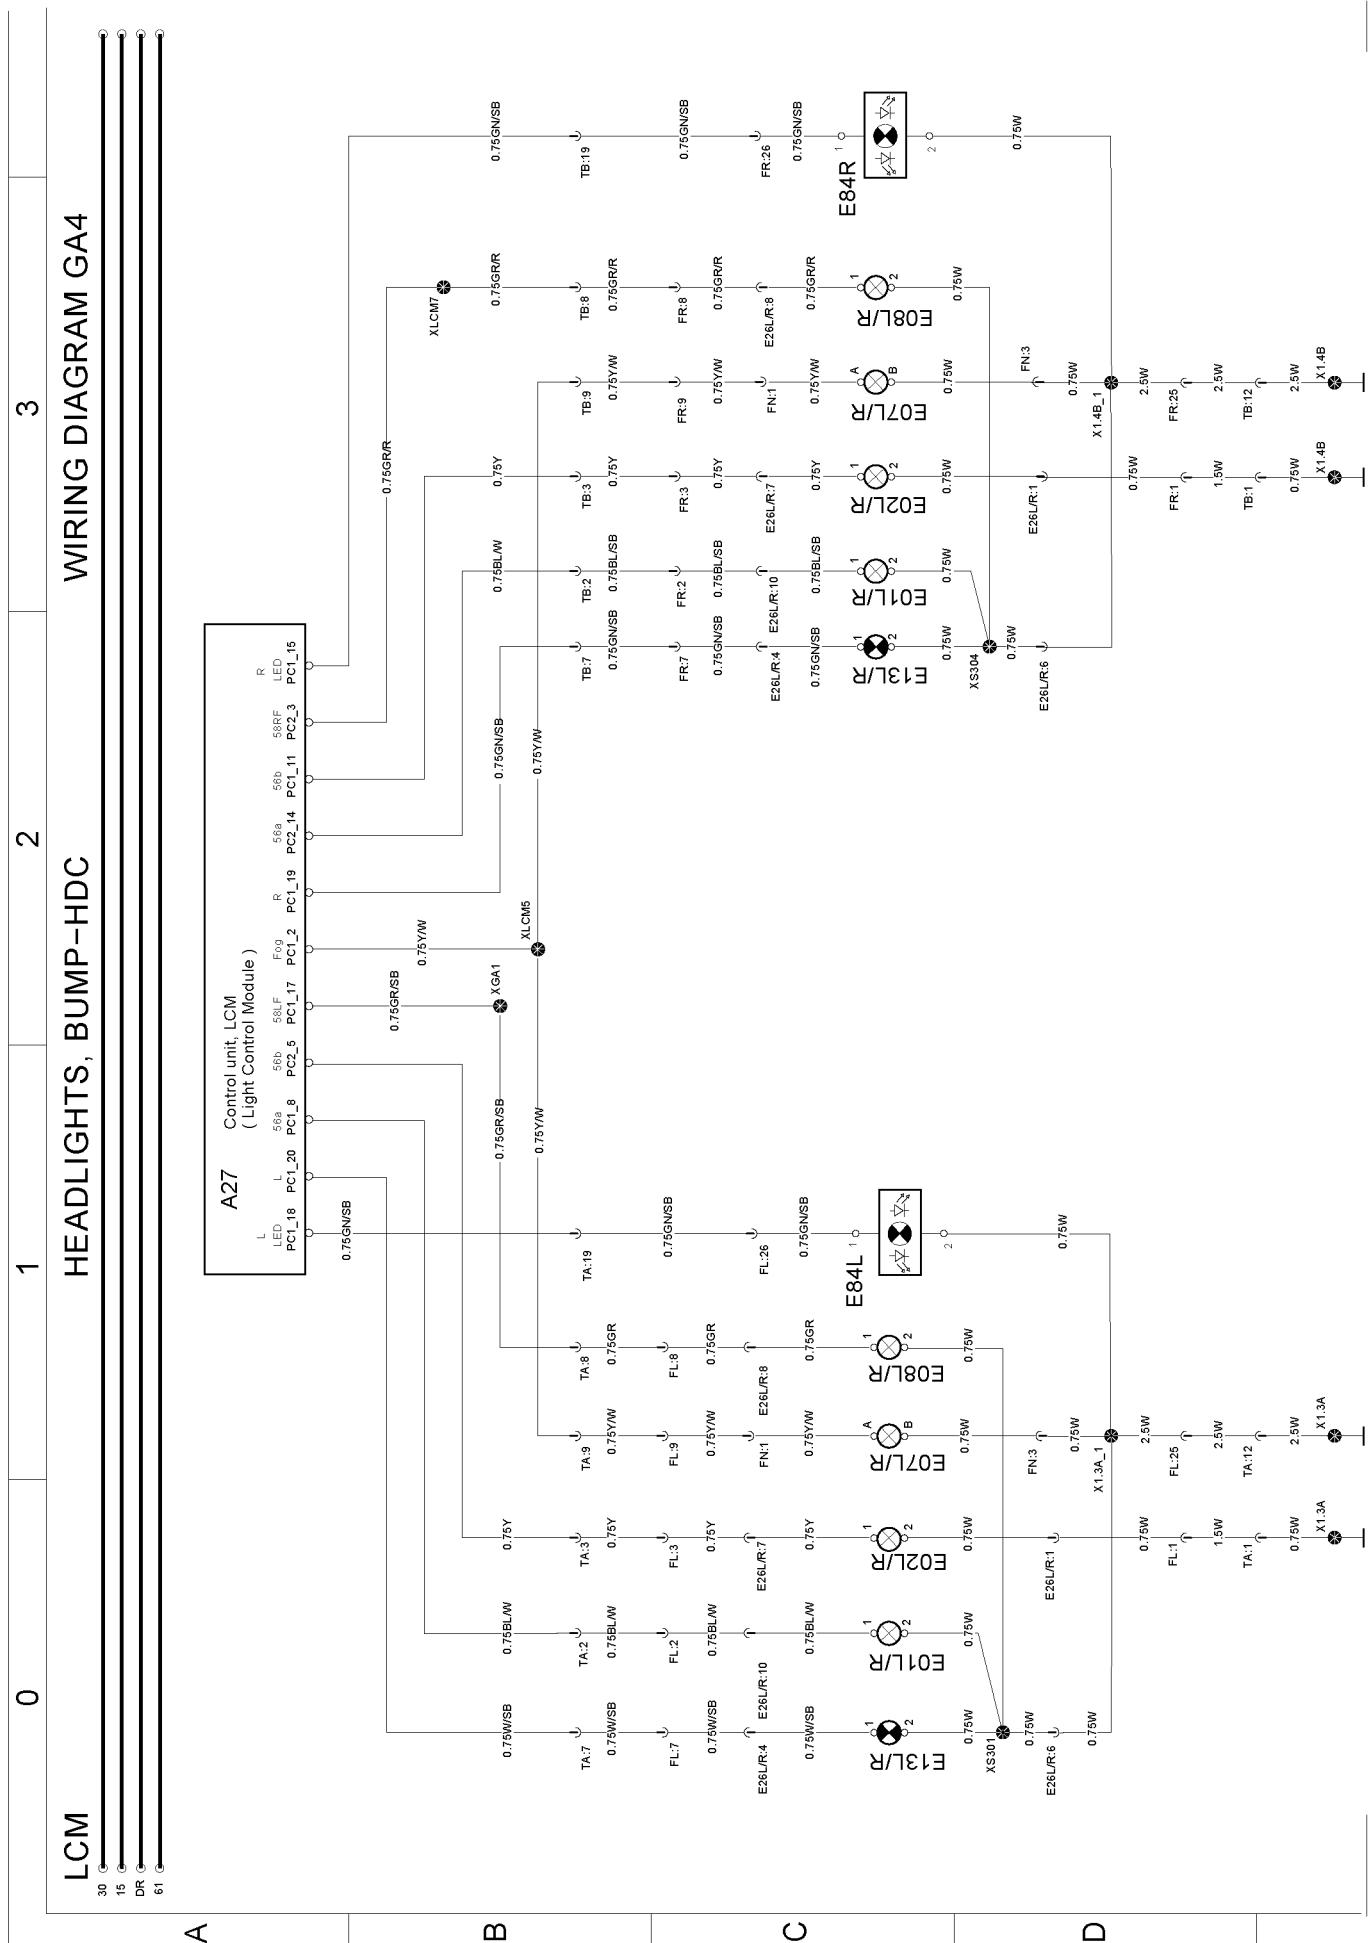


T3059726

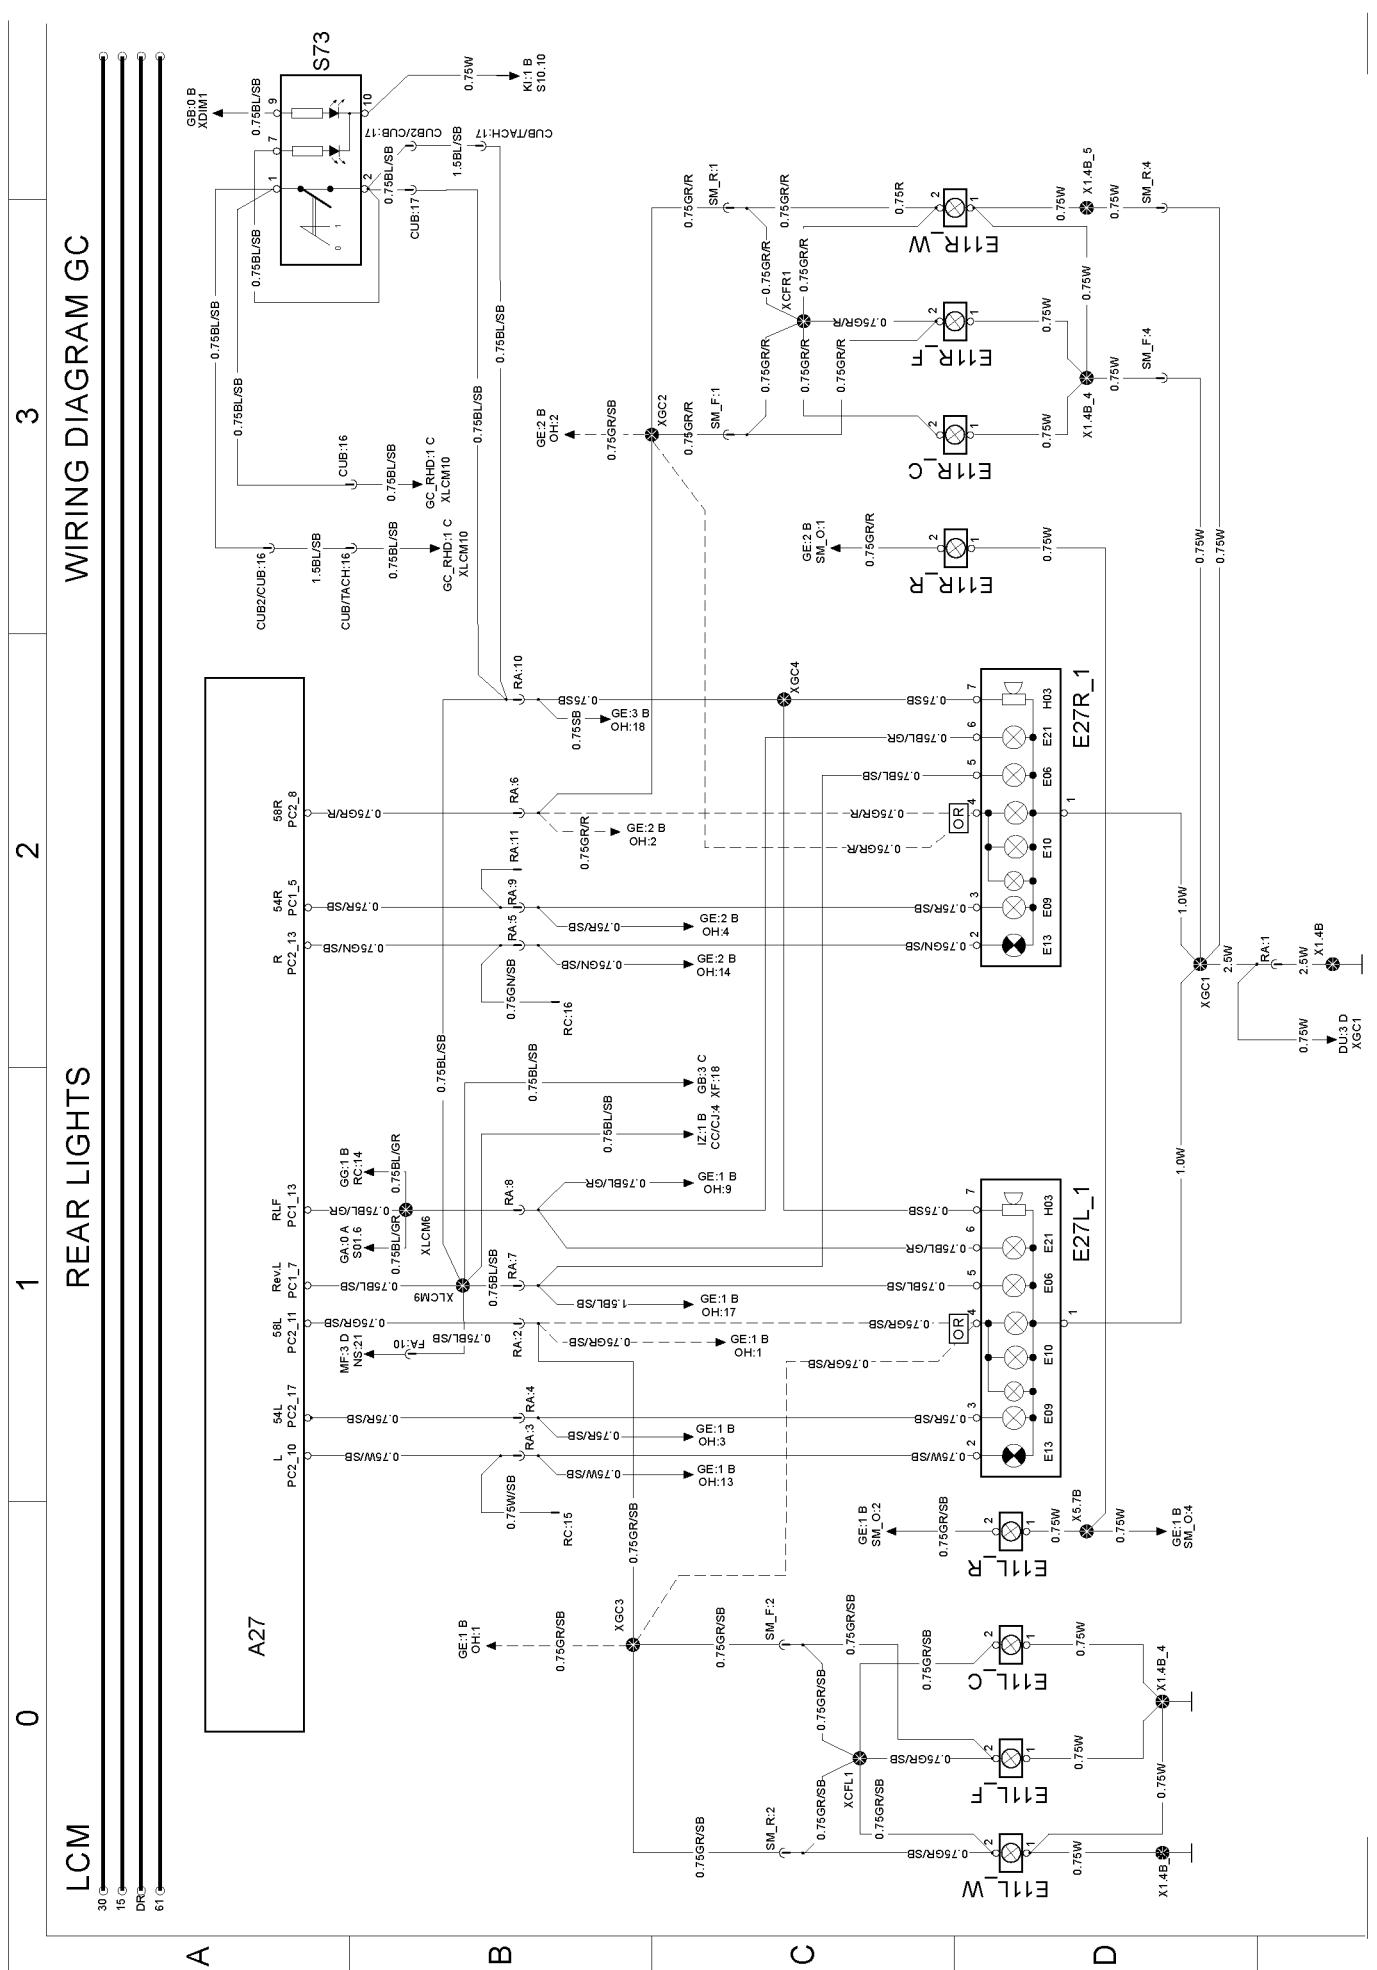


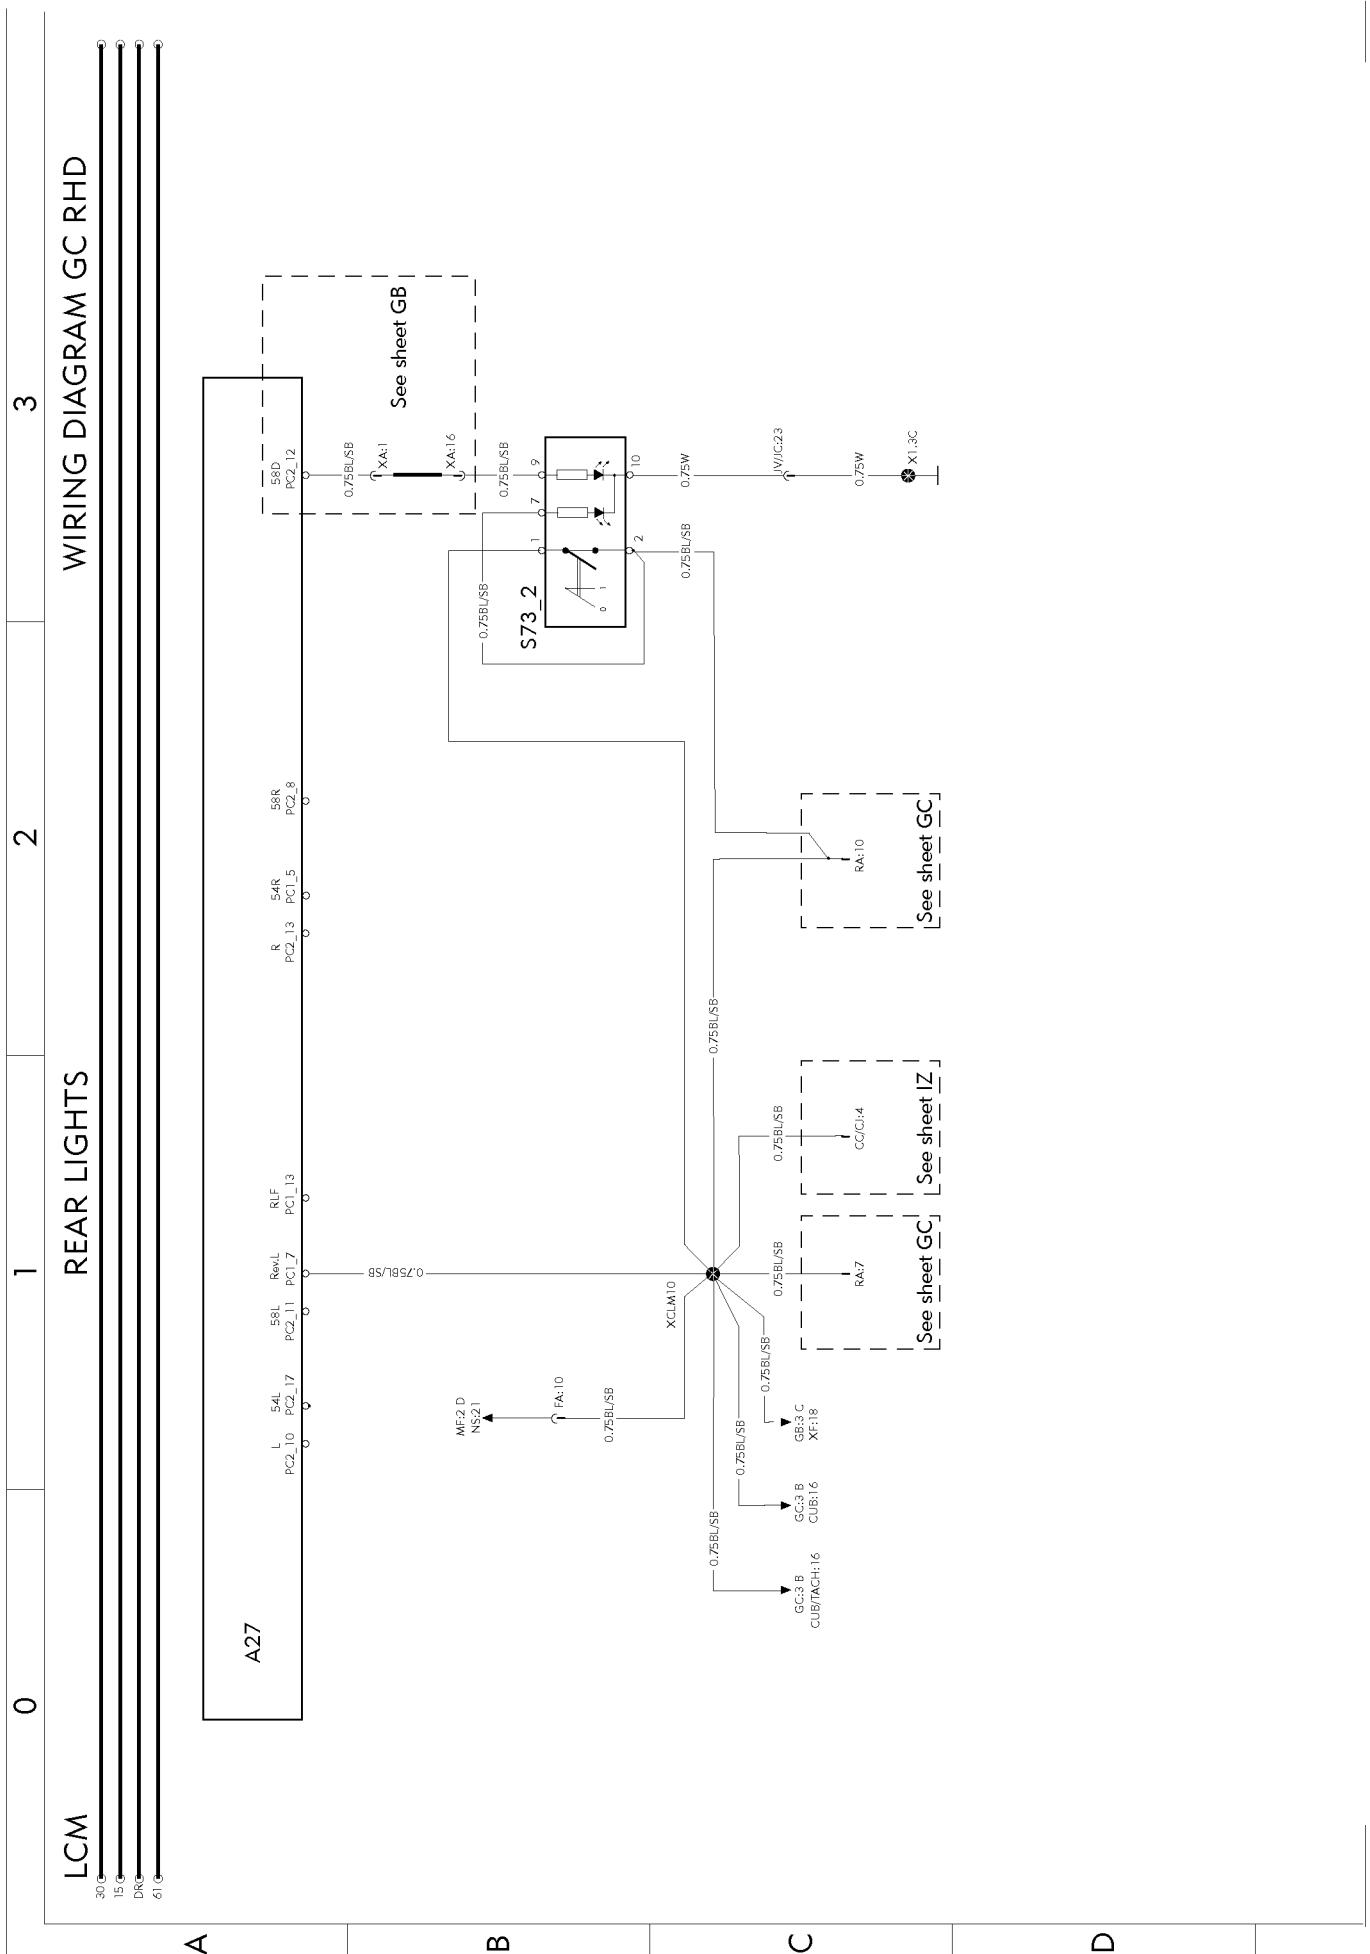


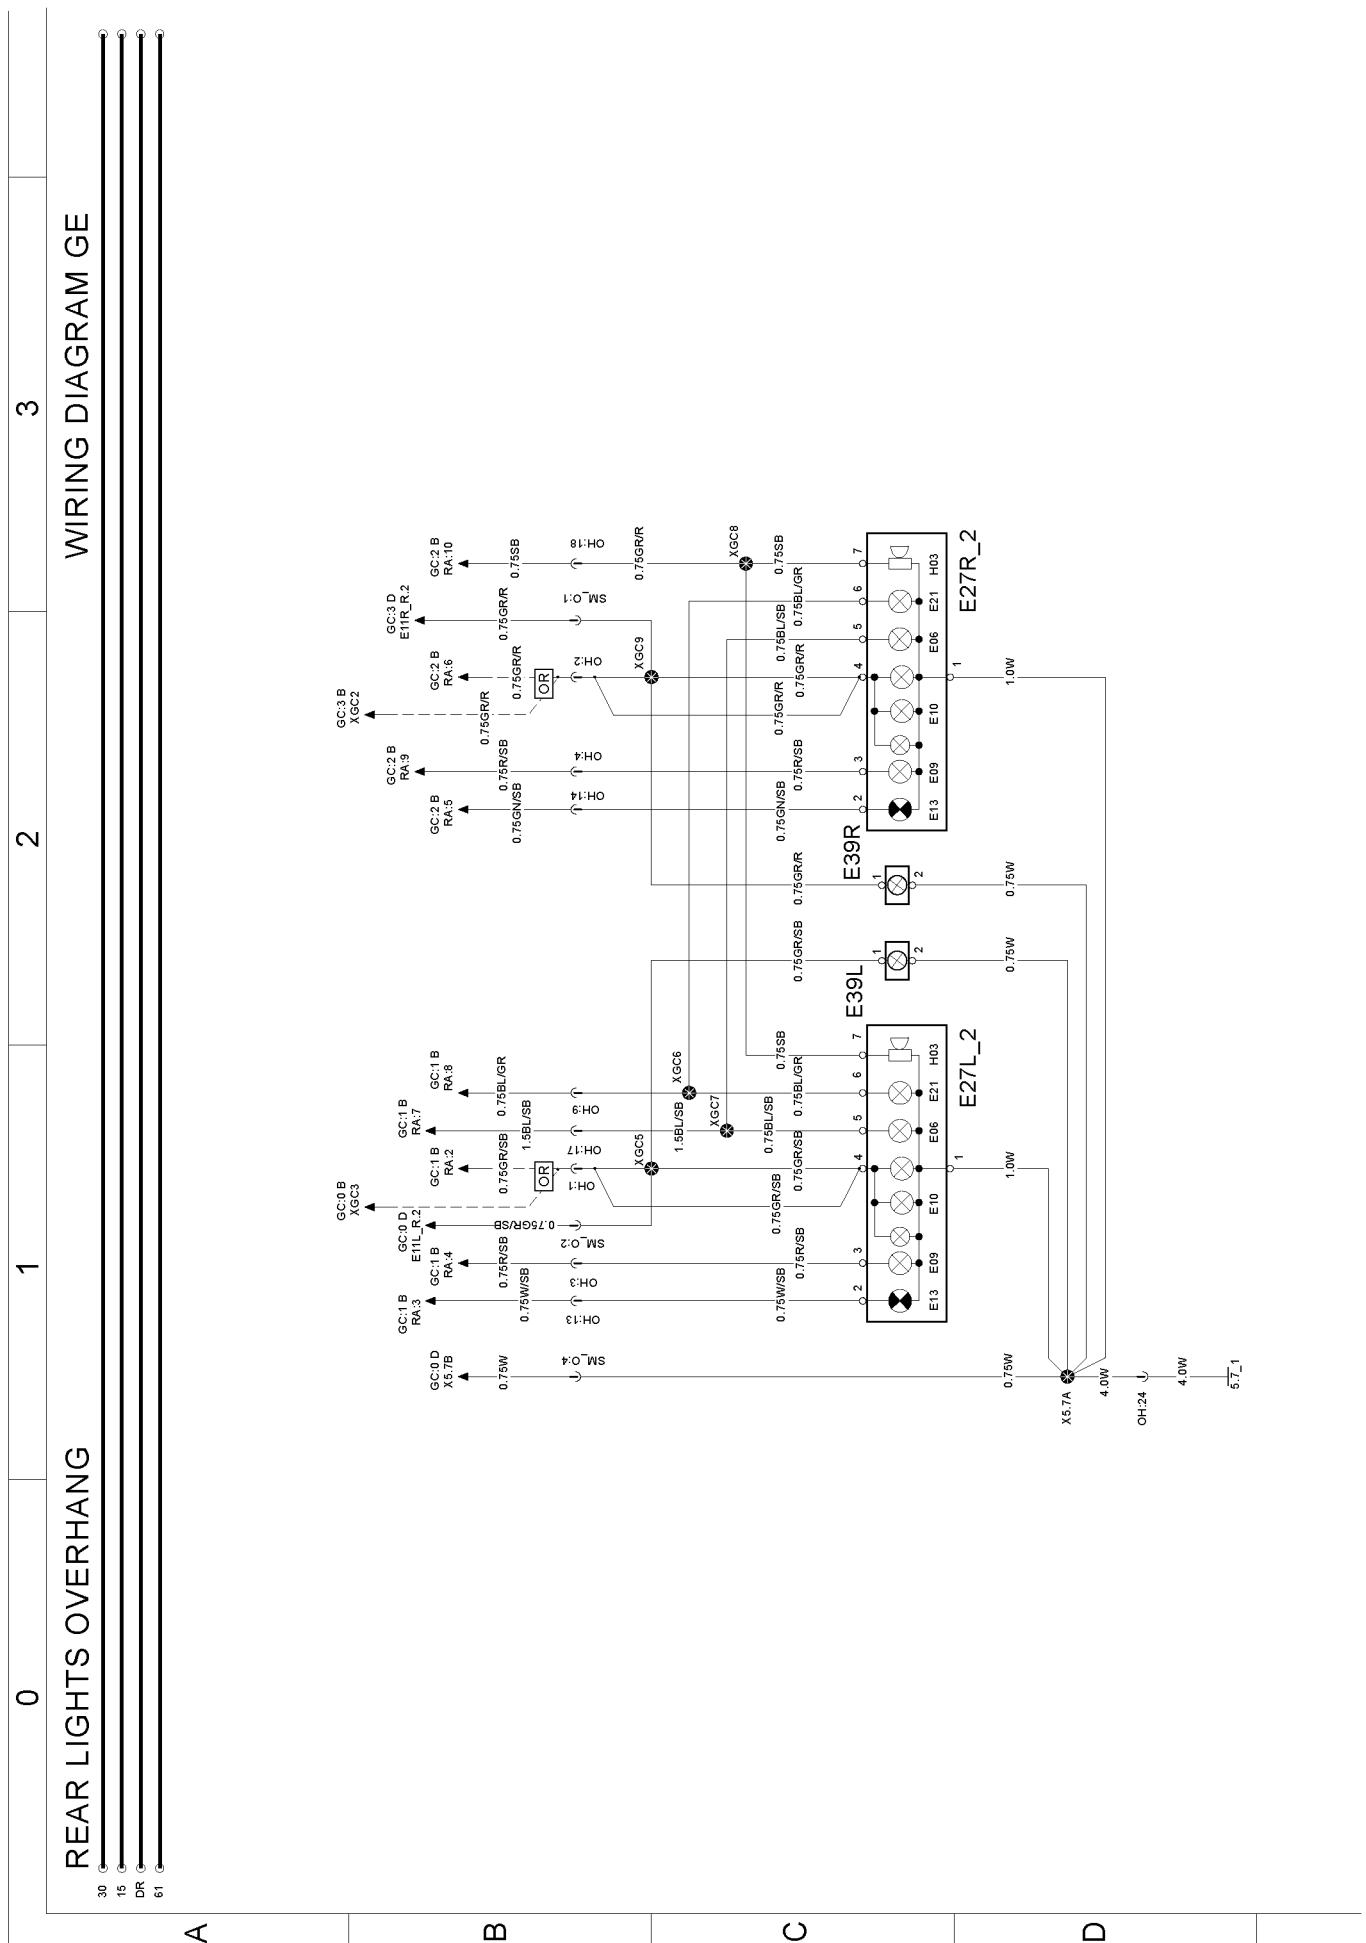

T3057798

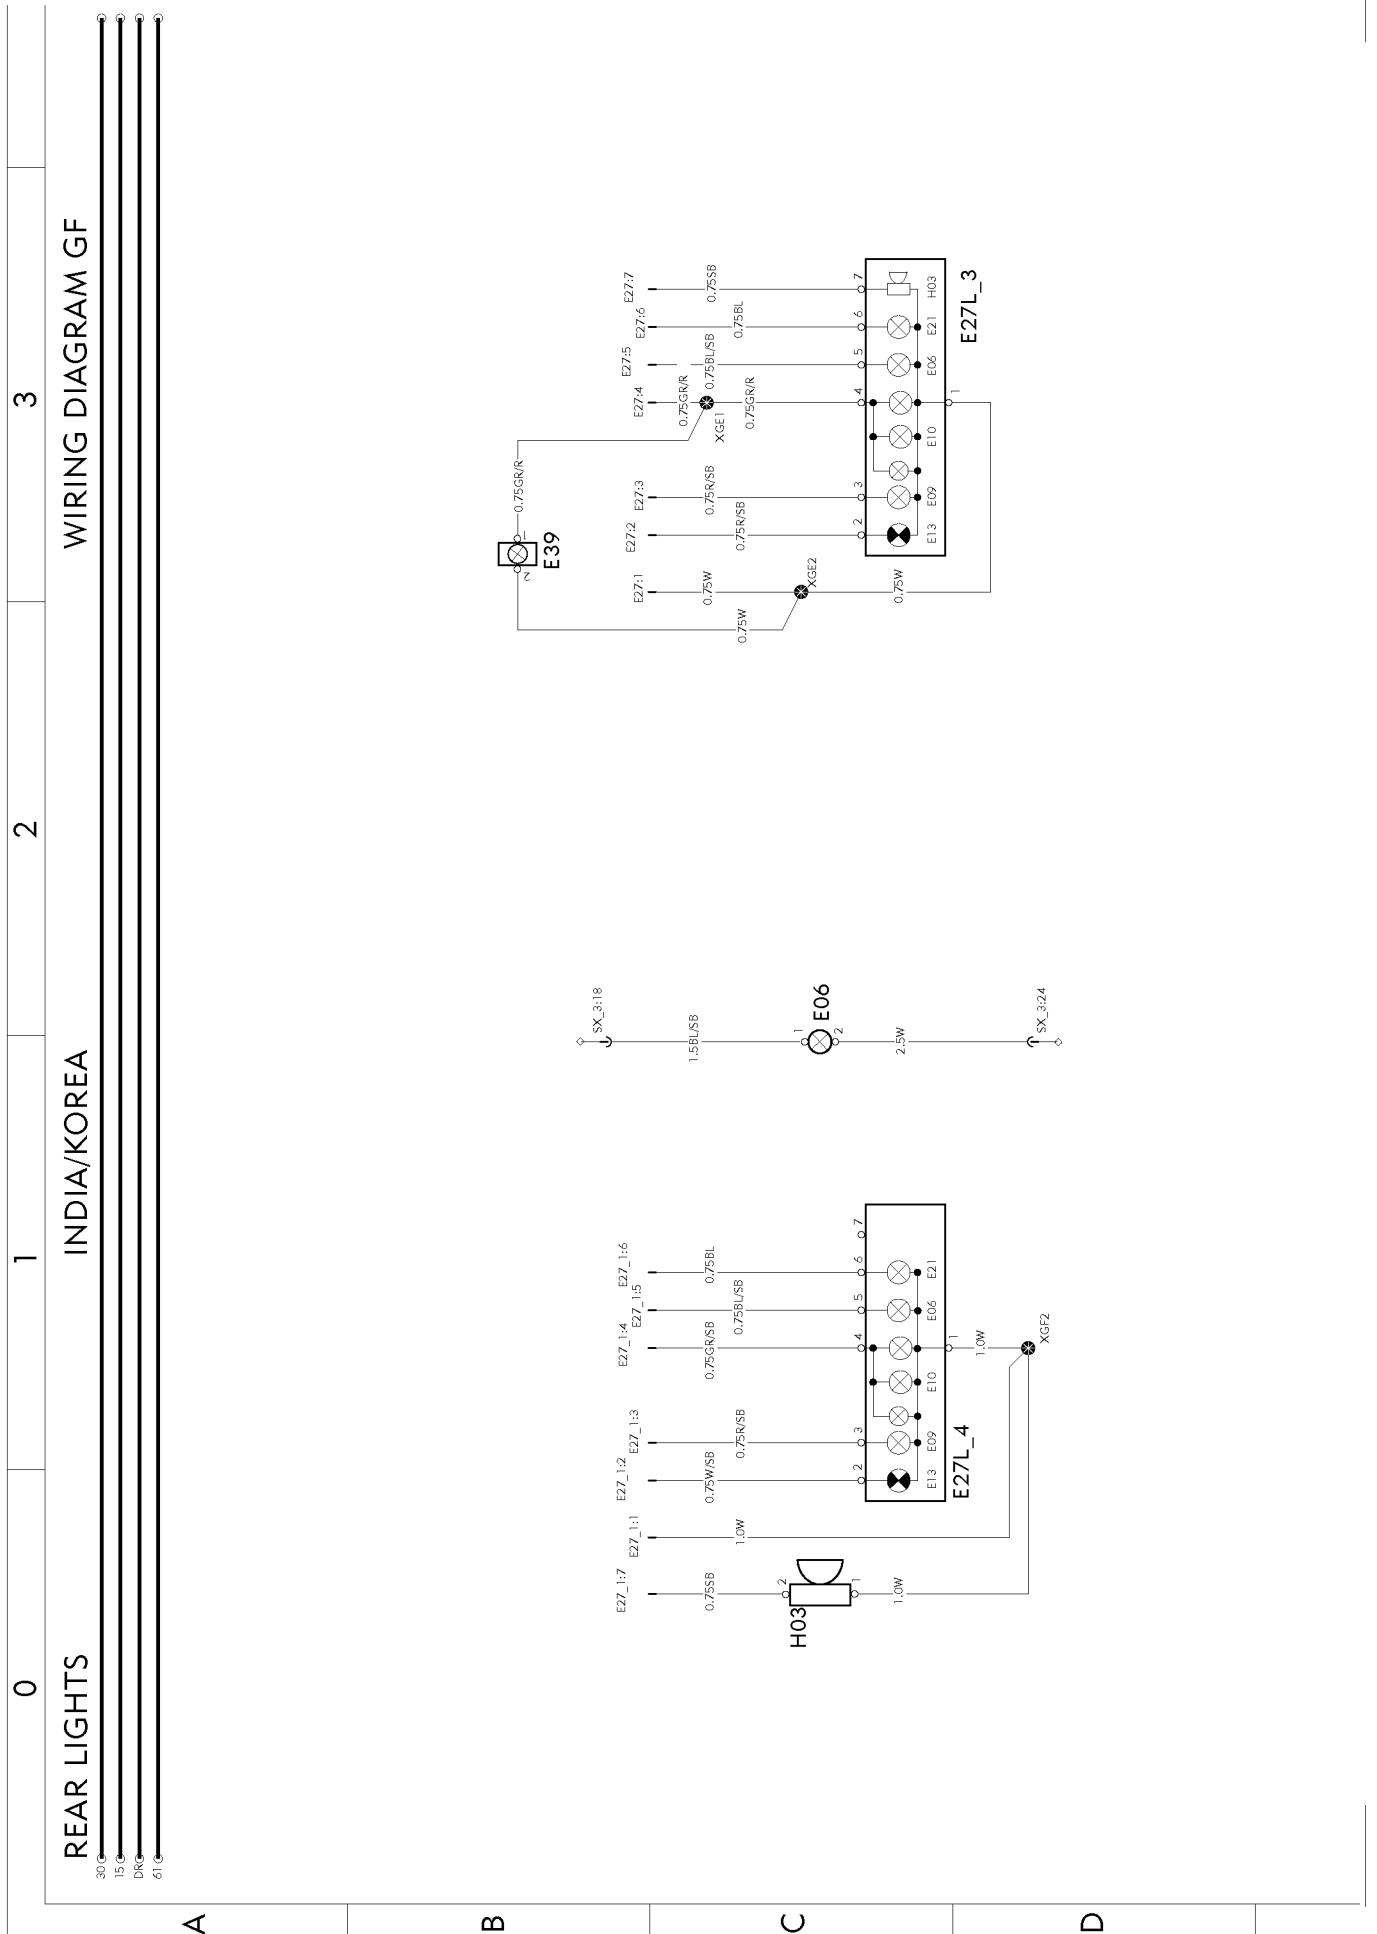

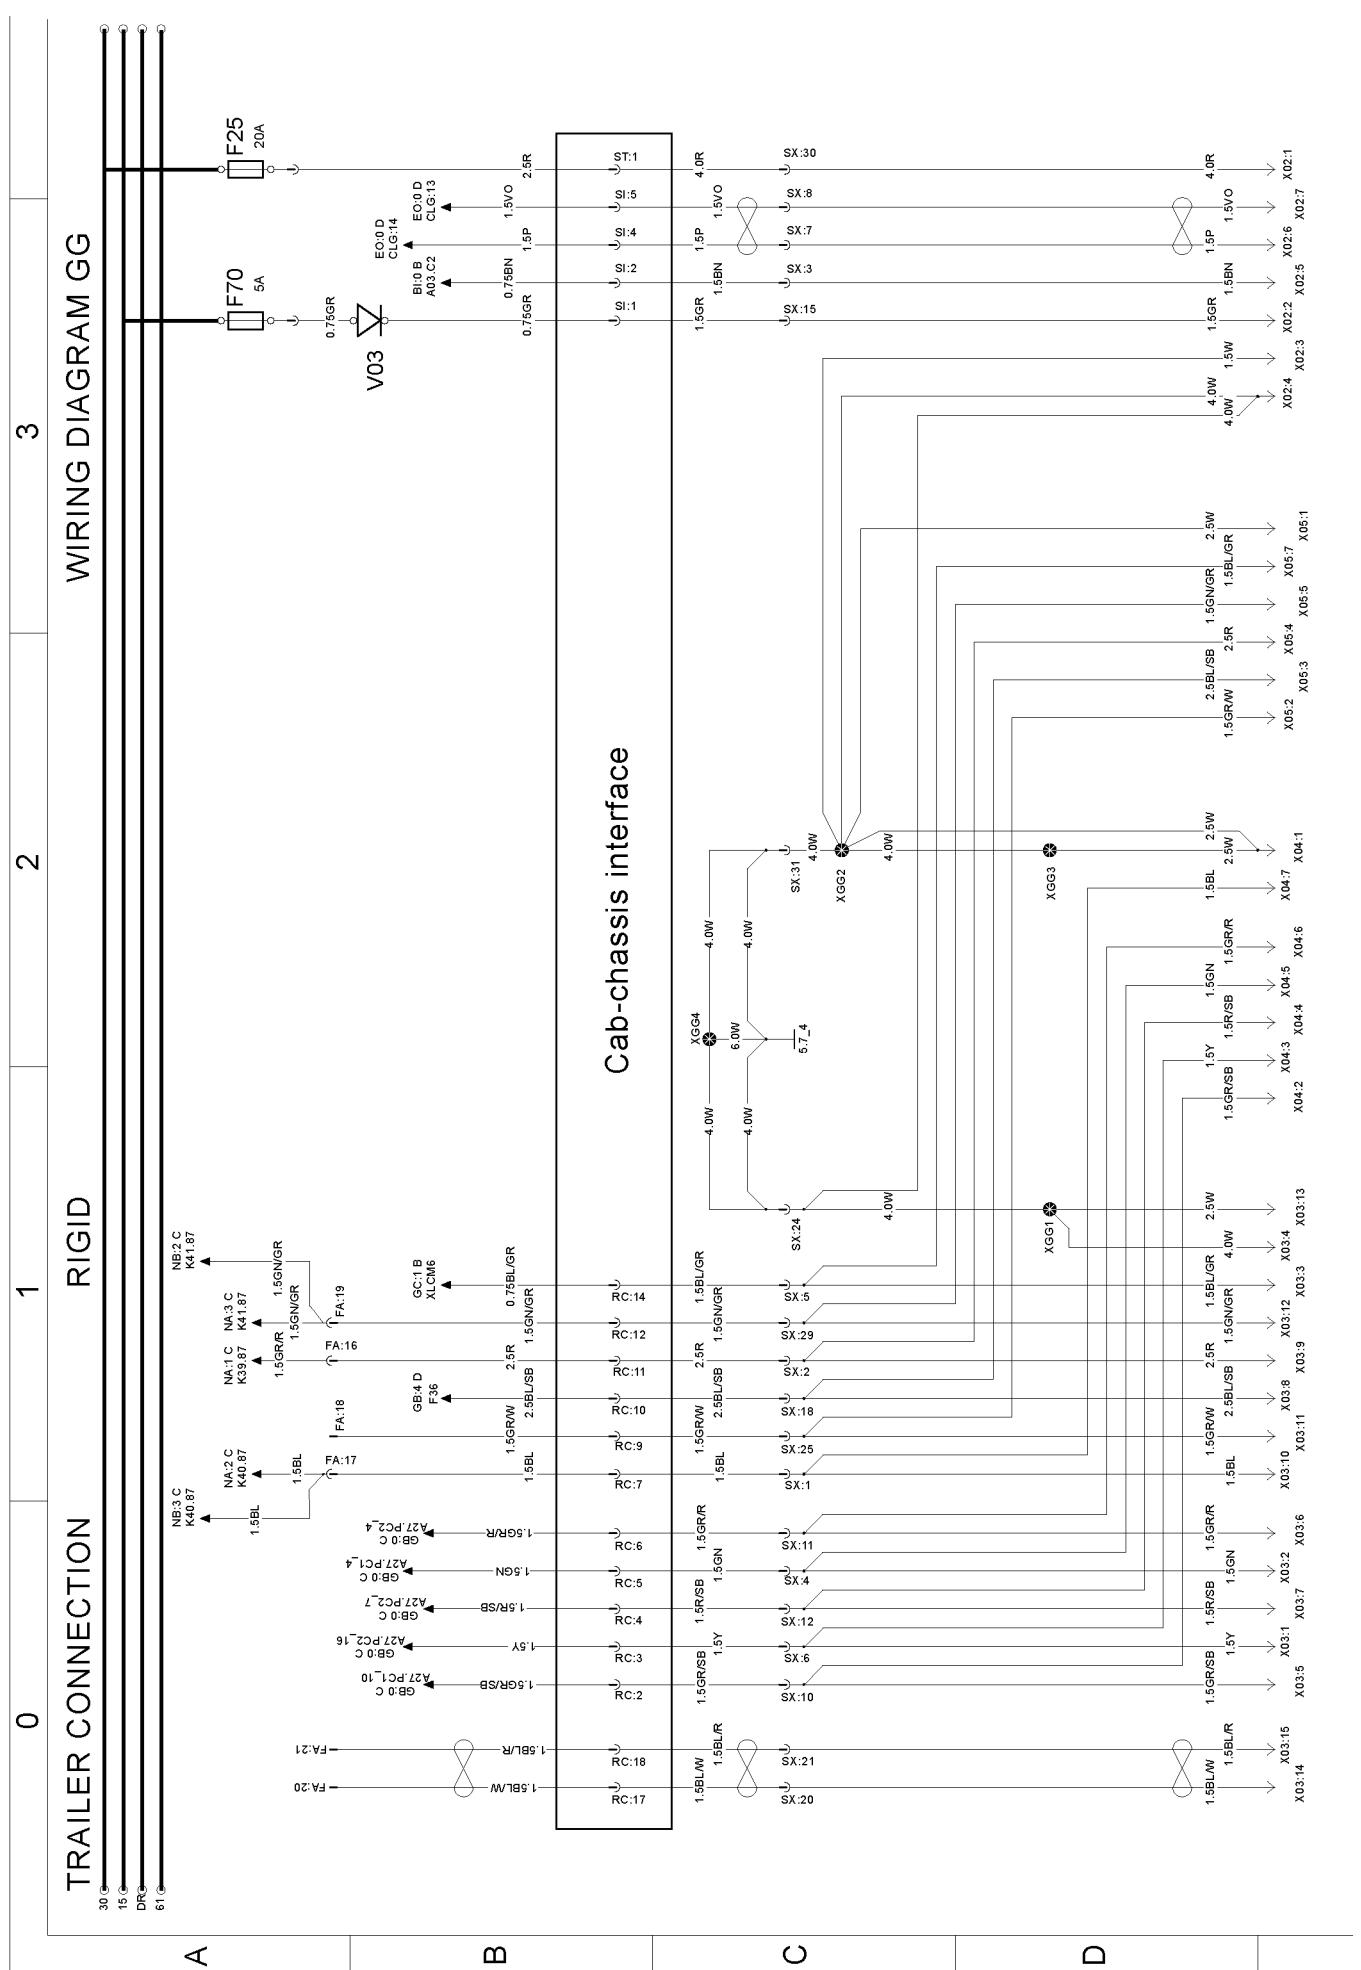

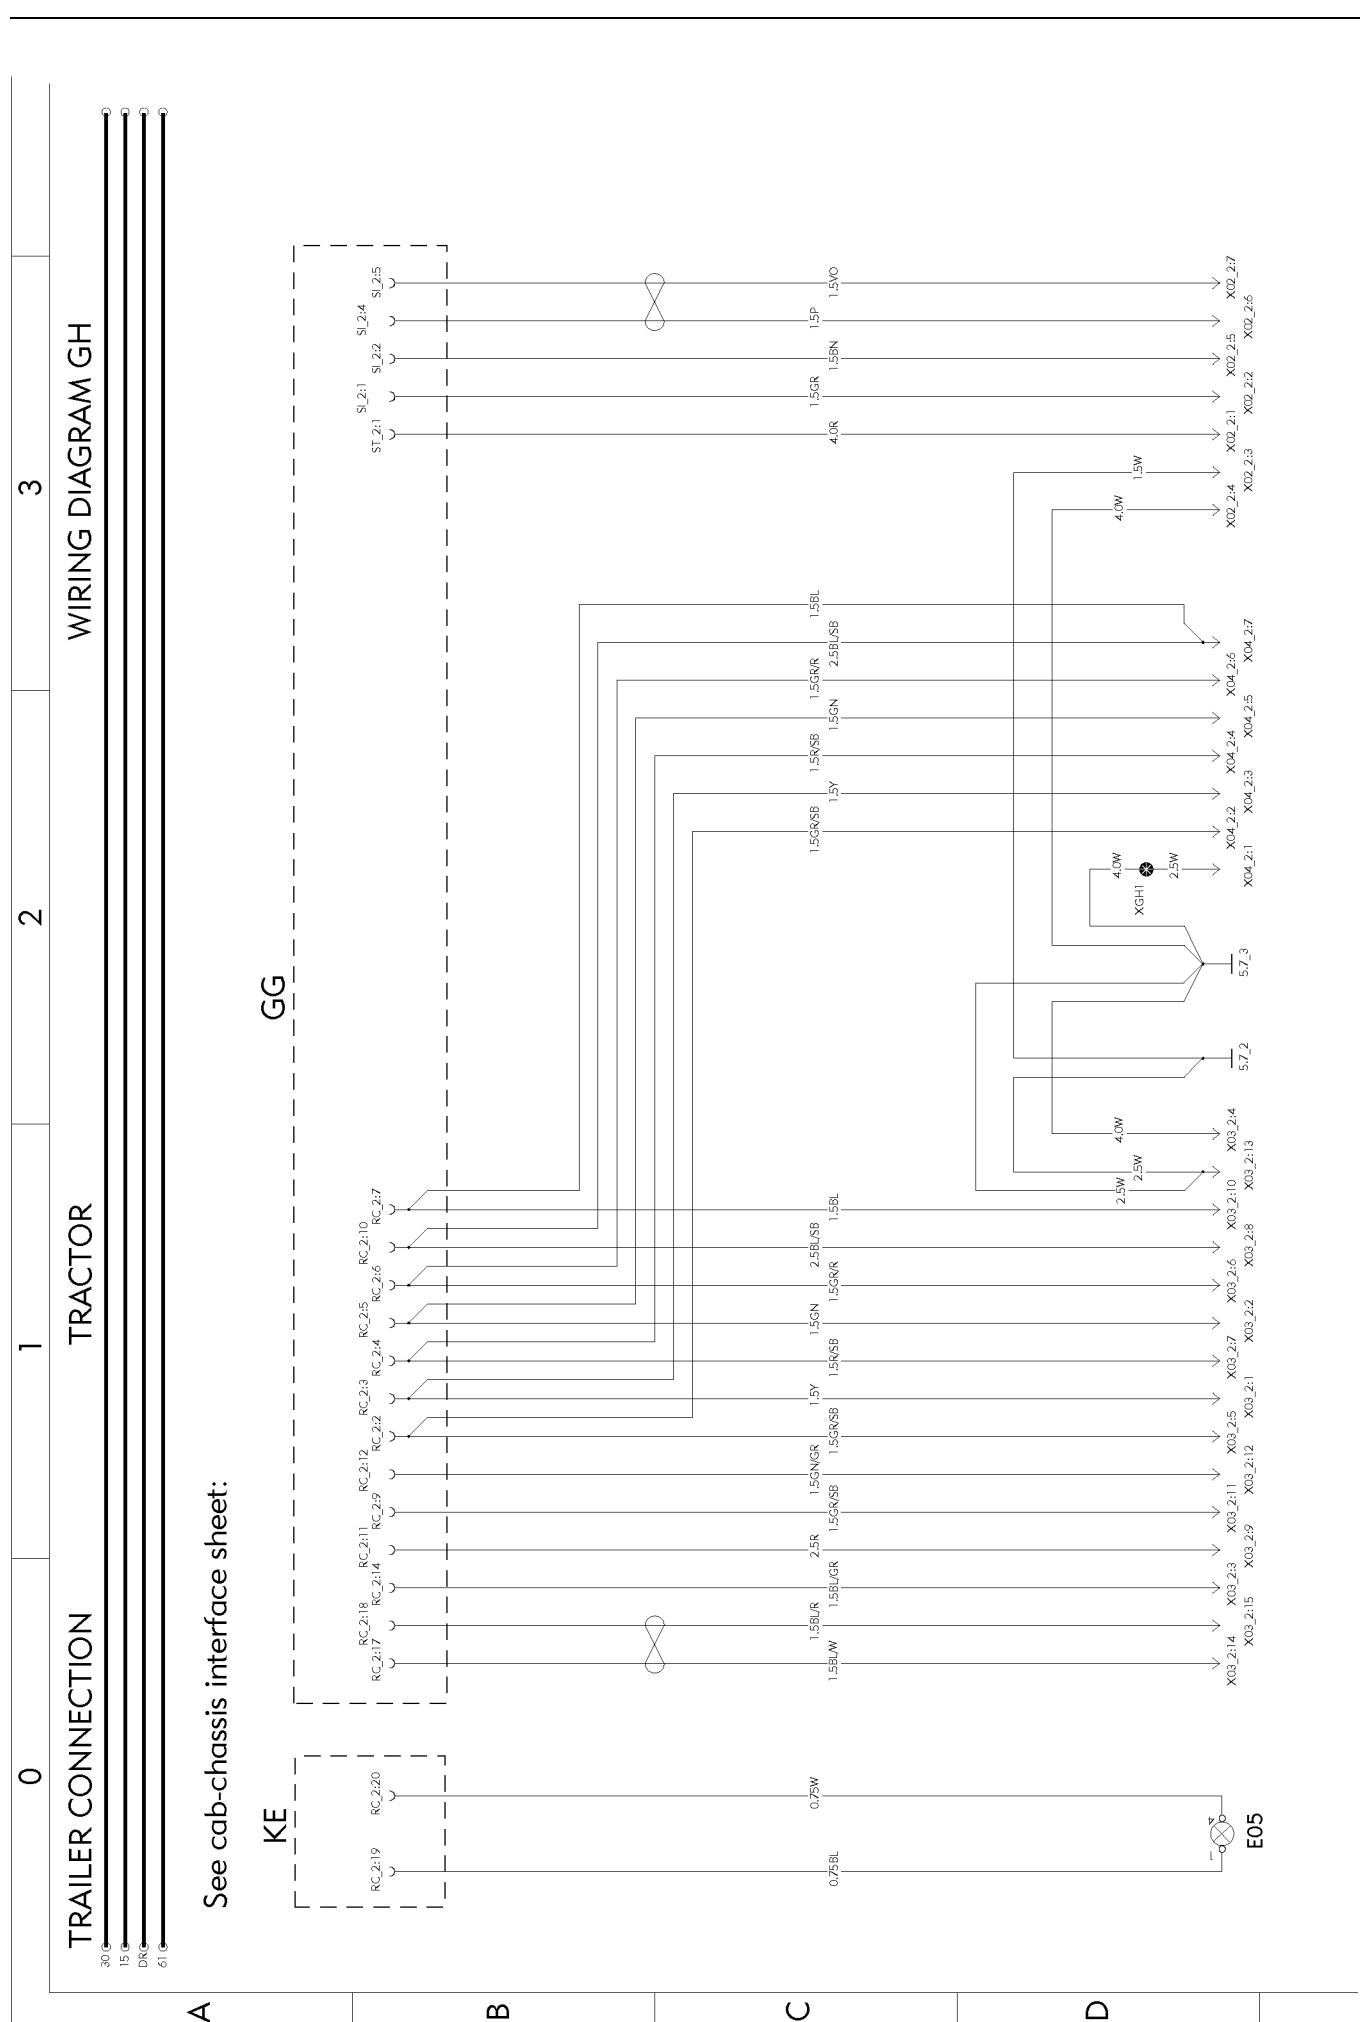


TRAILER CONNECTIONS (AUS ONLY)

3

2

1

WIRING DIAGRAM GK

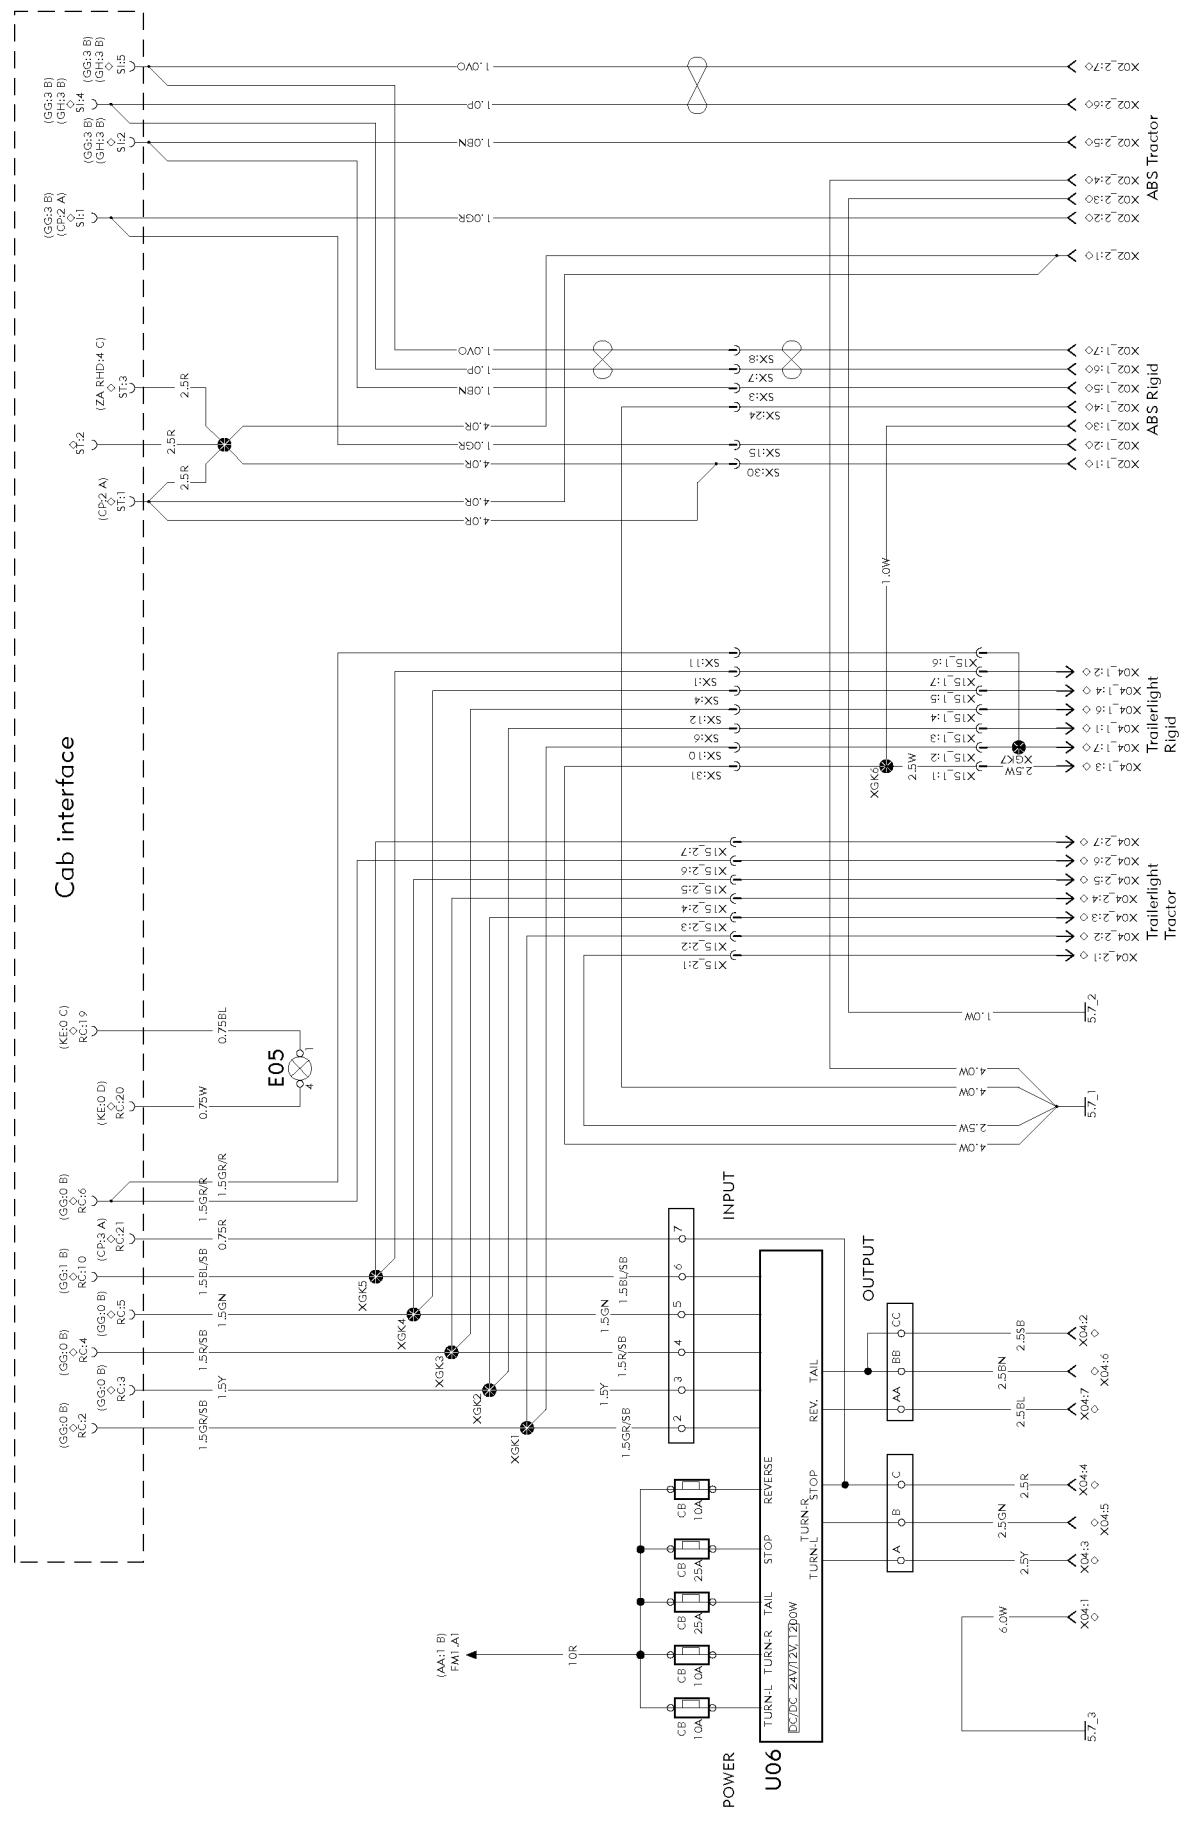

A


2

U


1


0	1	2	3
WIRING DIAGRAM GL			

 
IDENTIFICATION LAMPS





India, position lights roof rear

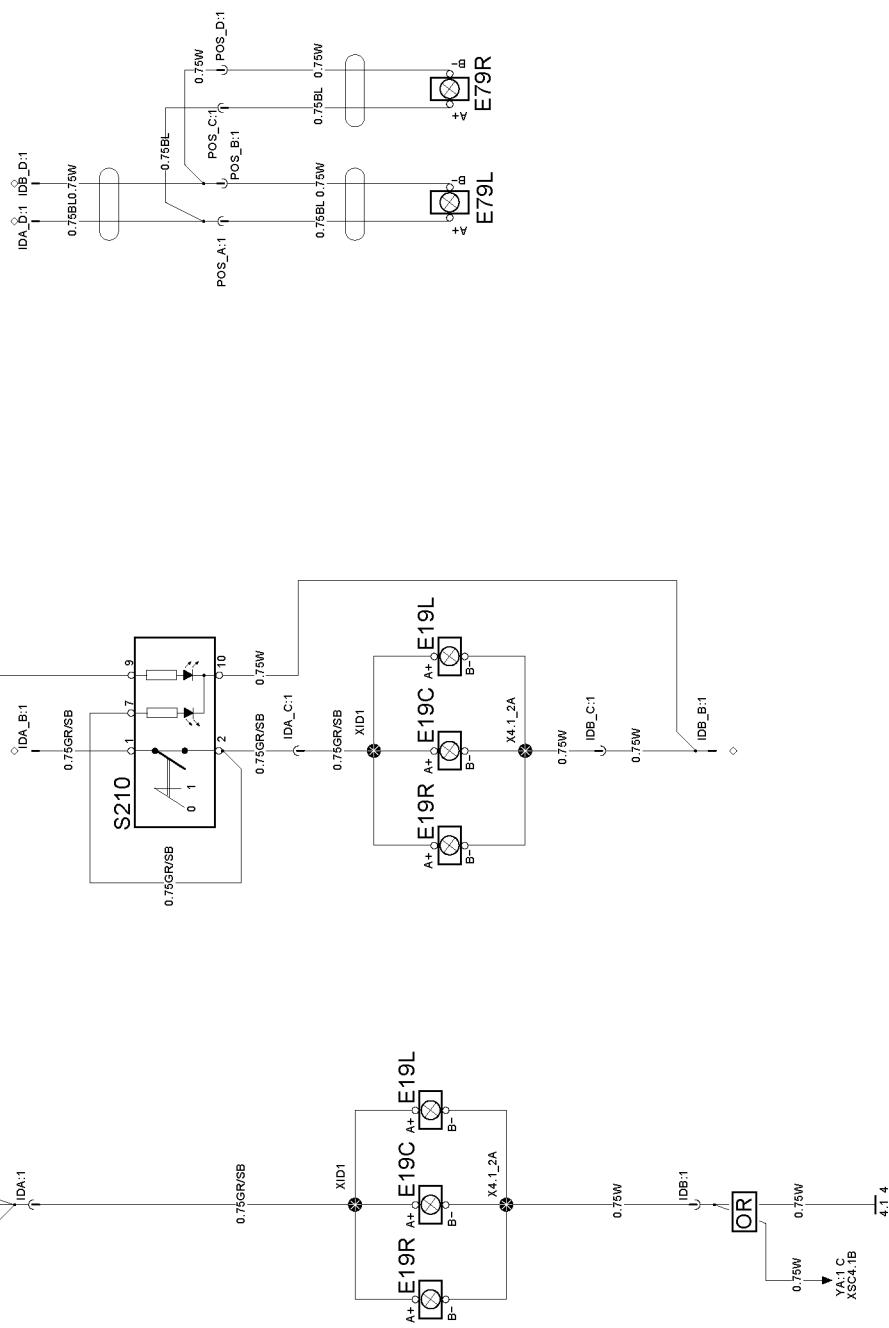


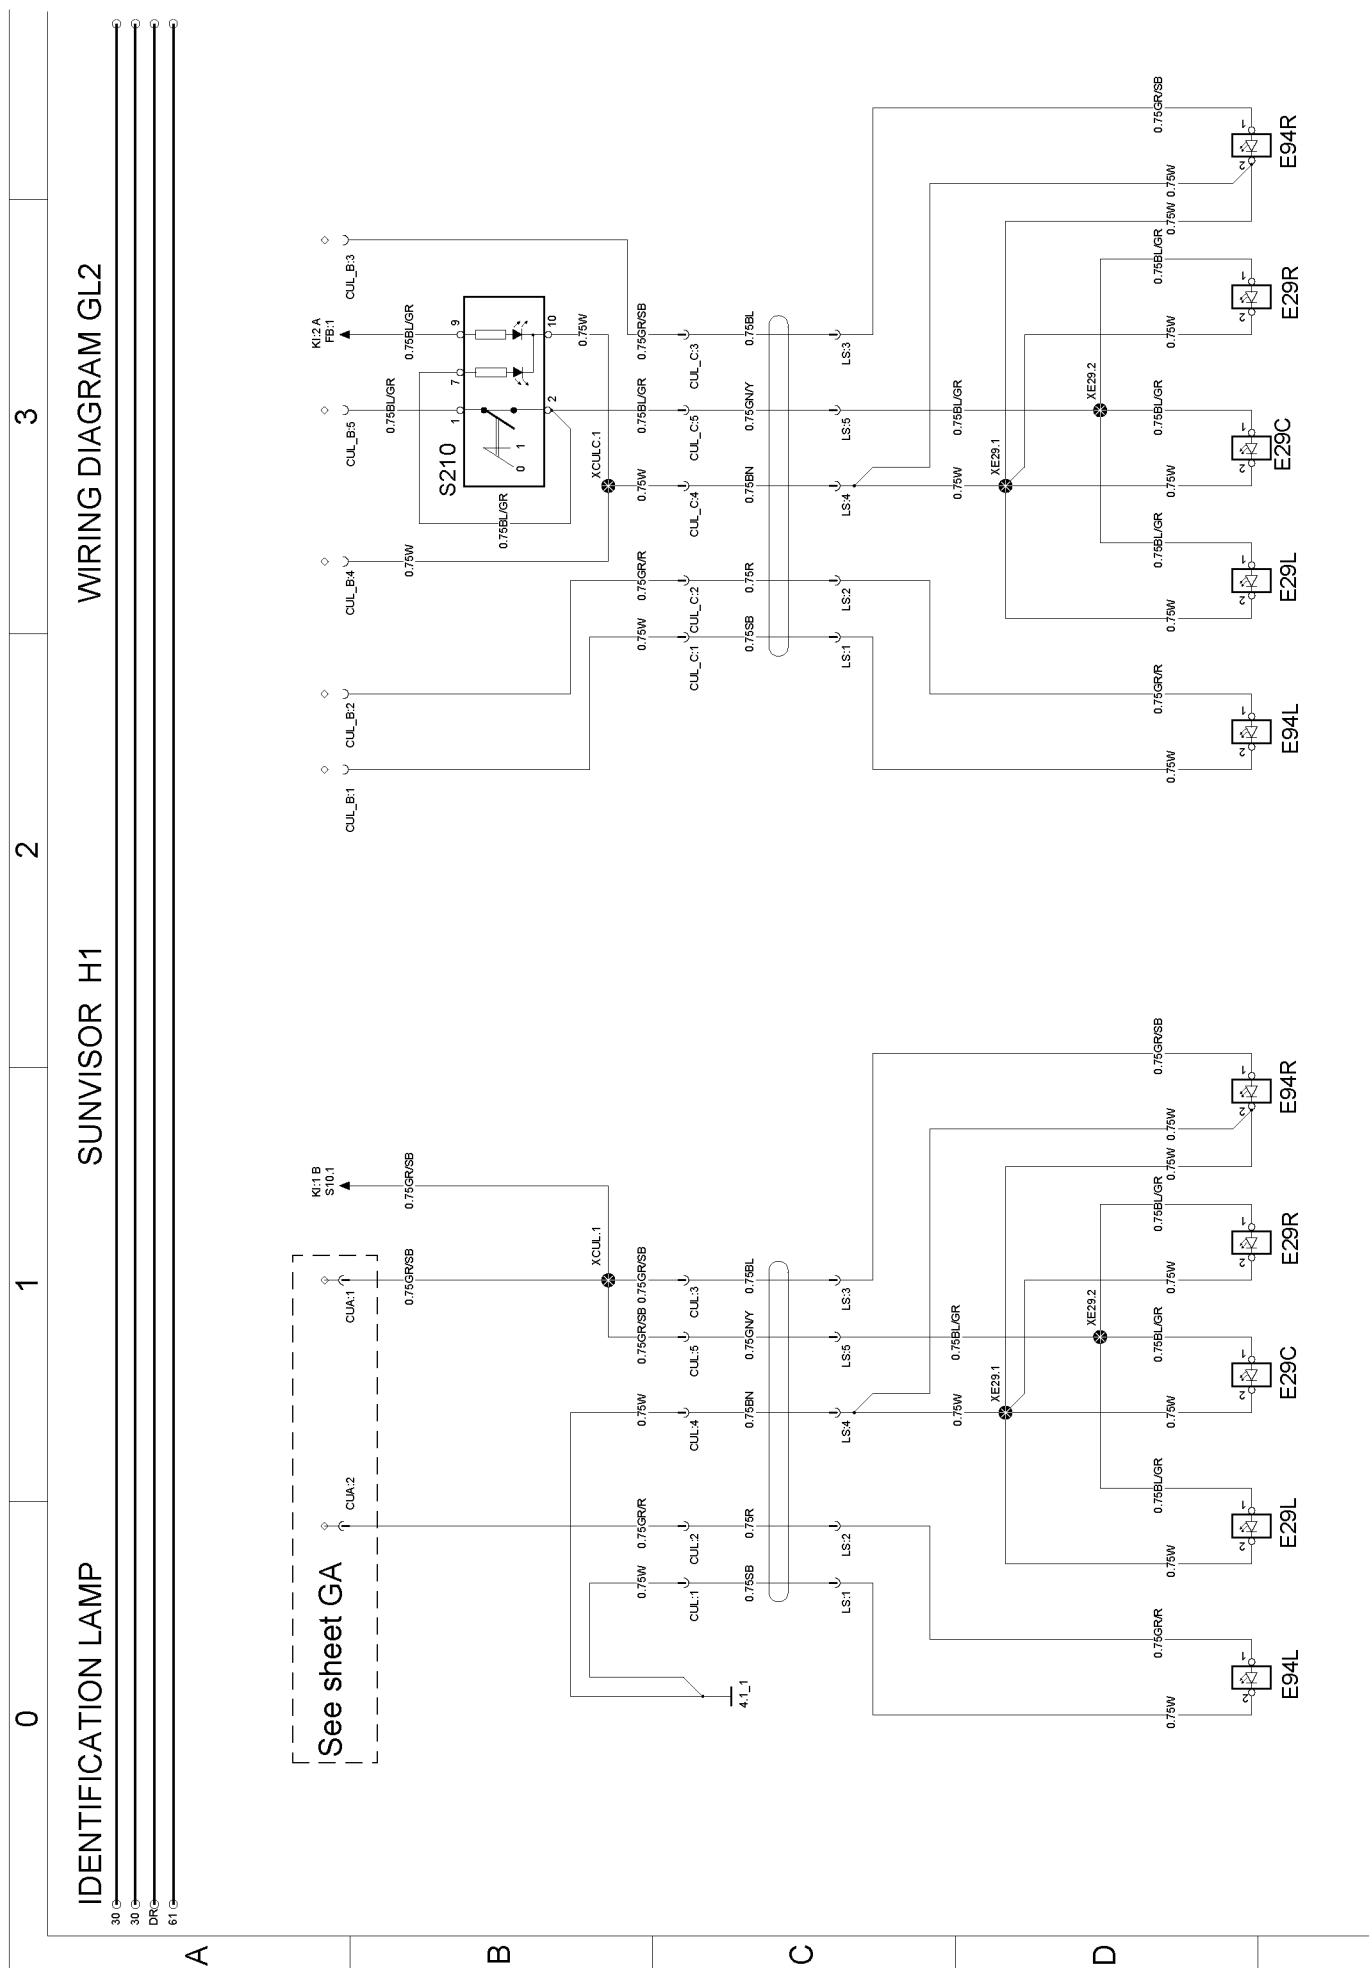


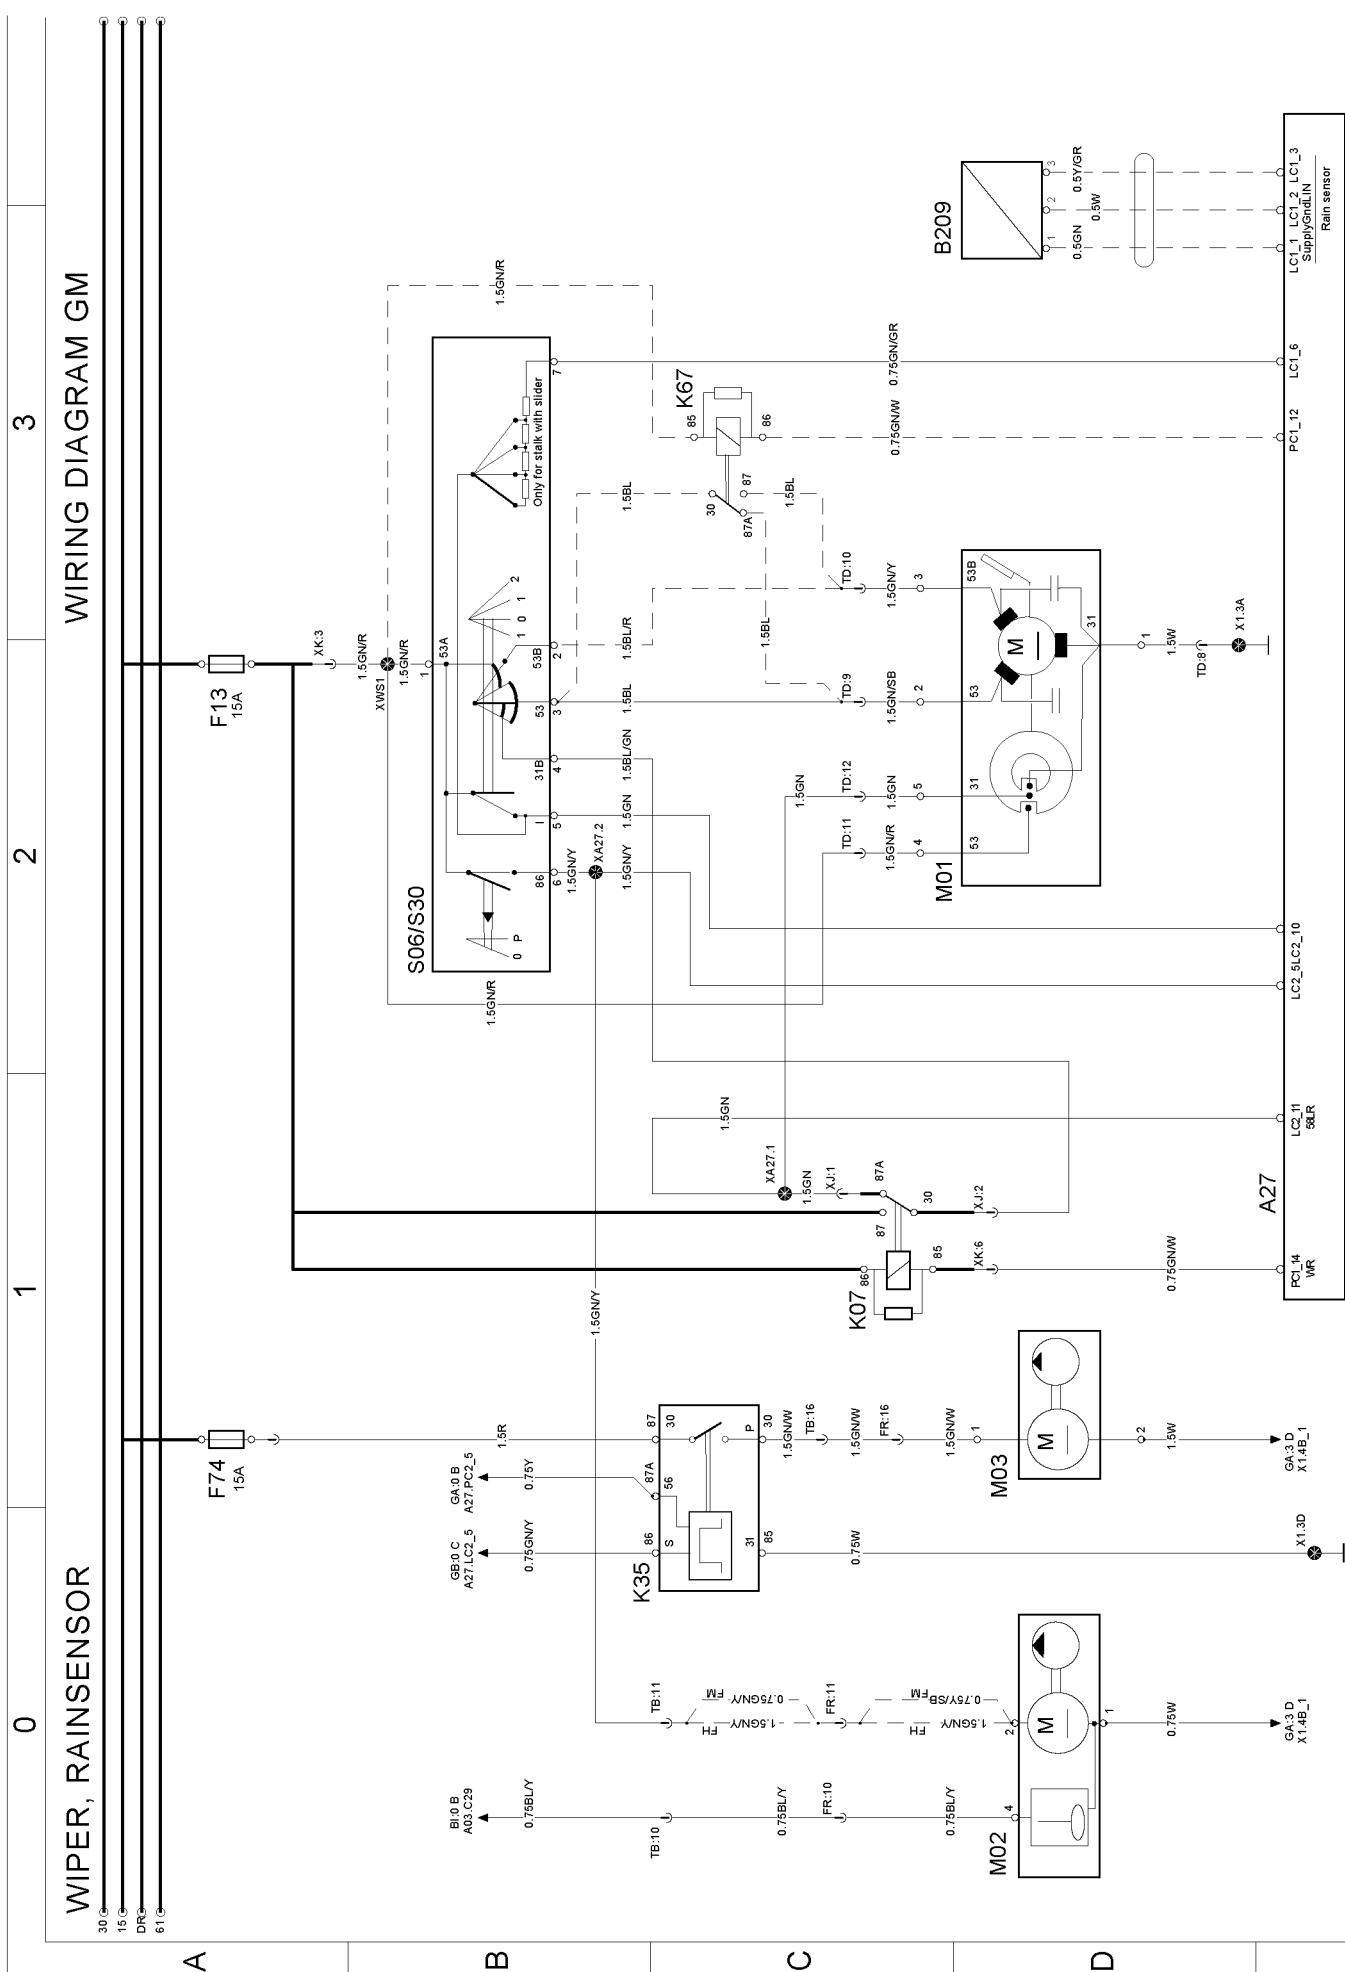


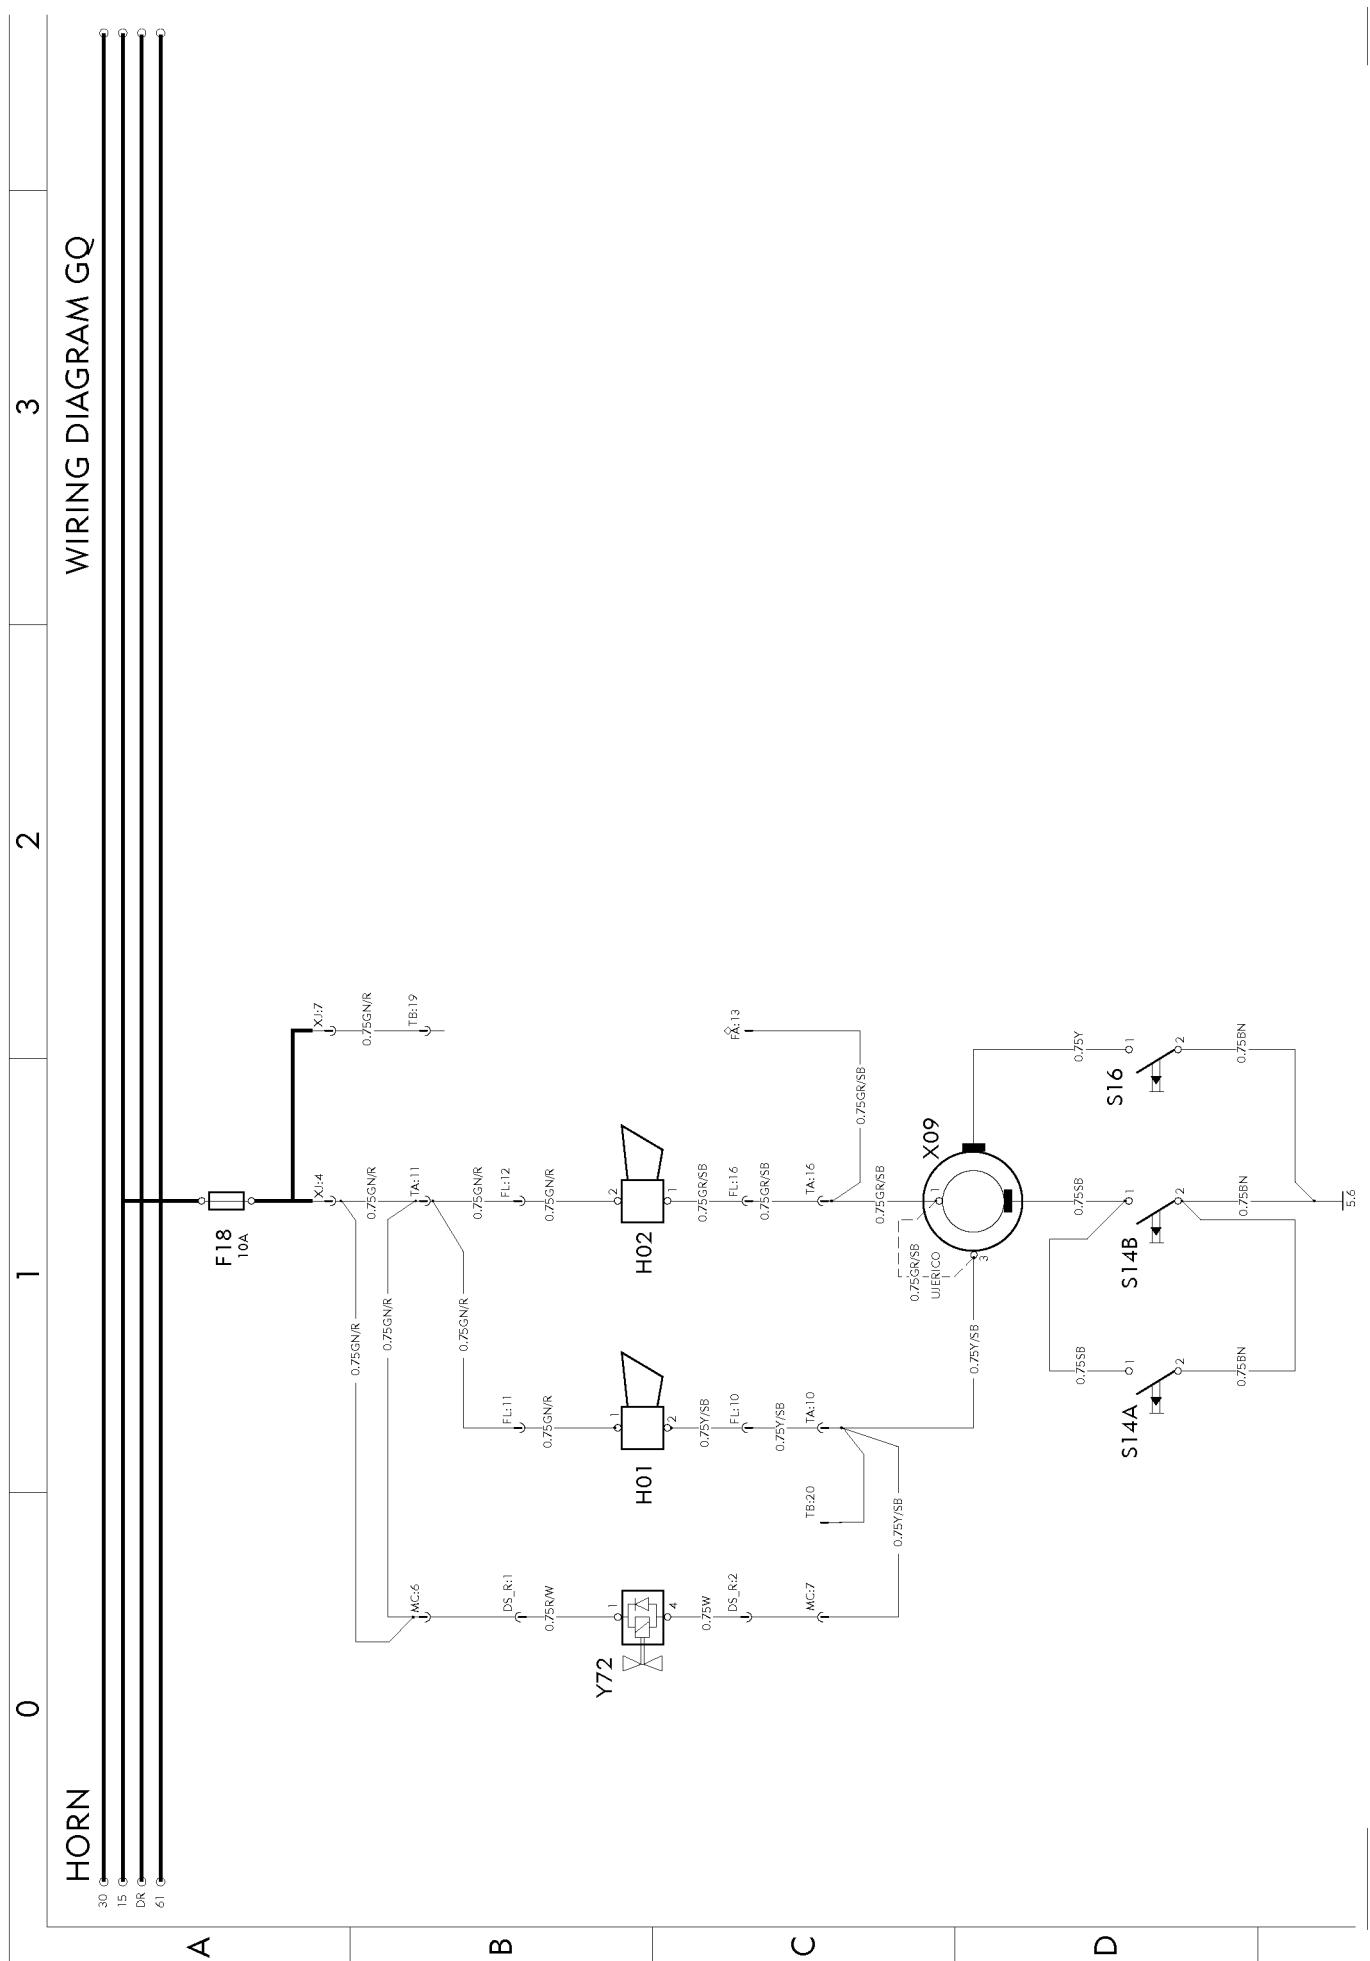


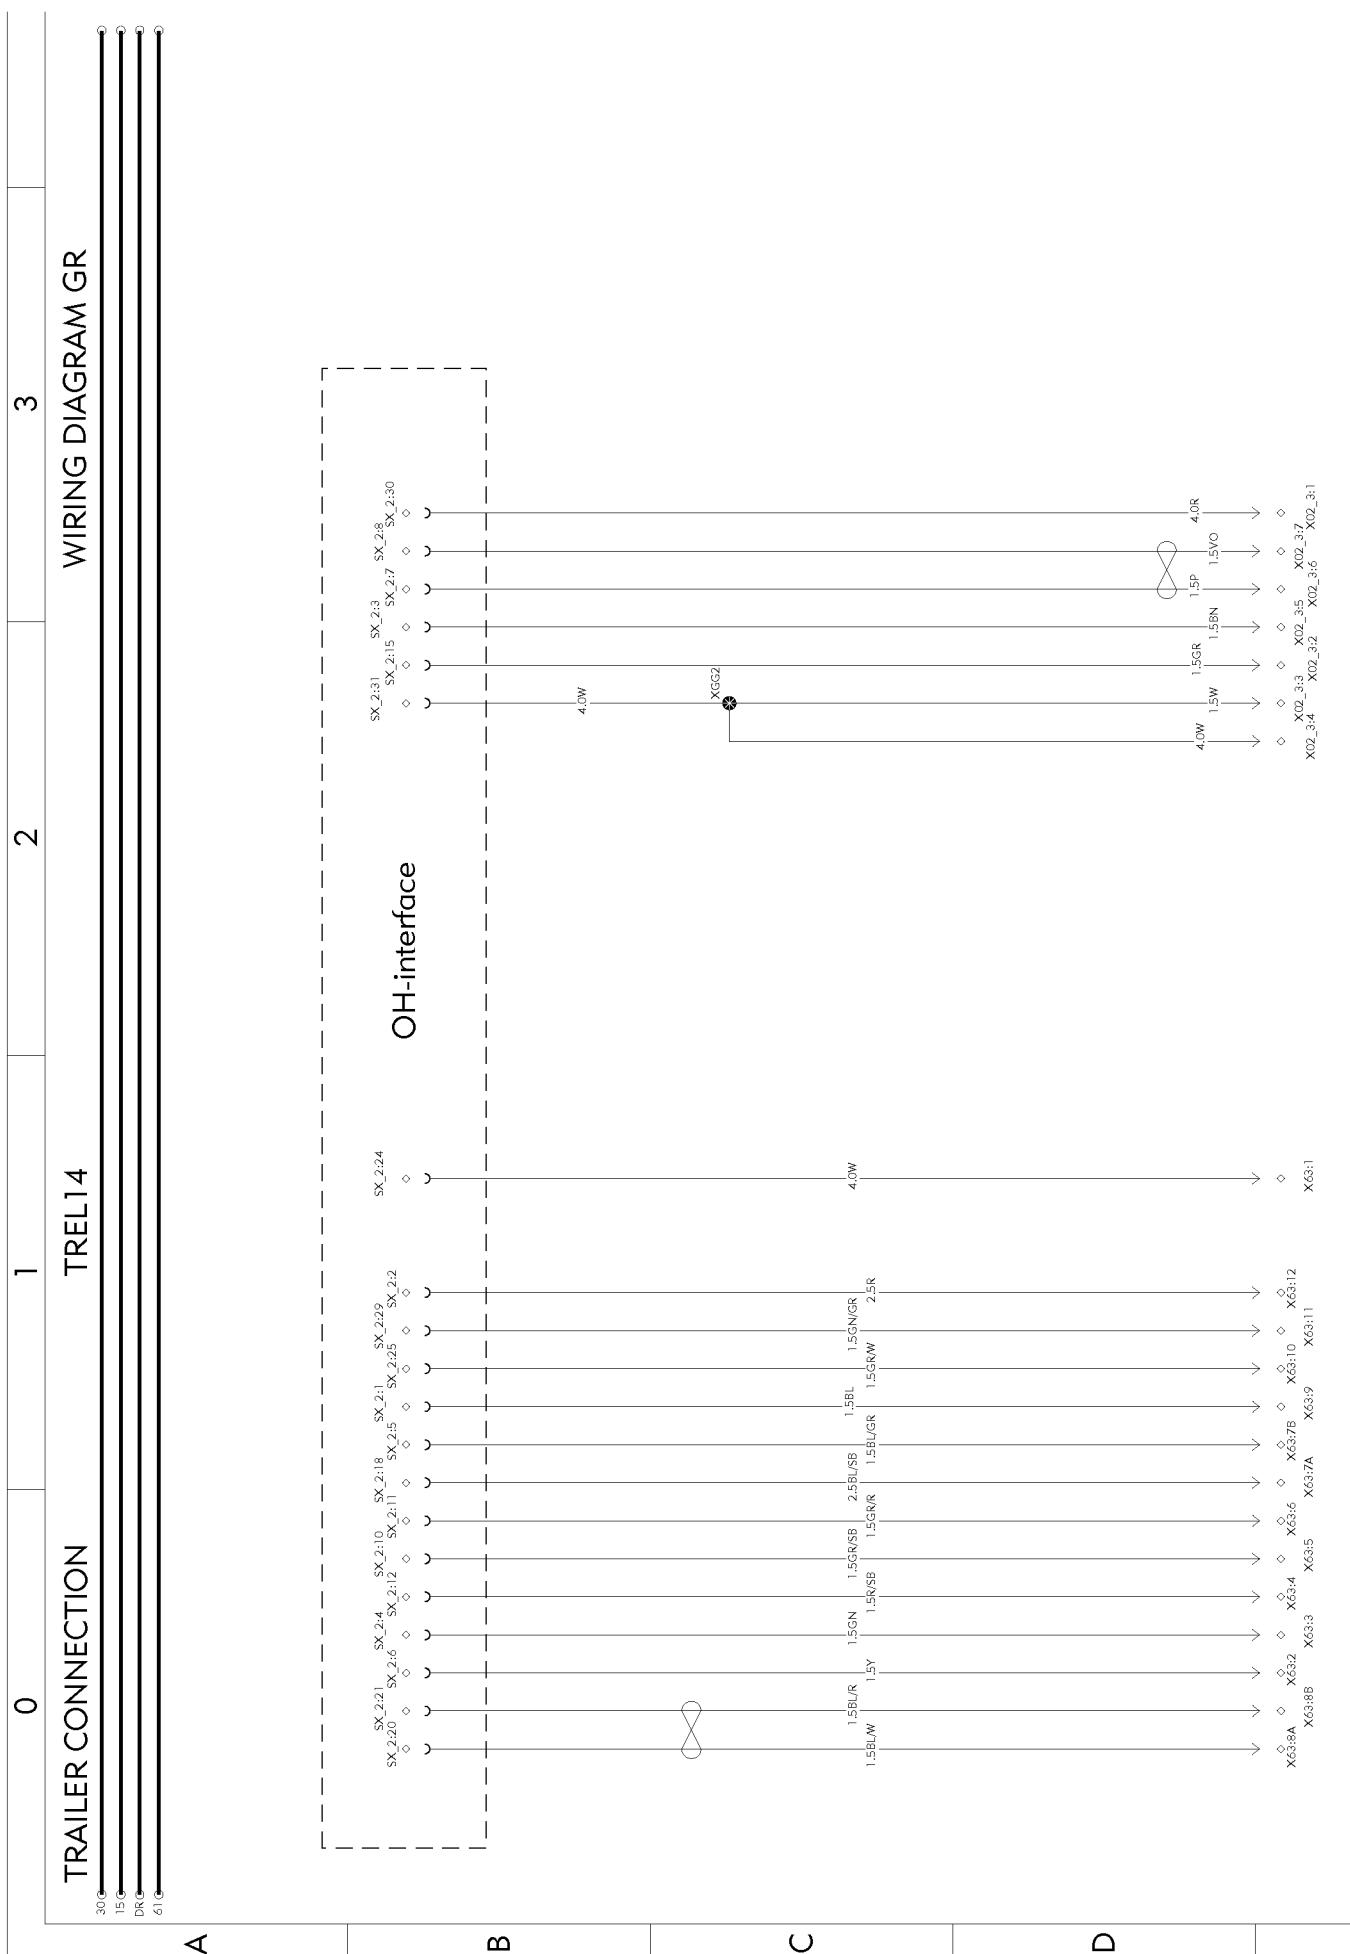


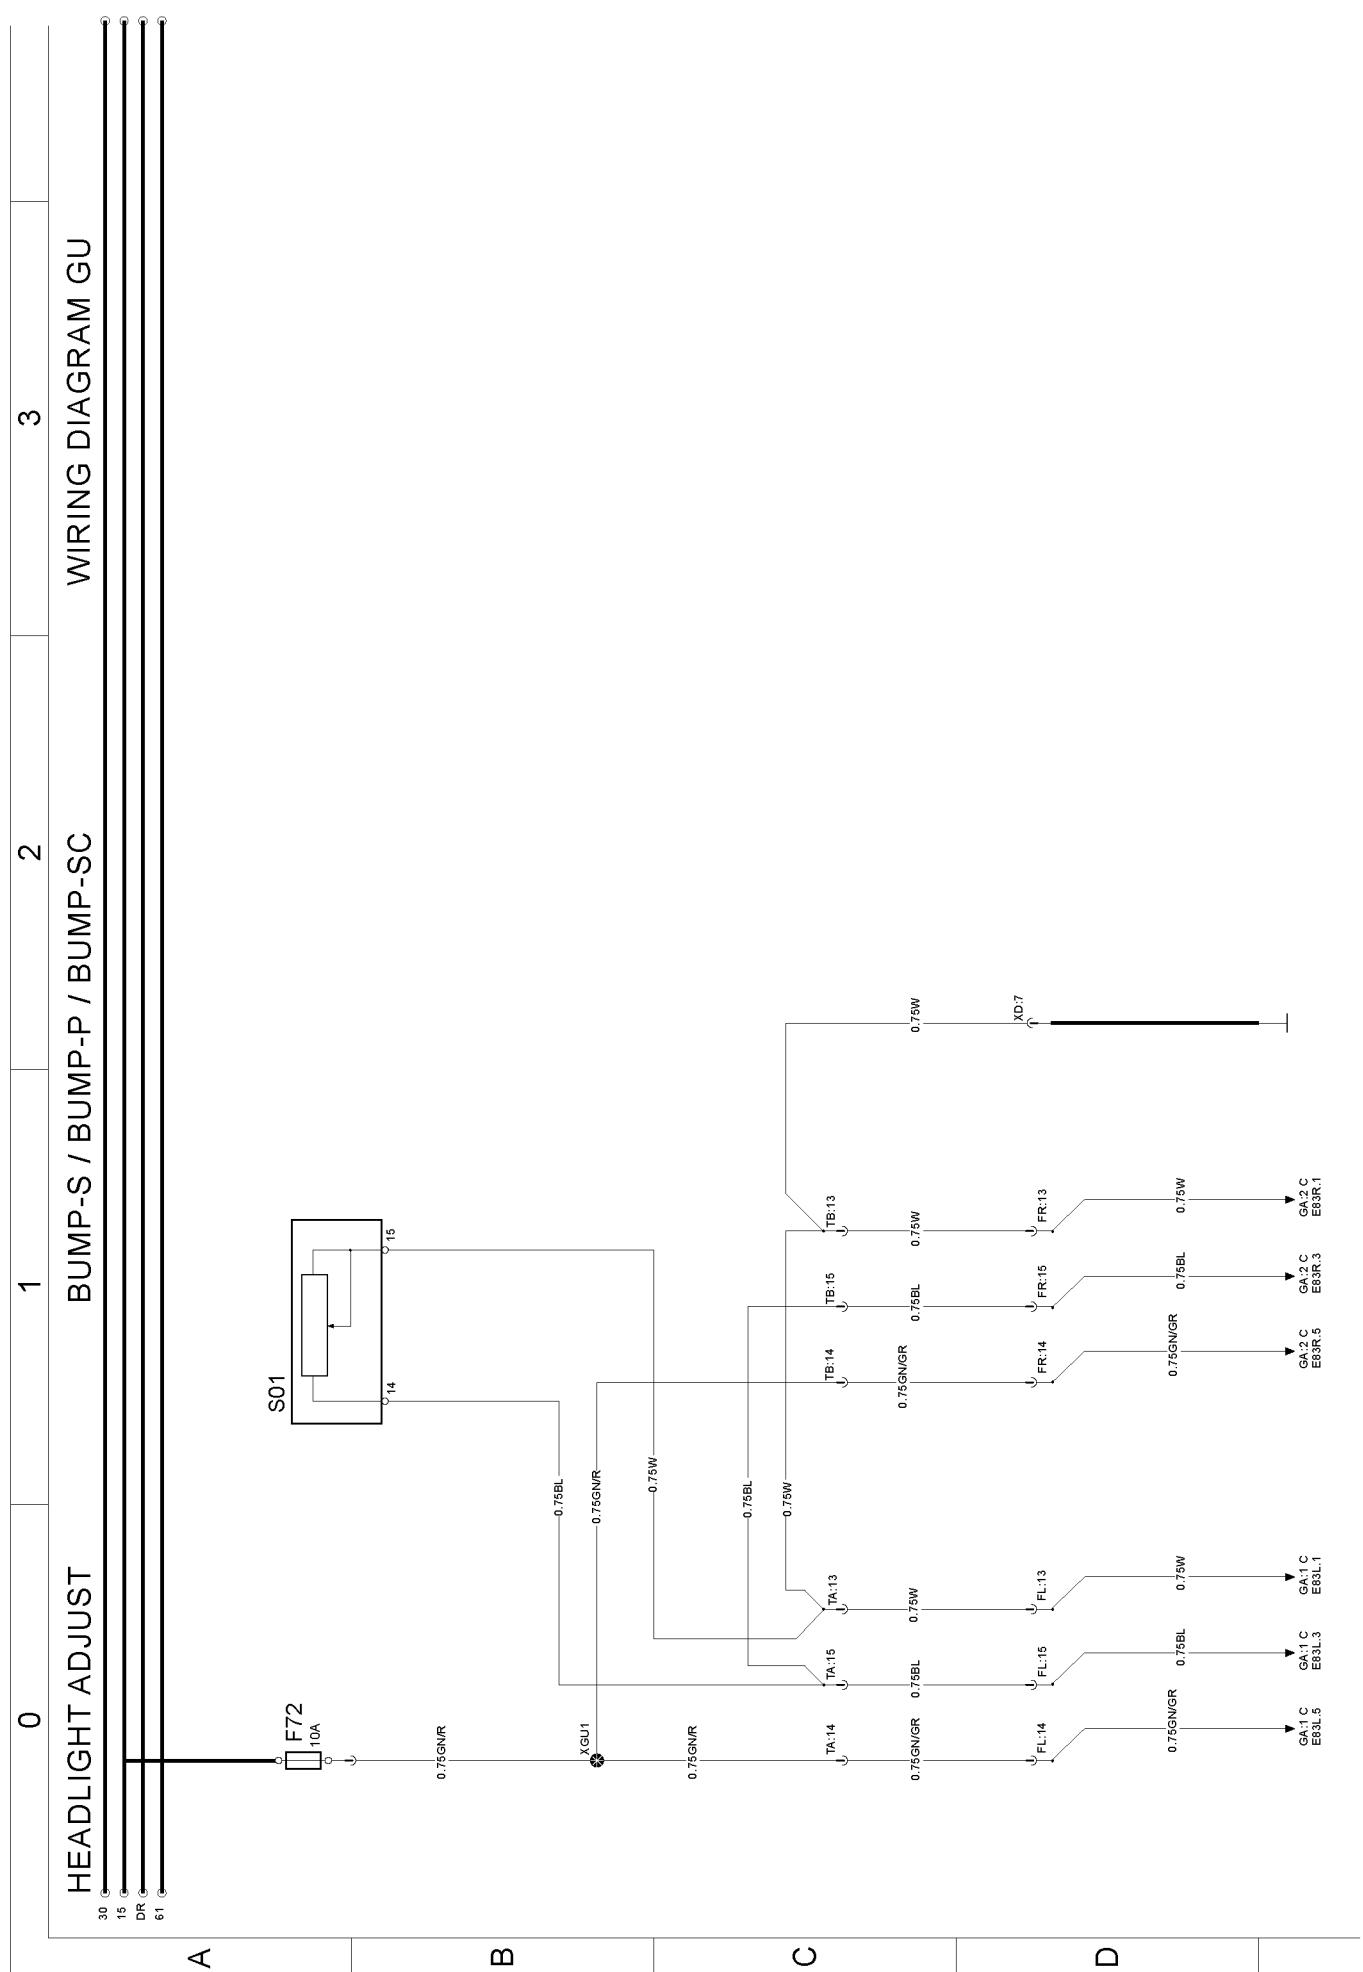


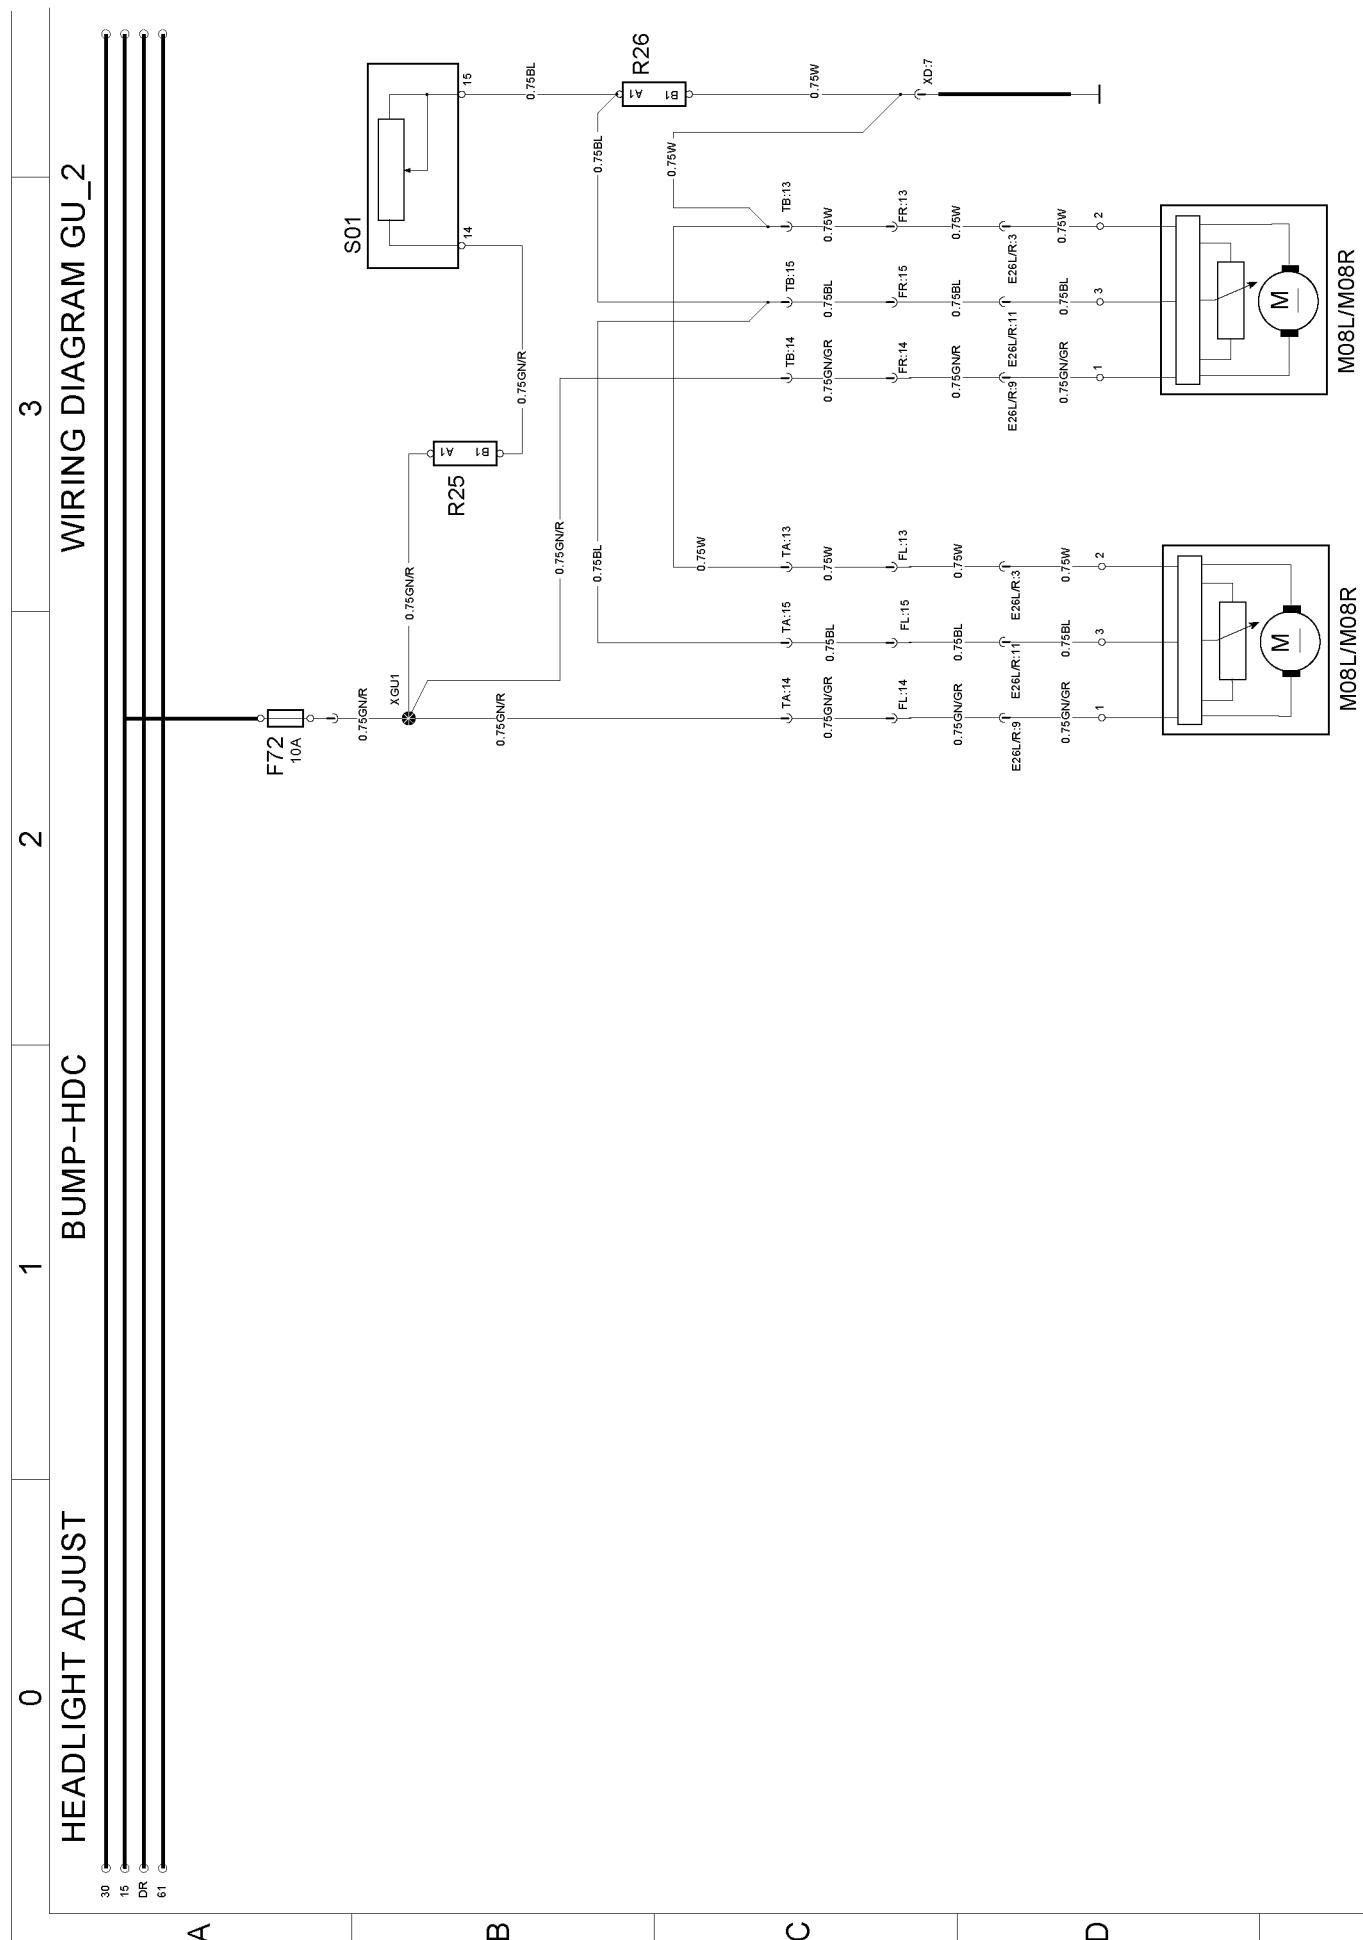


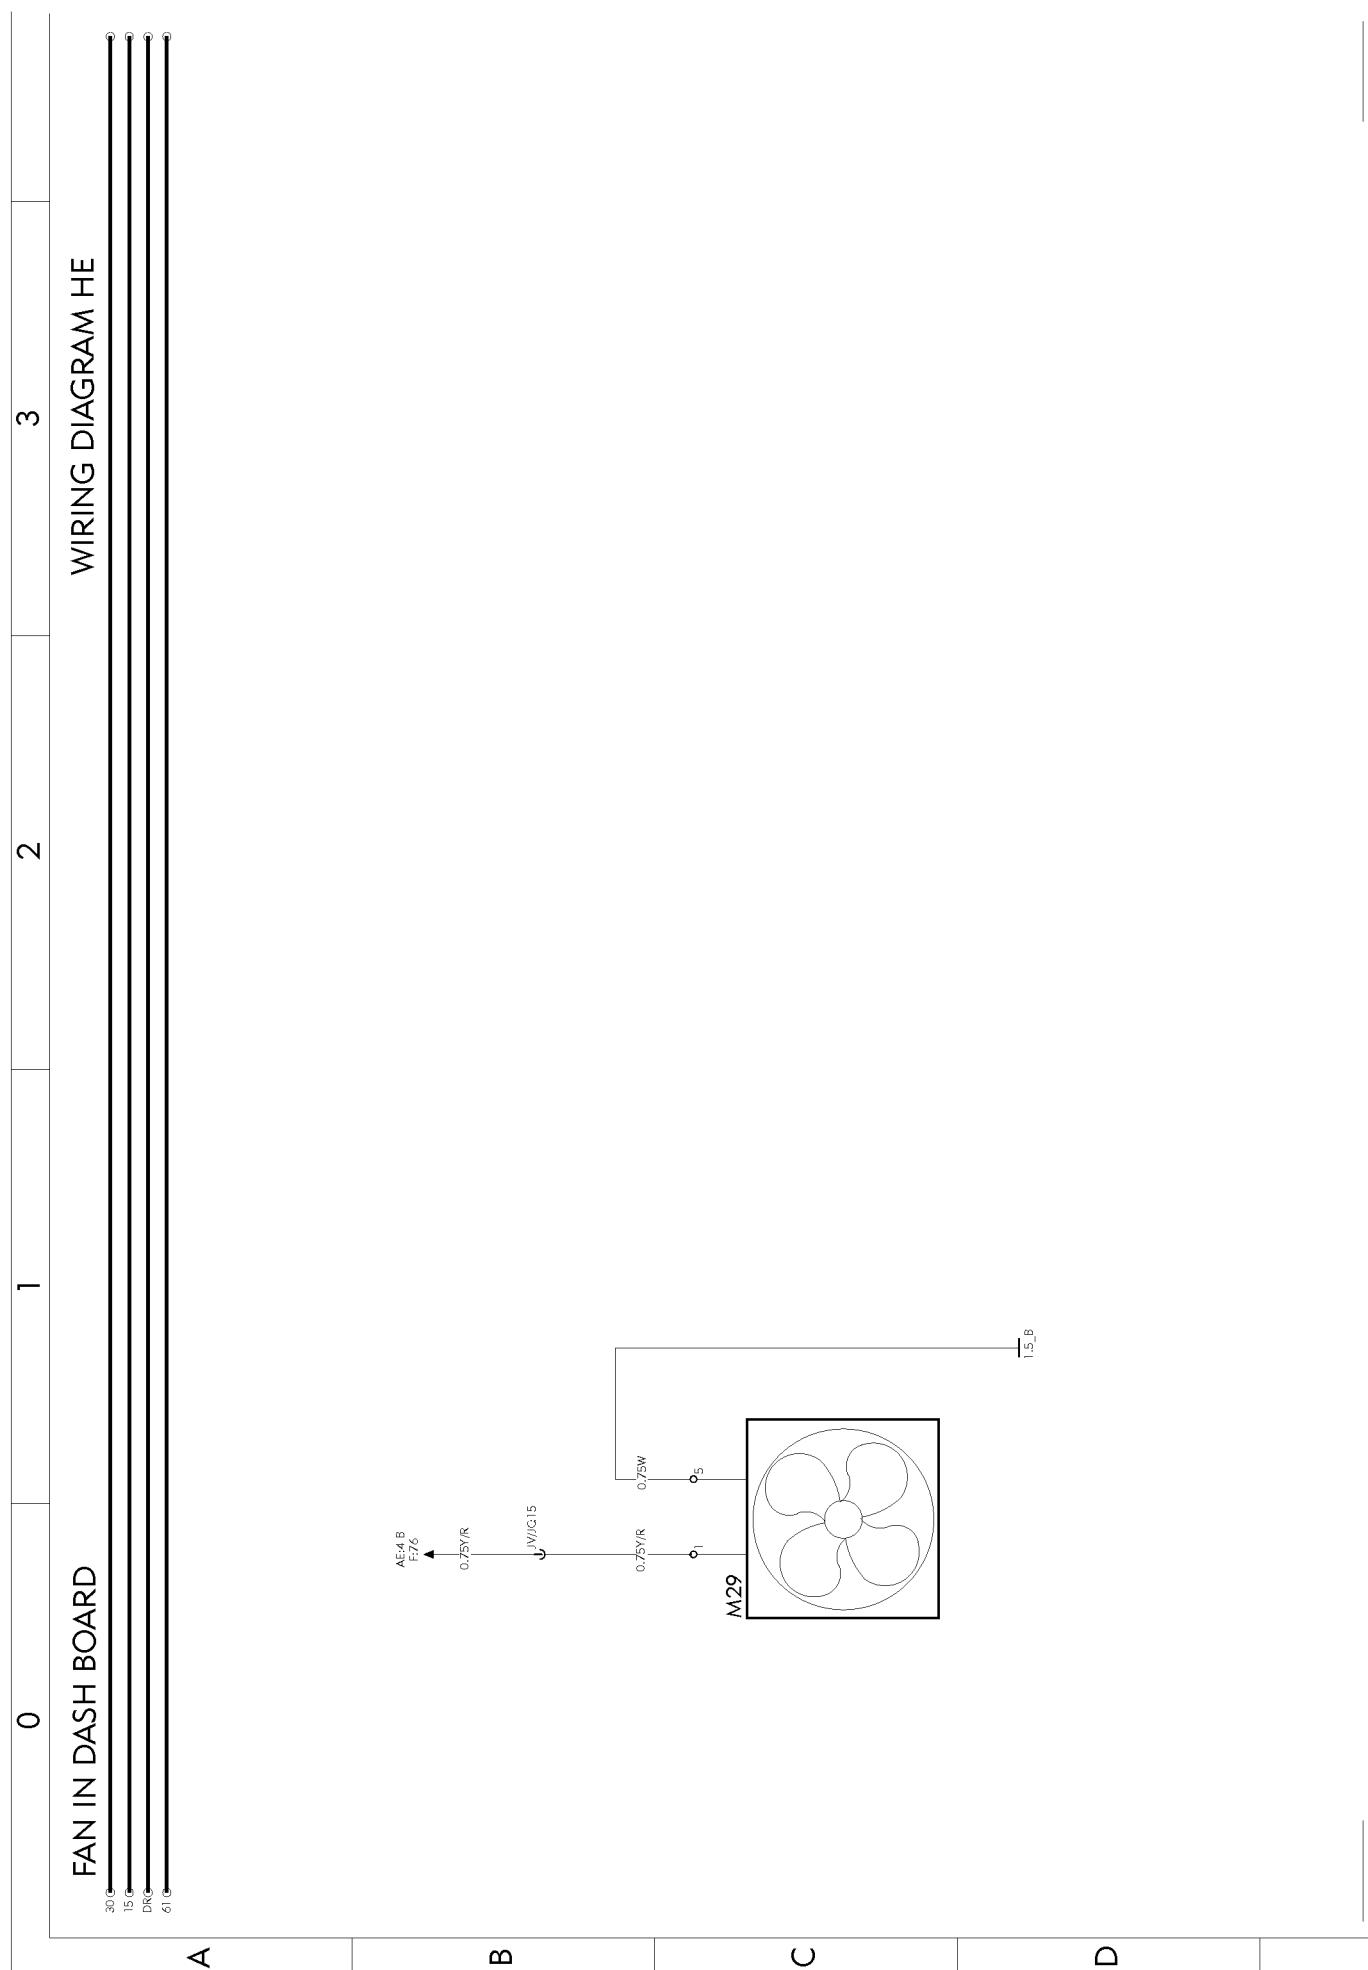

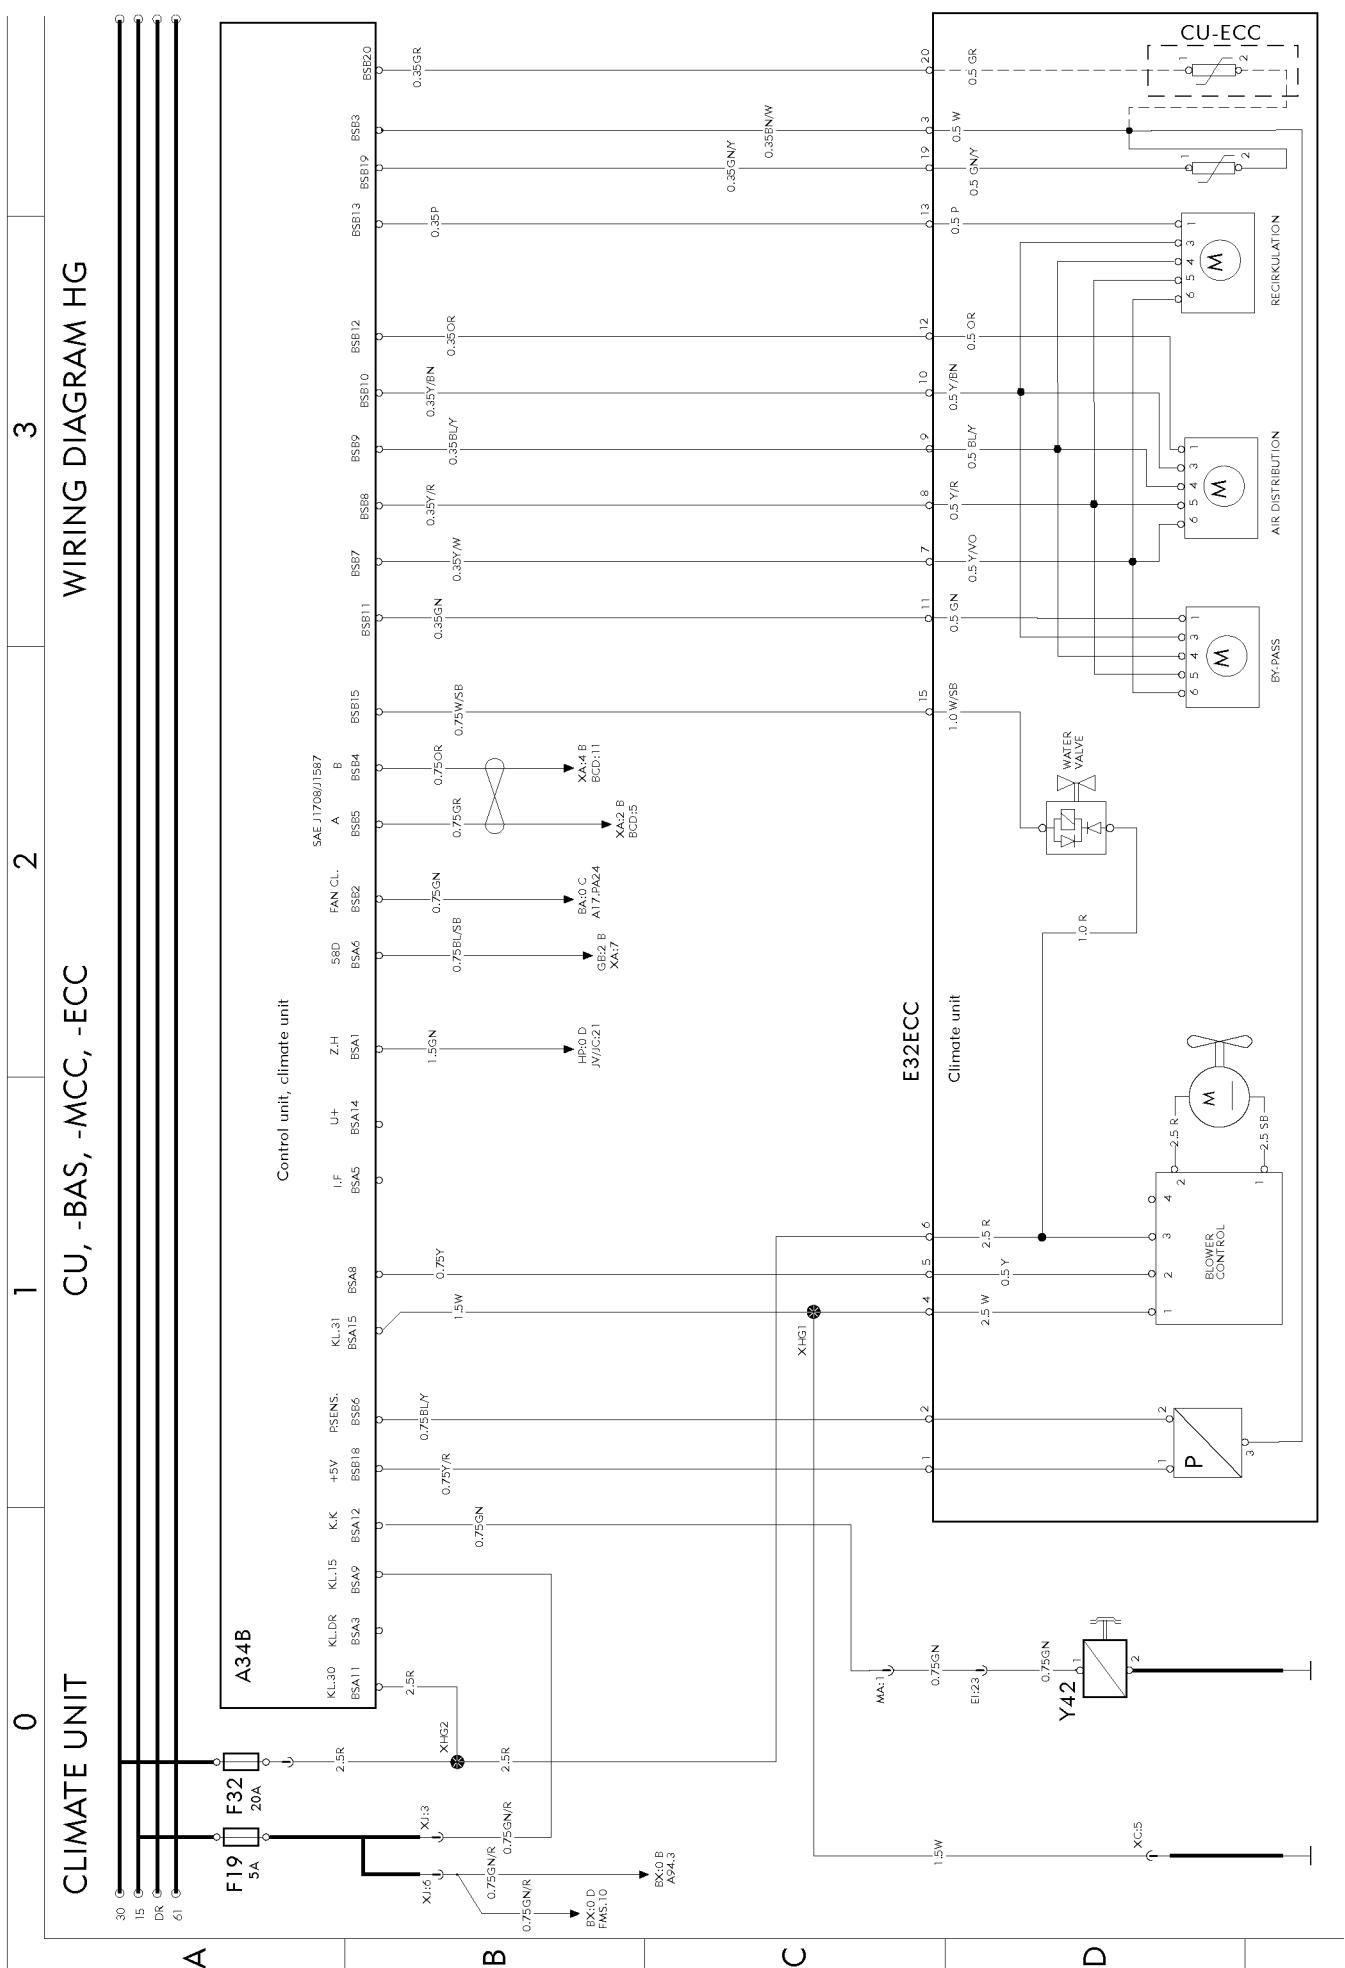

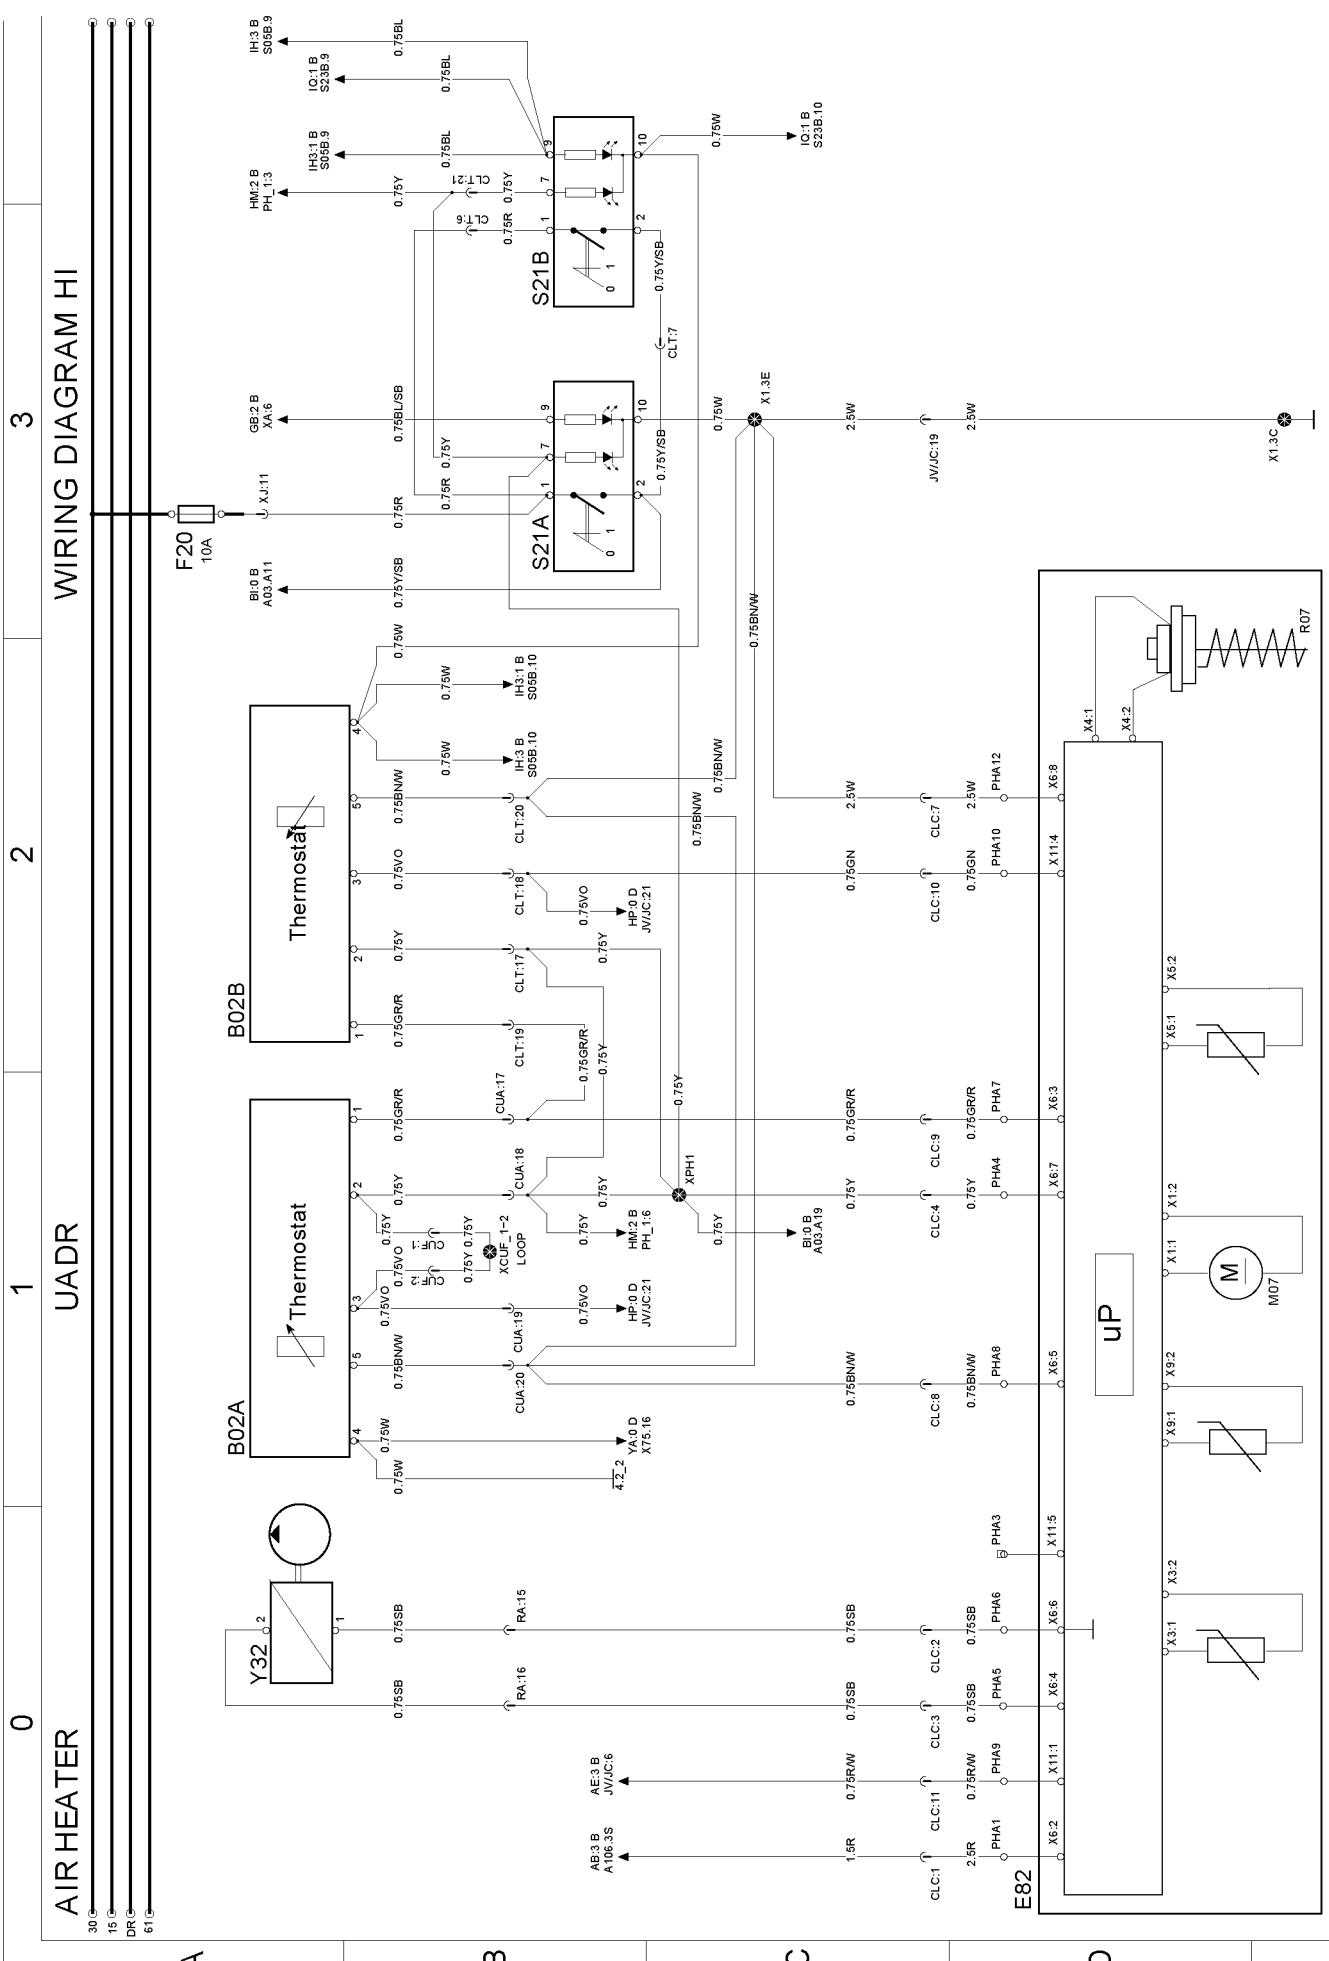


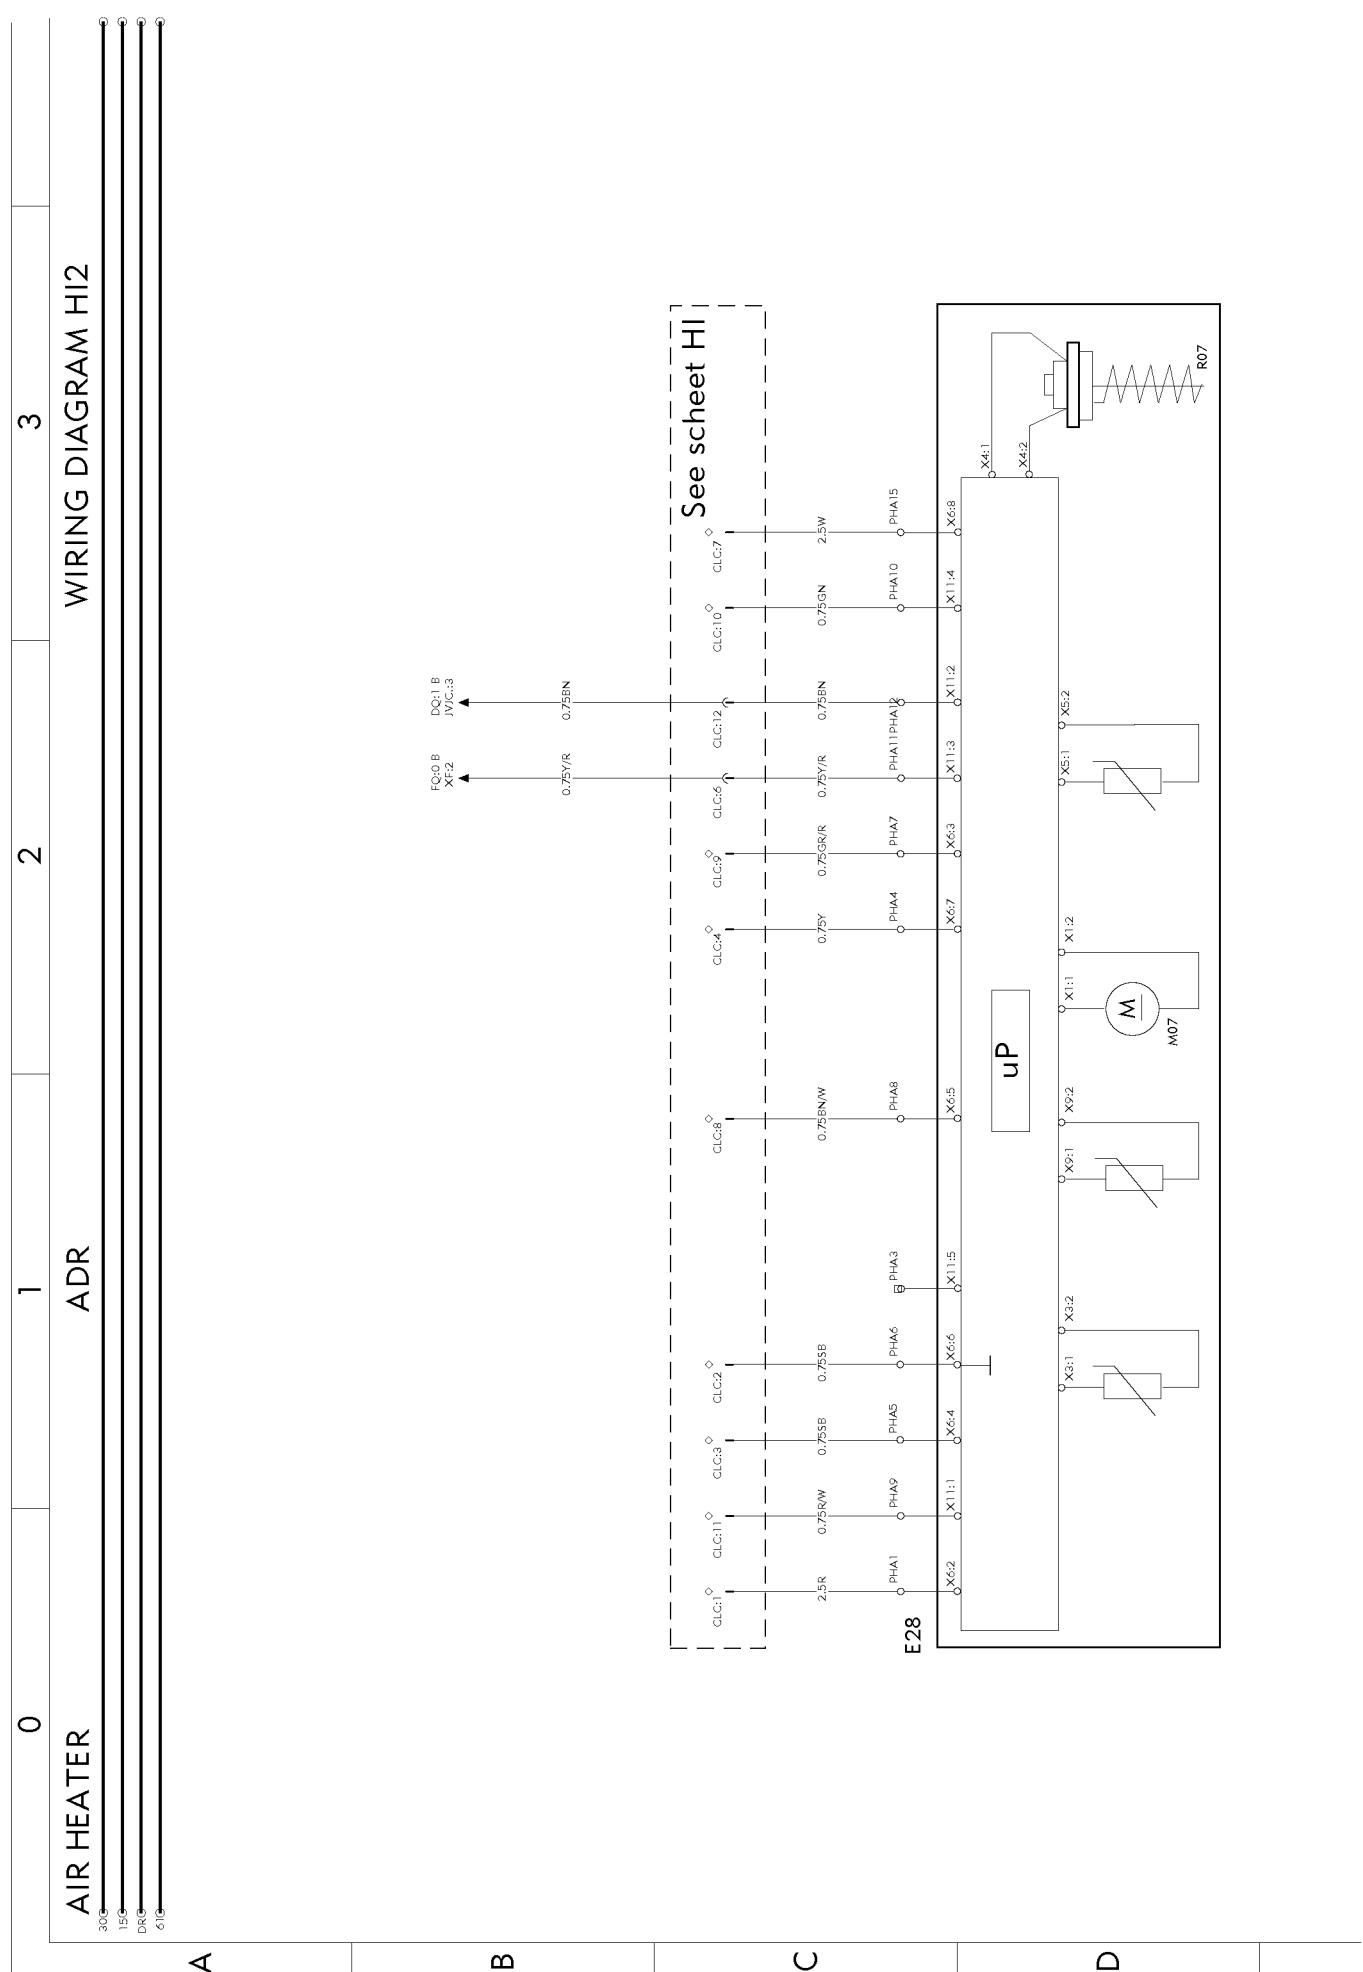

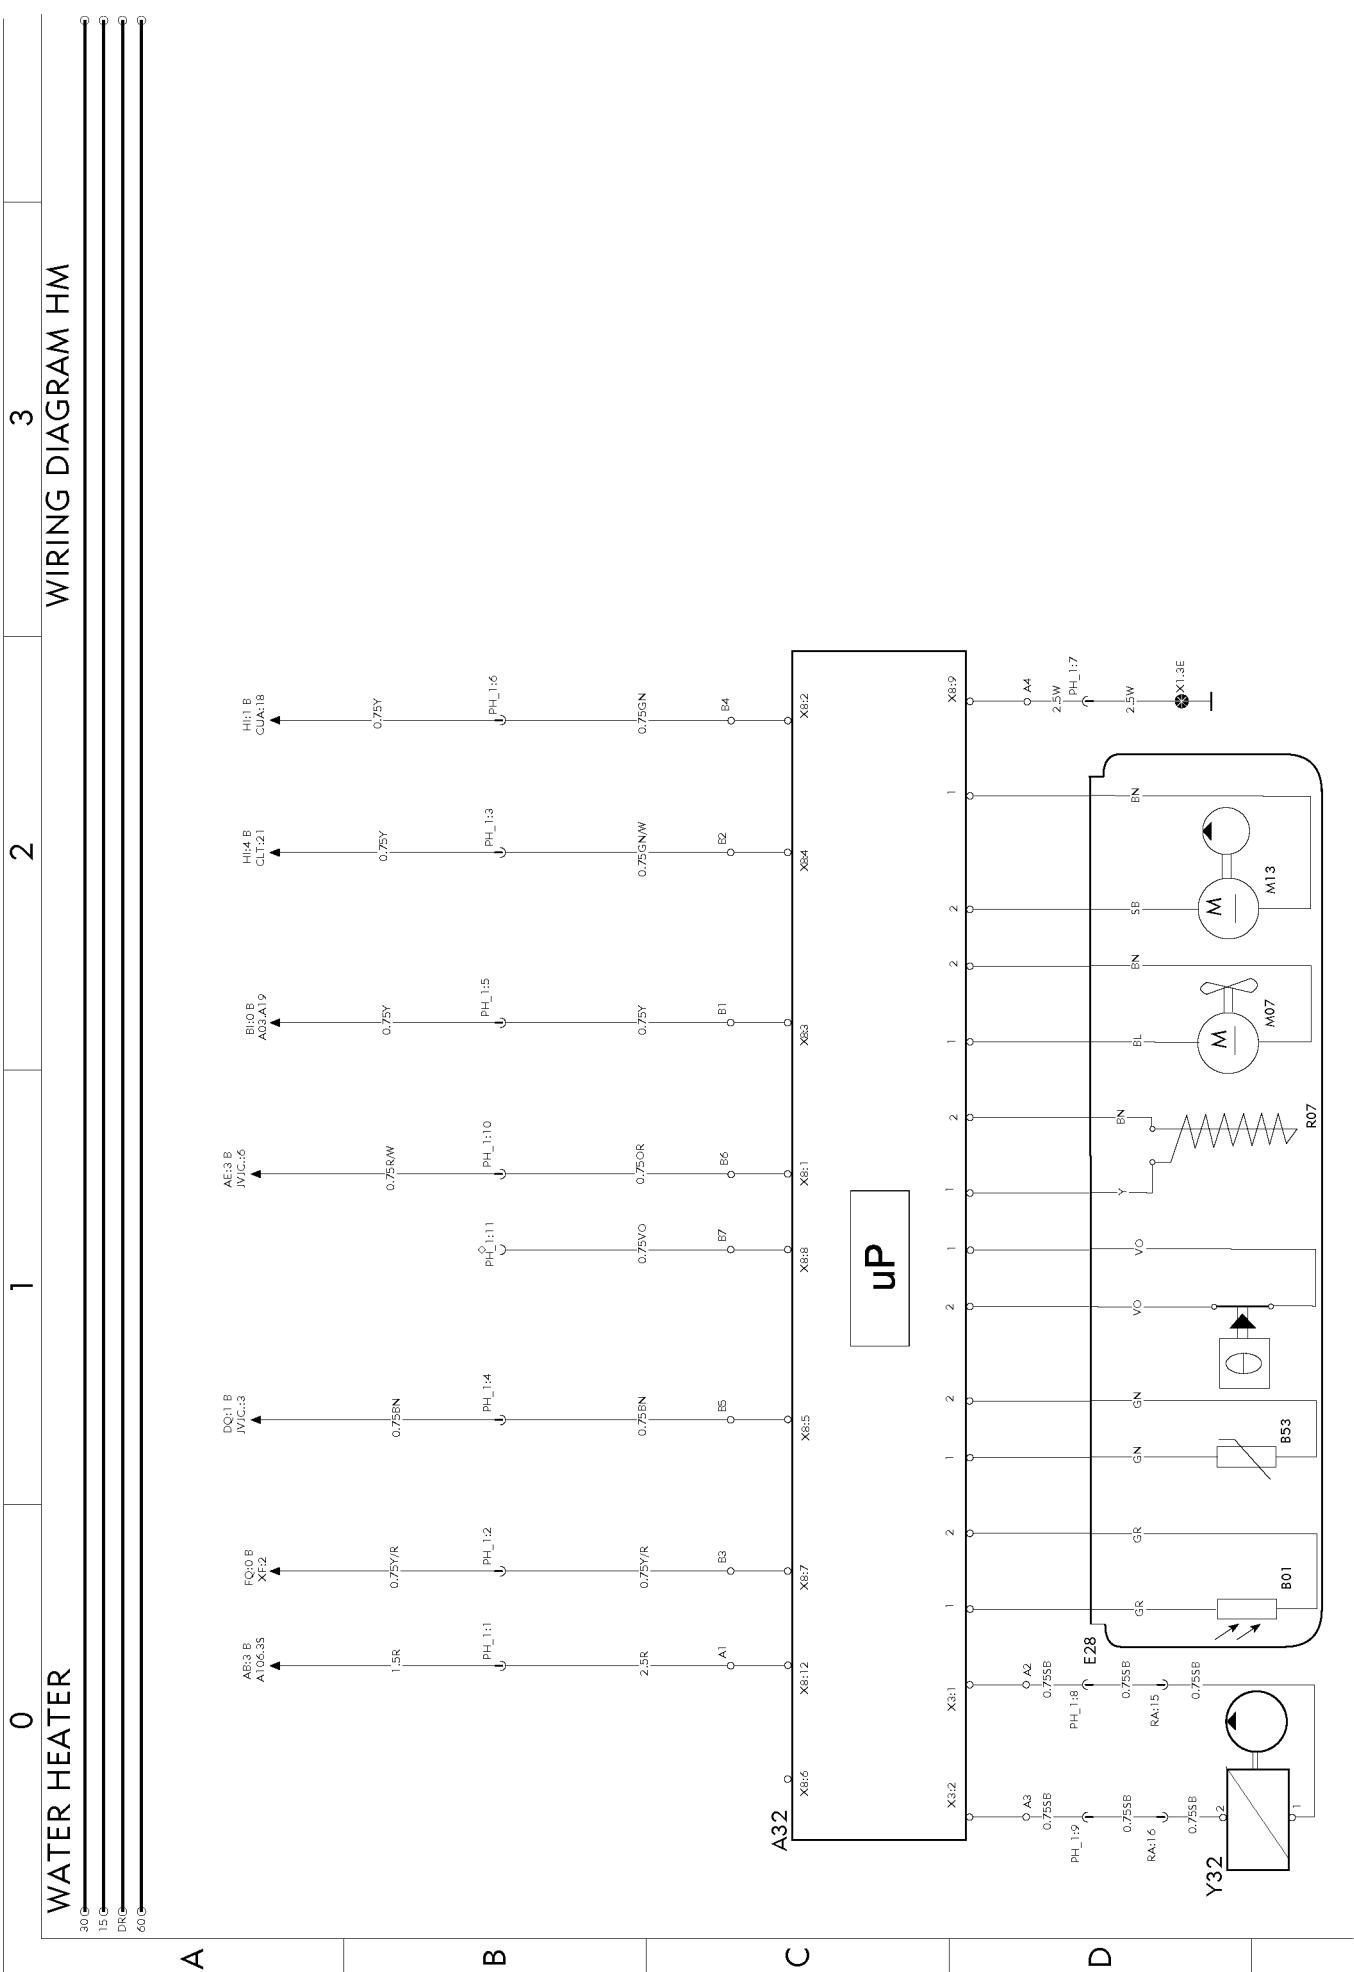


SHORT STOP CAB HEATER


30°C 15°C DRC 61°C

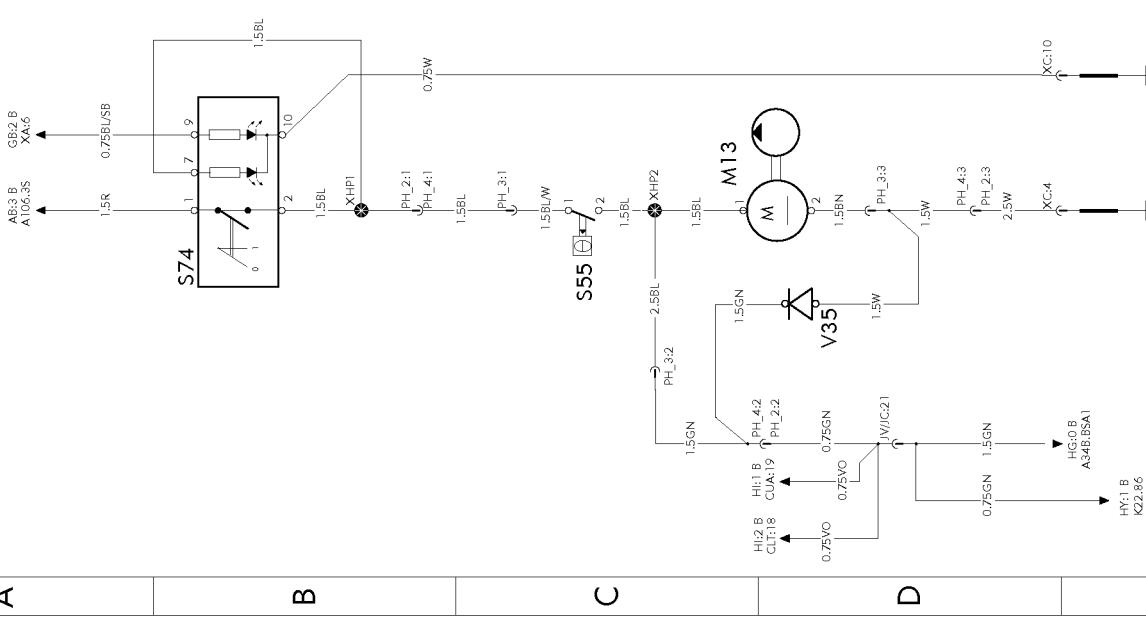



WIRING DIAGRAM HP


WIRING DIAGRAM HP

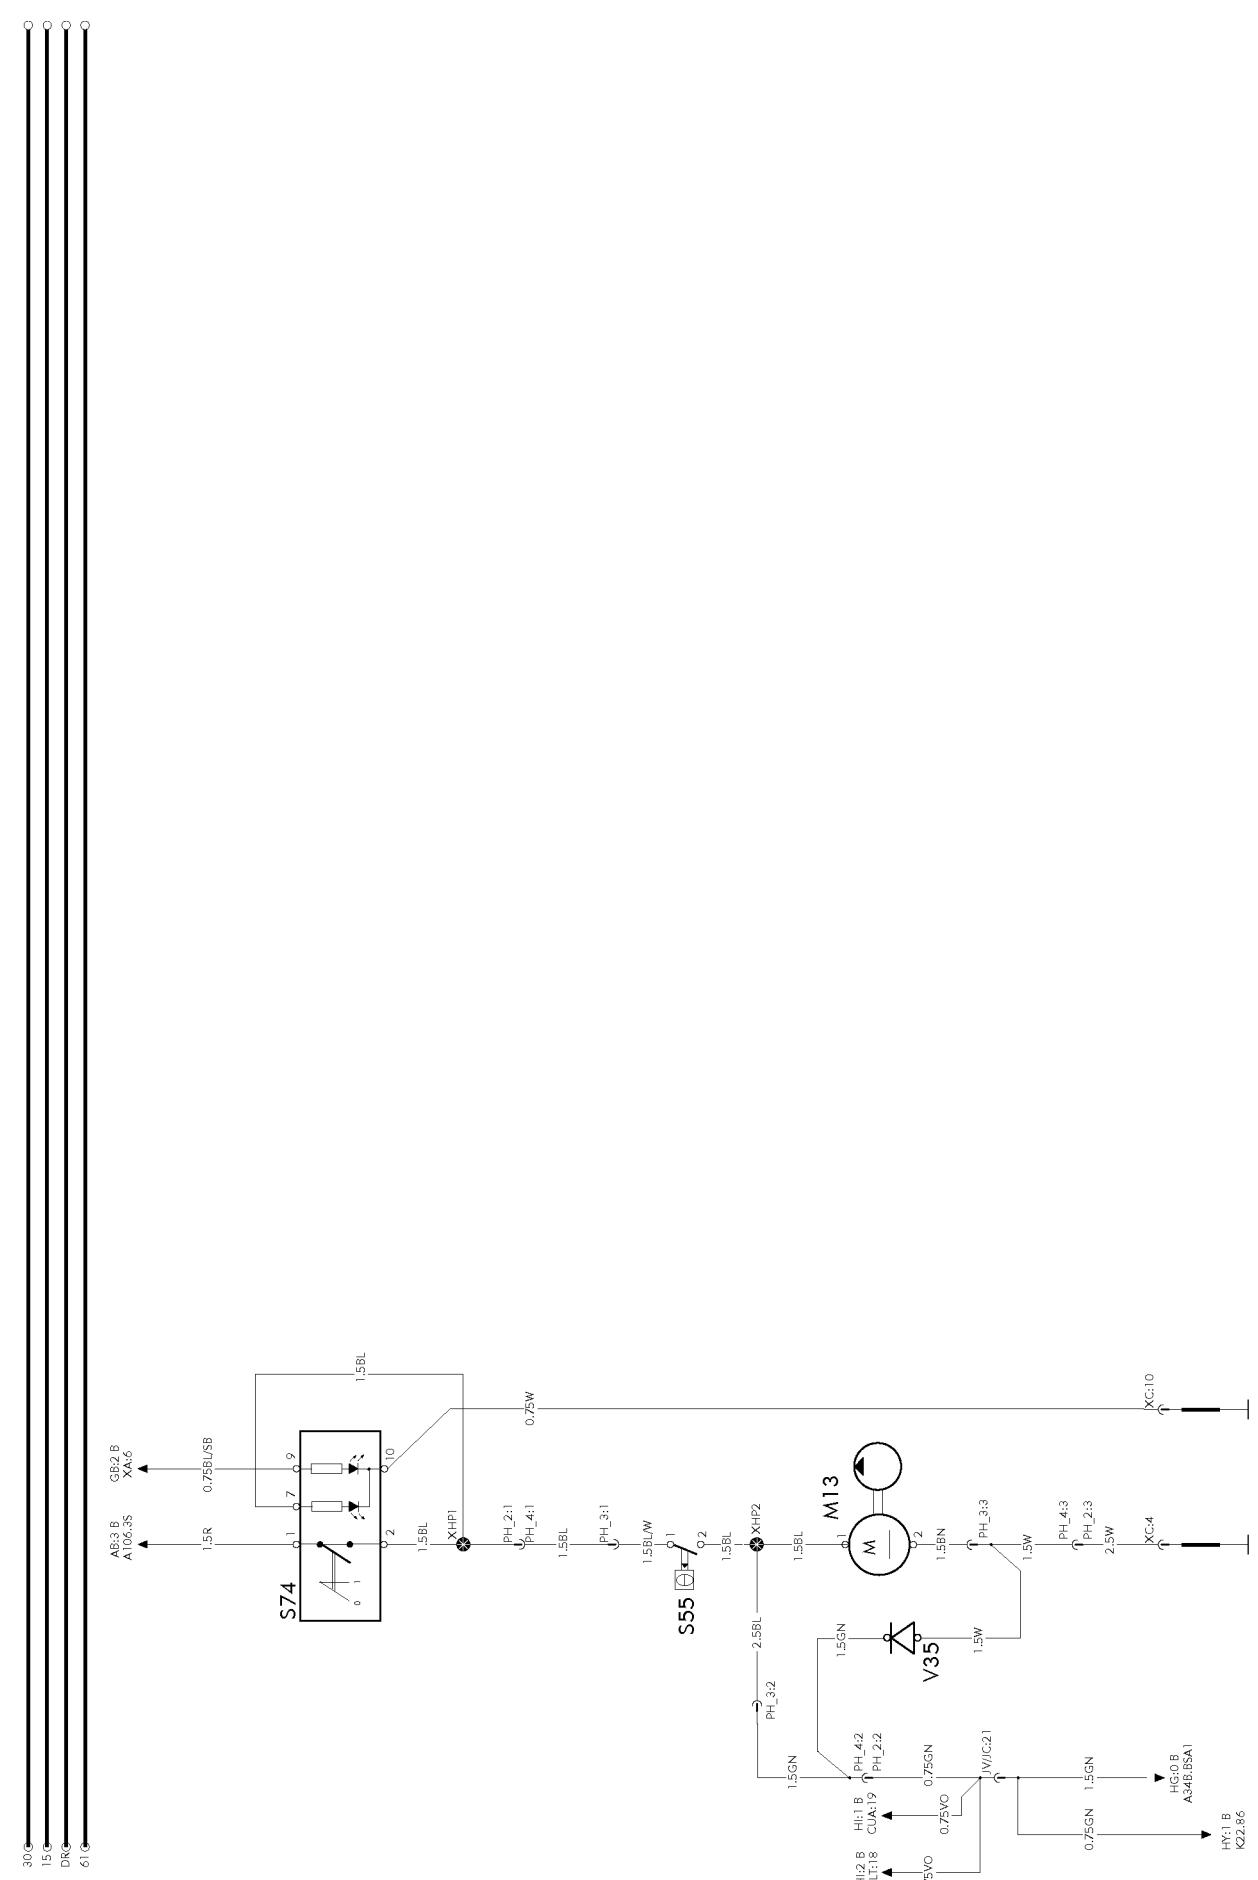


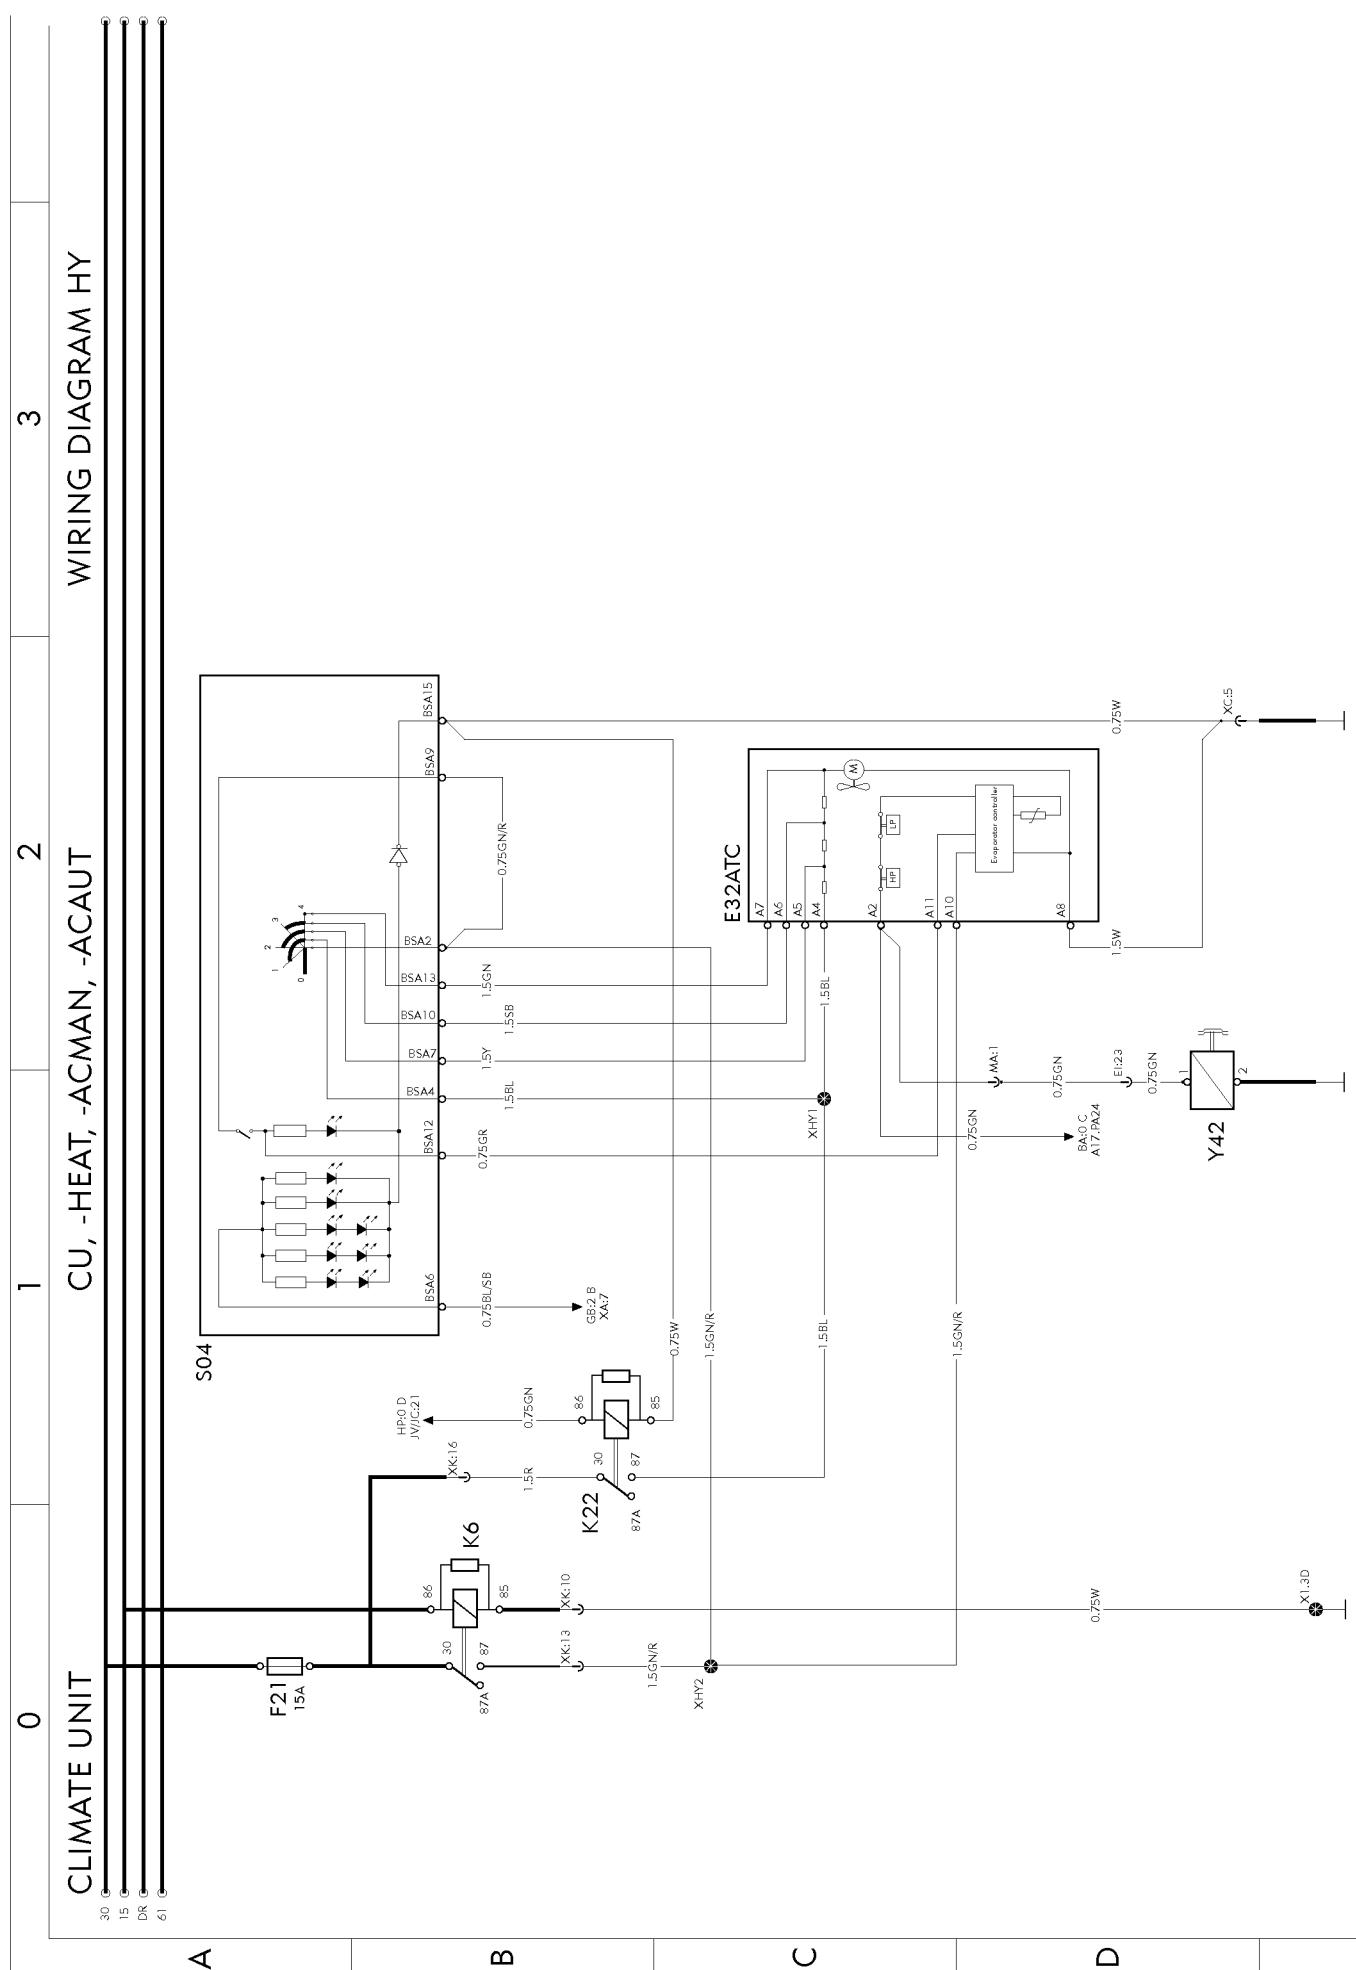

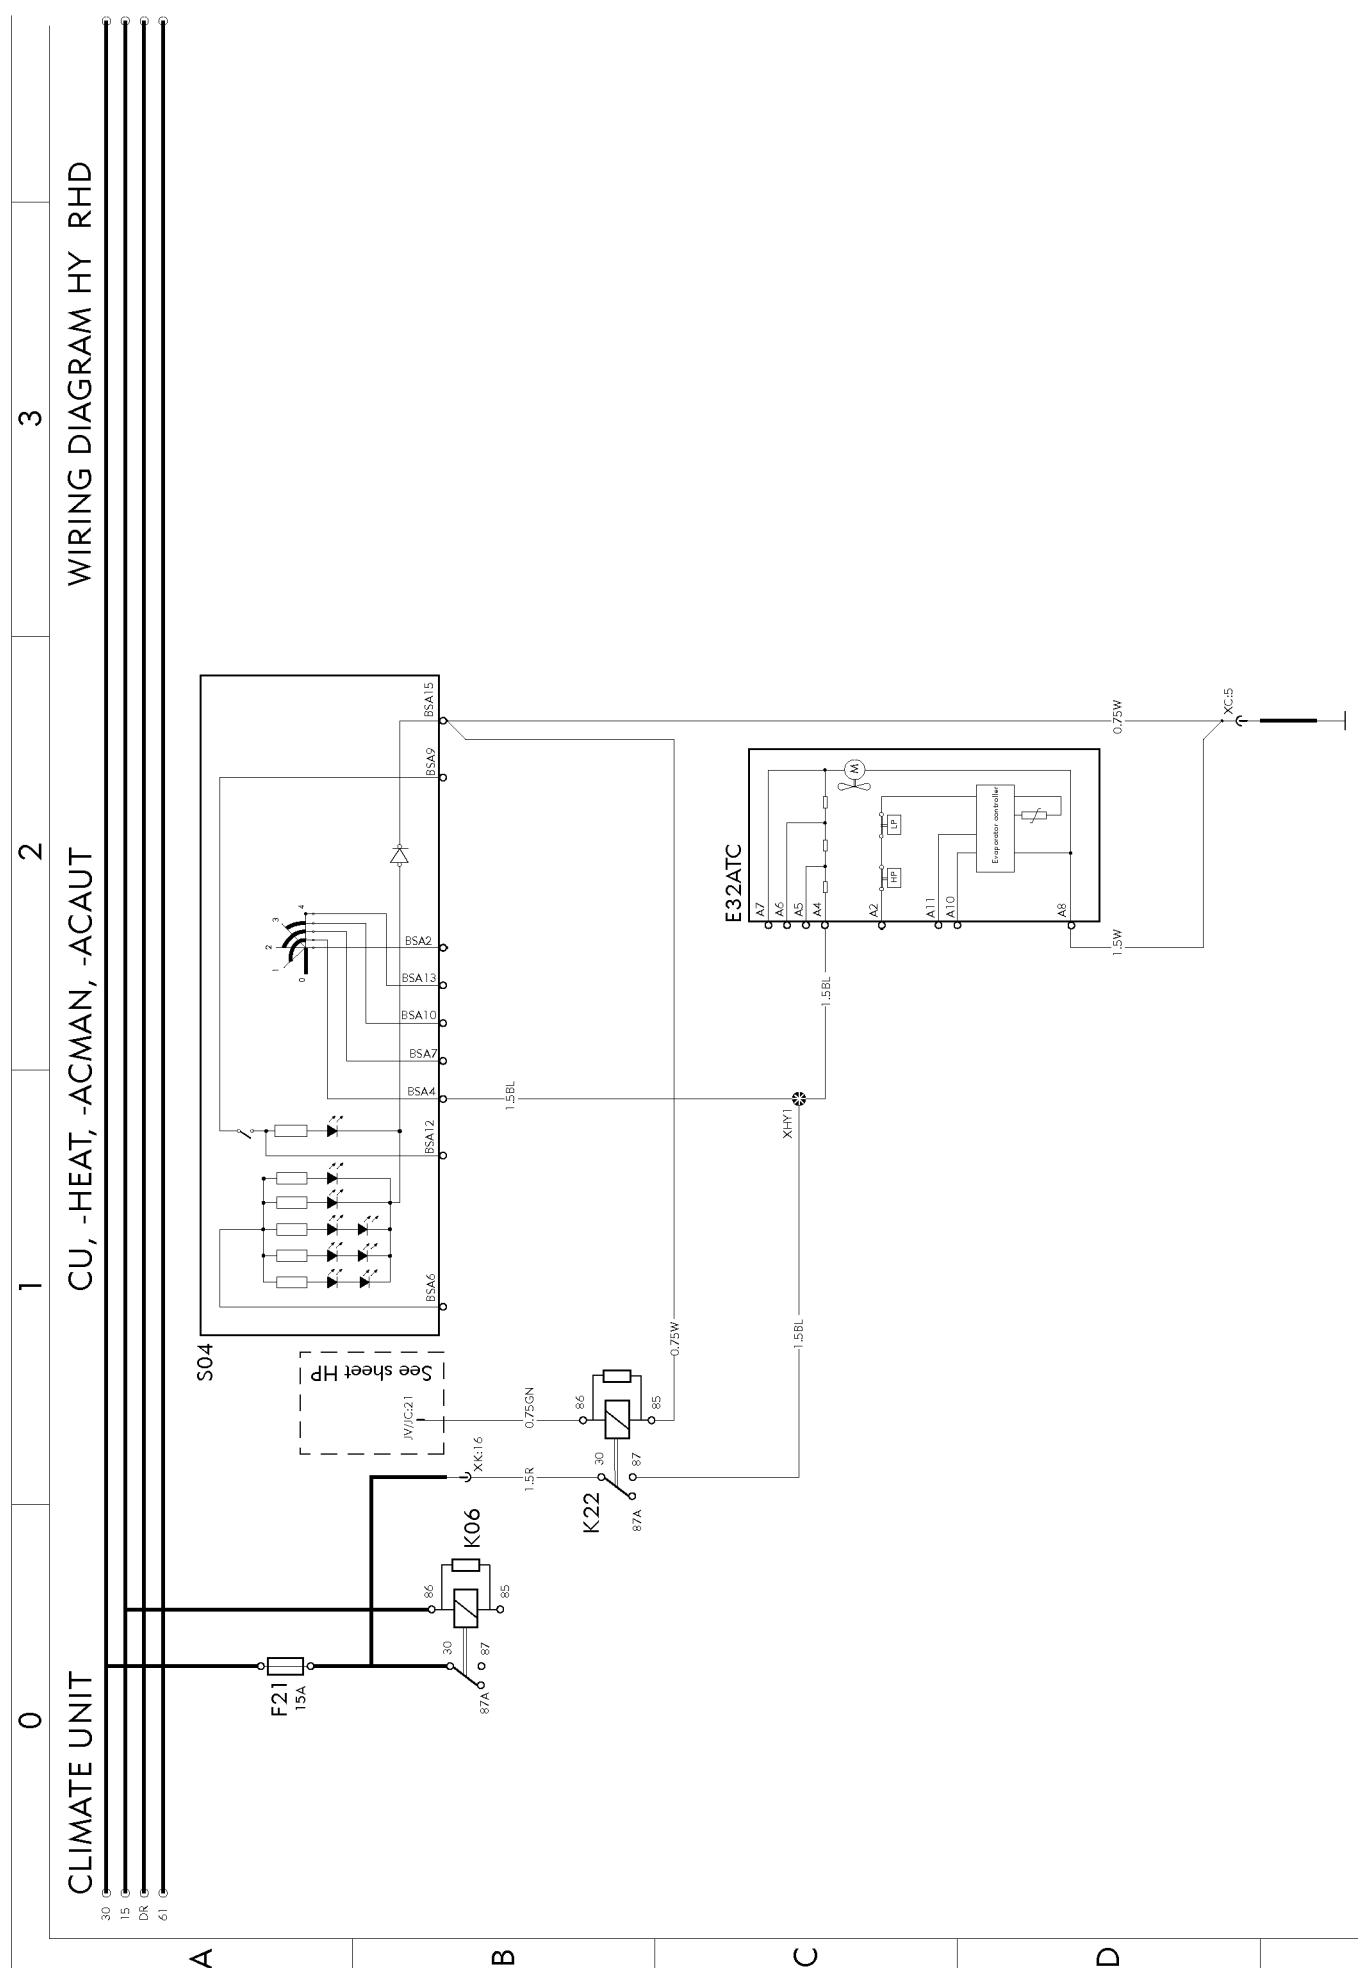

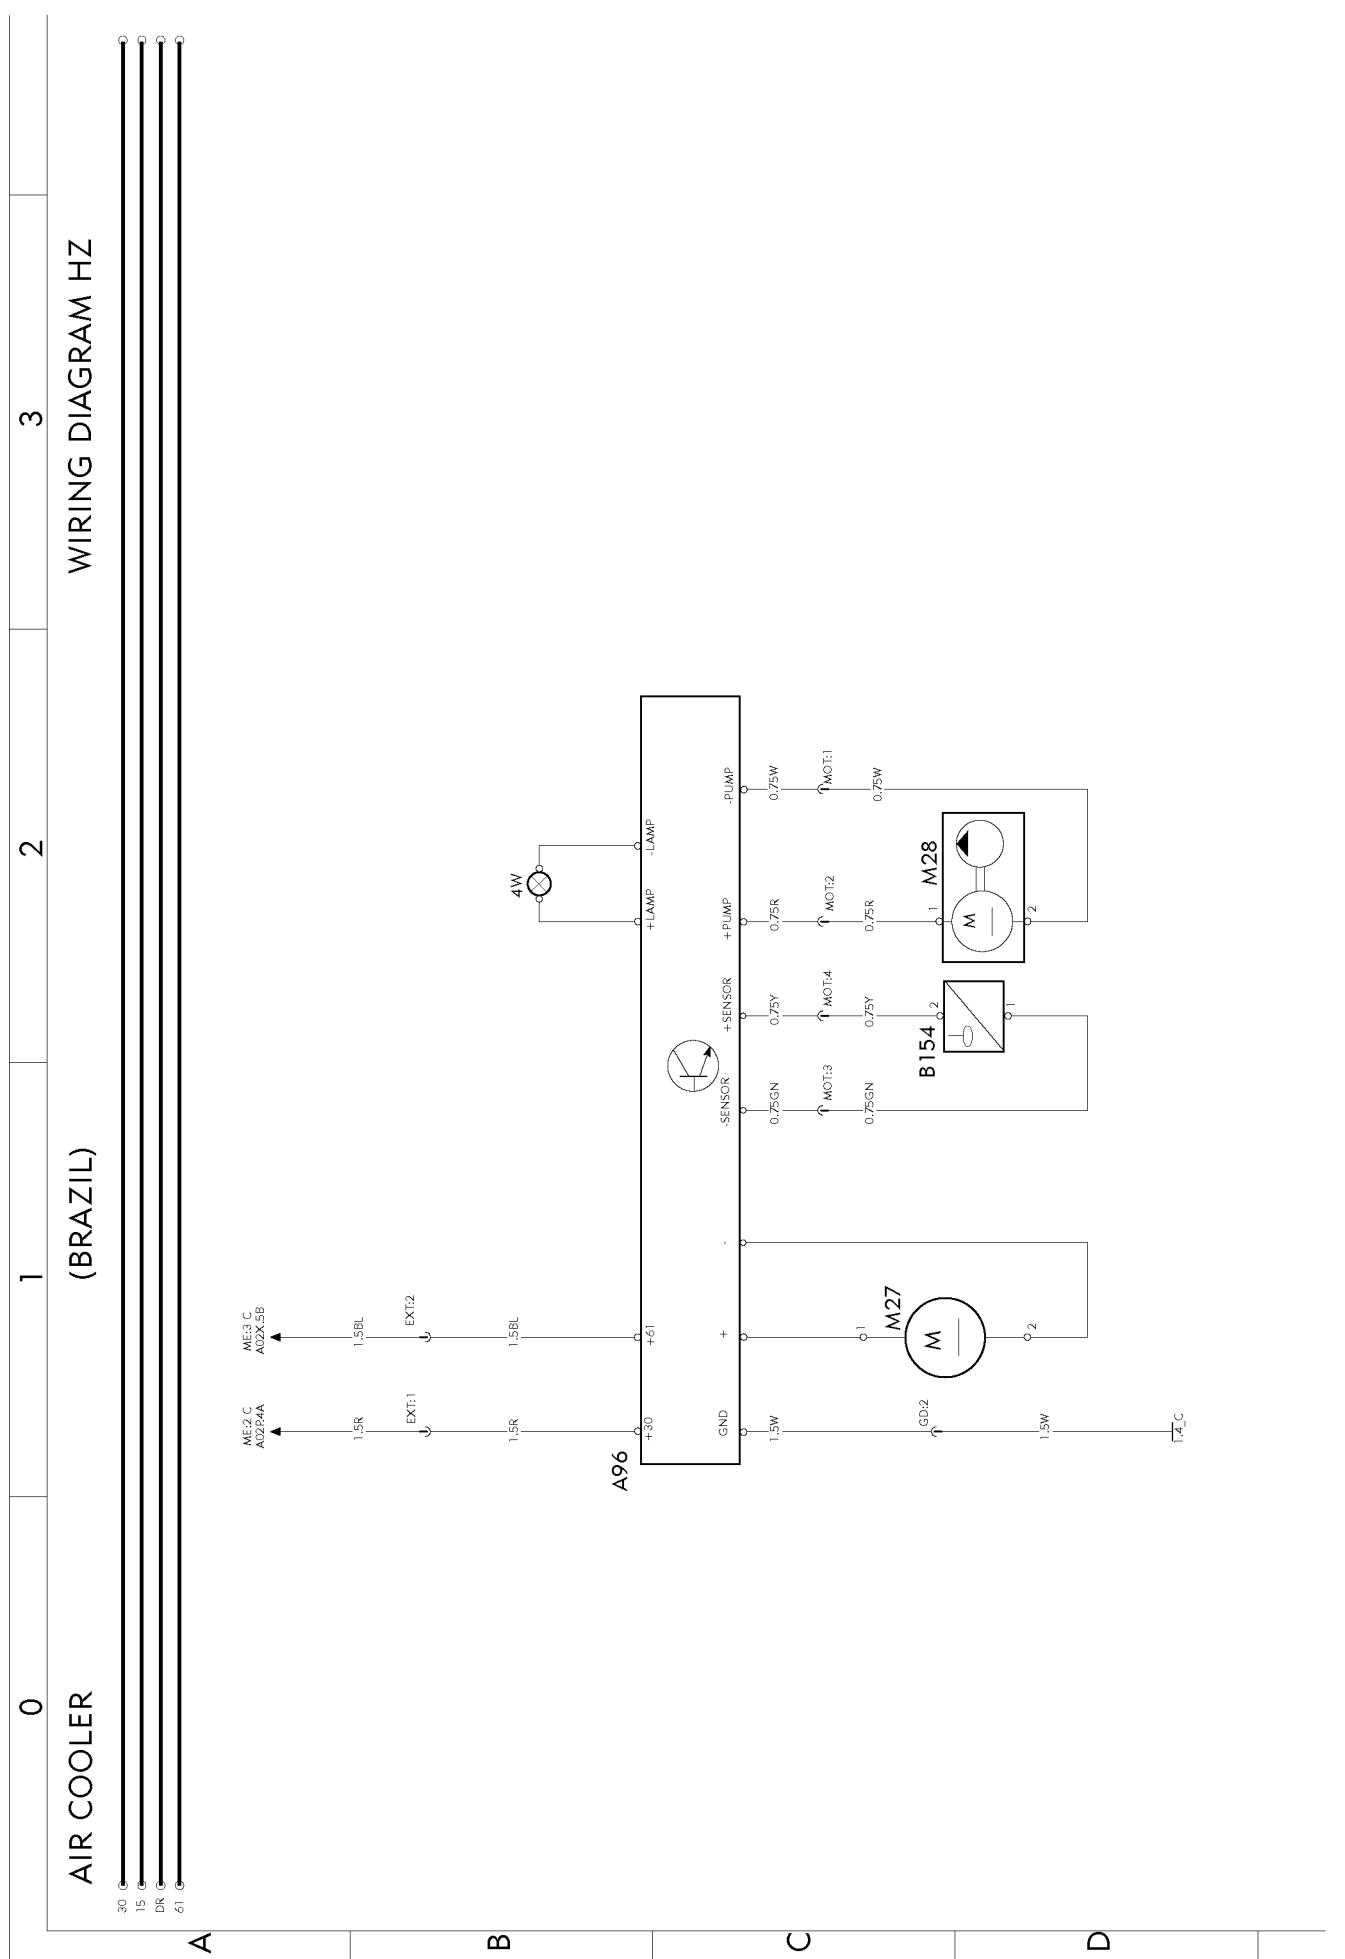


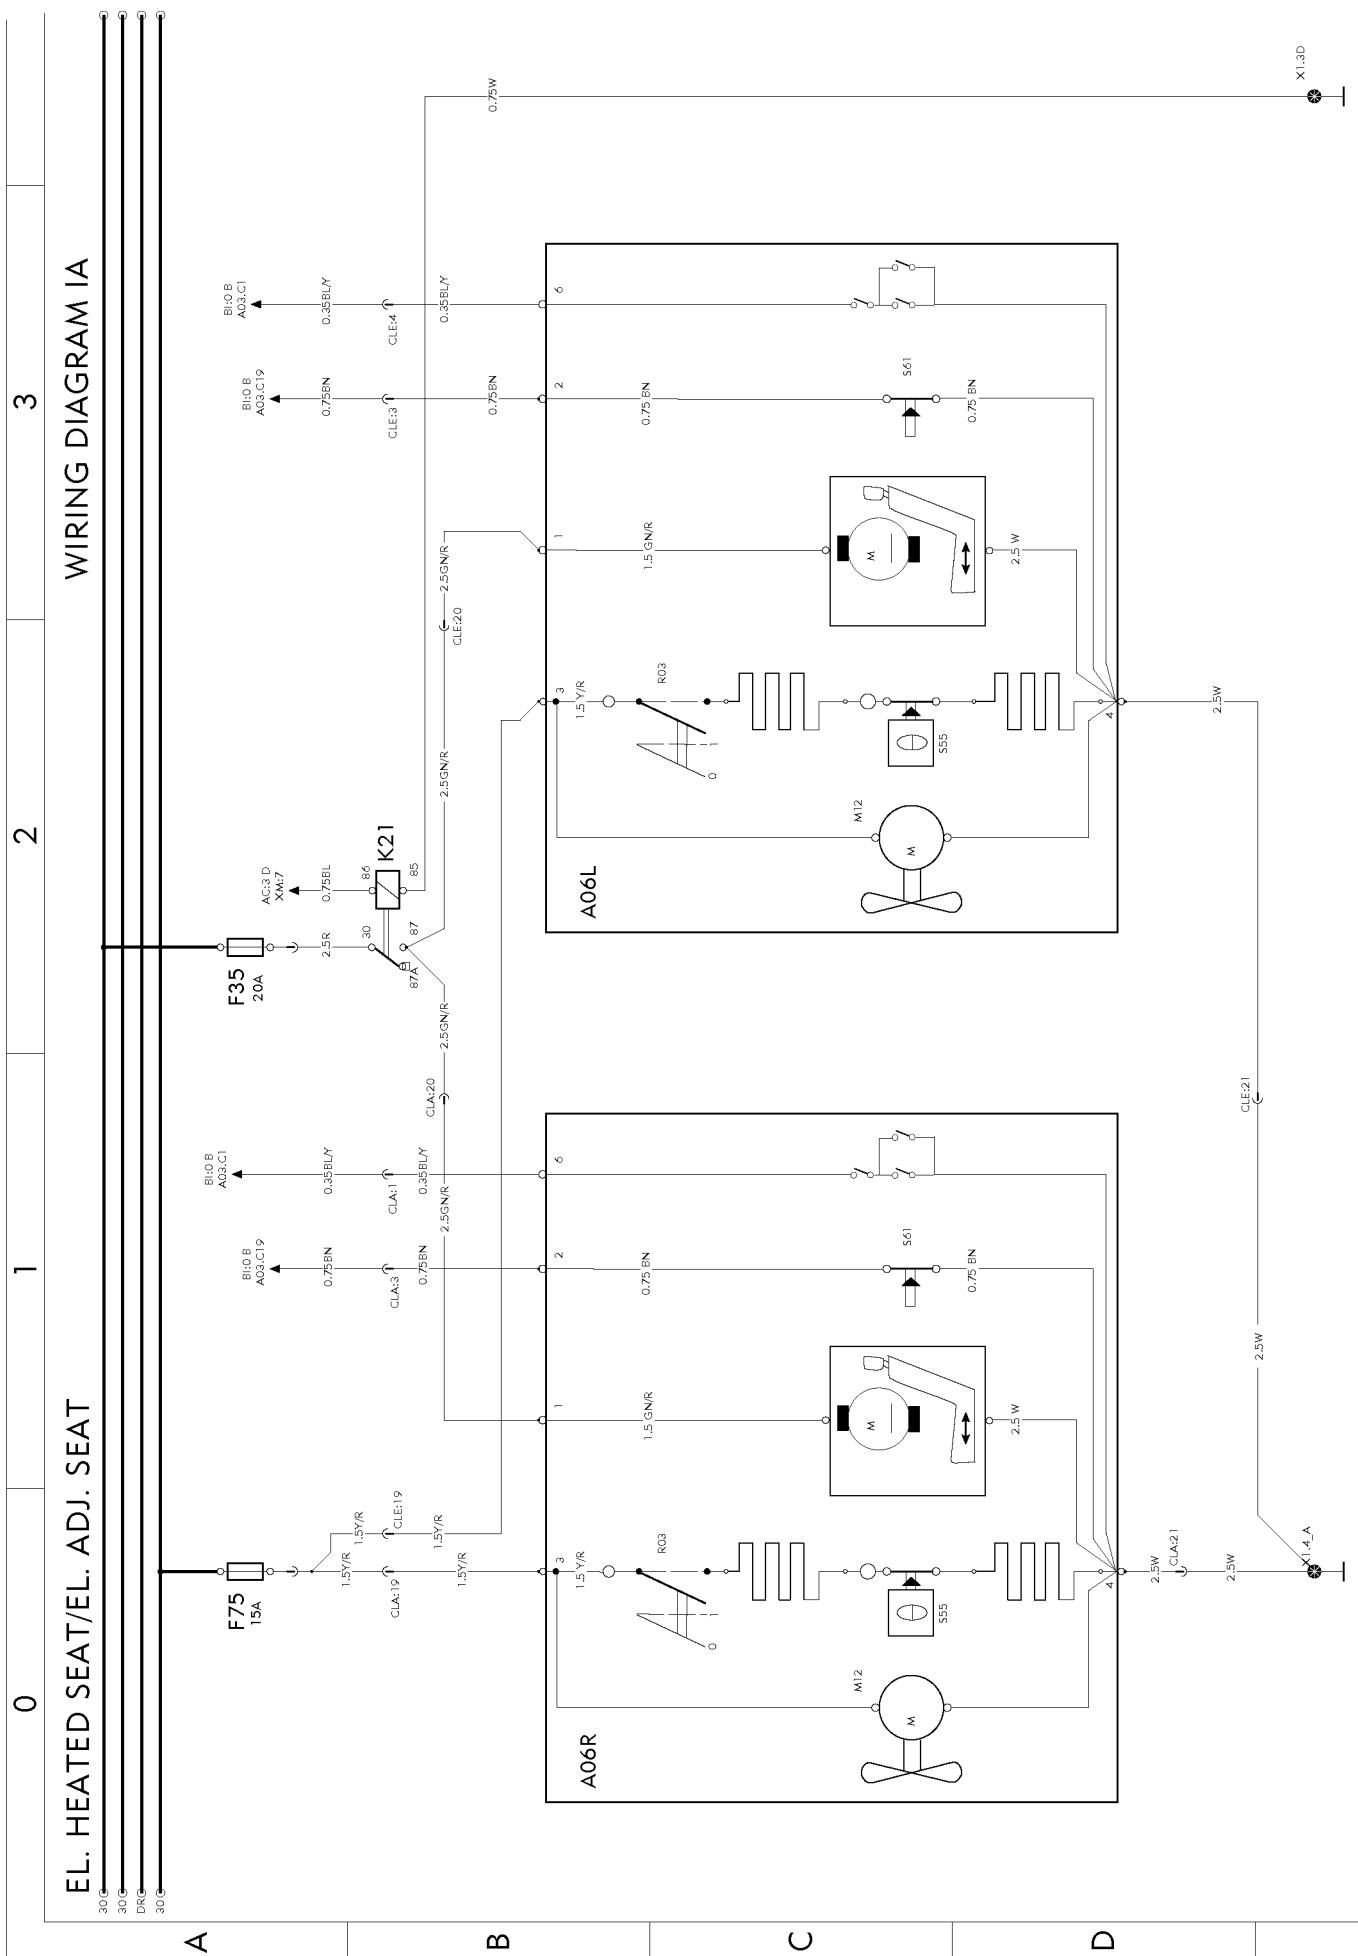


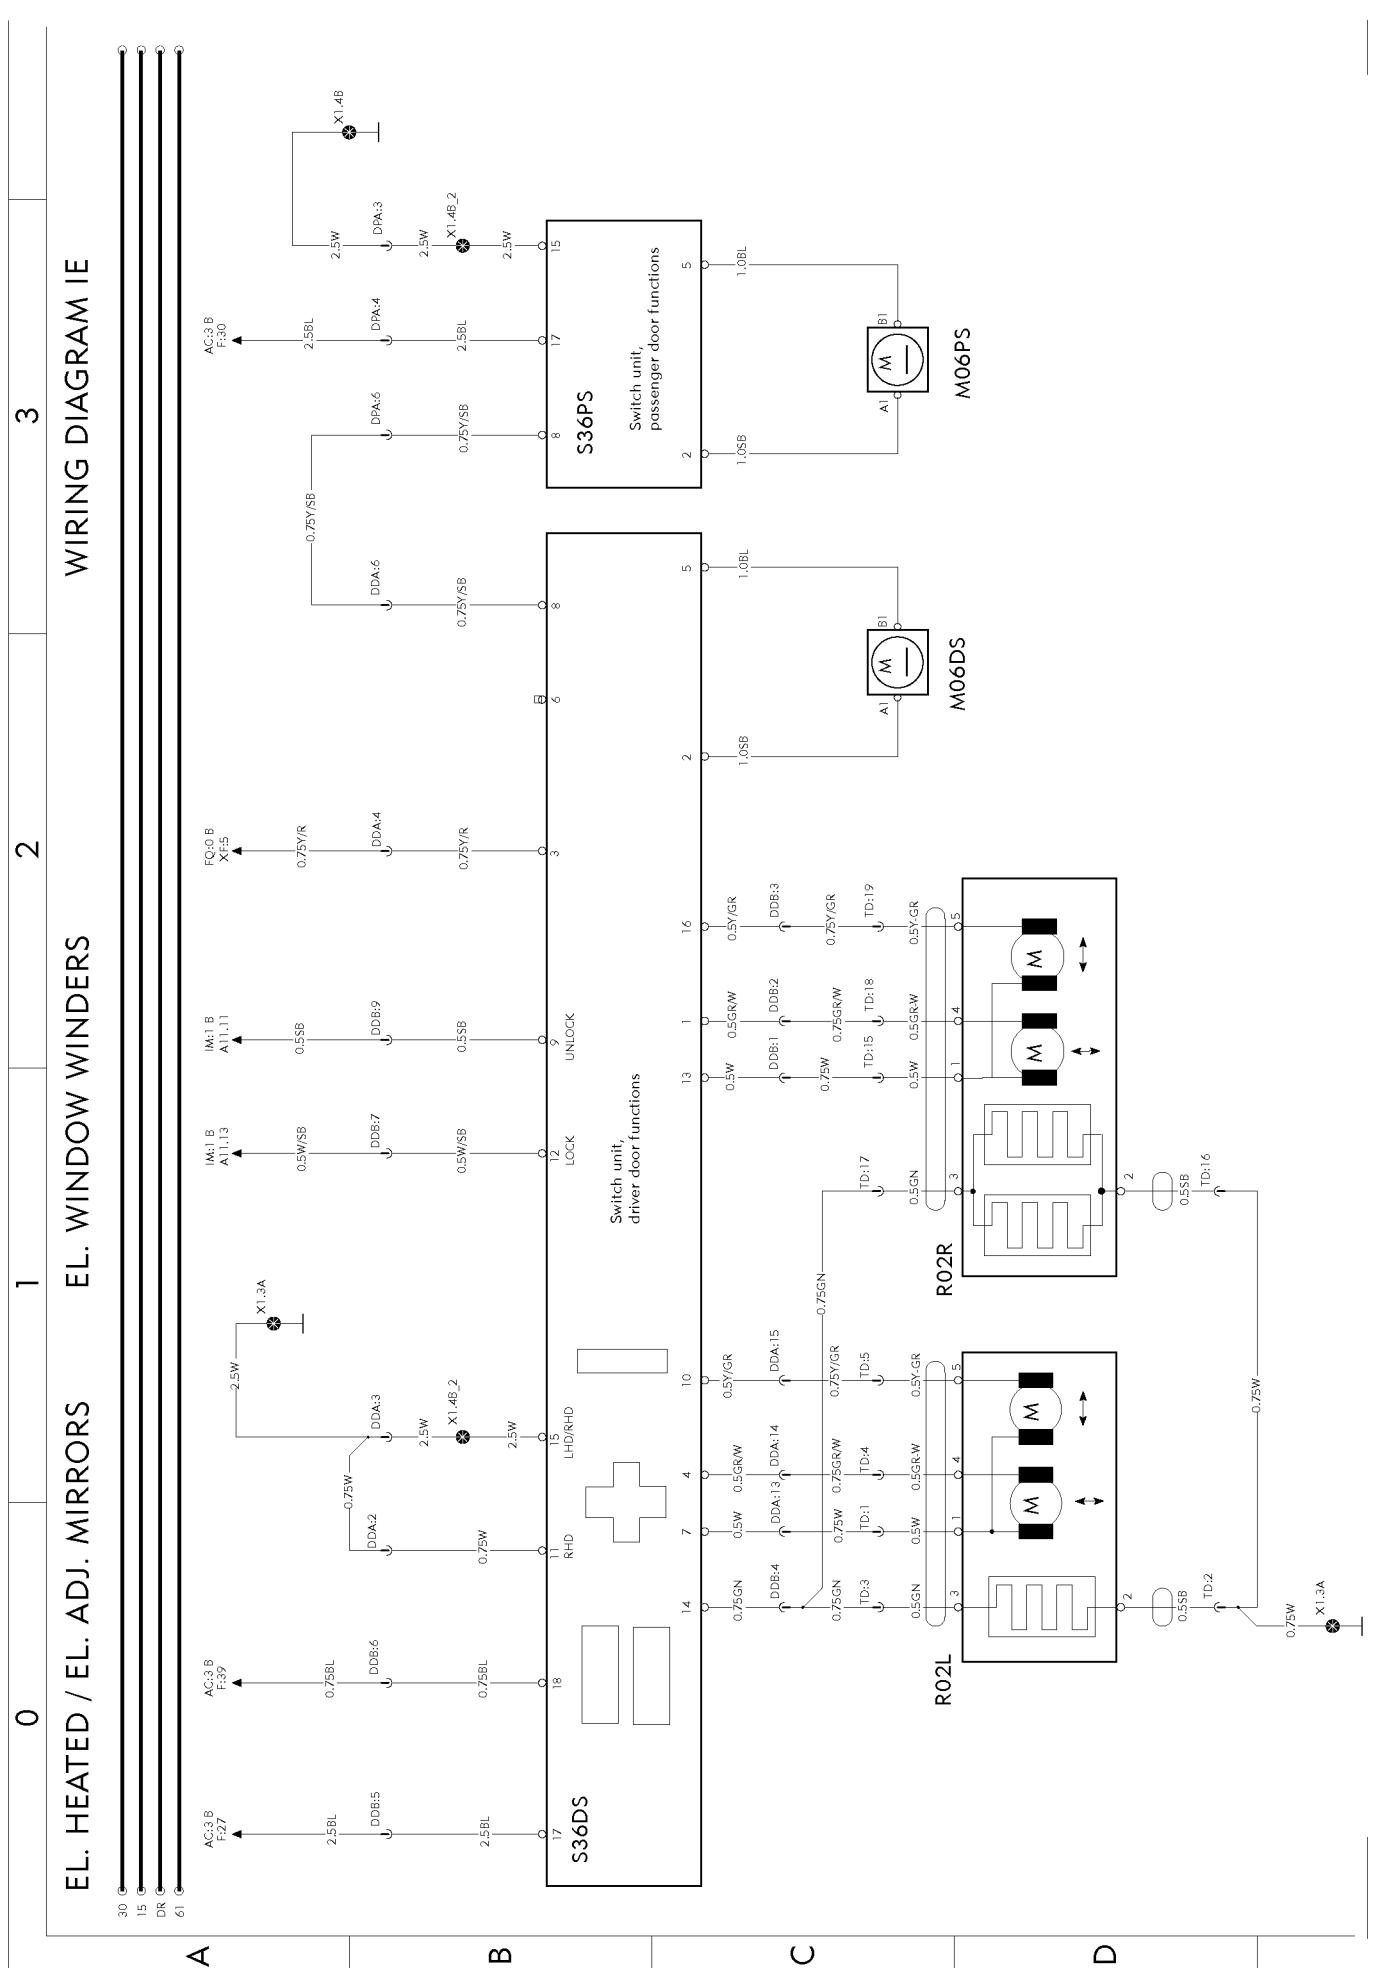

FOLDABLE MIRROR BRACKET, JAPAN

0	1	2	3
30	15	DR	61

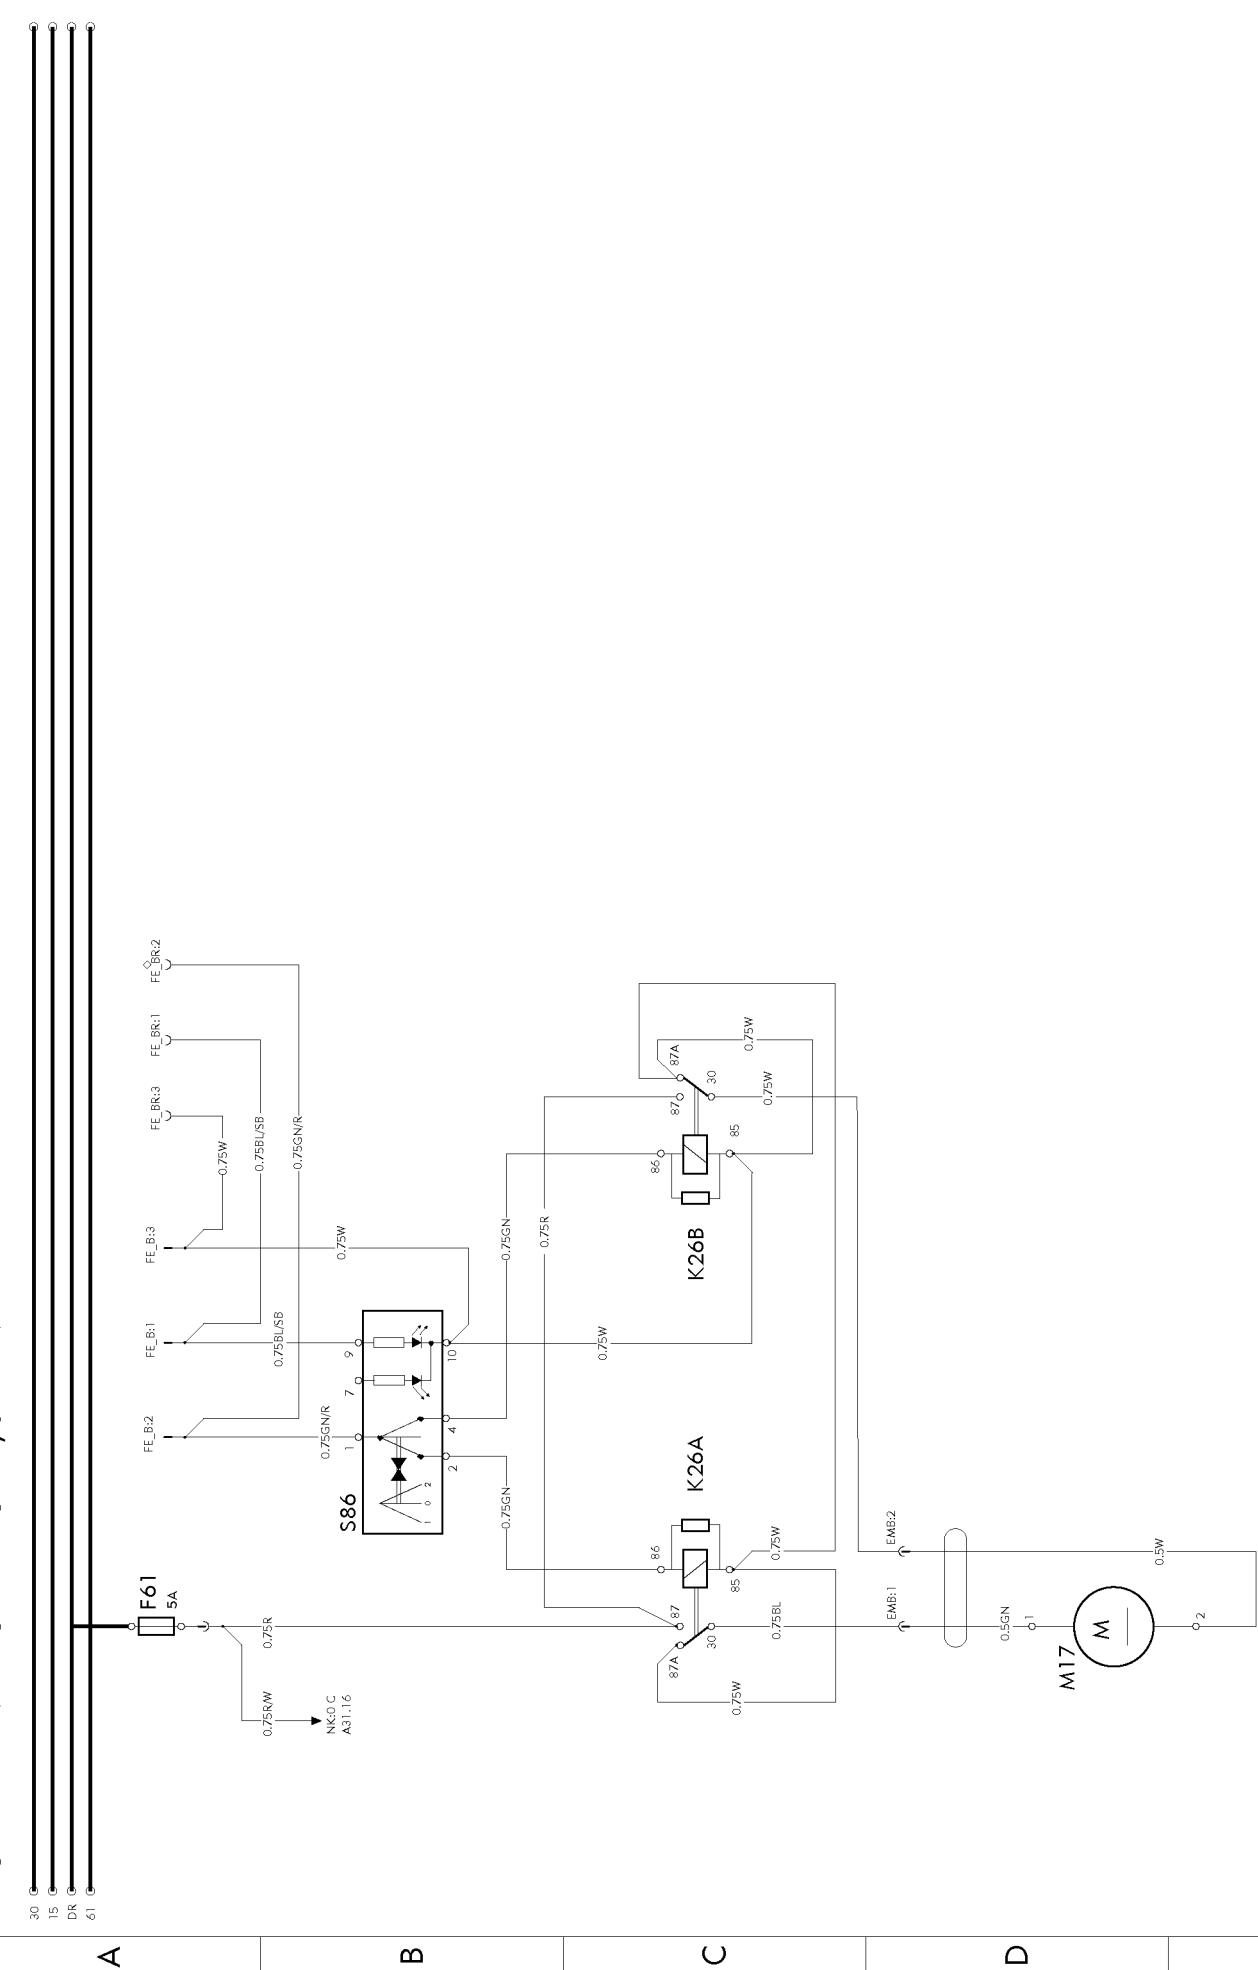

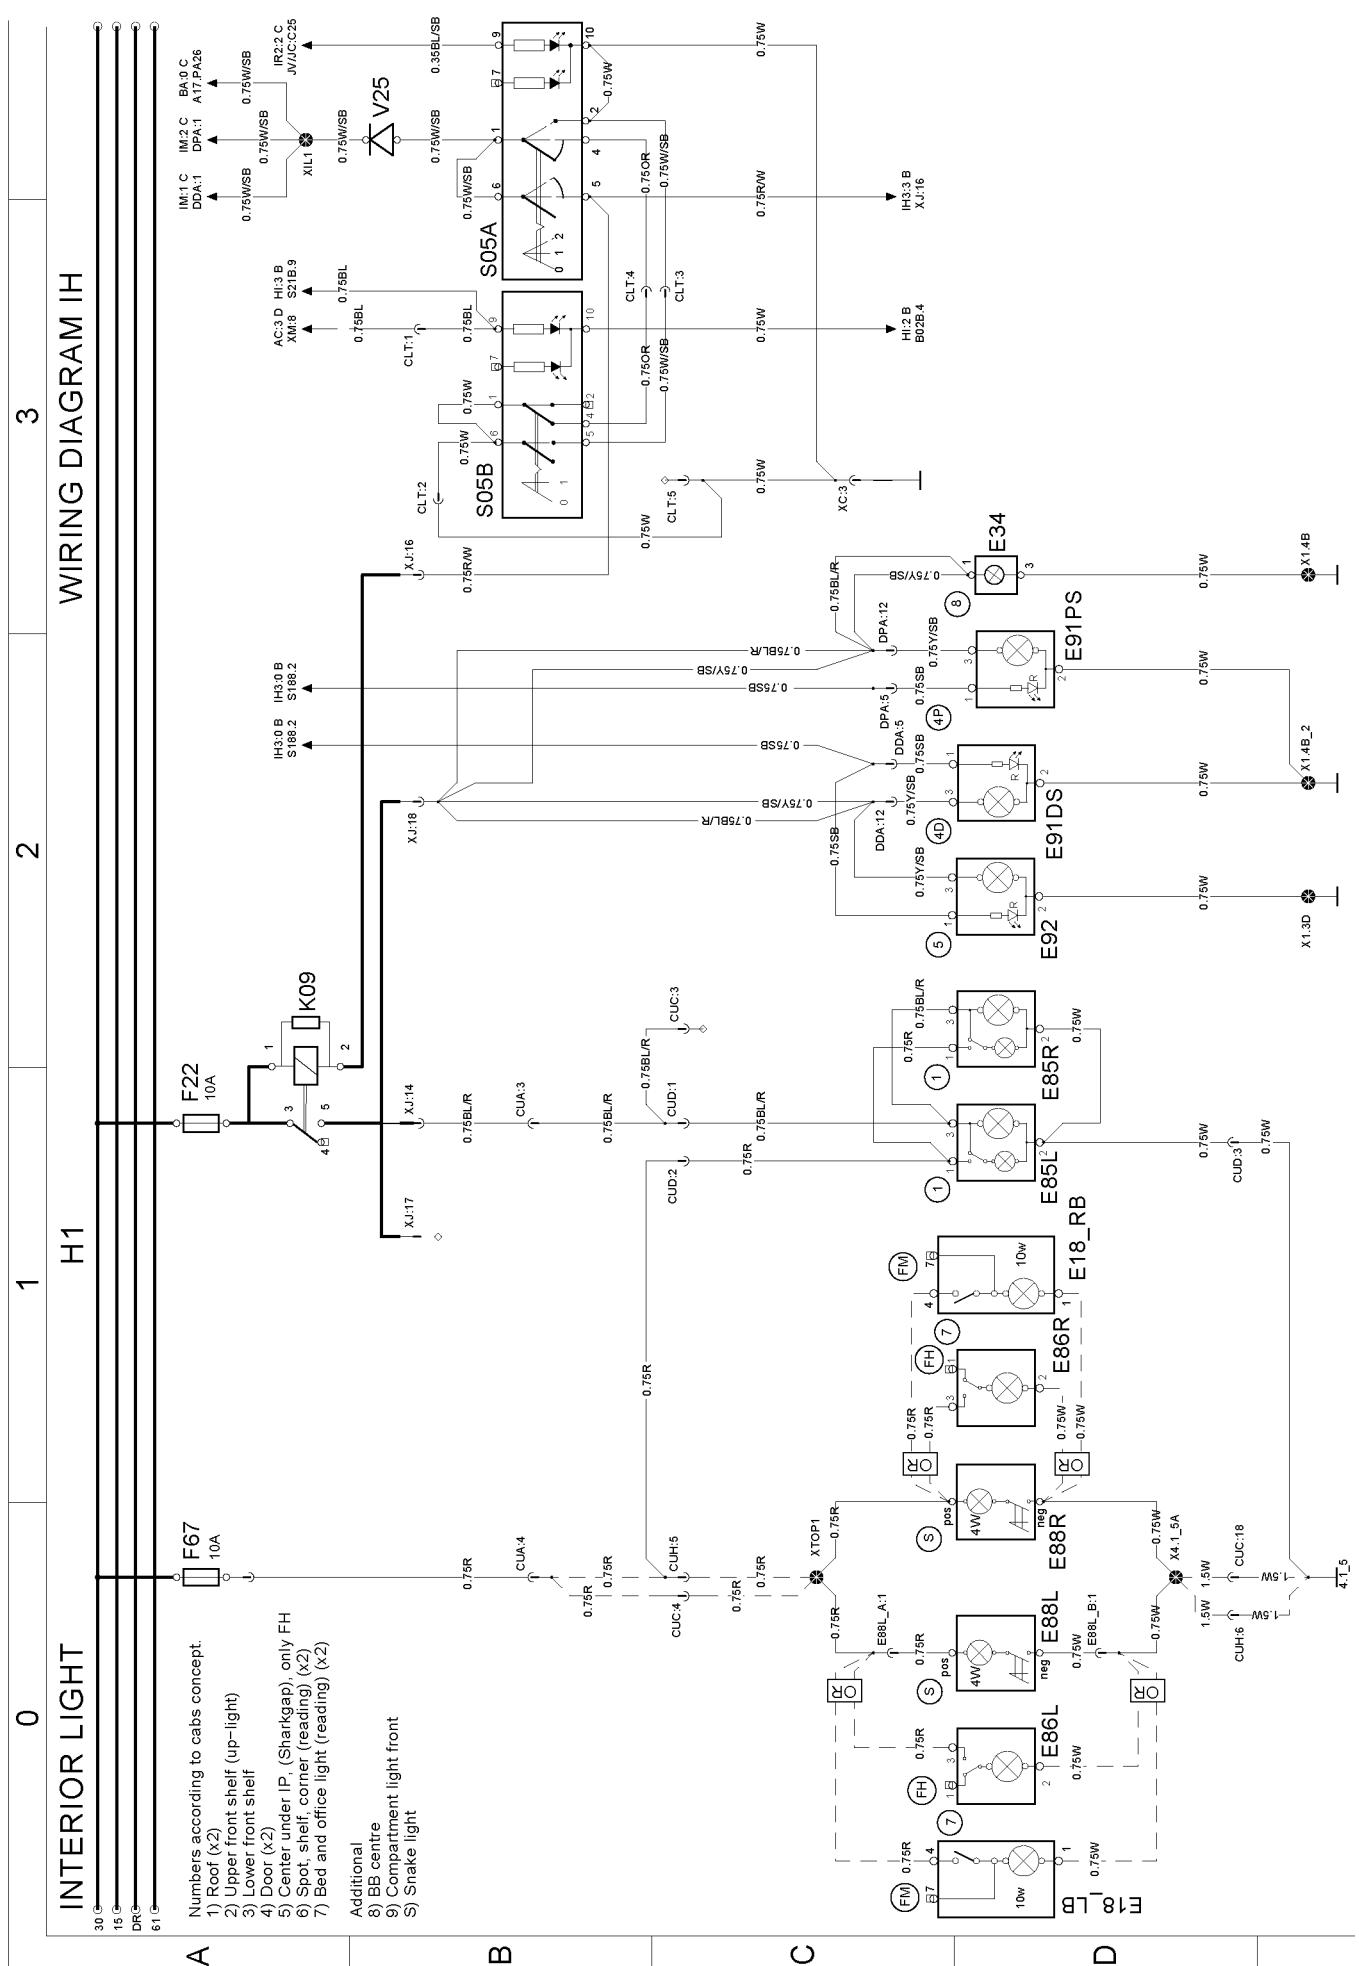


INTERIOR LIGHT


3


2


1


WIRING DIAGRAM IH3

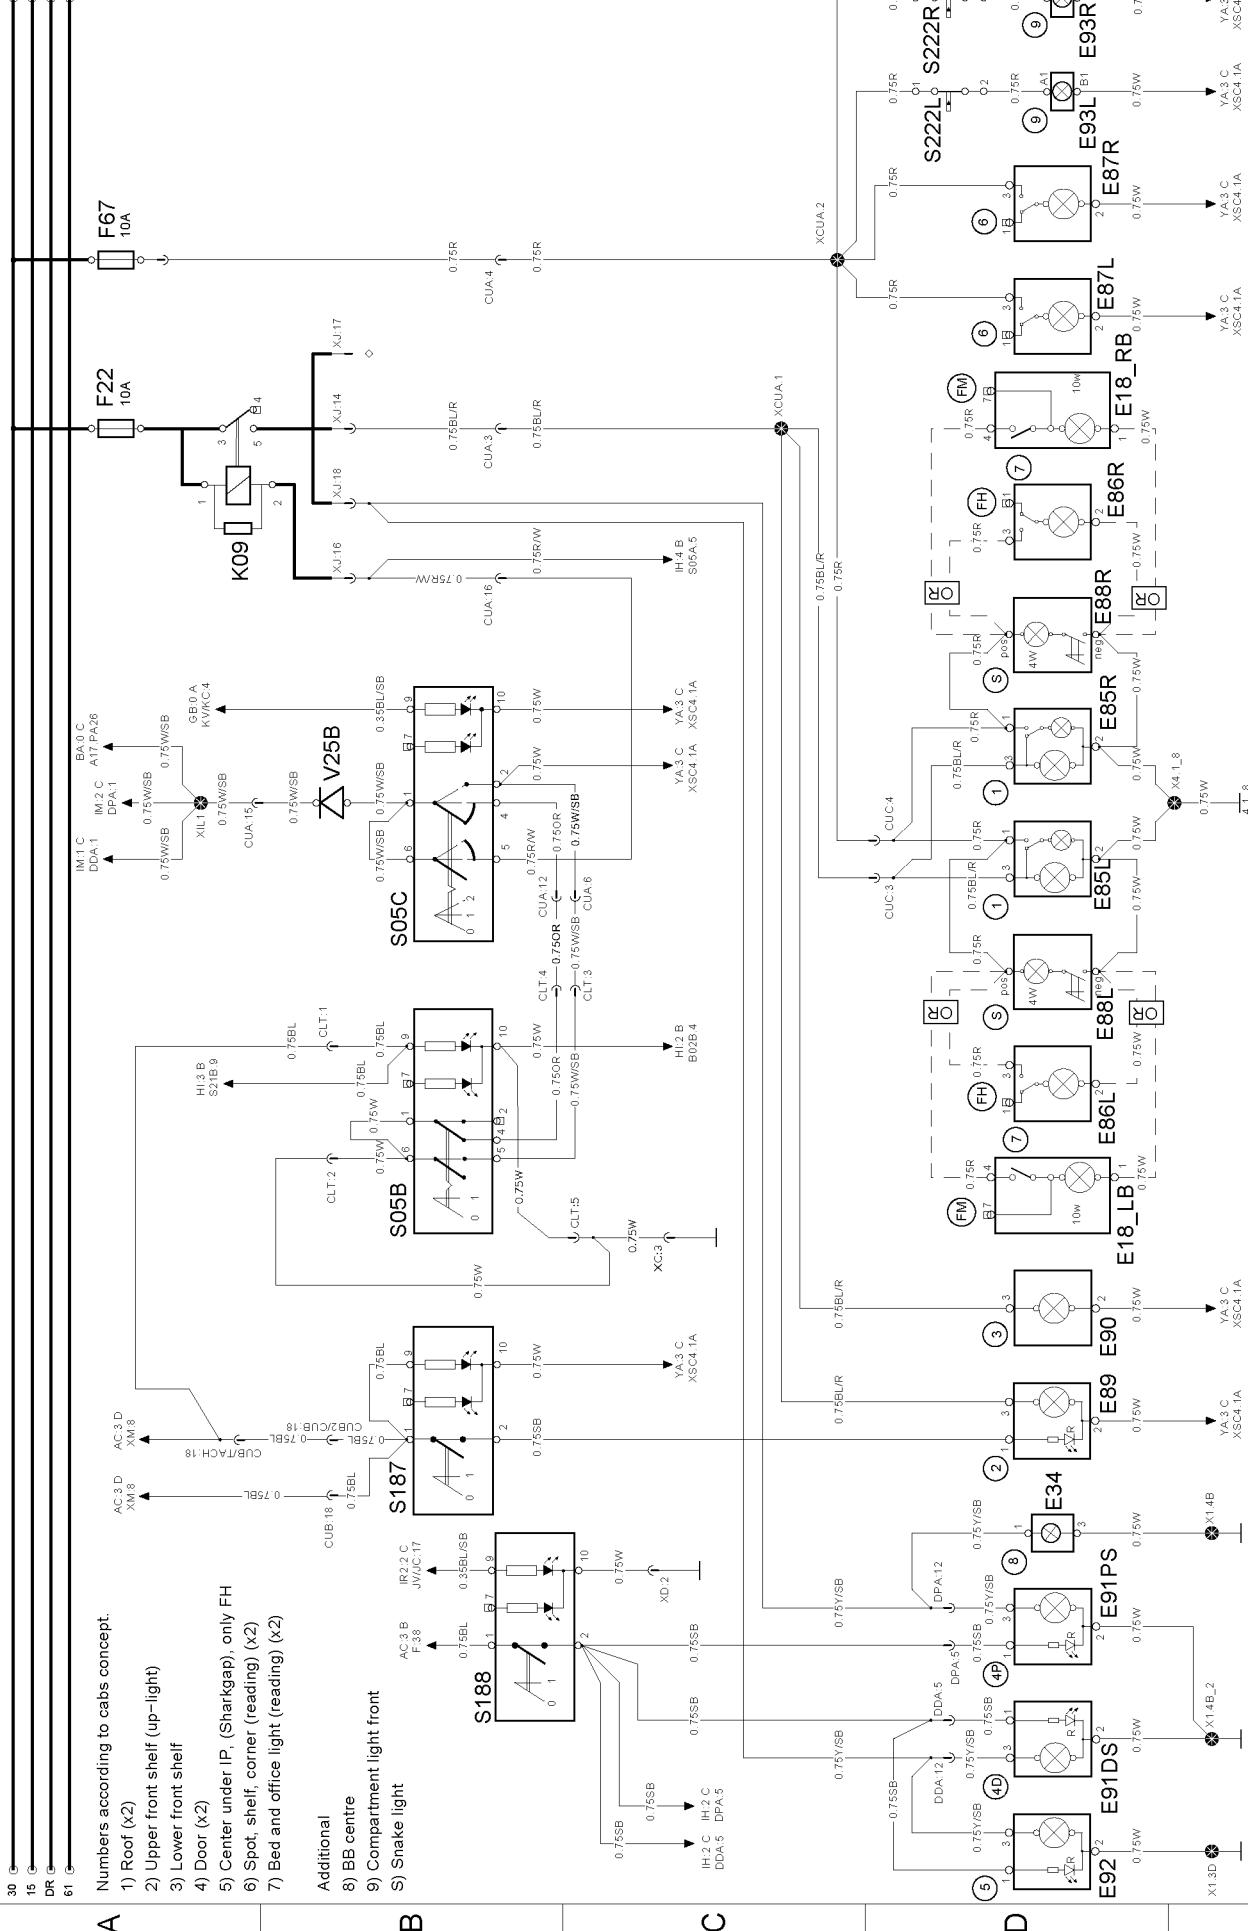


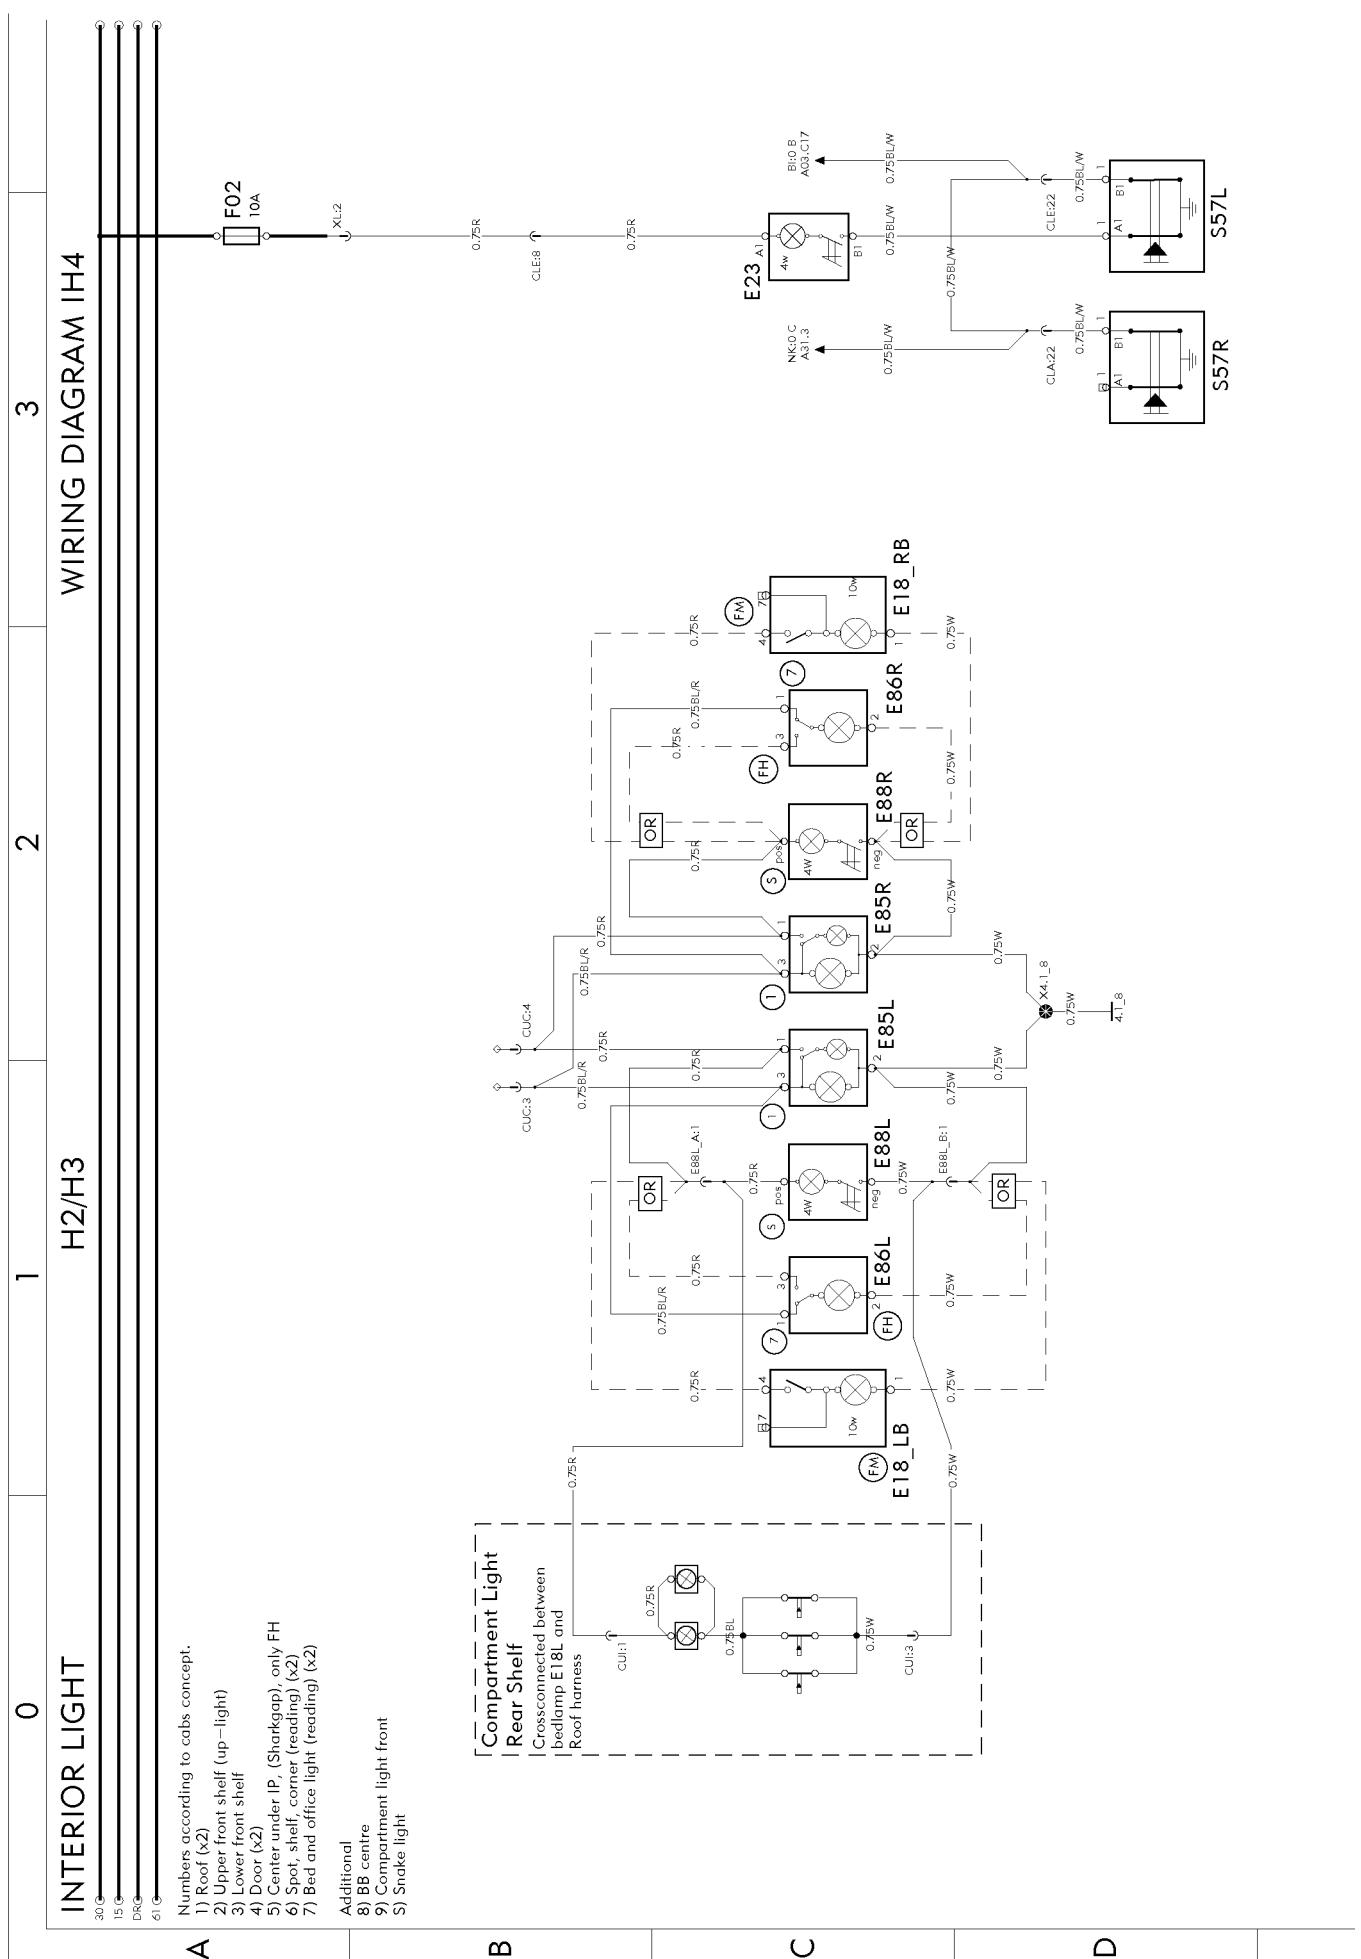

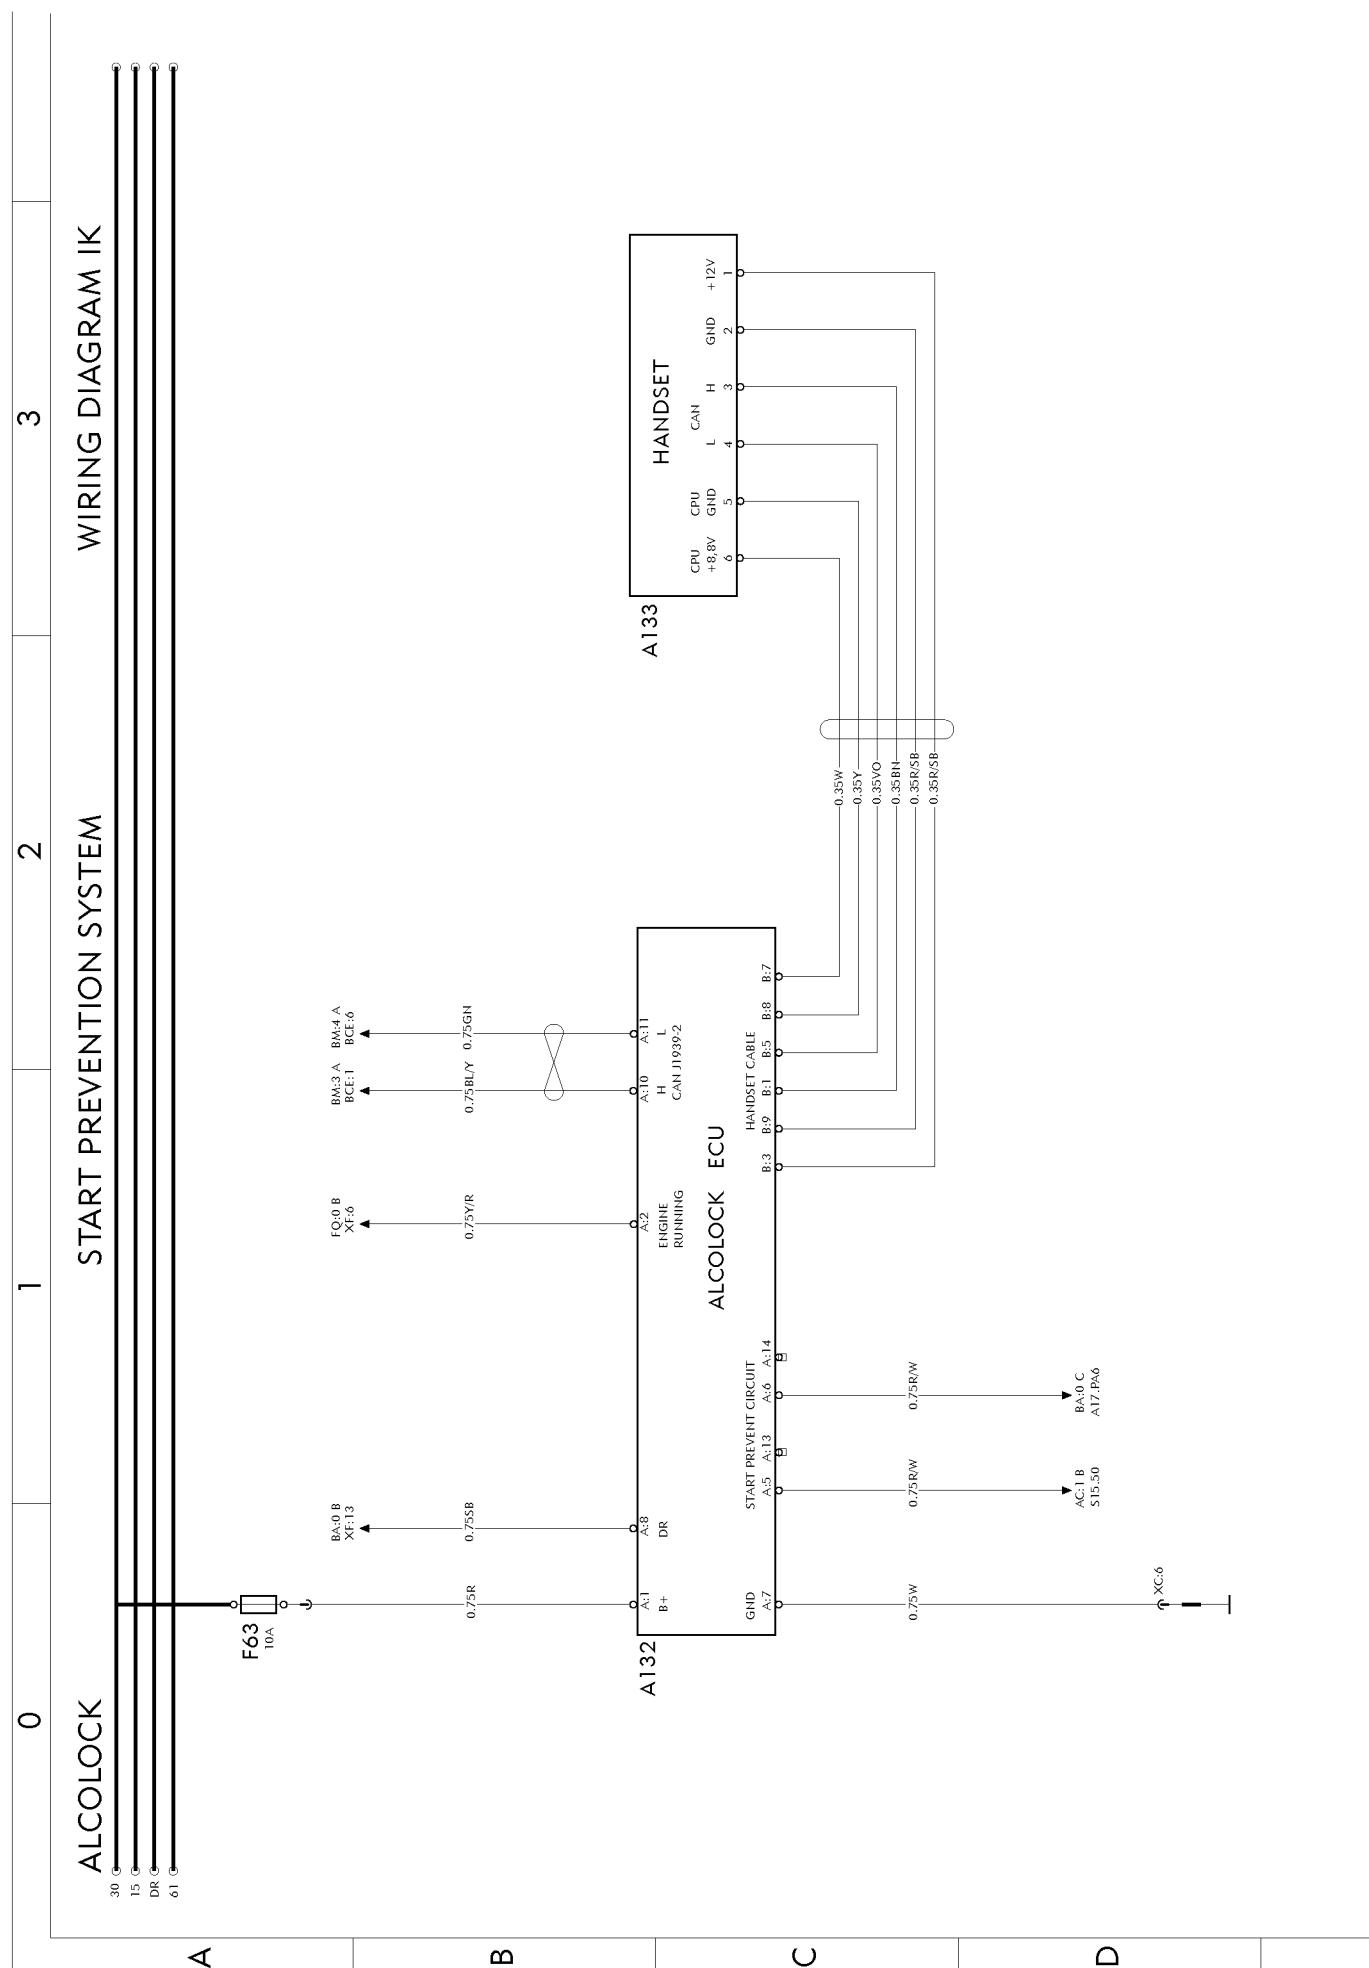

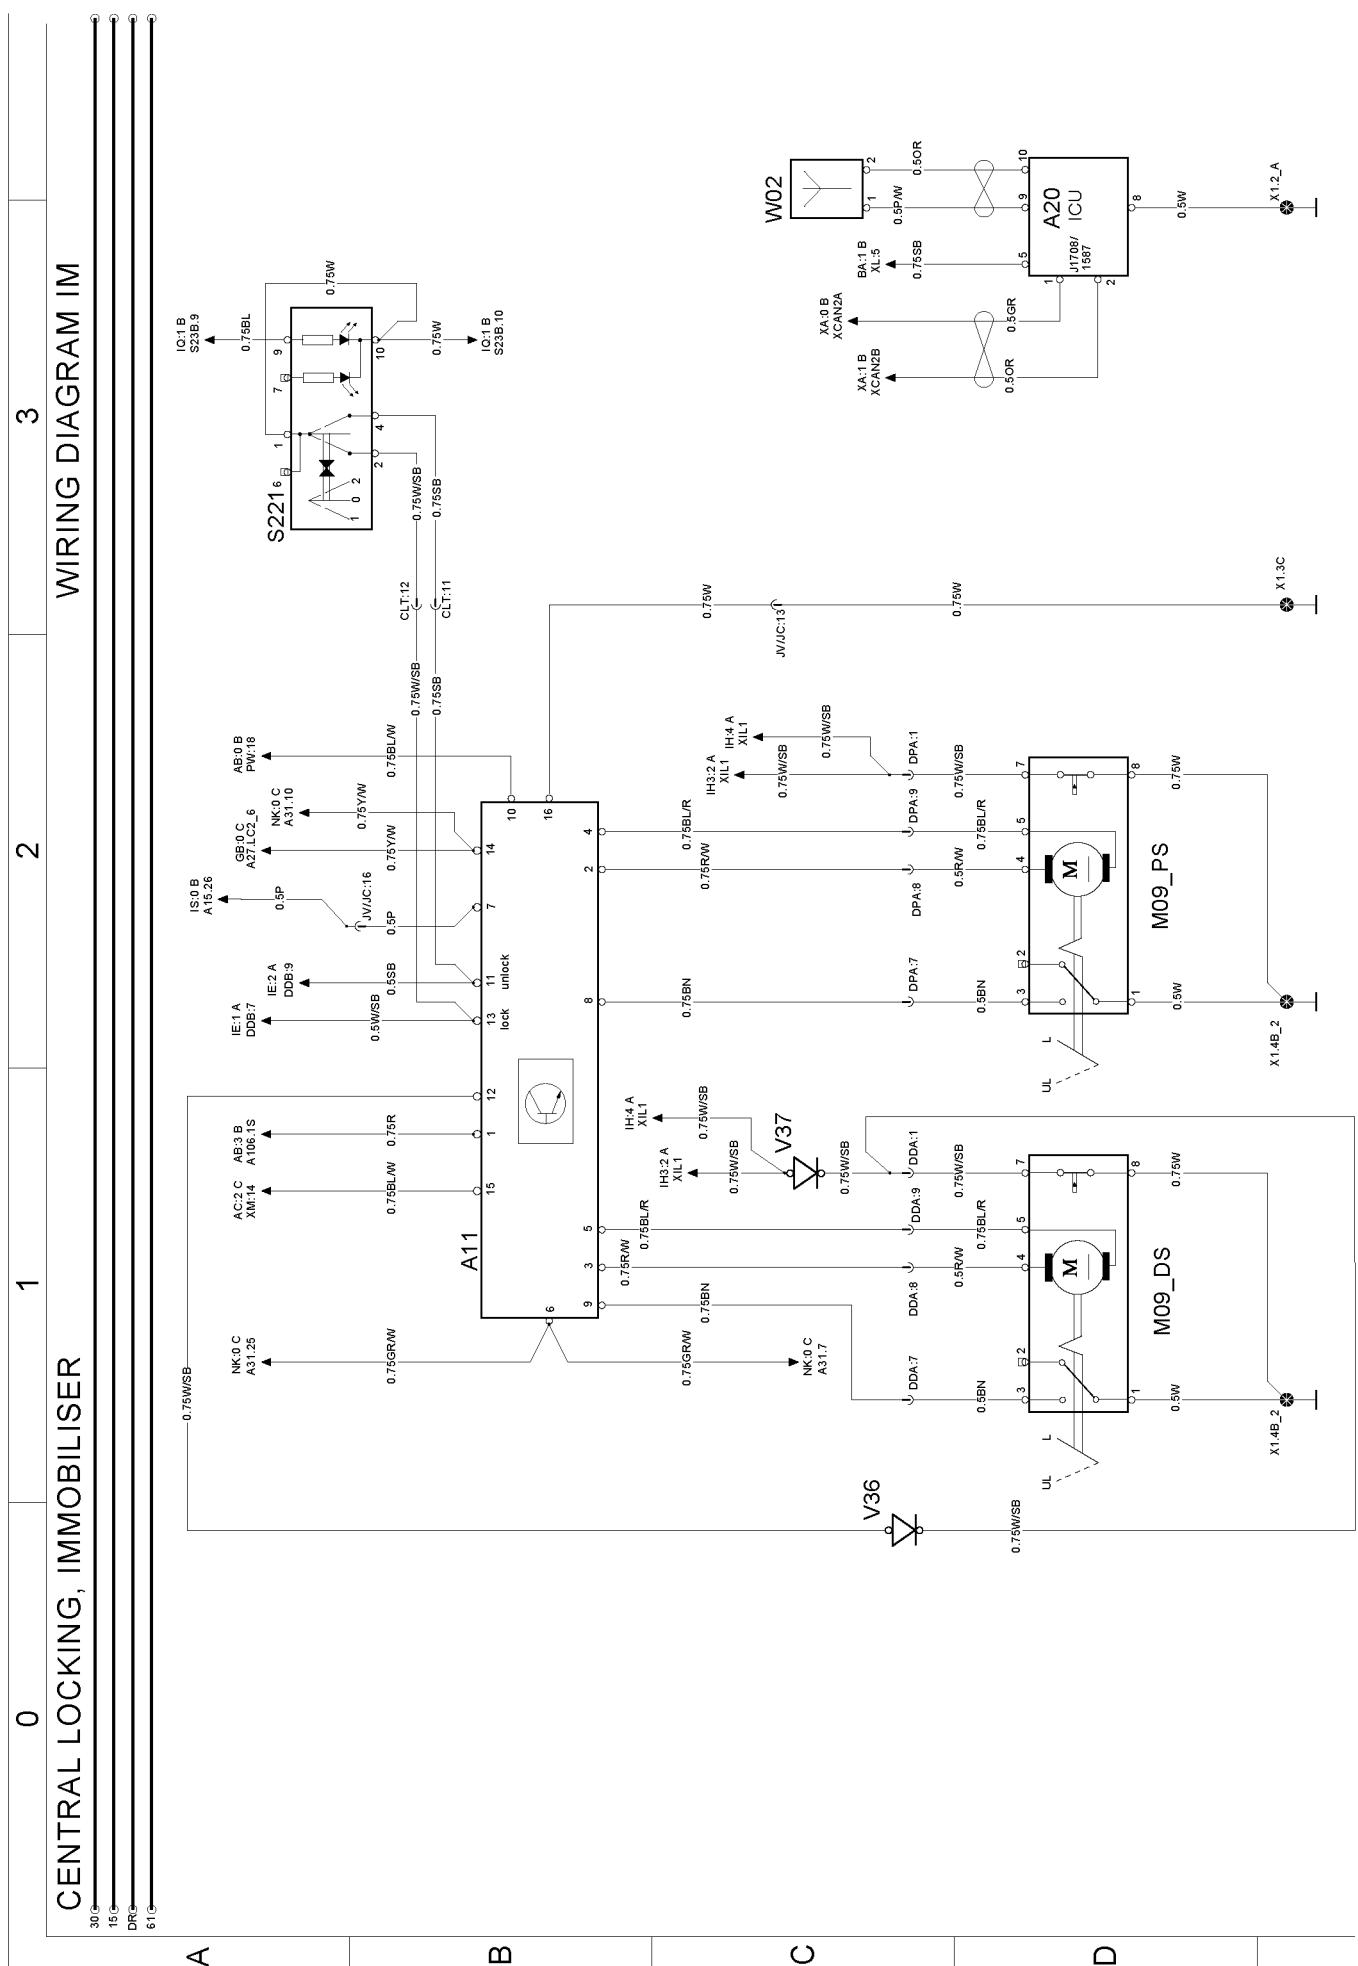

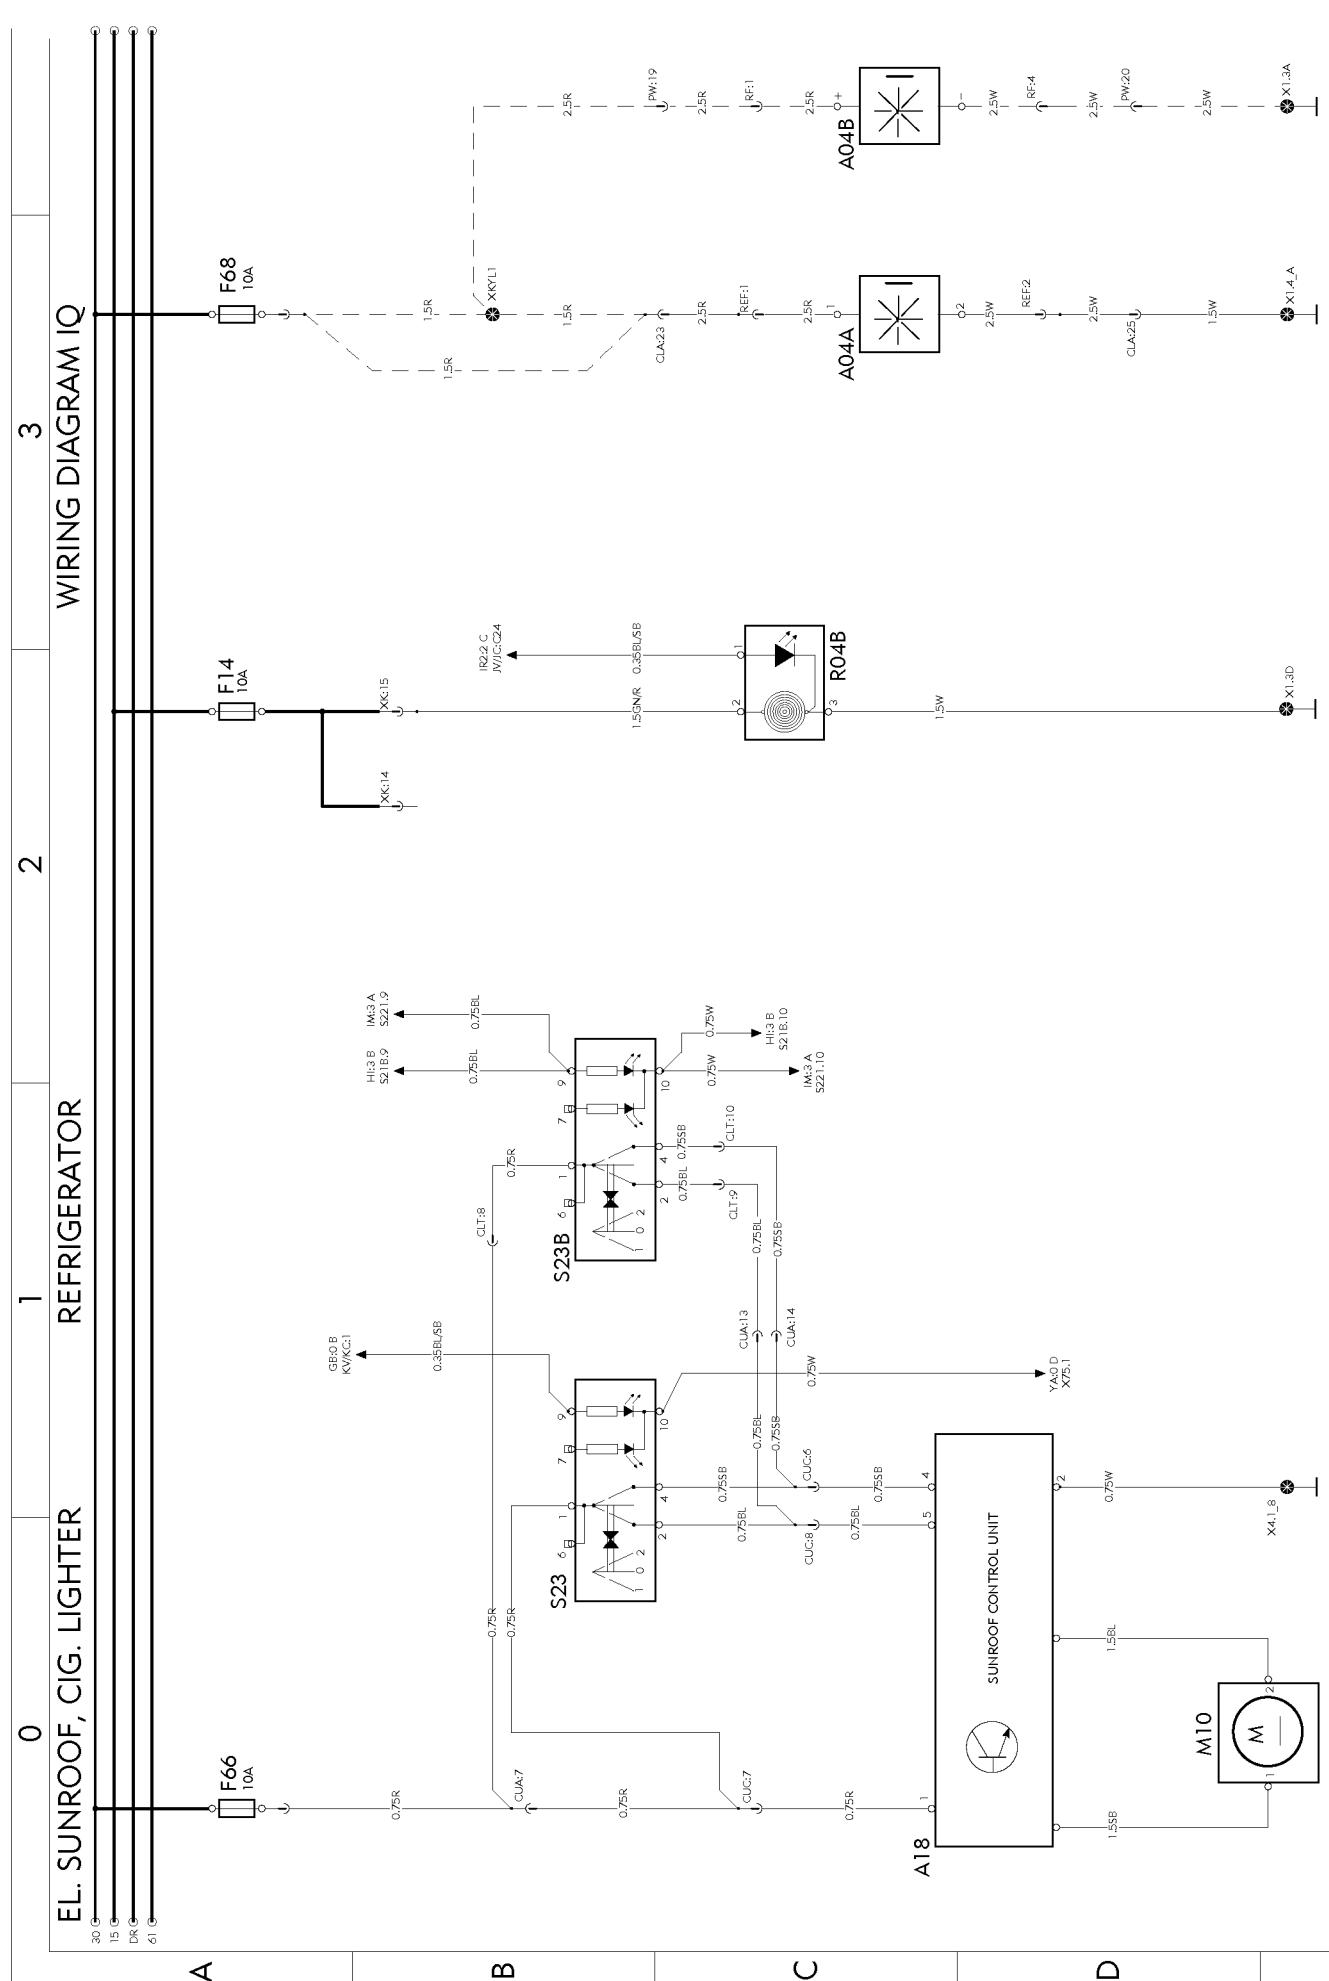

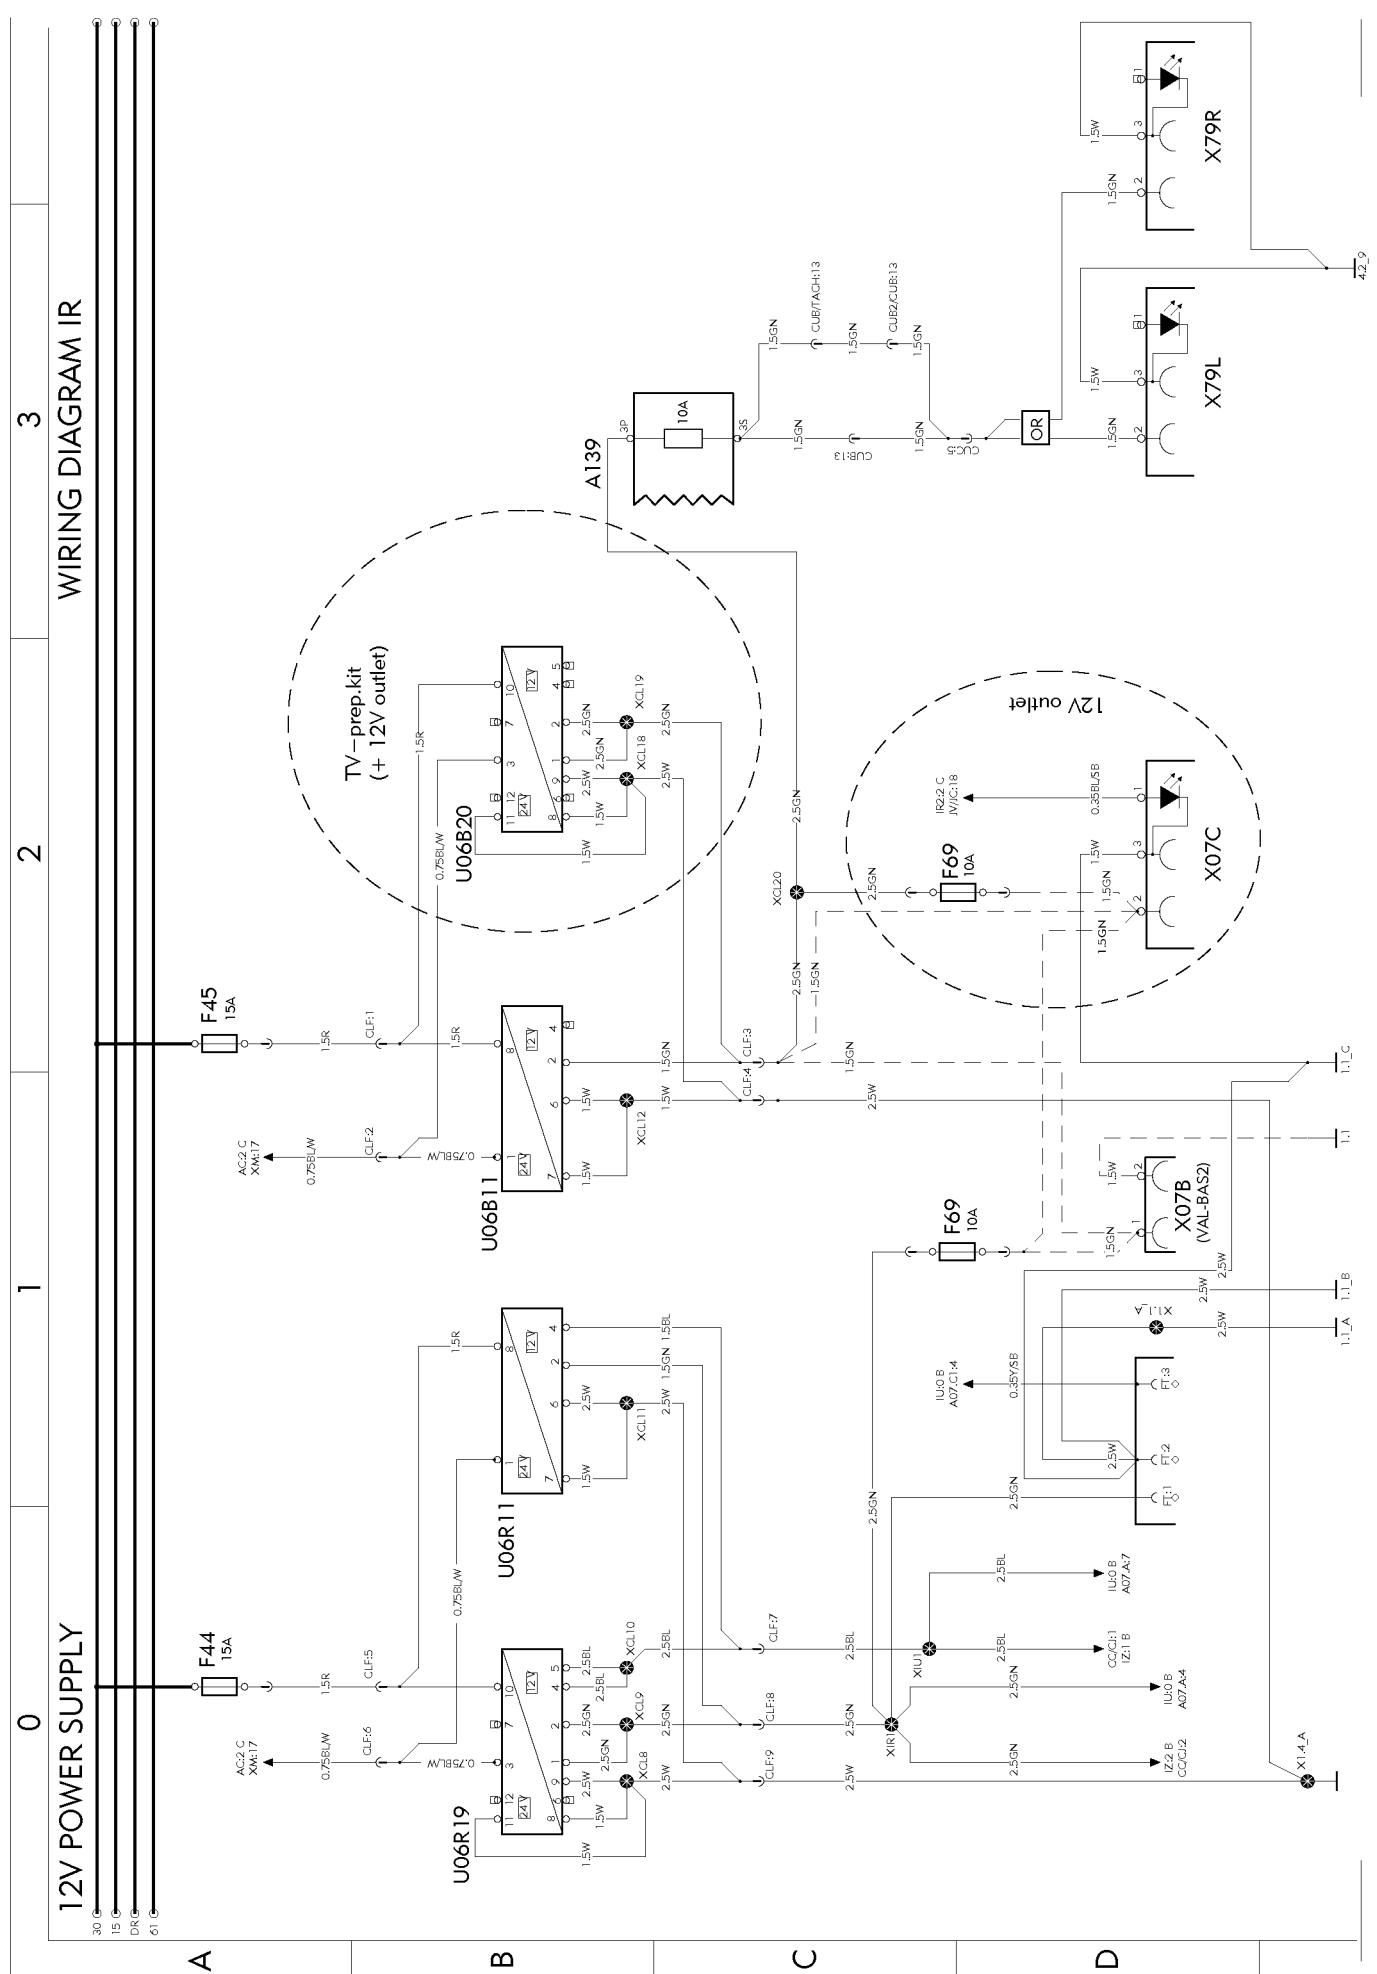


POWER OUTLETS

0

2

3

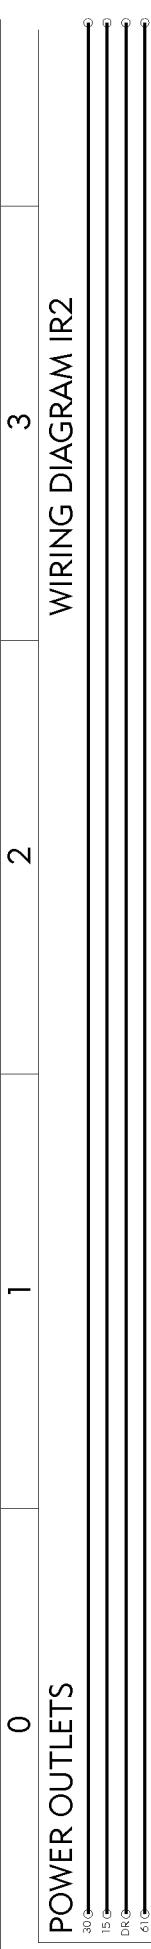



WIRING DIAGRAM IR2

1


2


3

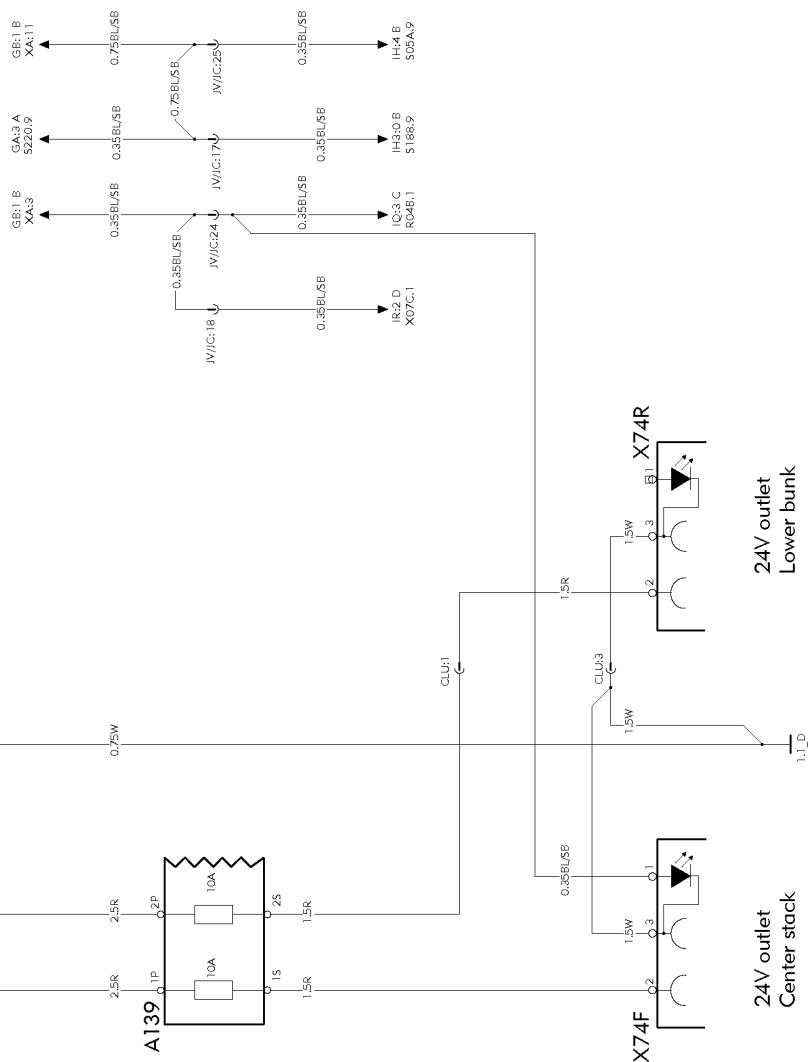


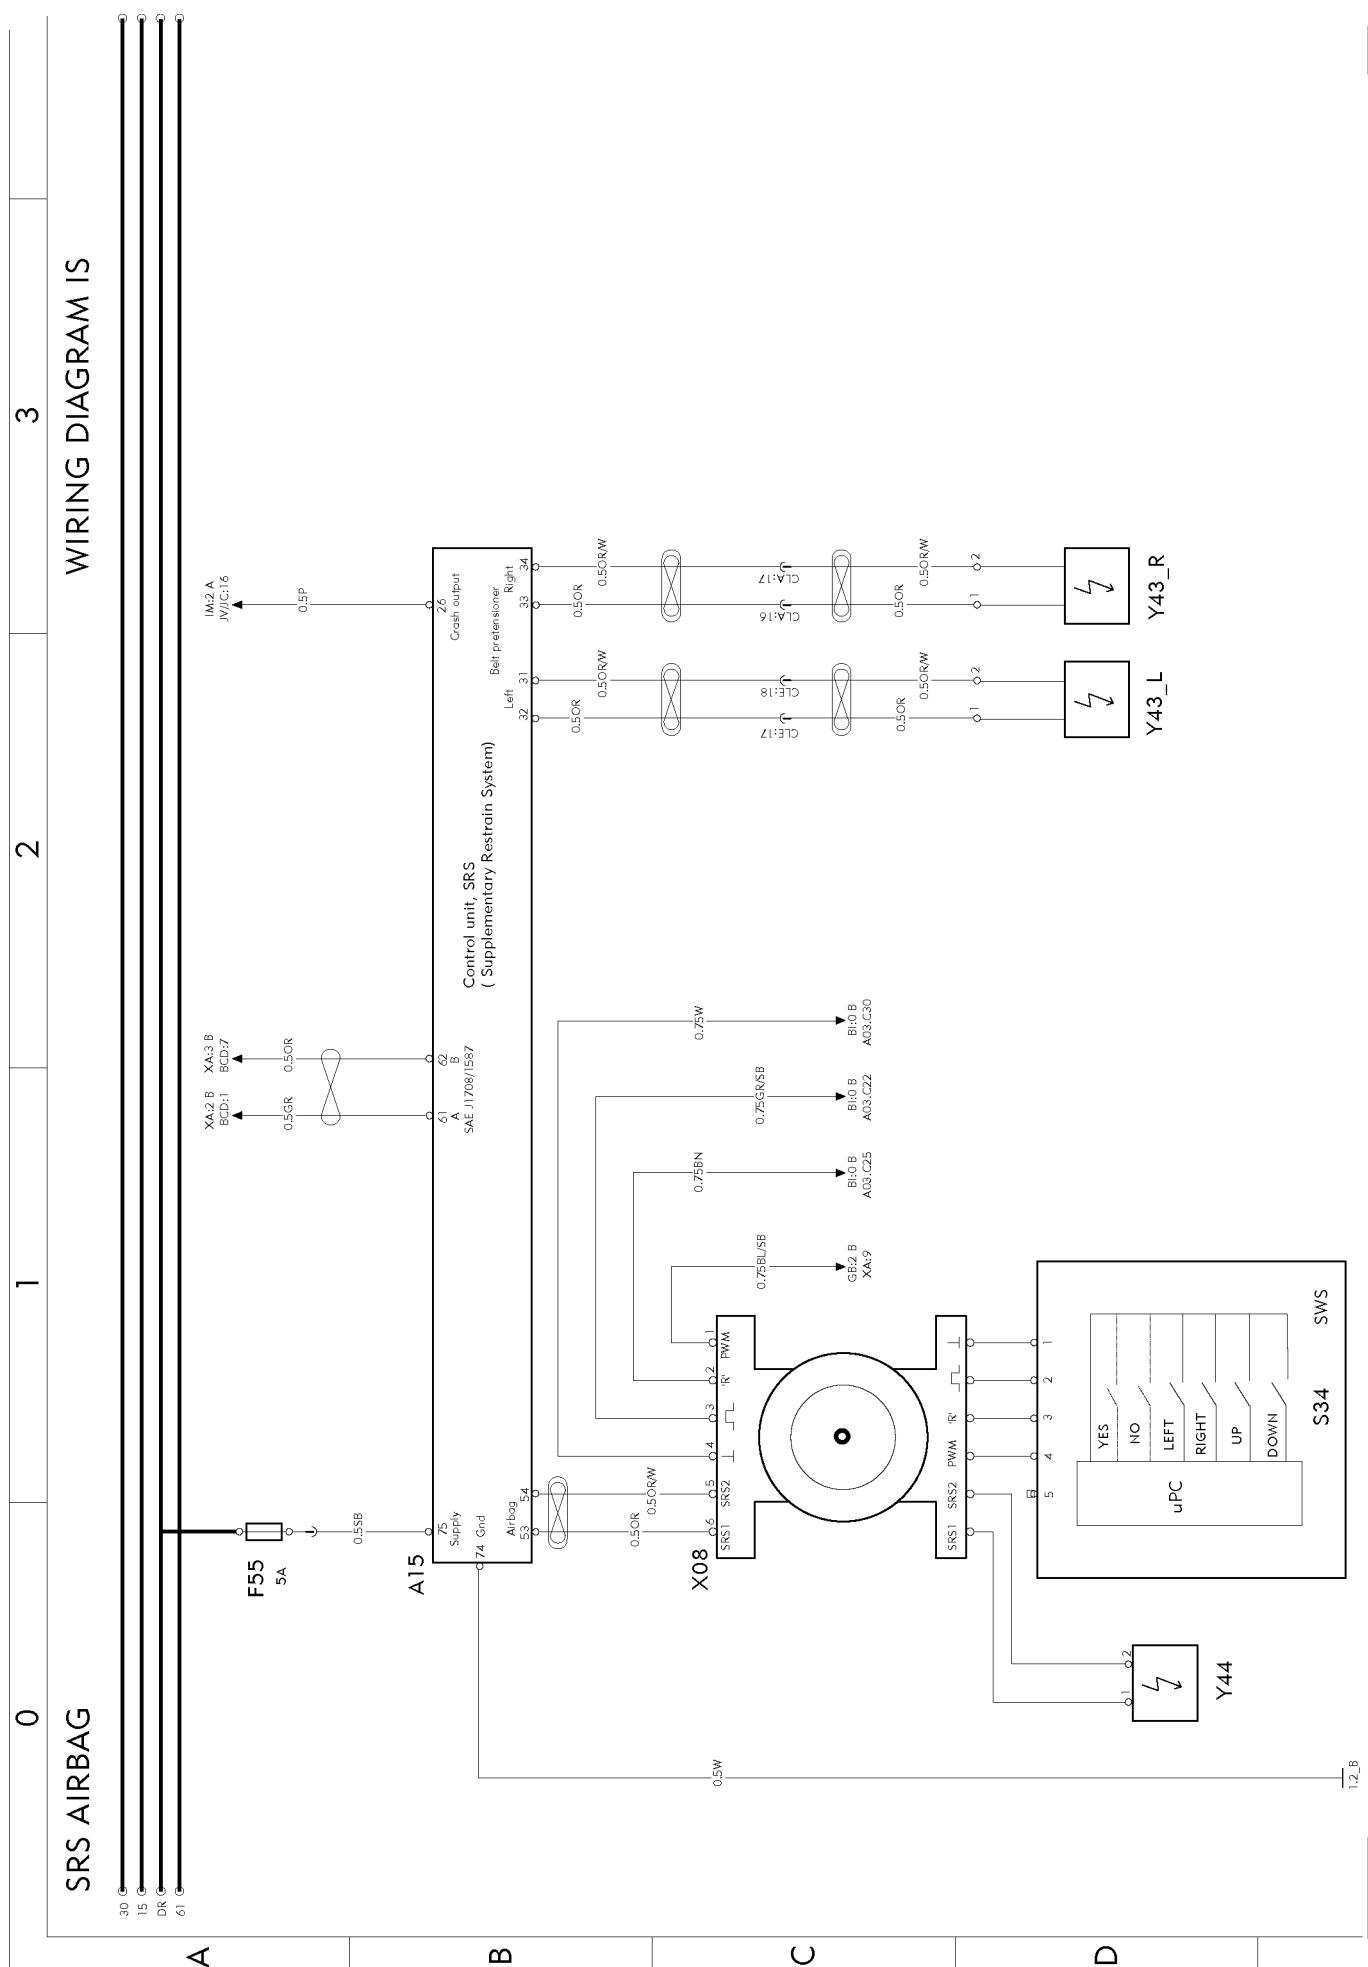

T3053131

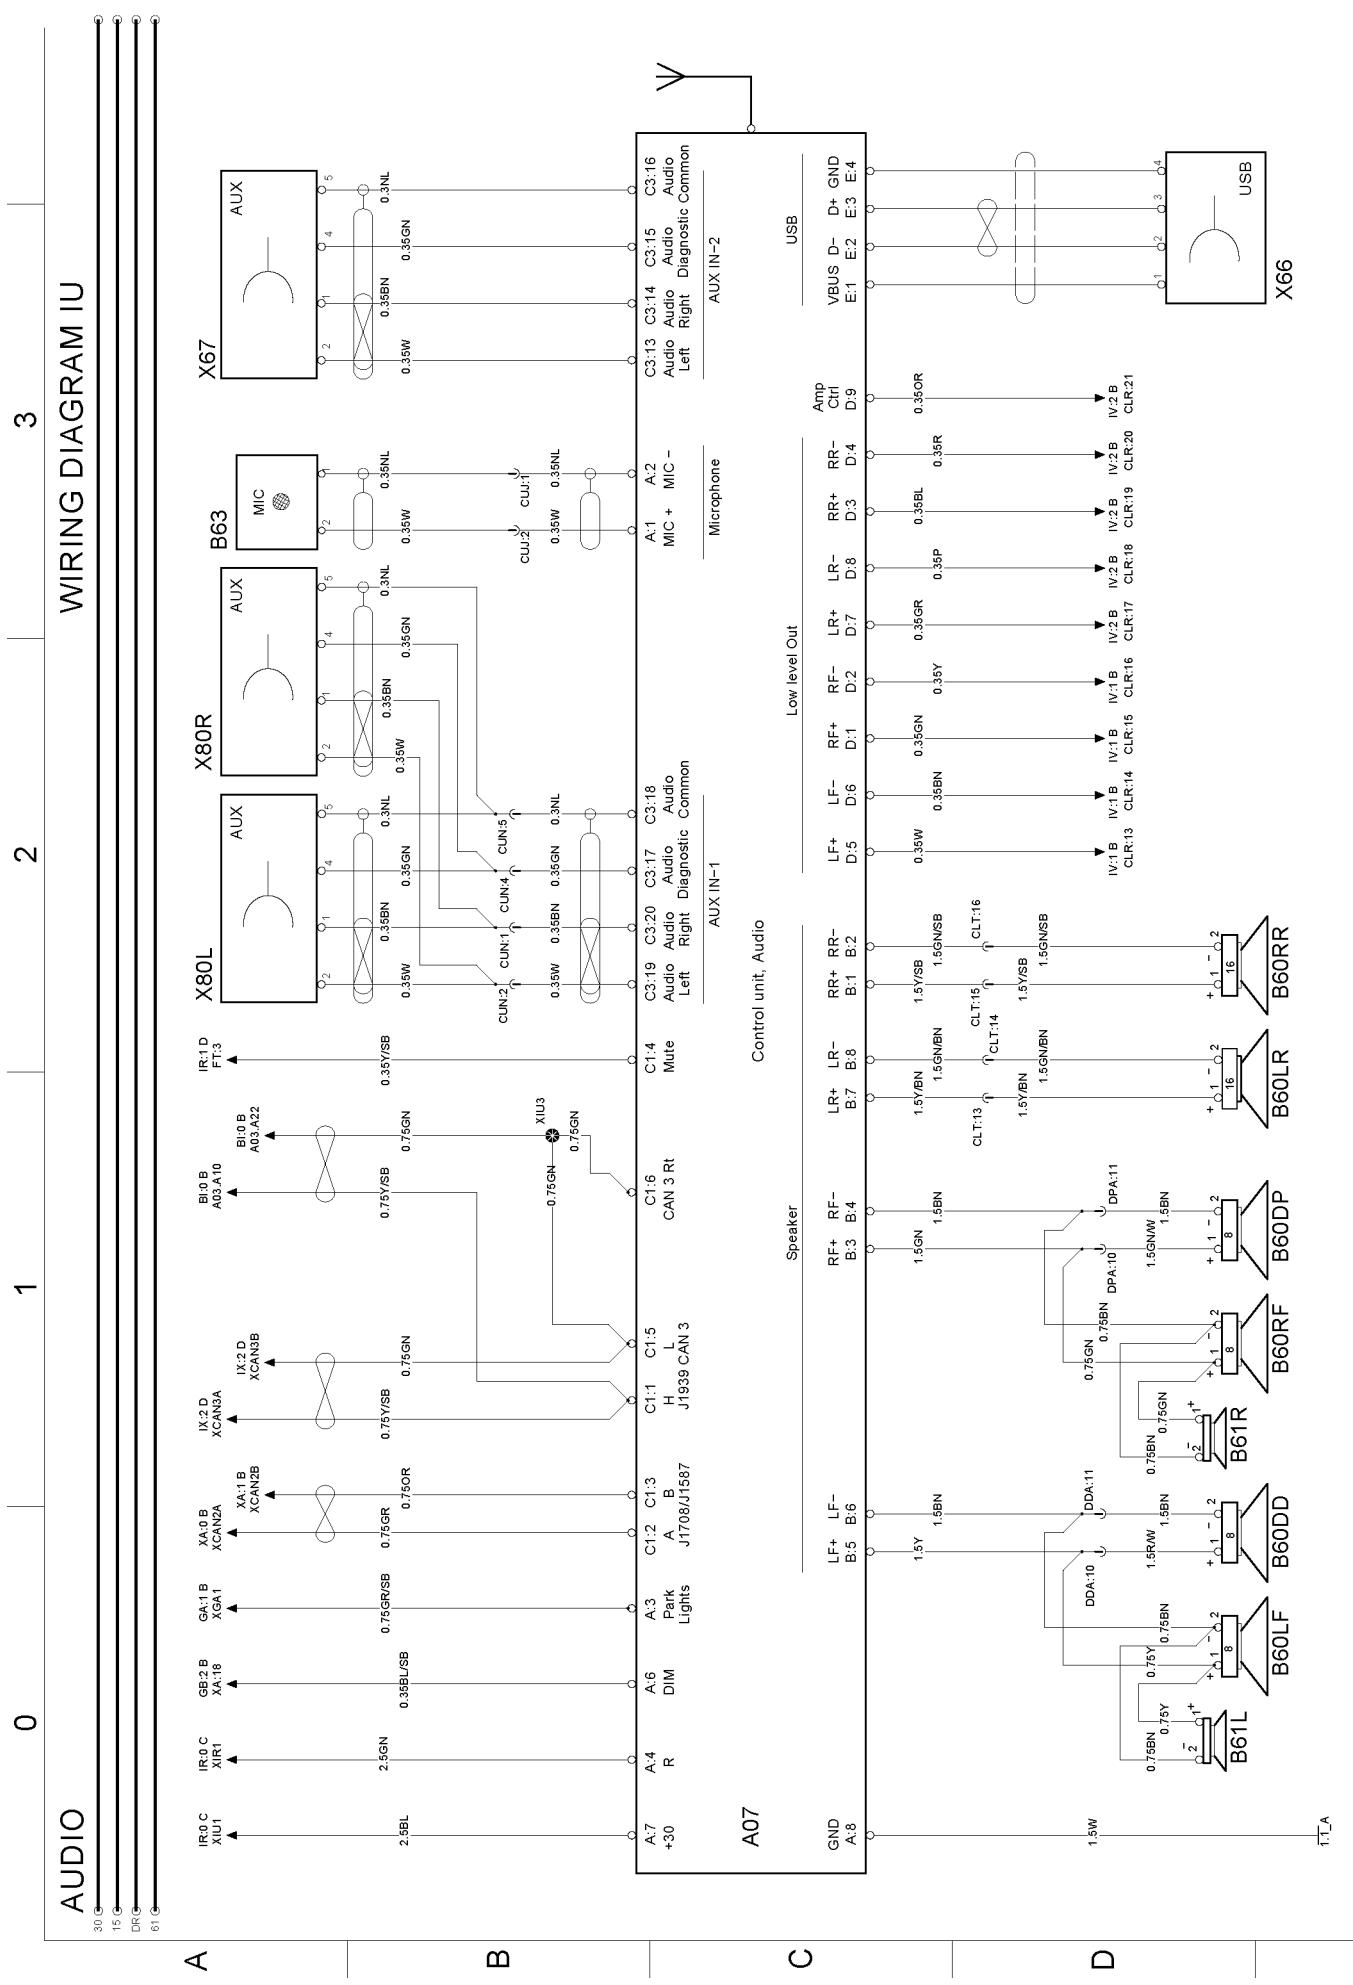

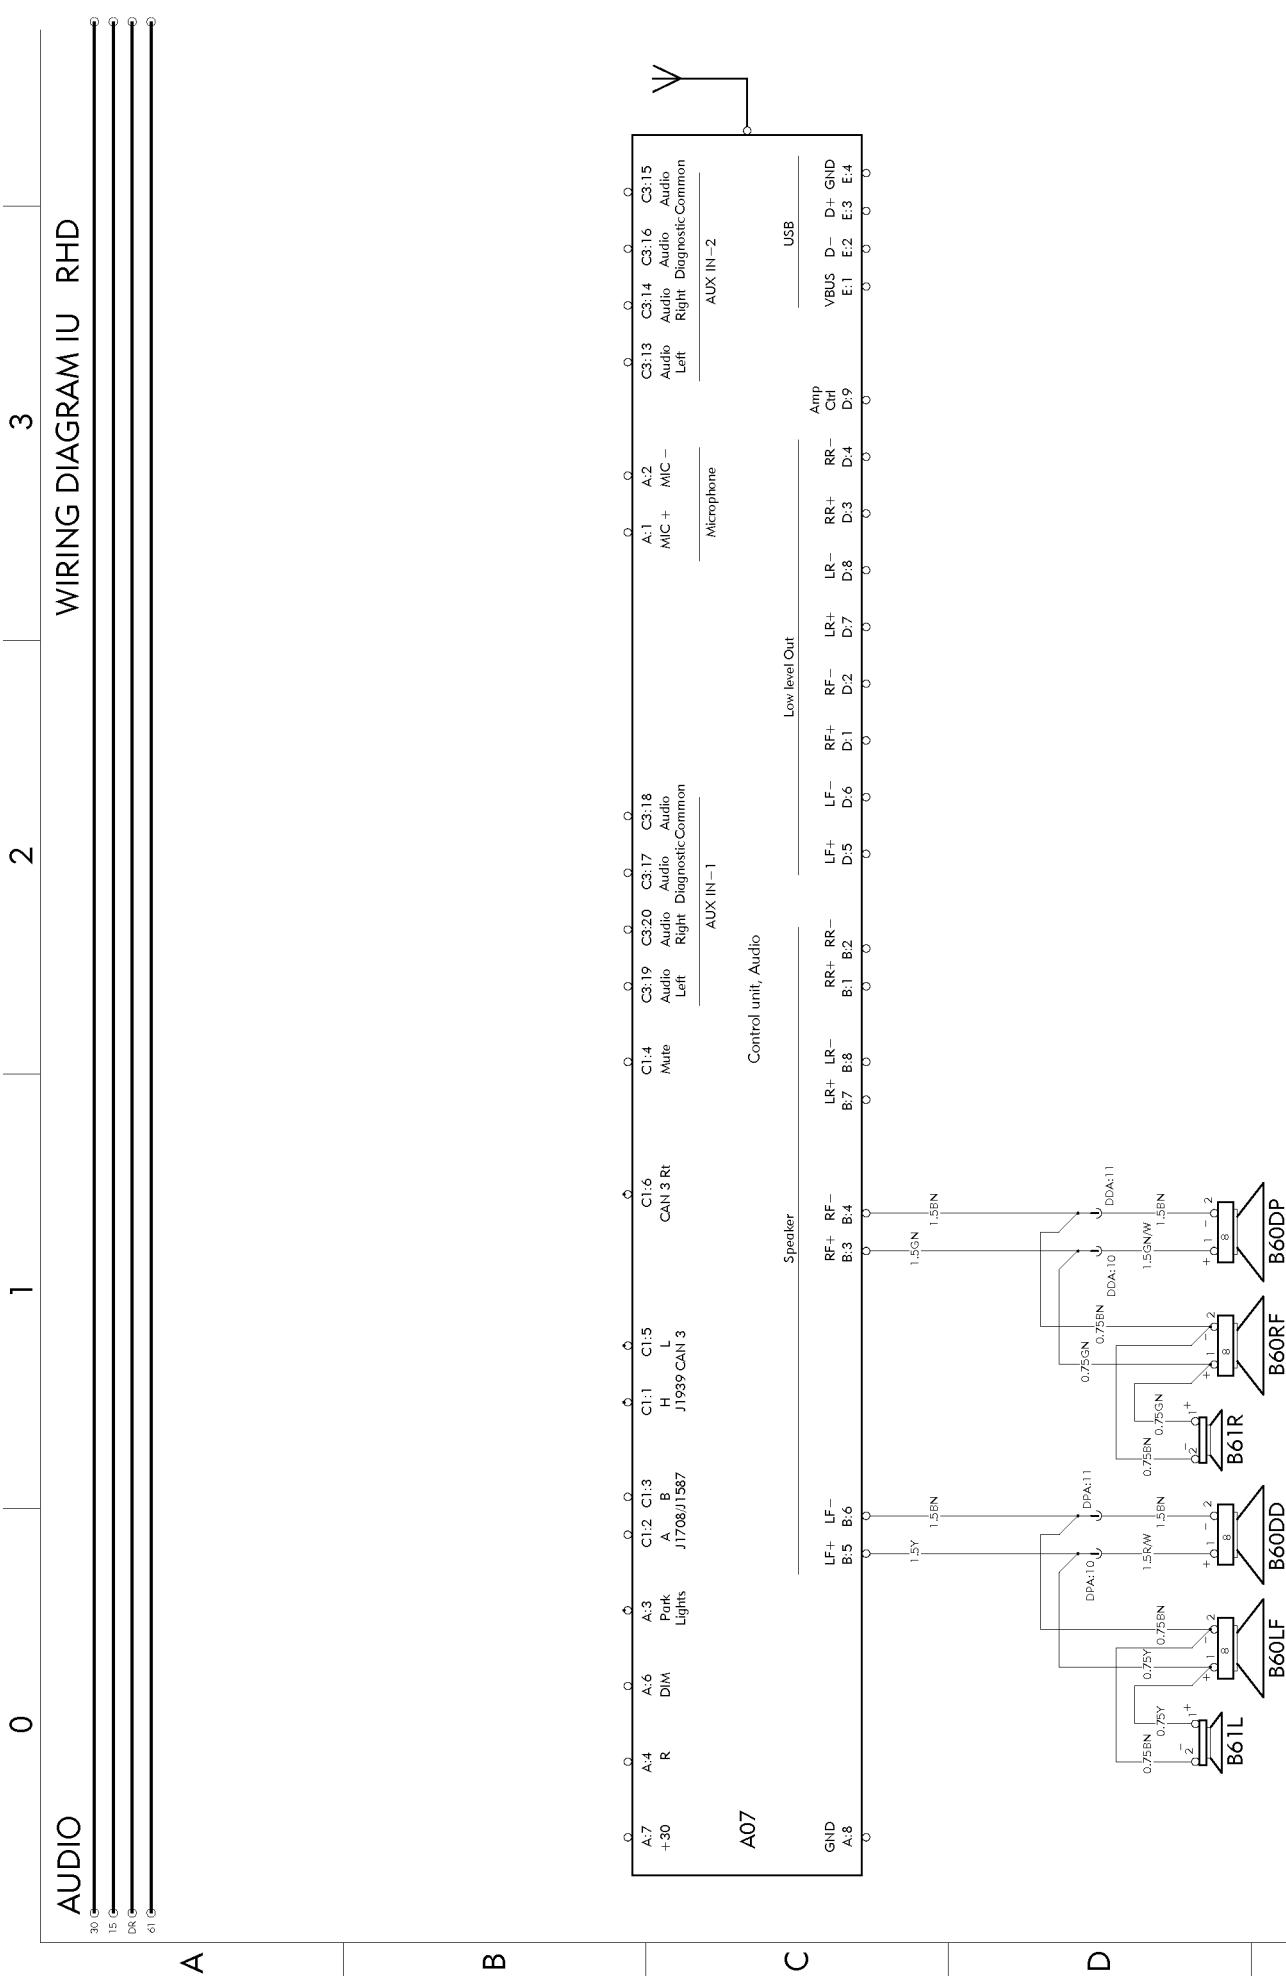

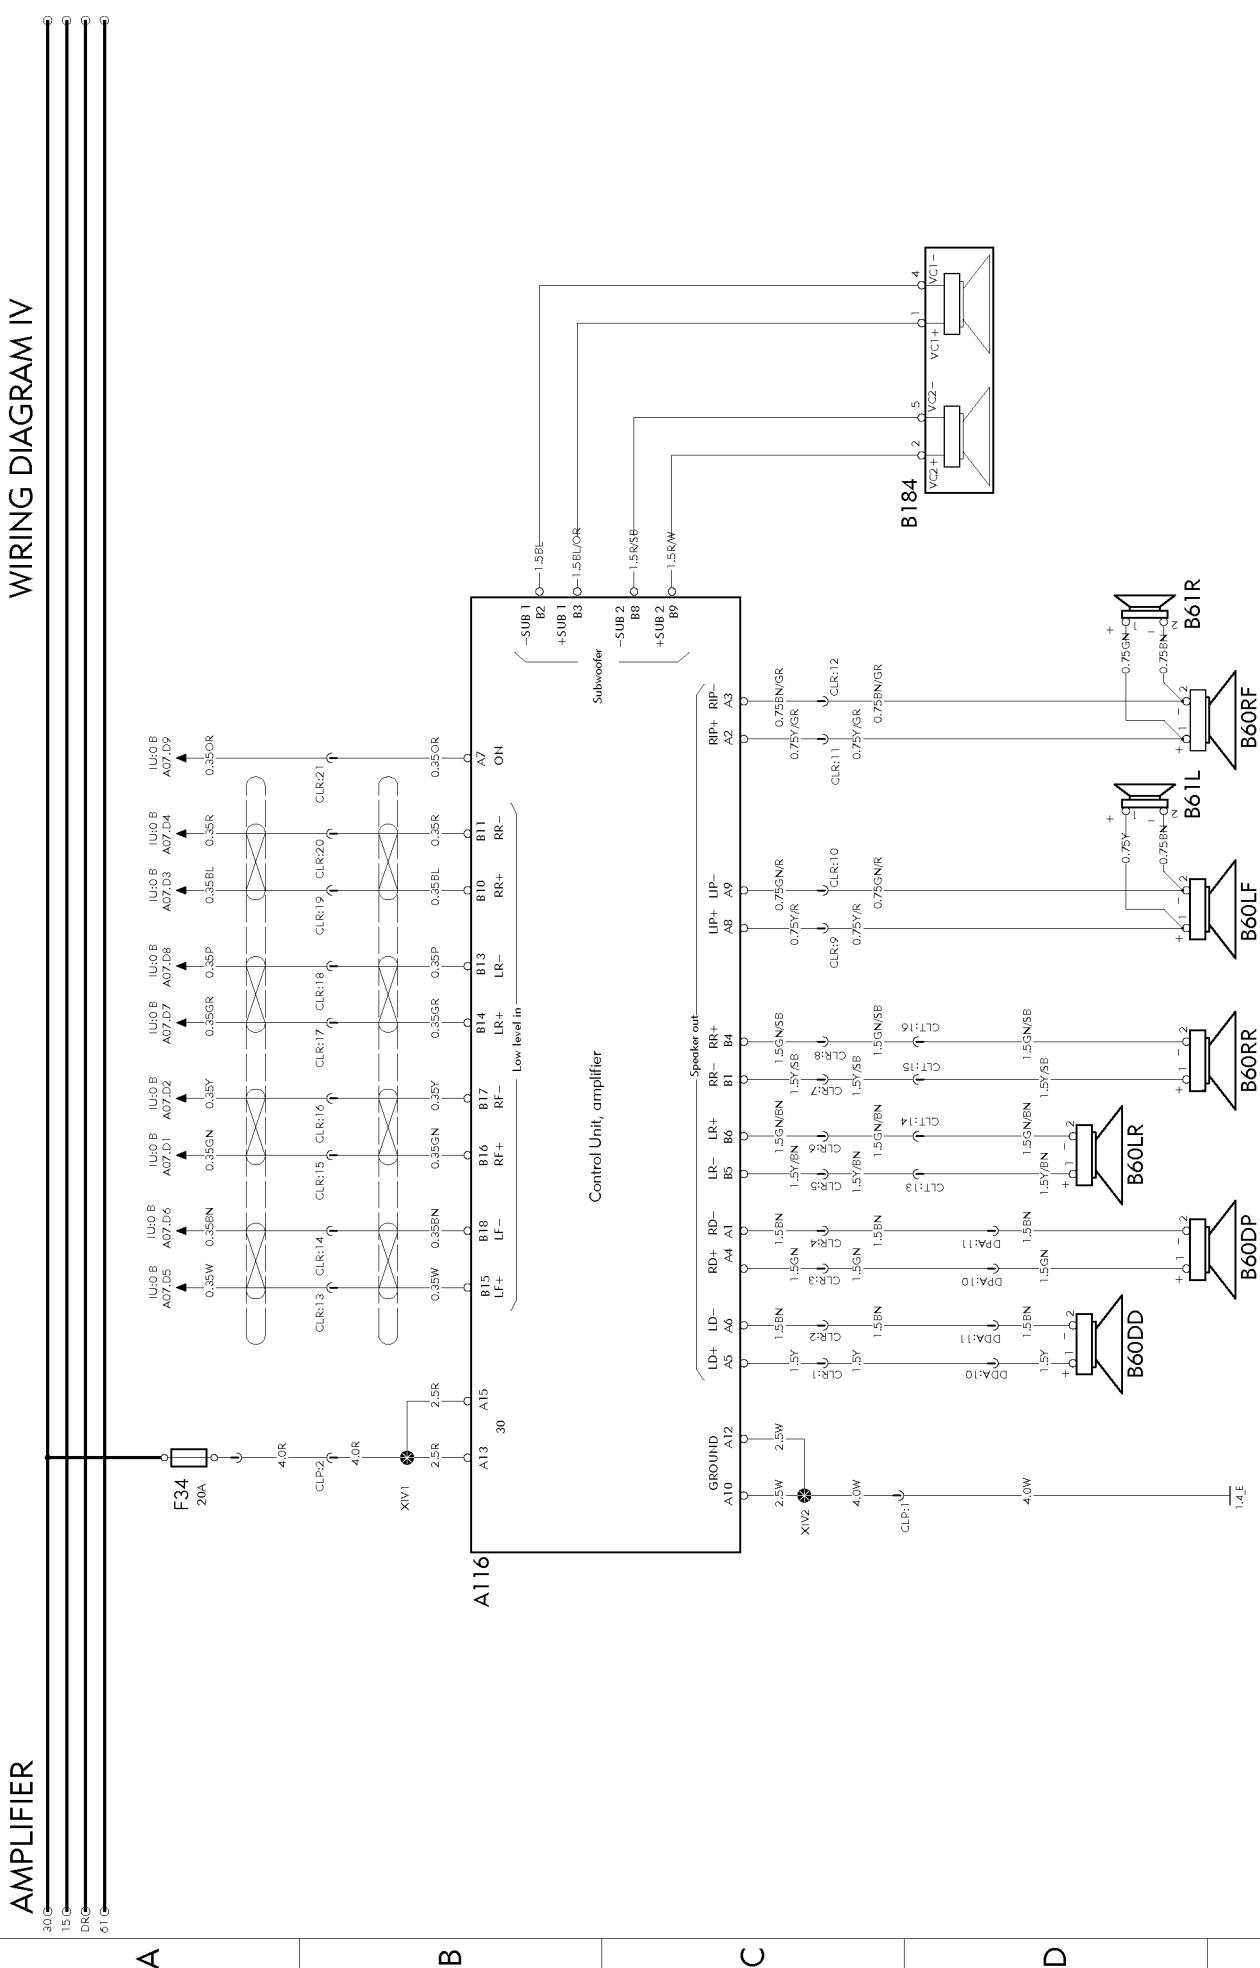


INTEGRATED TELEPHONE, GSM


1


2


८५

WIRING DIAGRAM IX

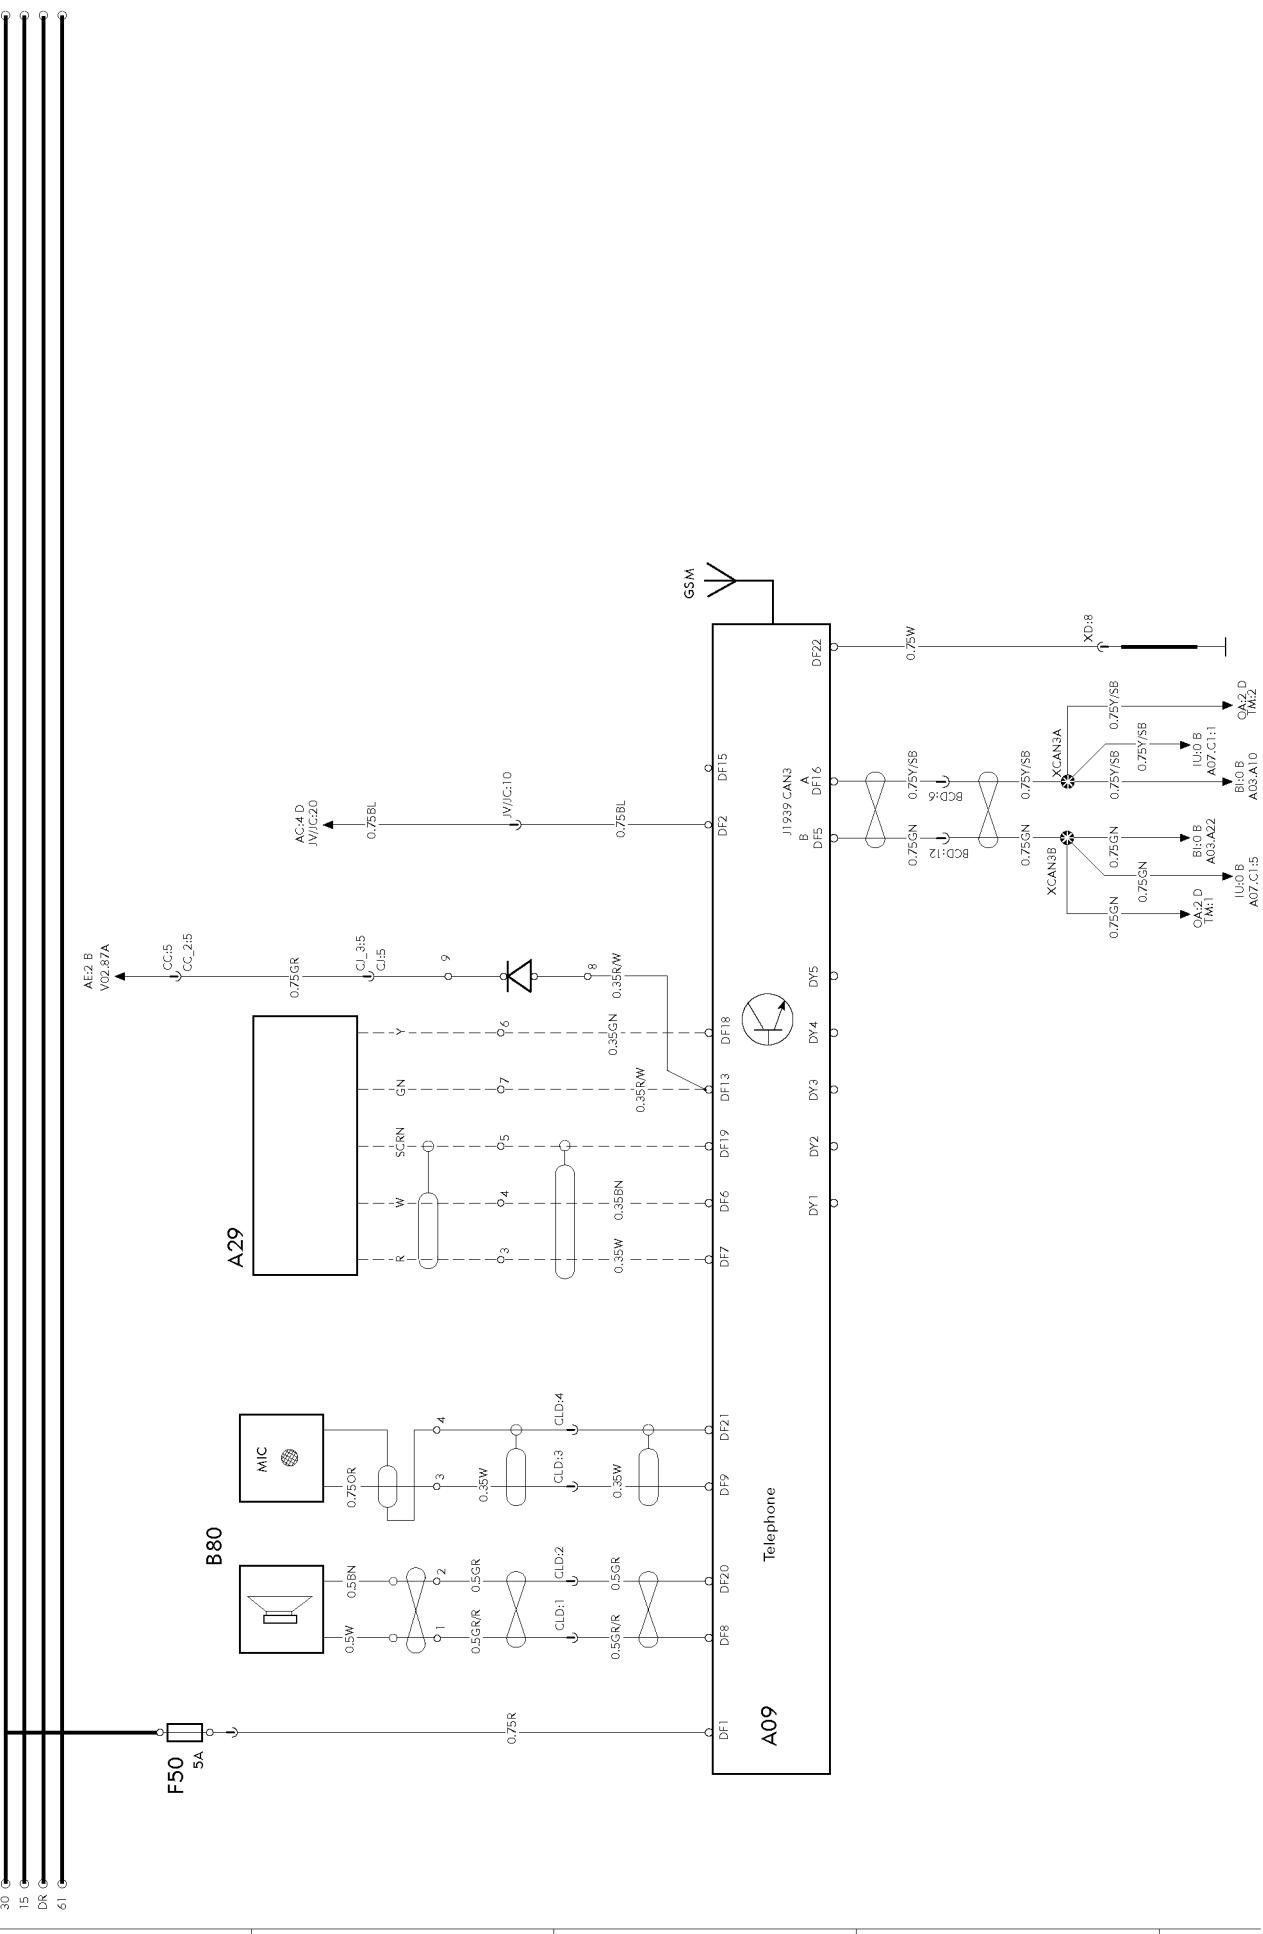

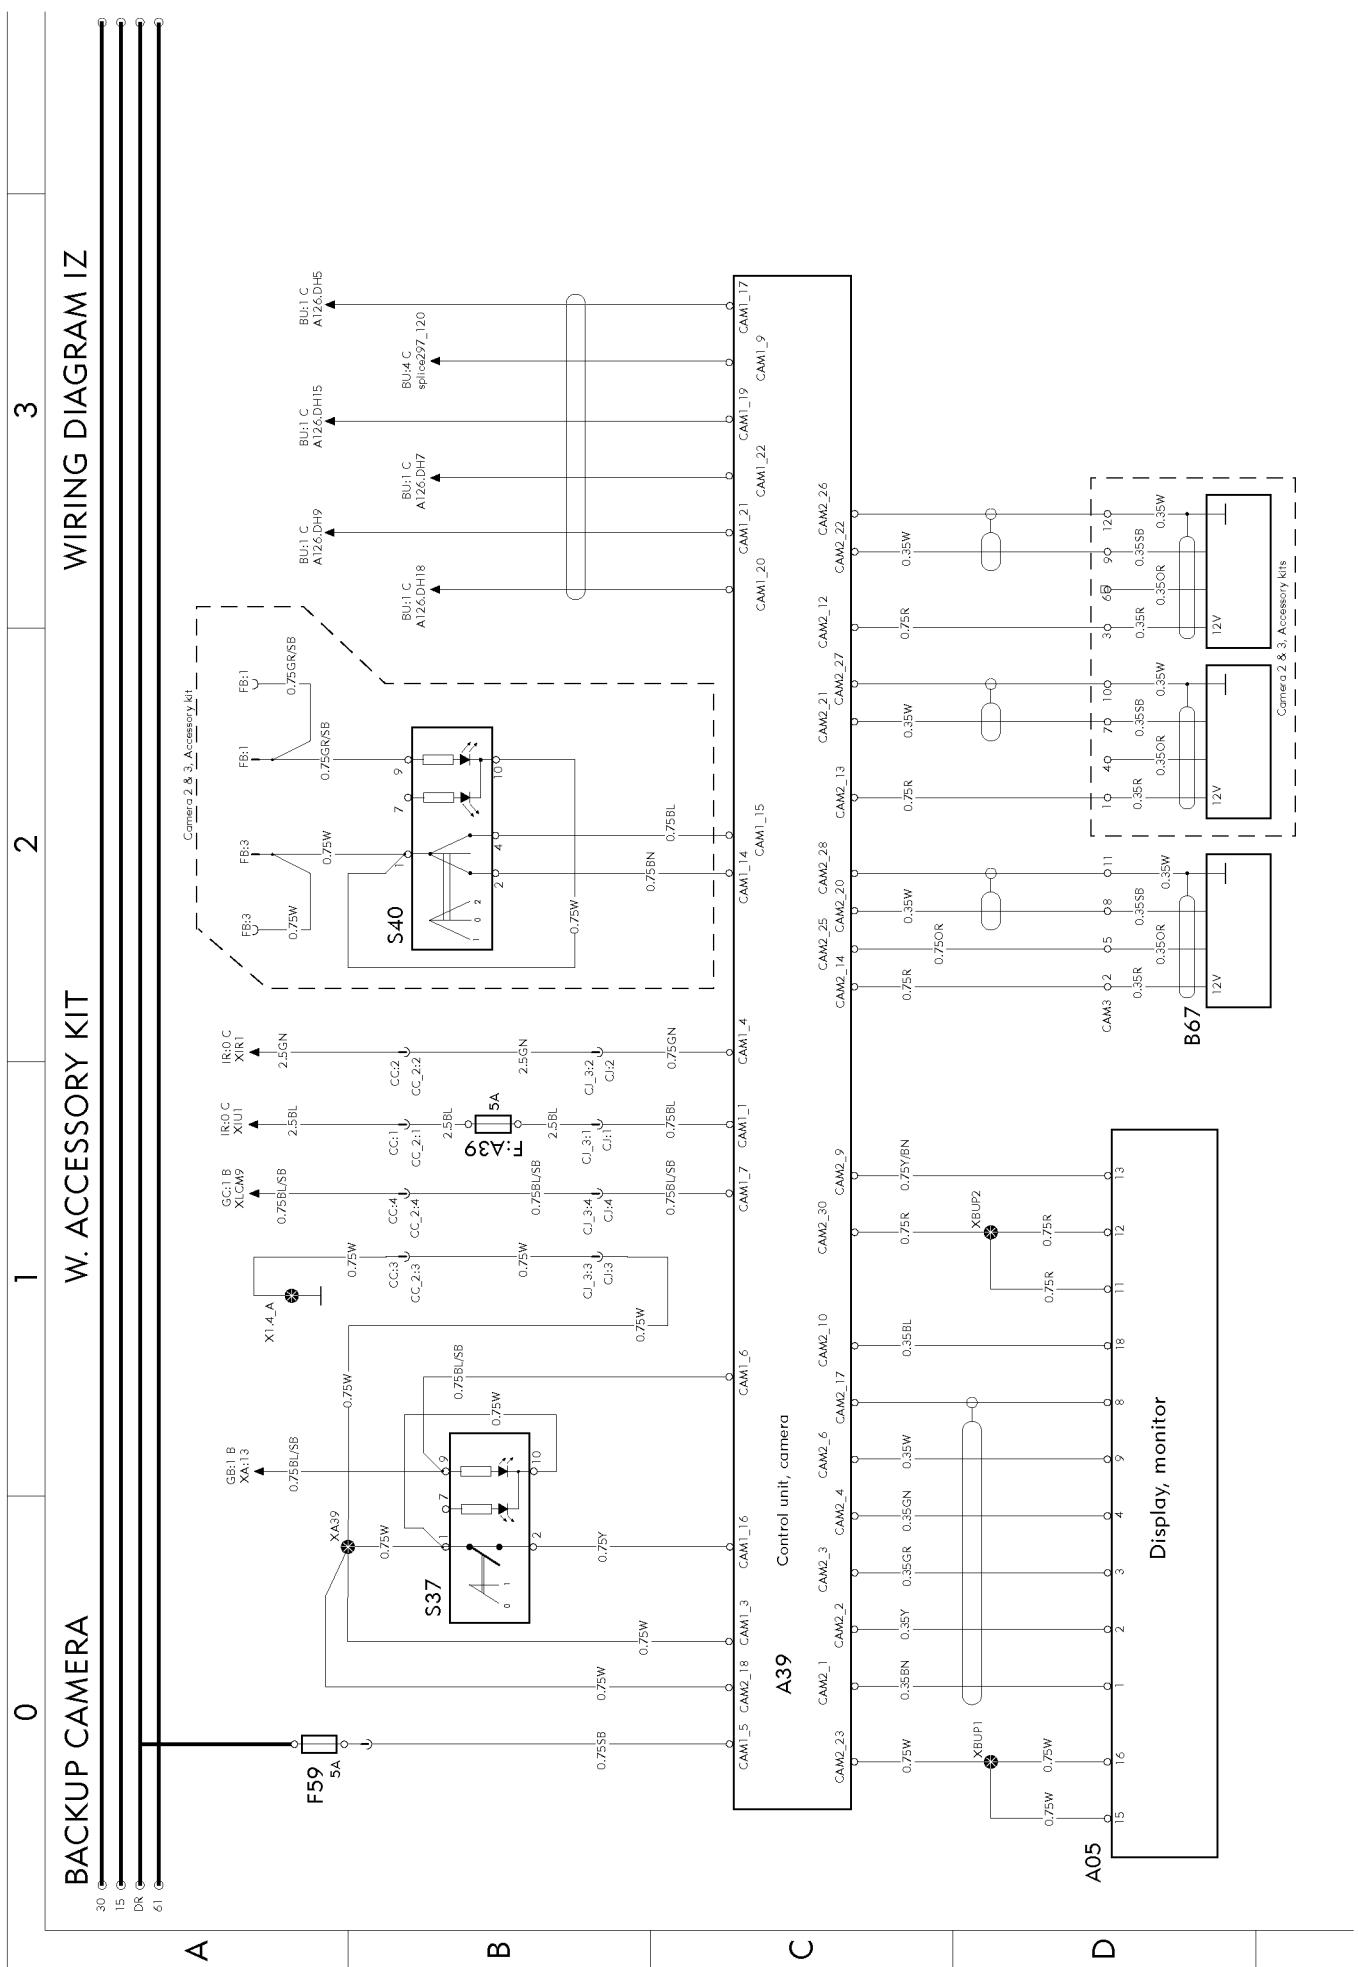

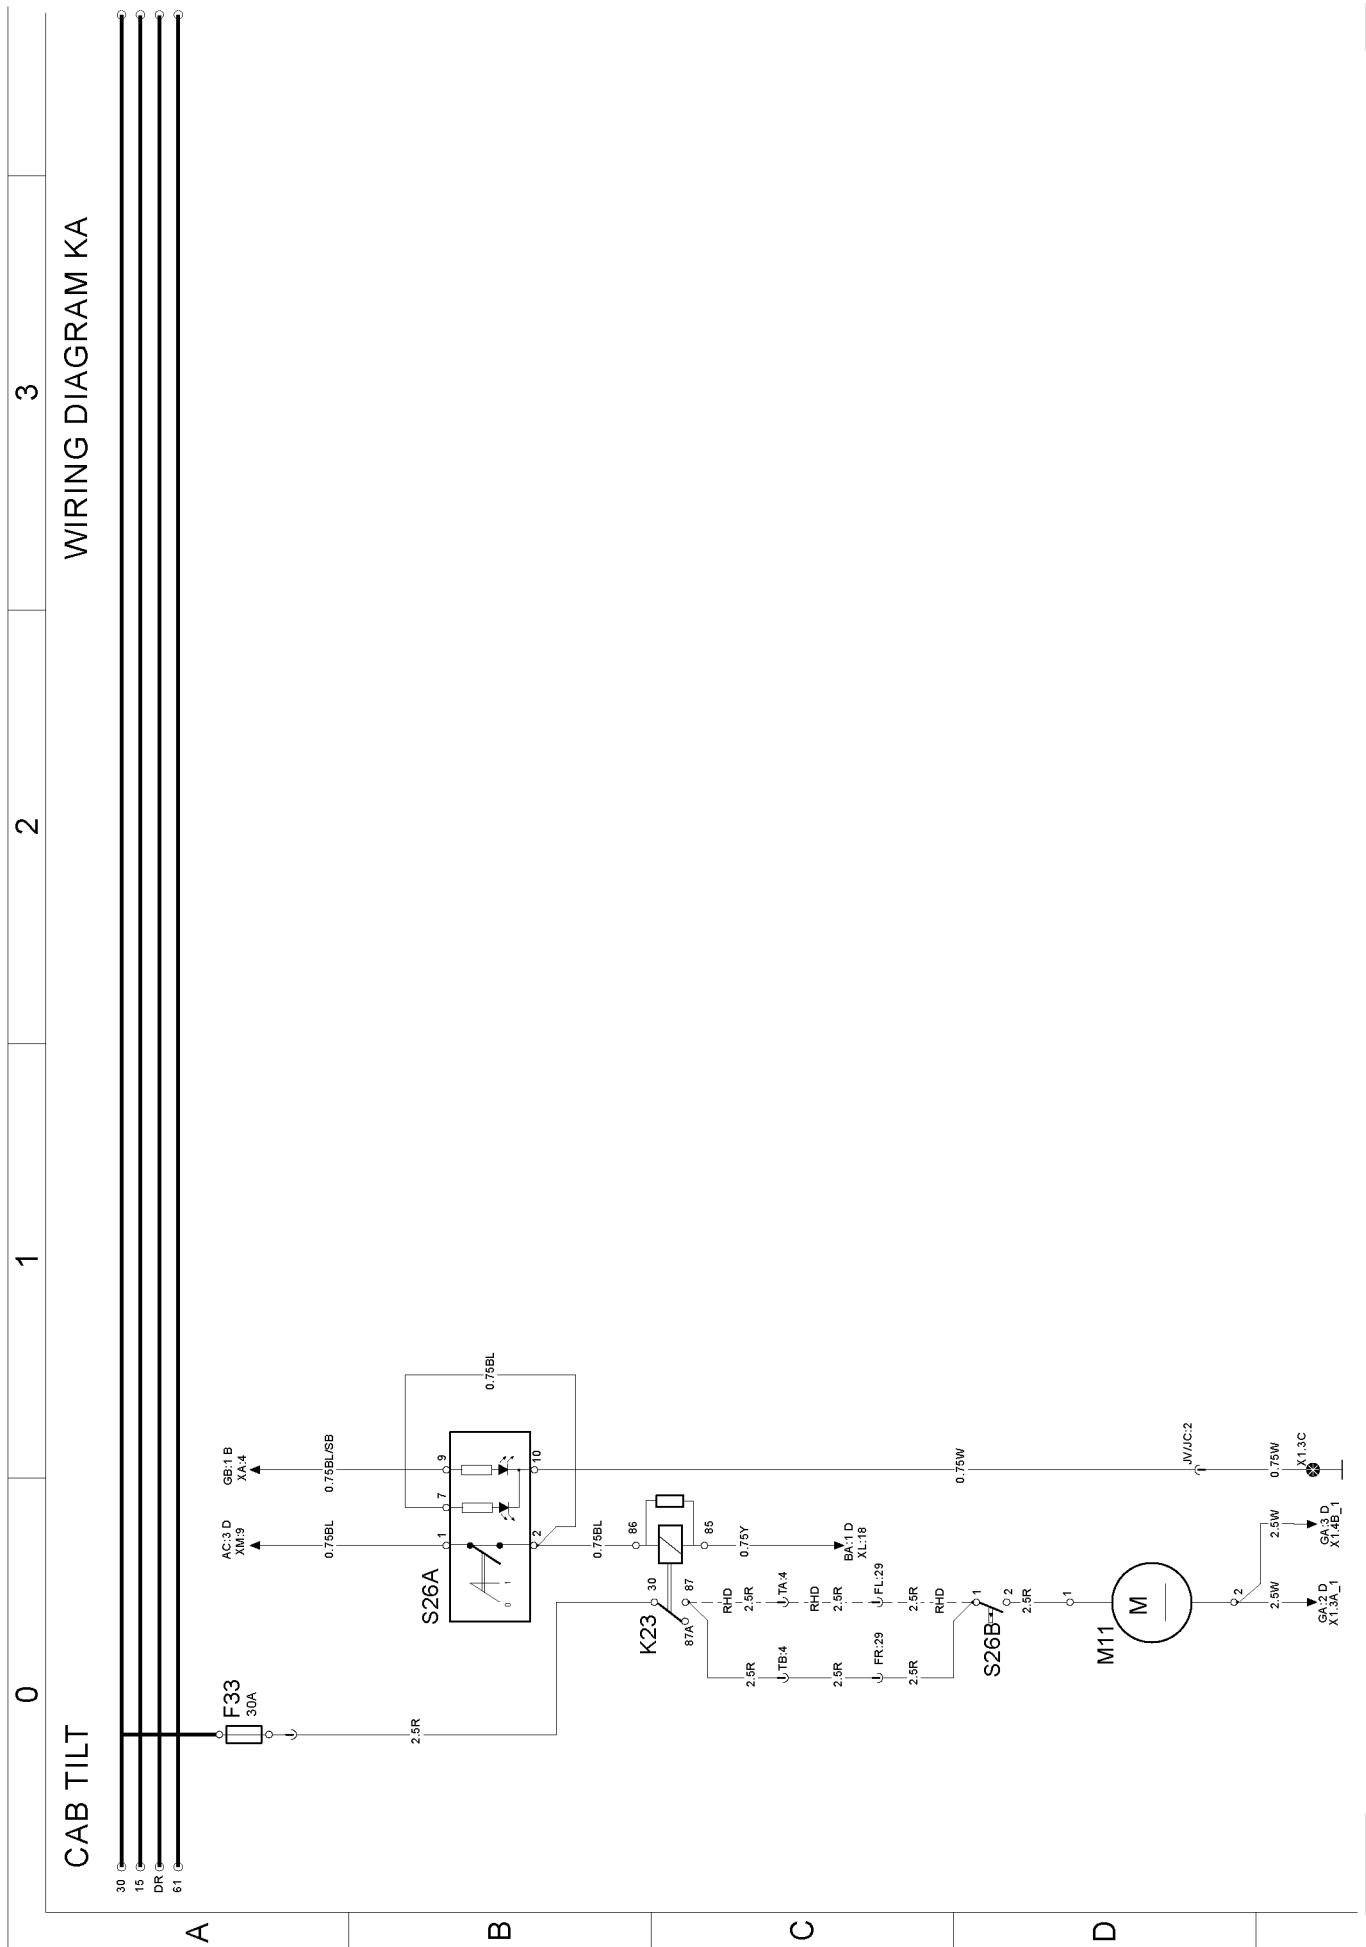

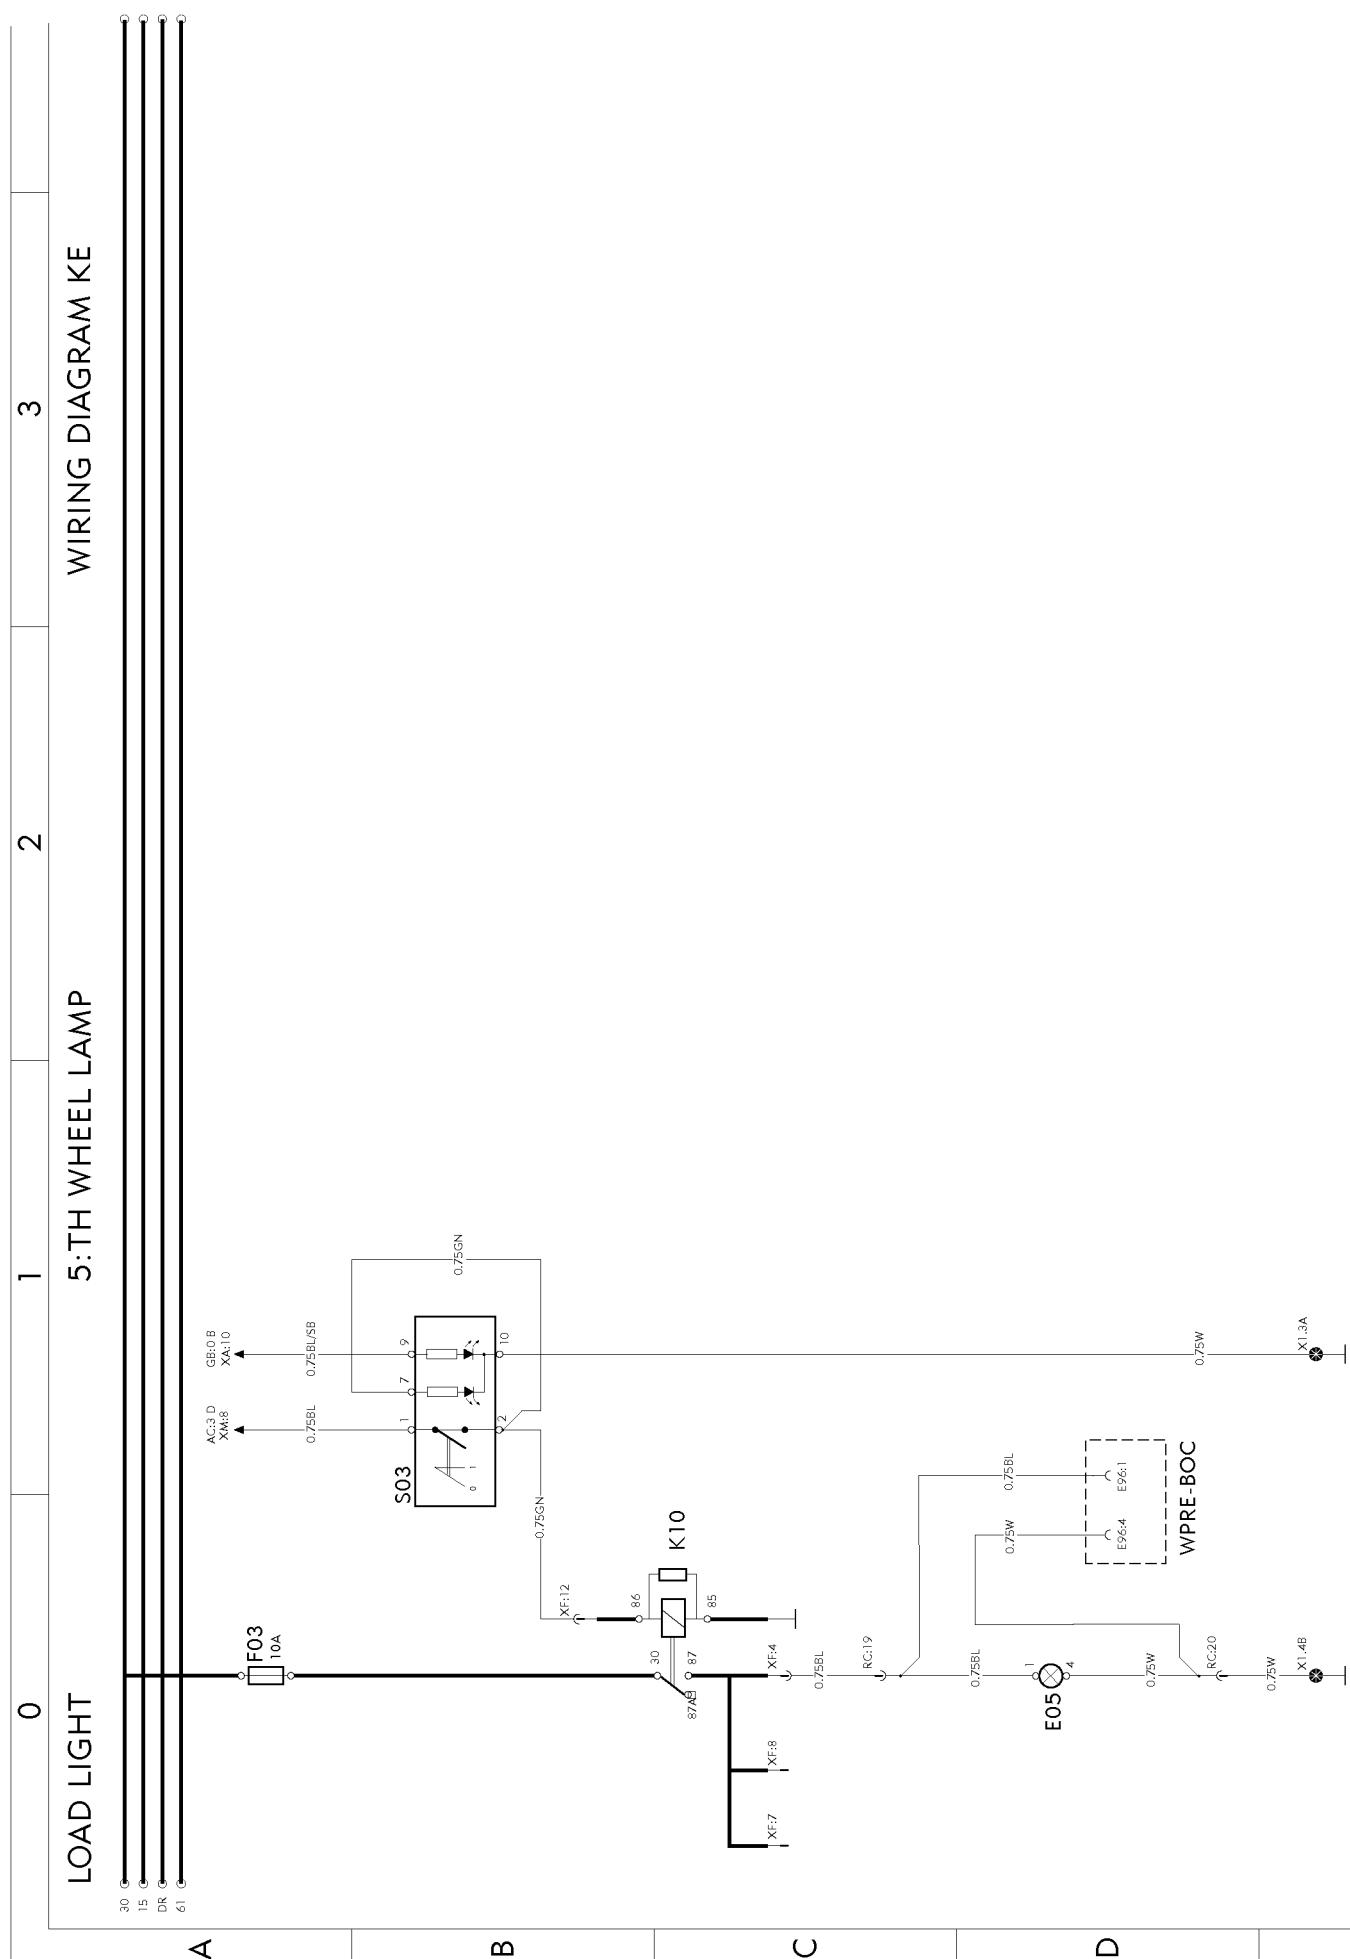

LIGHT SIGN

3

WIRING DIAGRAM K1

2

1

0

A

B

C


D


B


C

D


T3059903

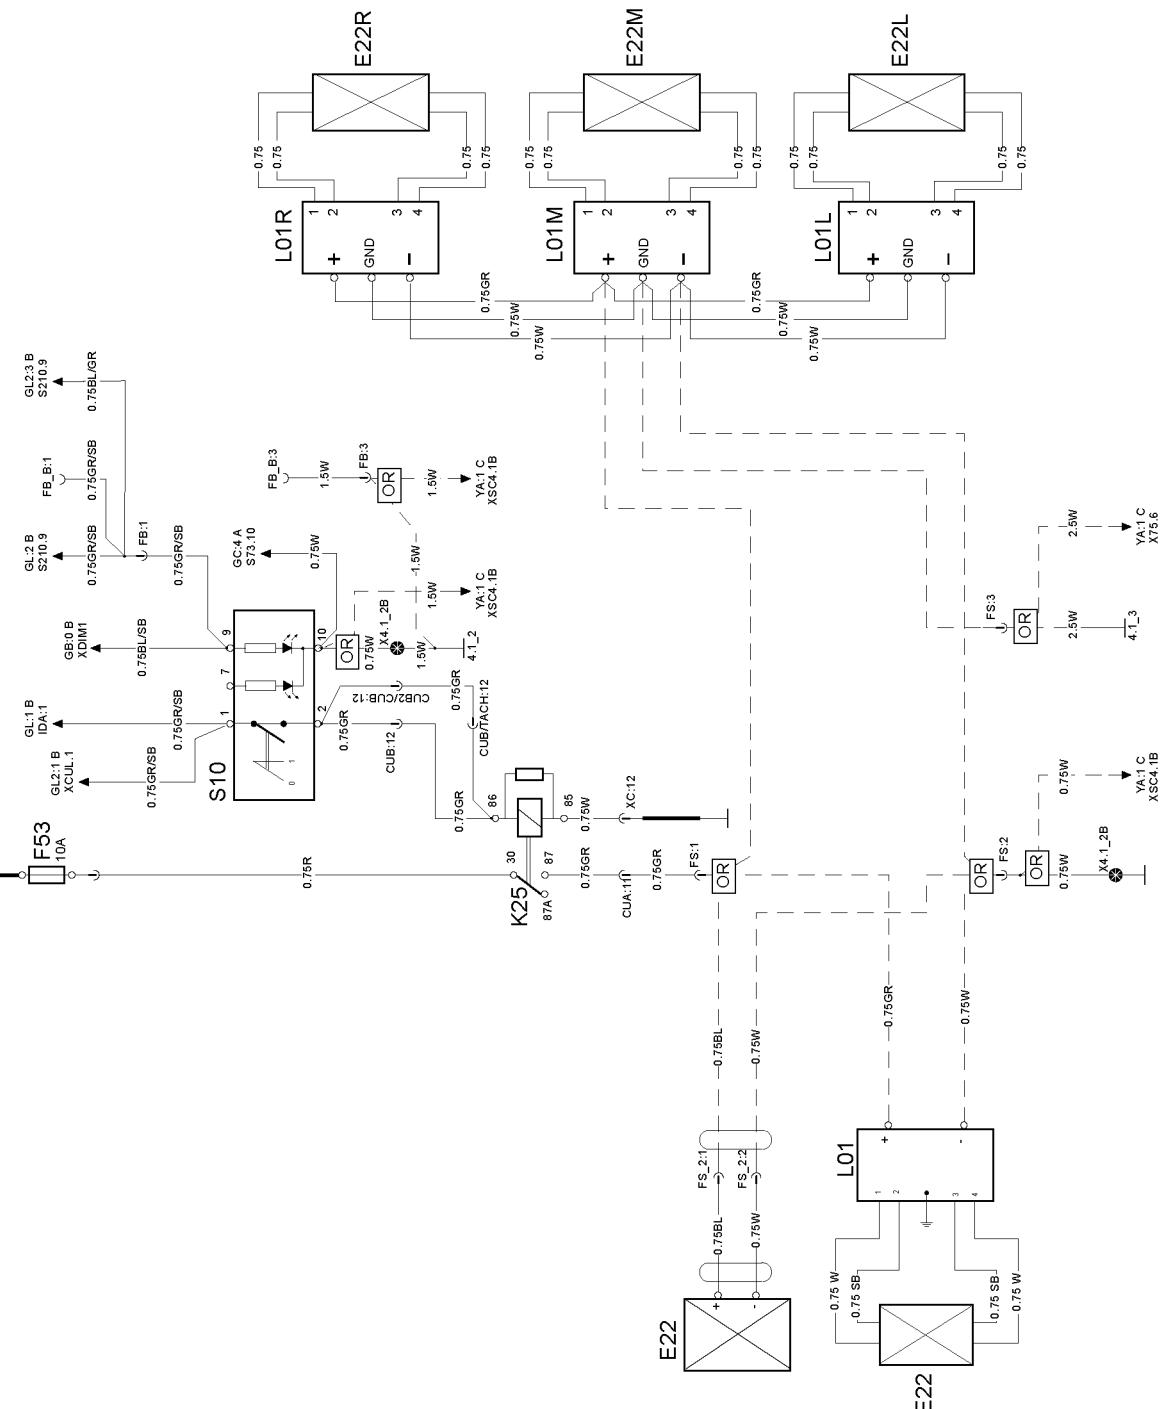

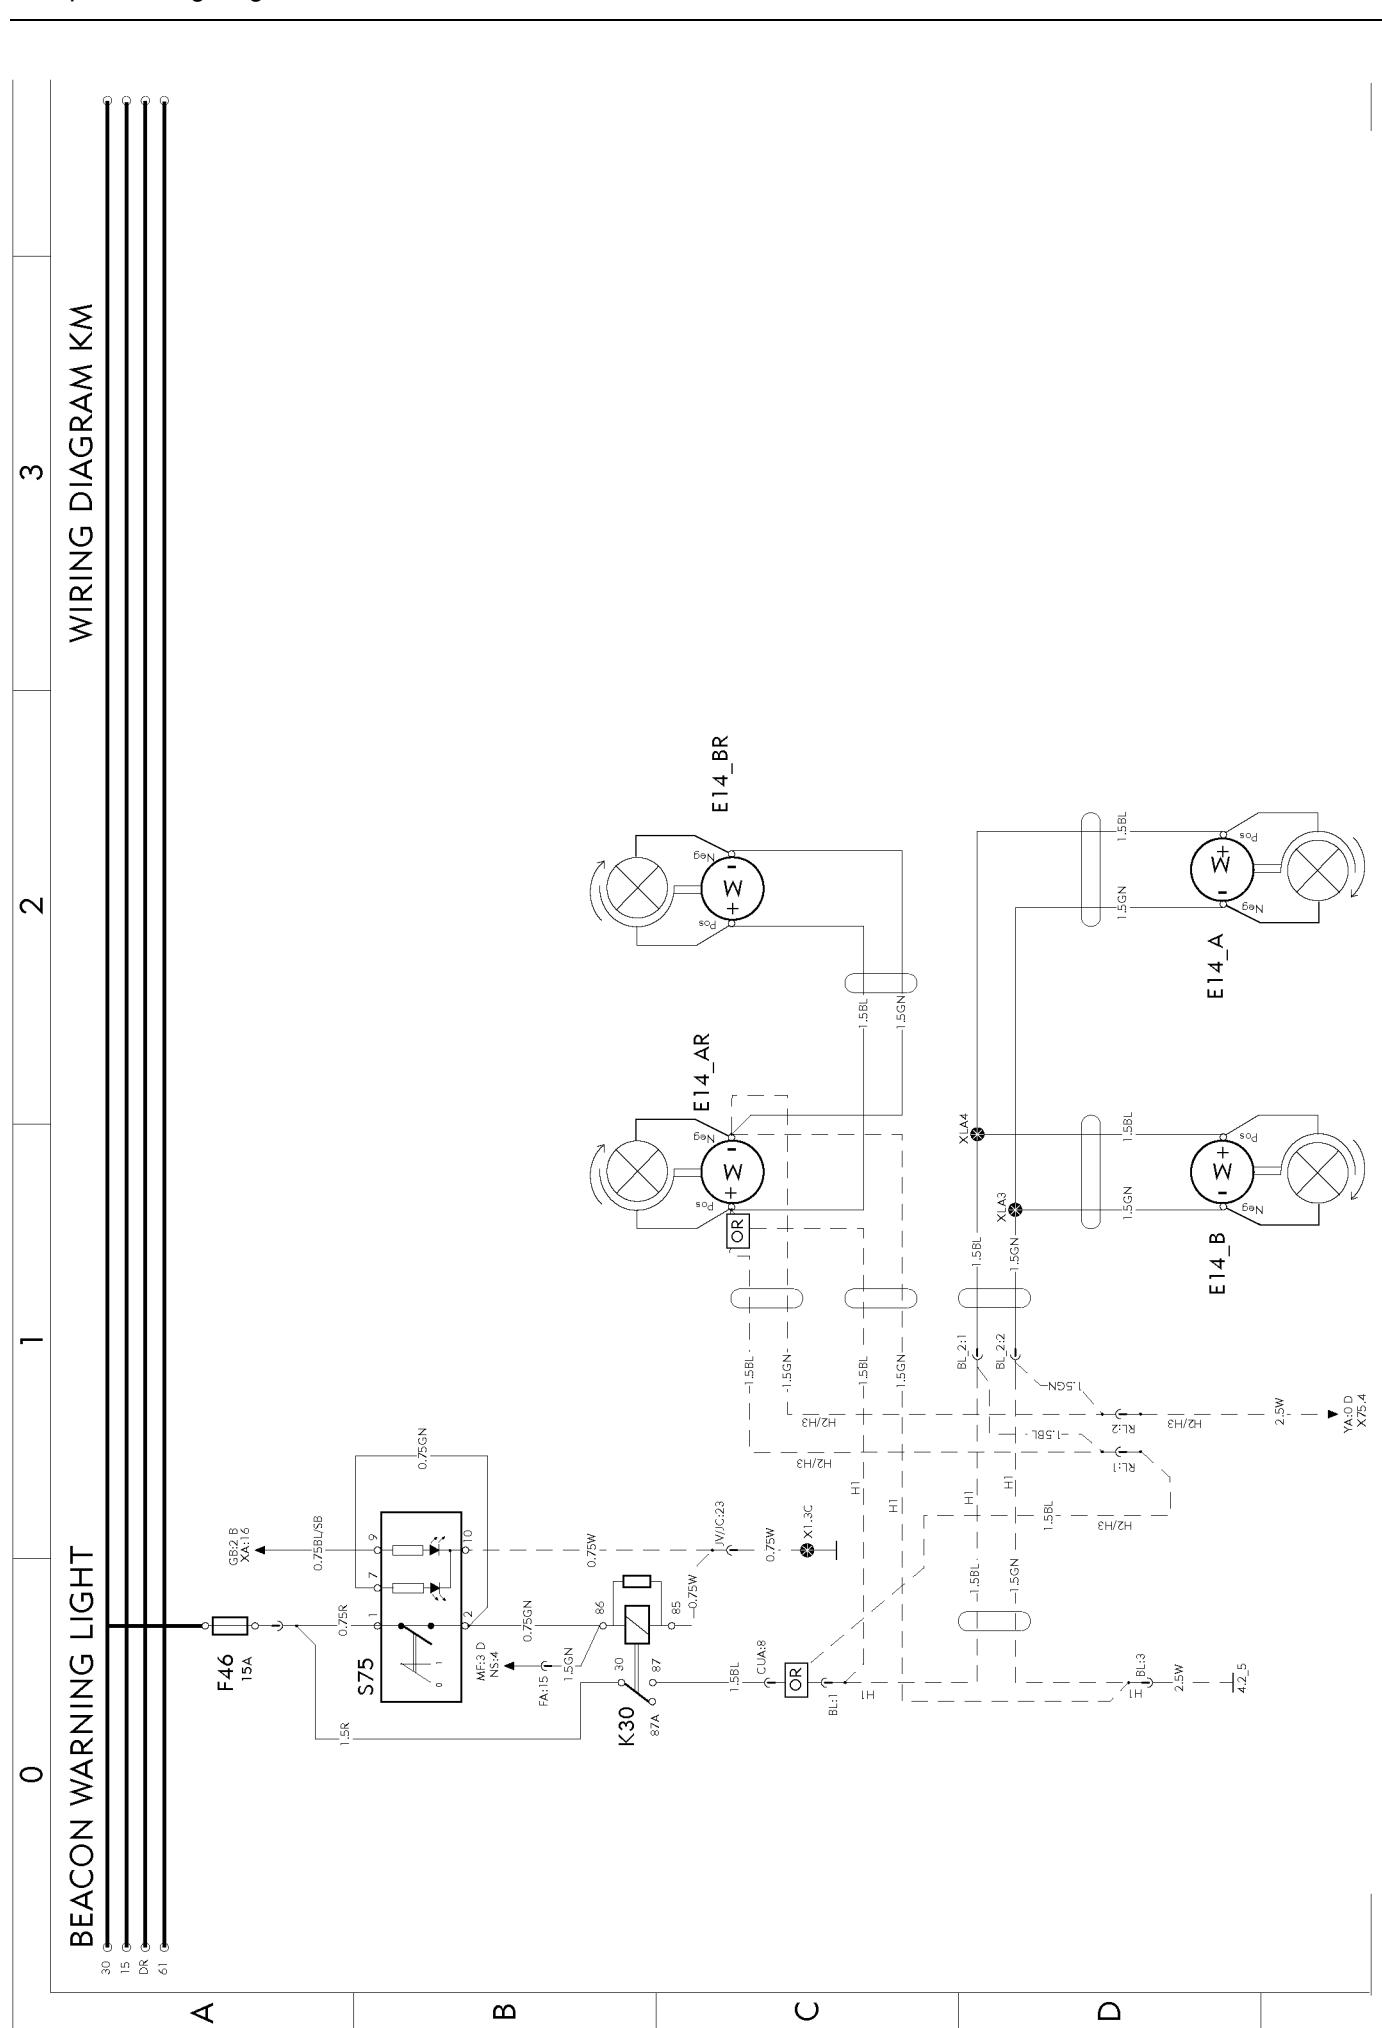

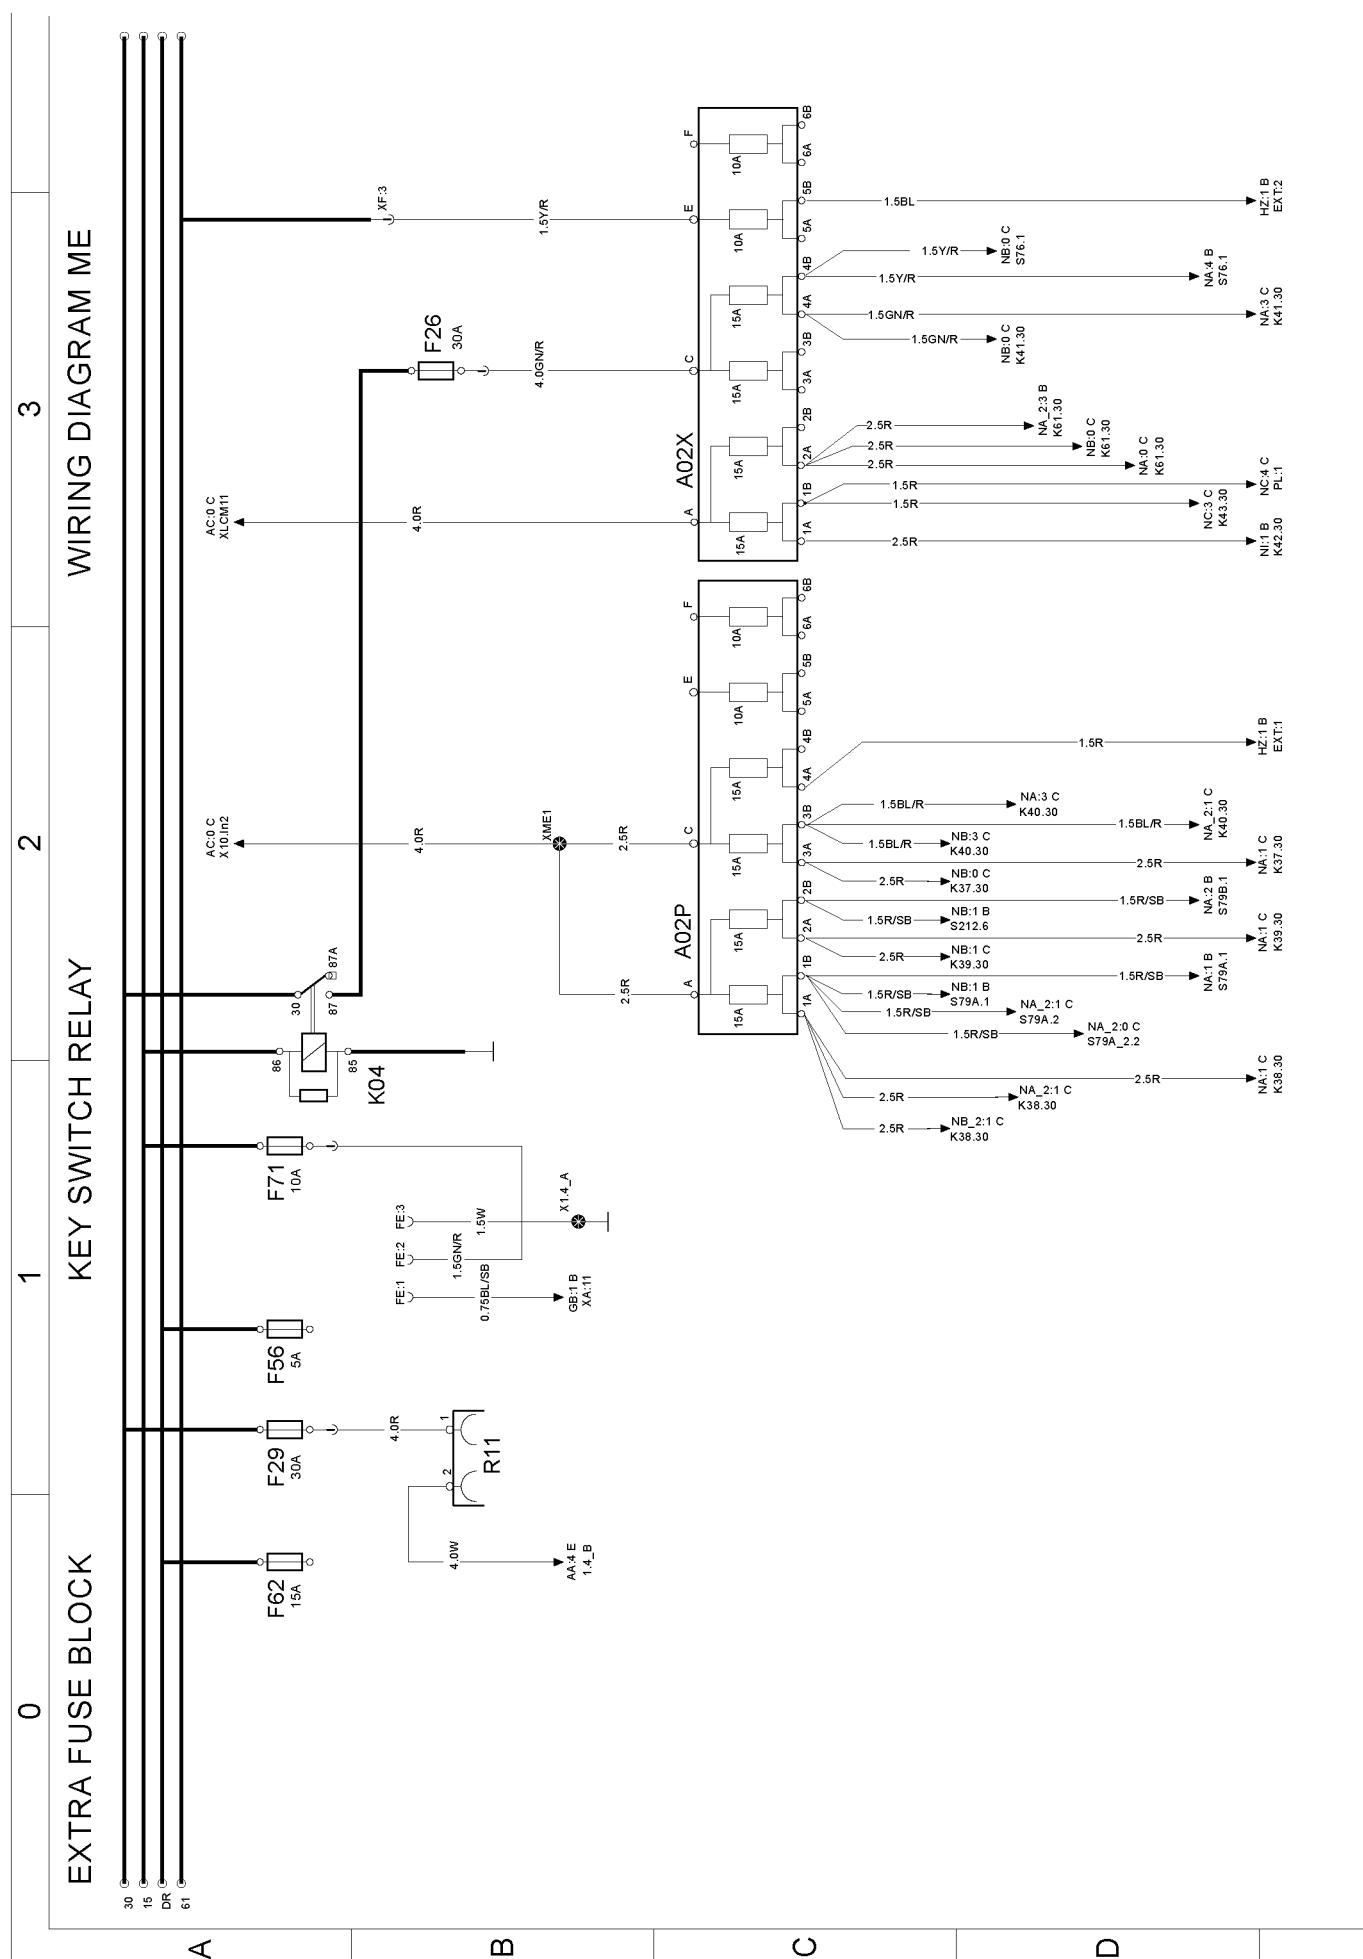

0	1	2	3
EXTRA FUSE BLOCK			

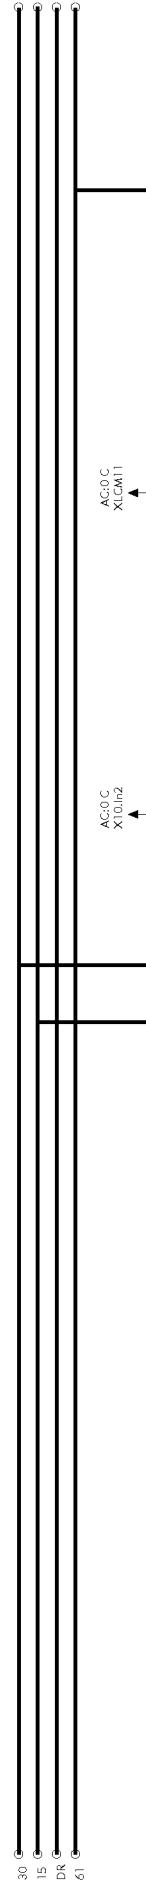


A

K04


AC-0 C
XLCM11

X01n2

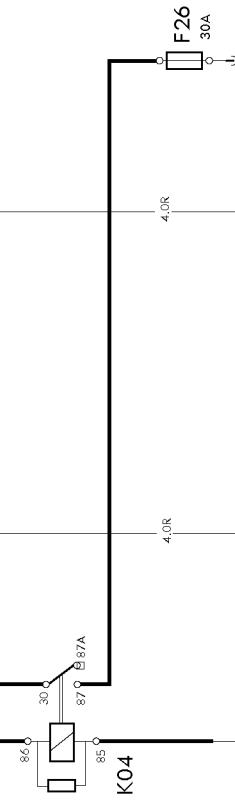


B


SPDUs-S

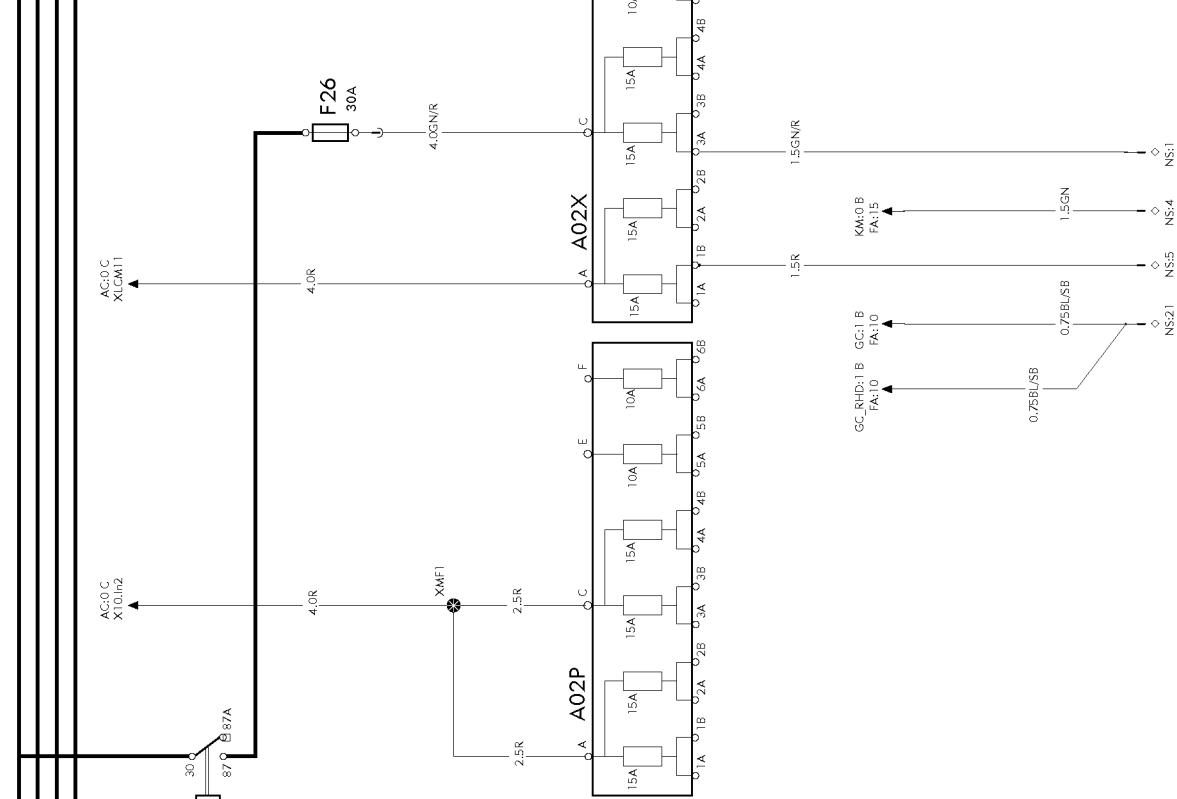


C

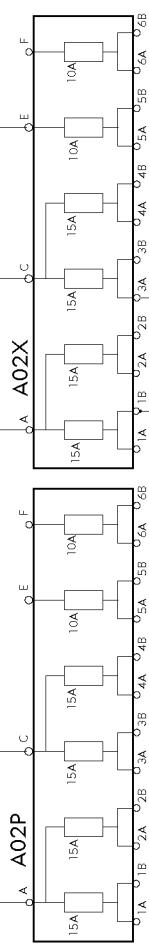



C

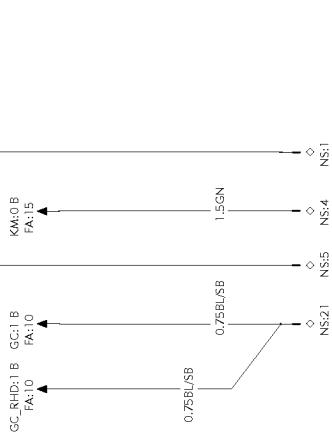



D

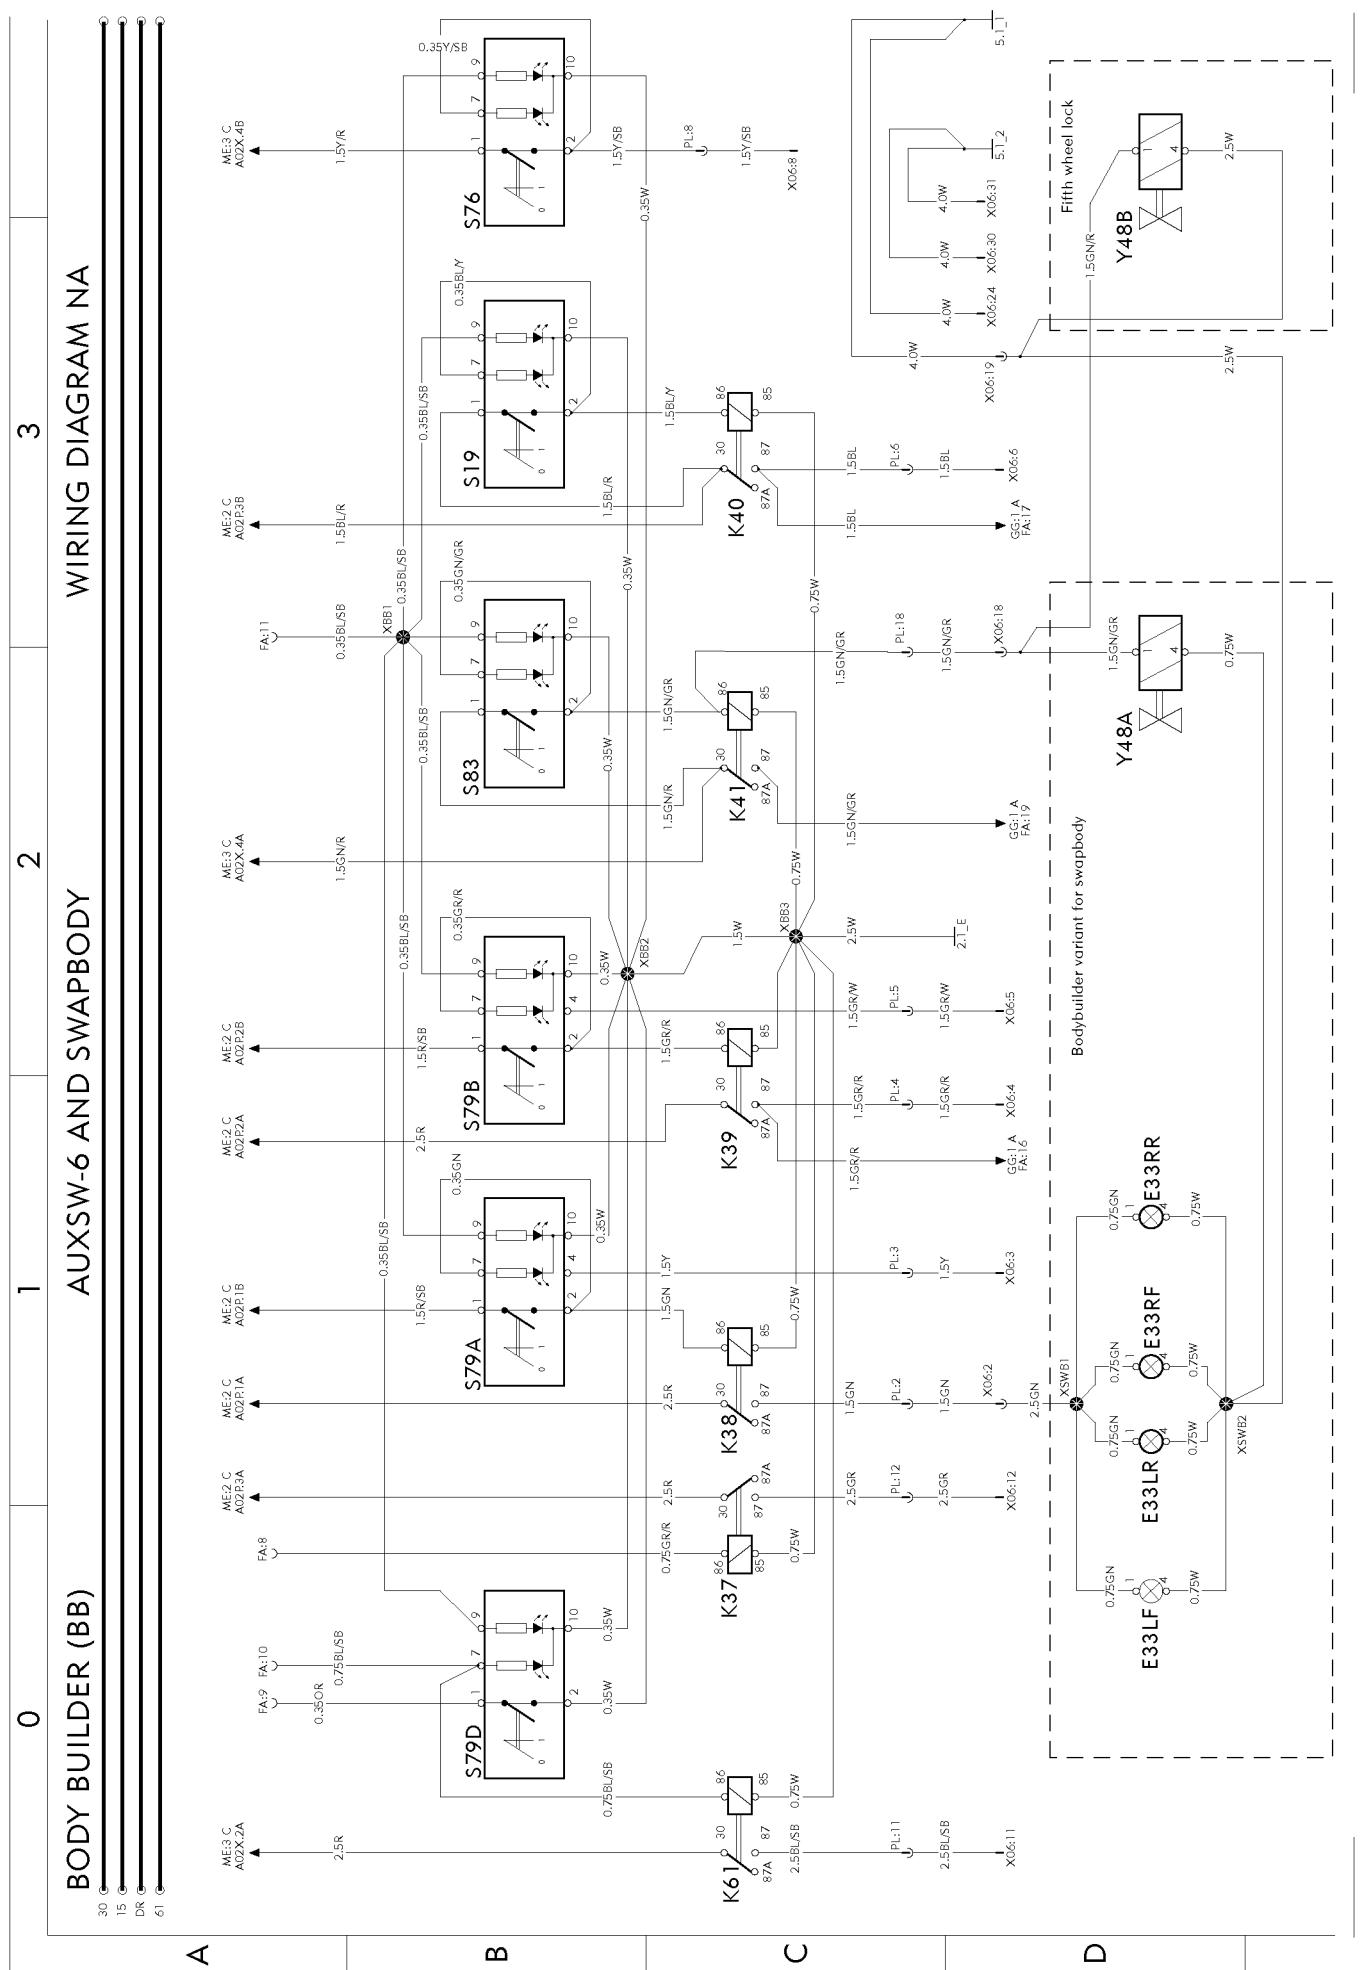

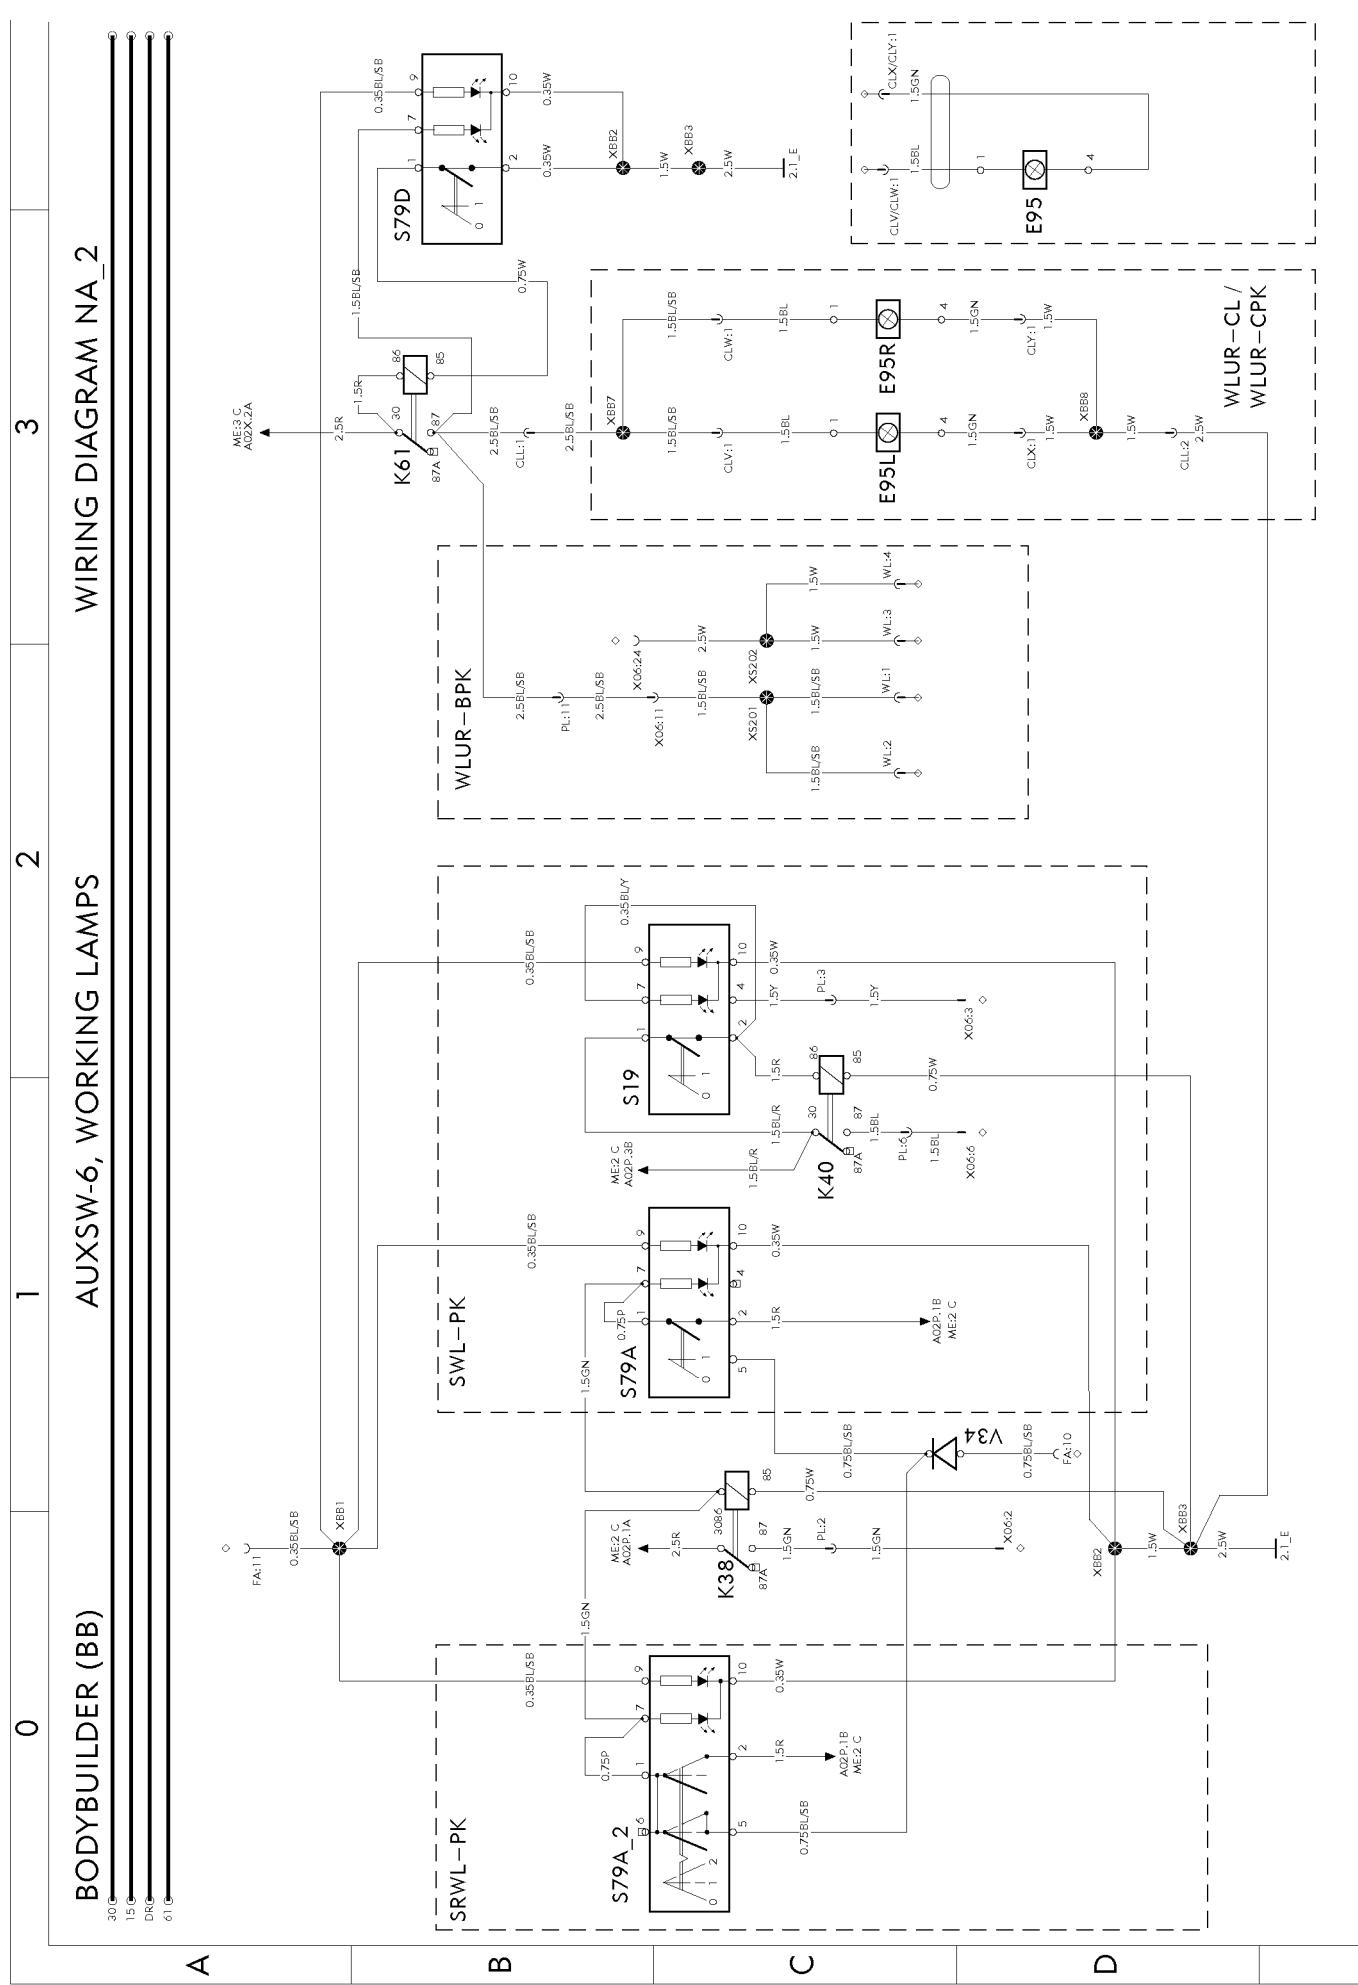

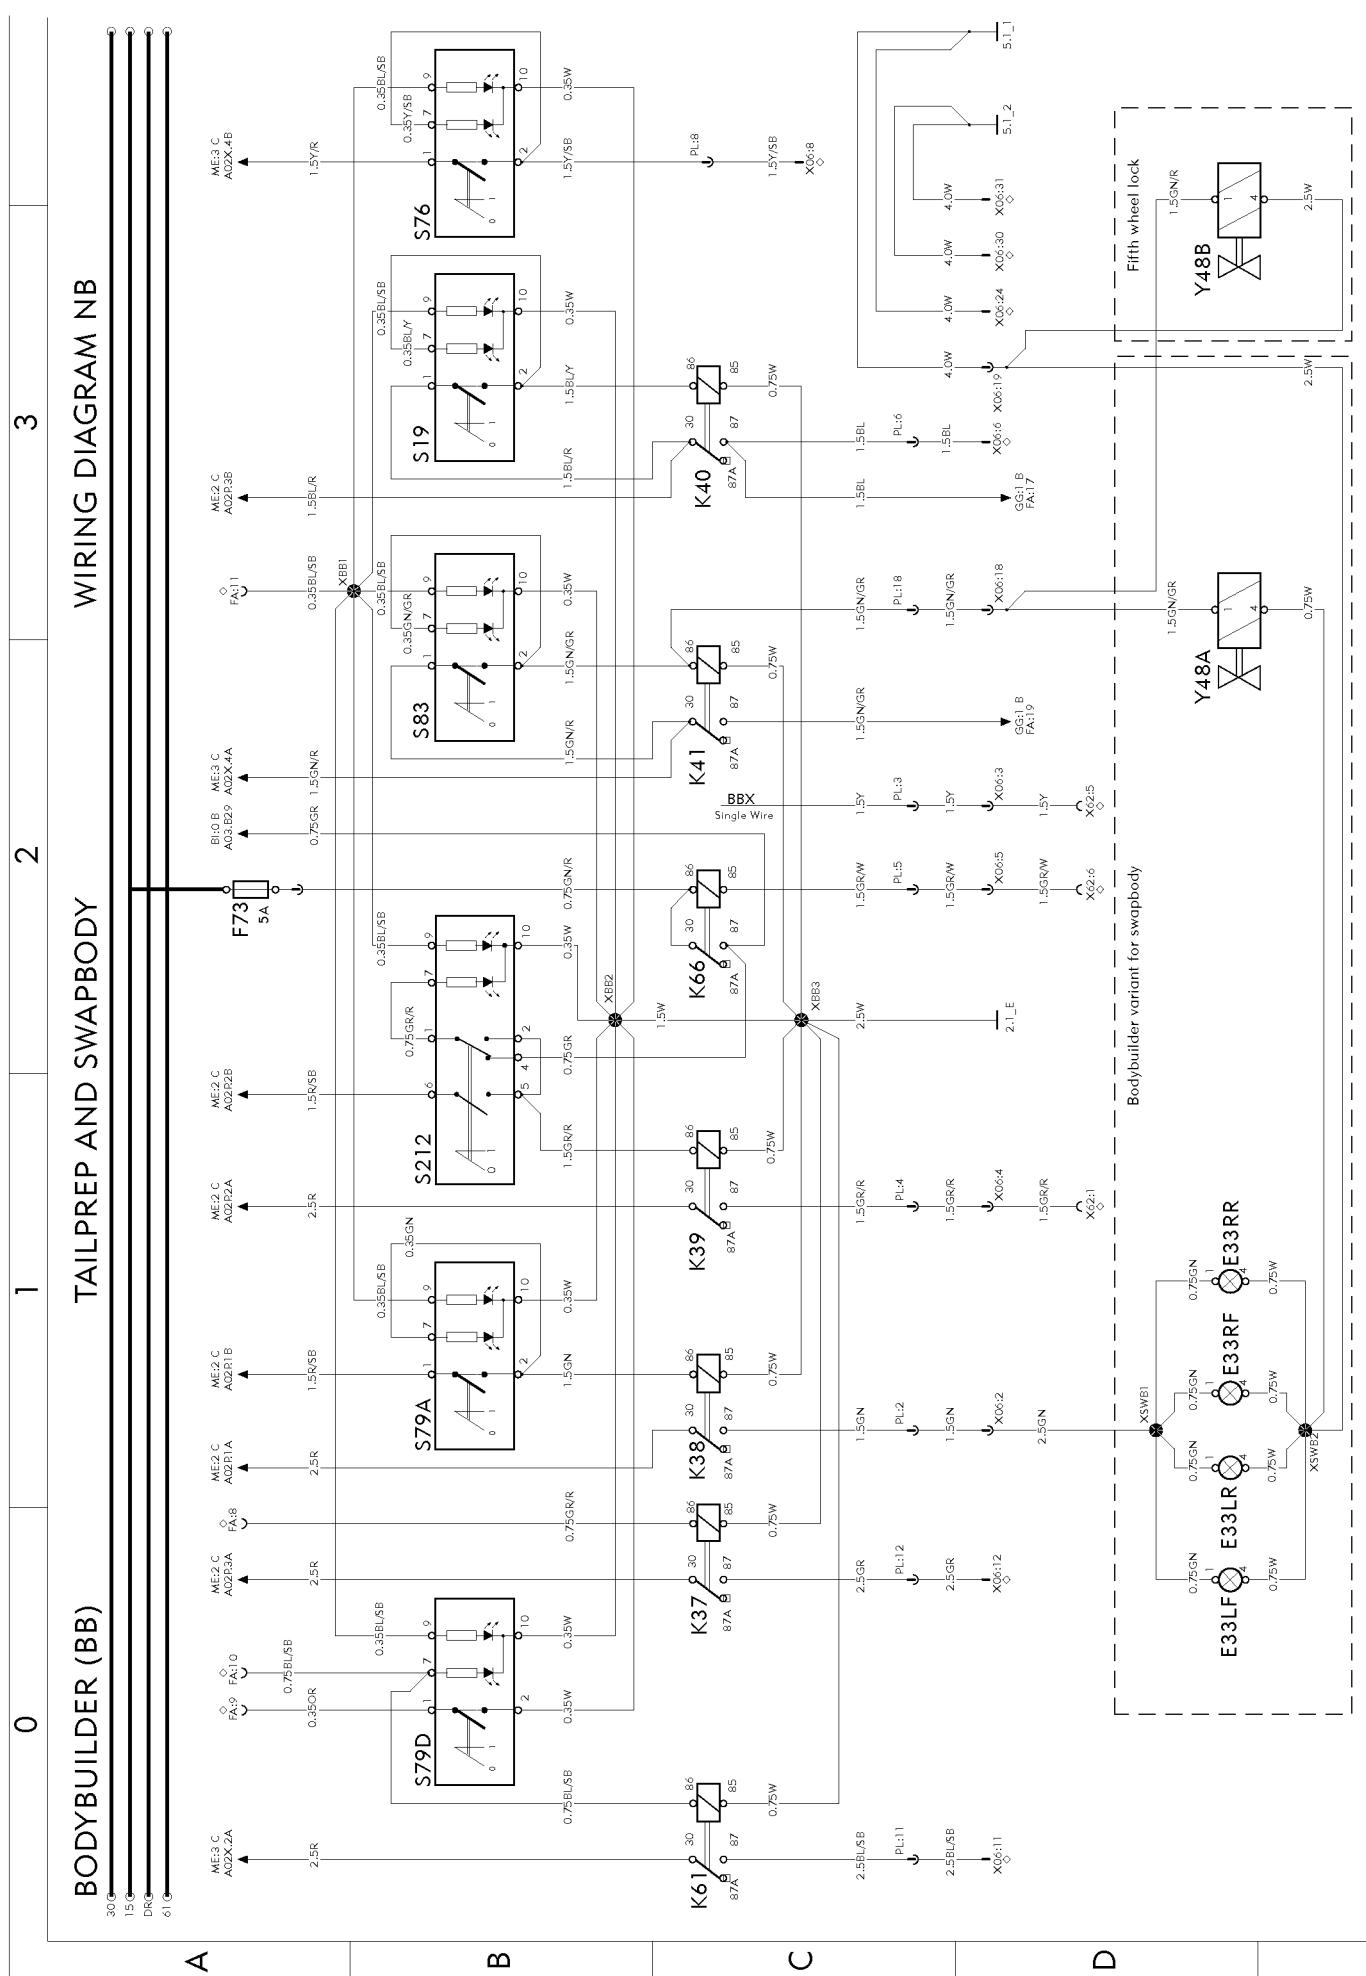

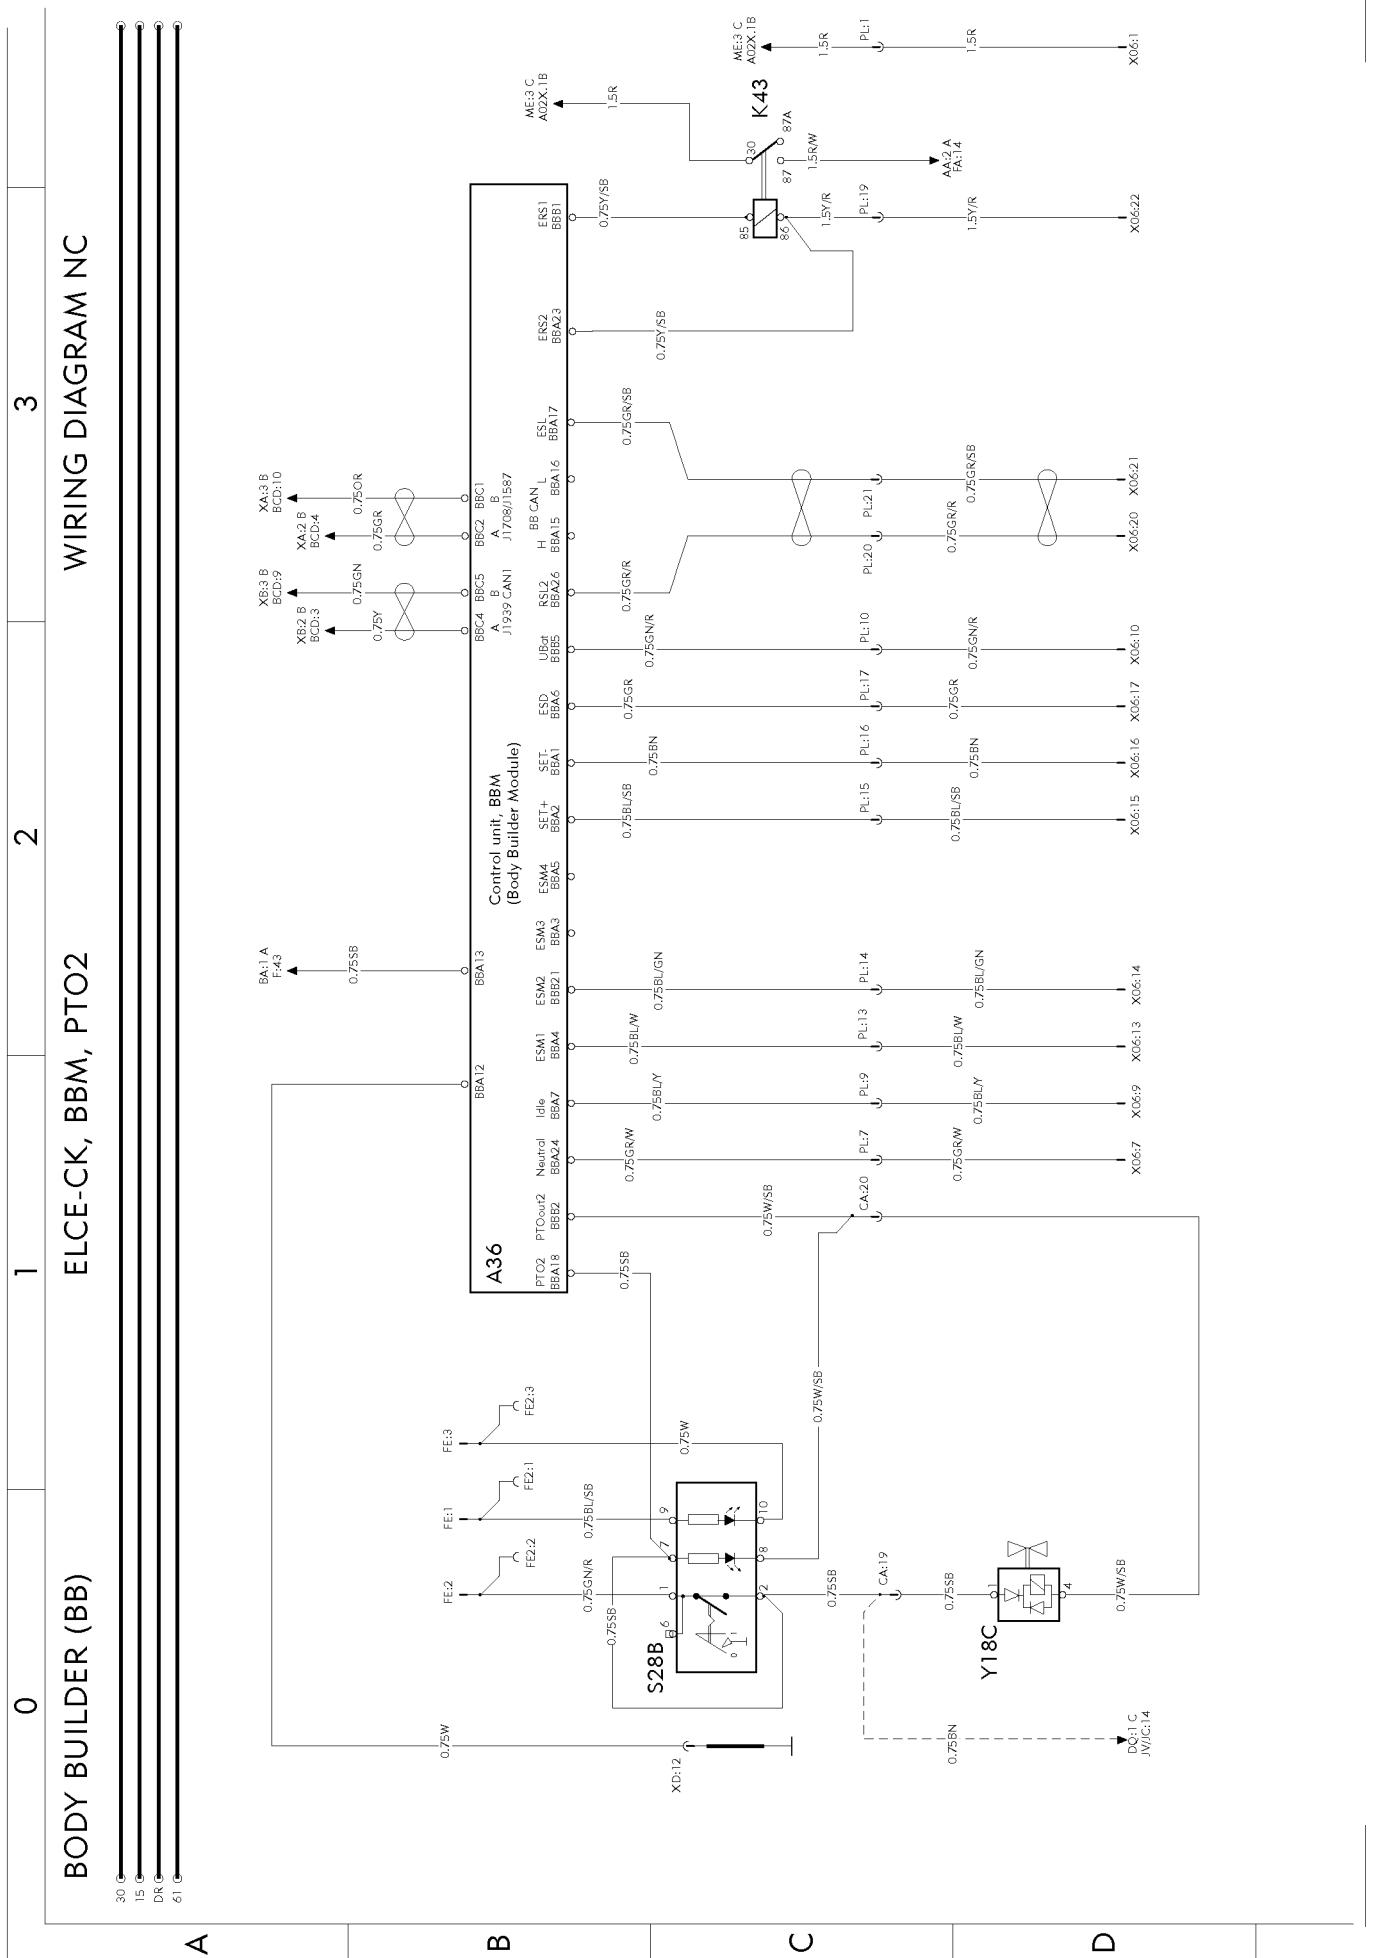

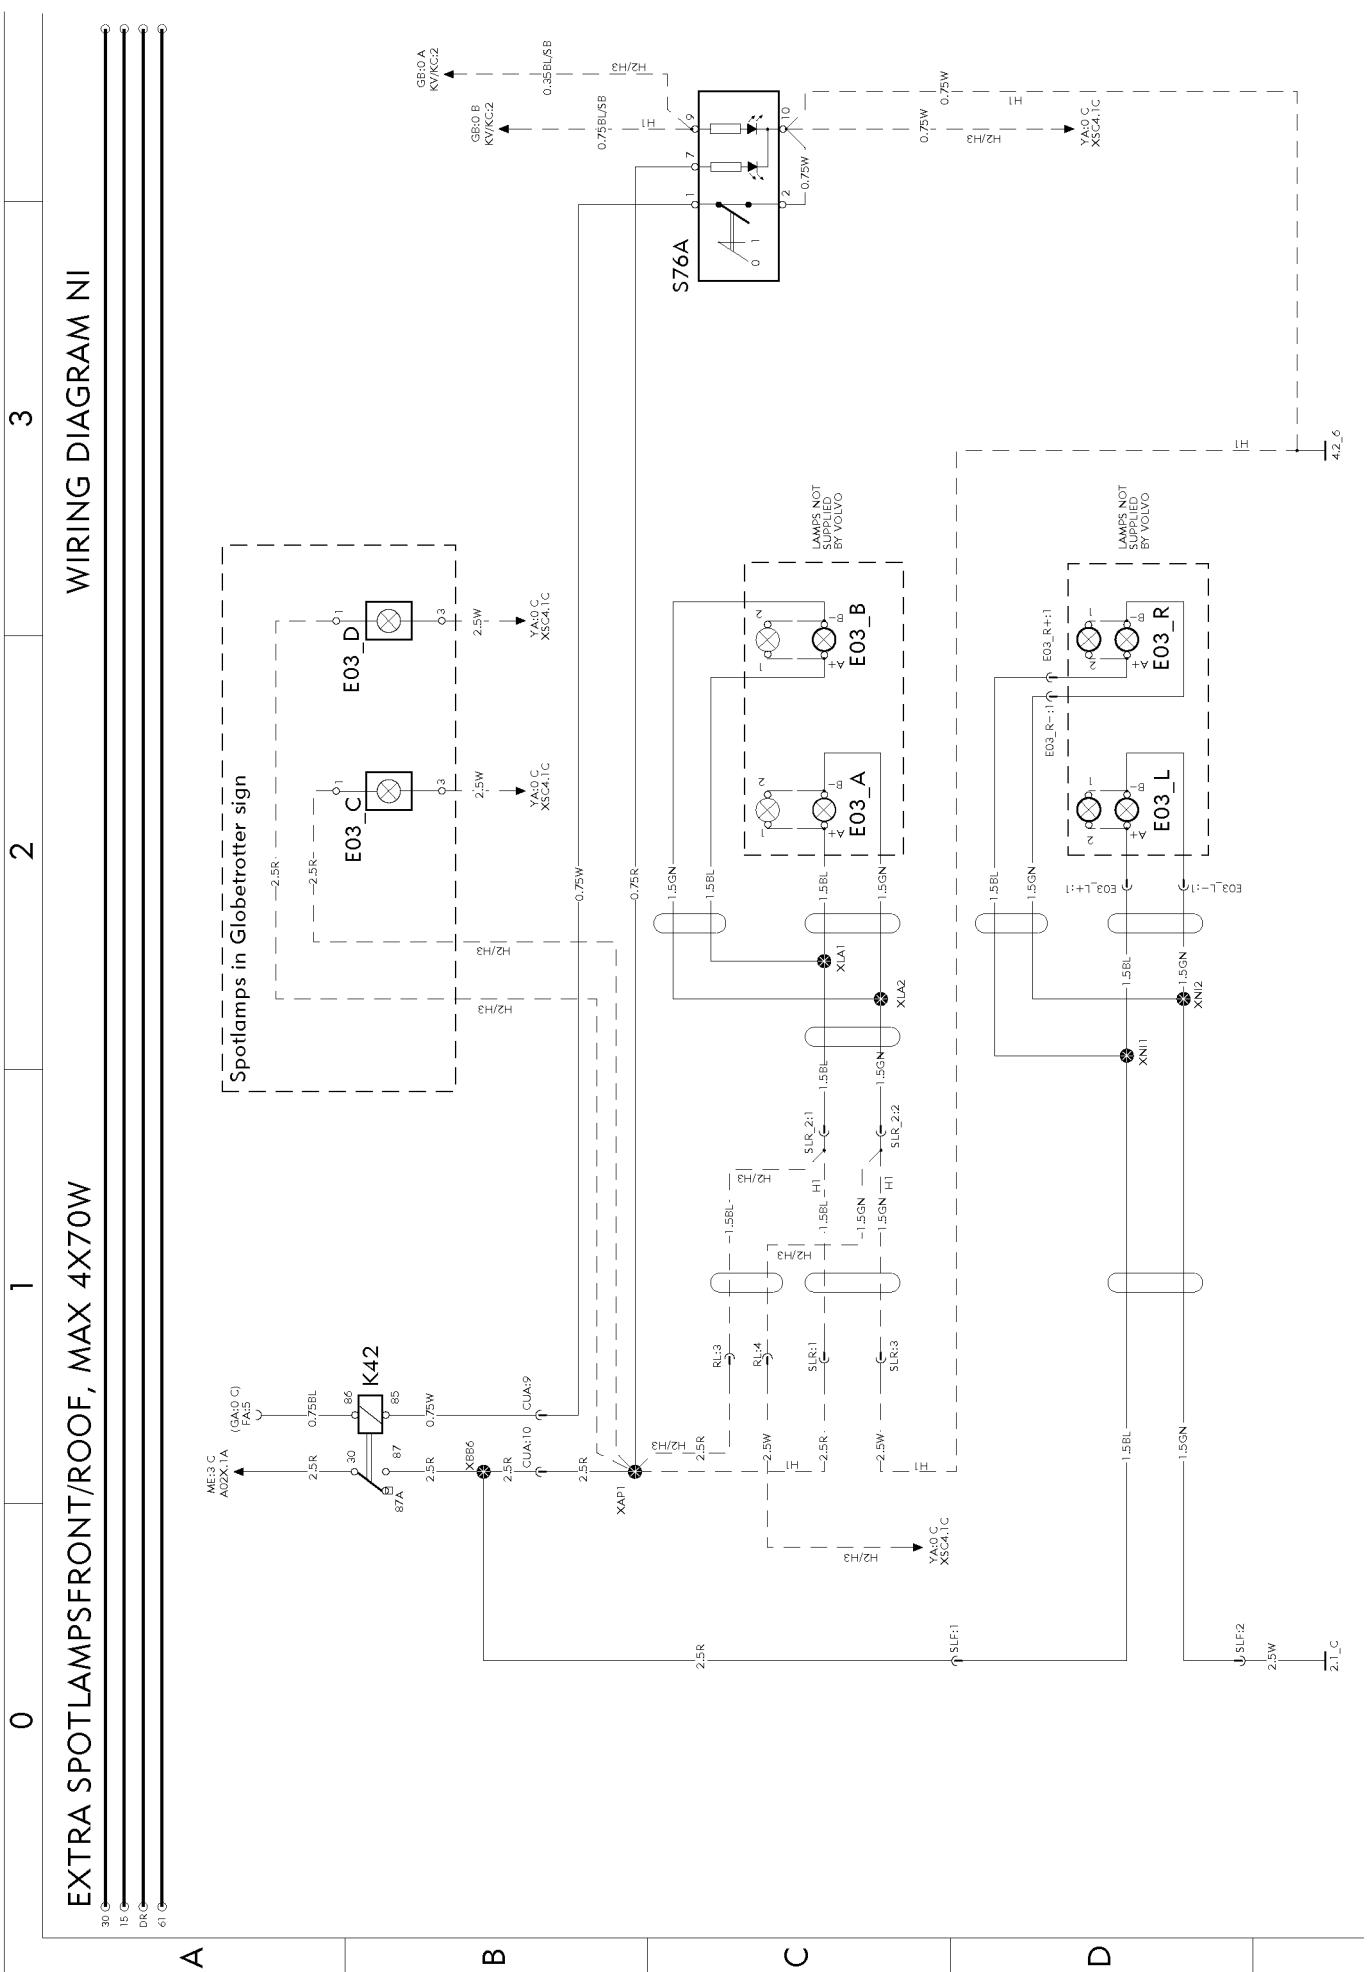

BURGLAR ALARM

11


WIRING DIAGRAM NK


3


2

7


○

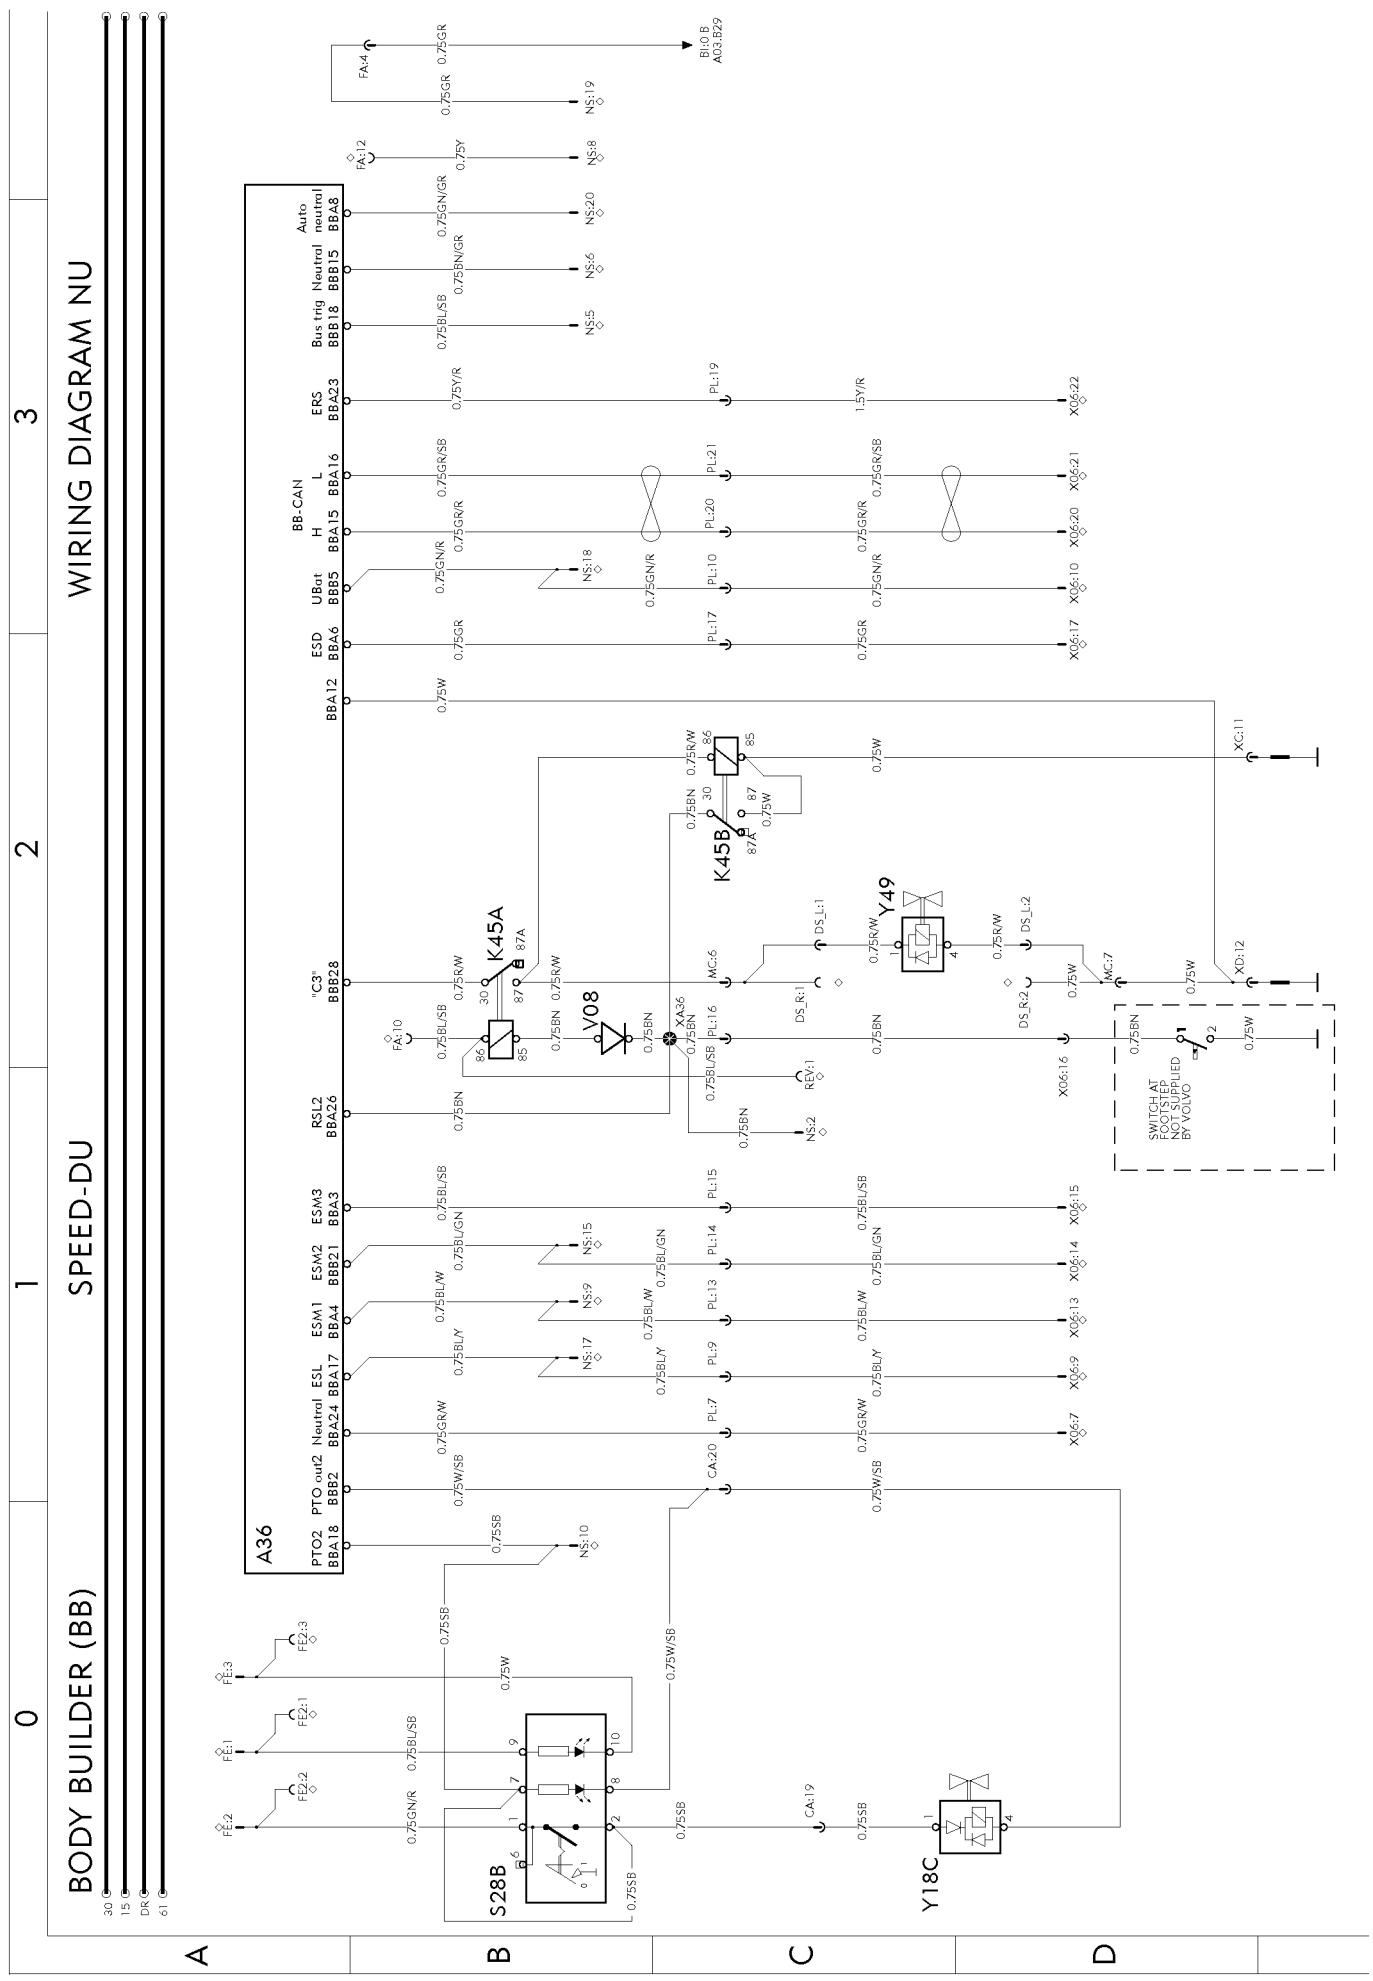

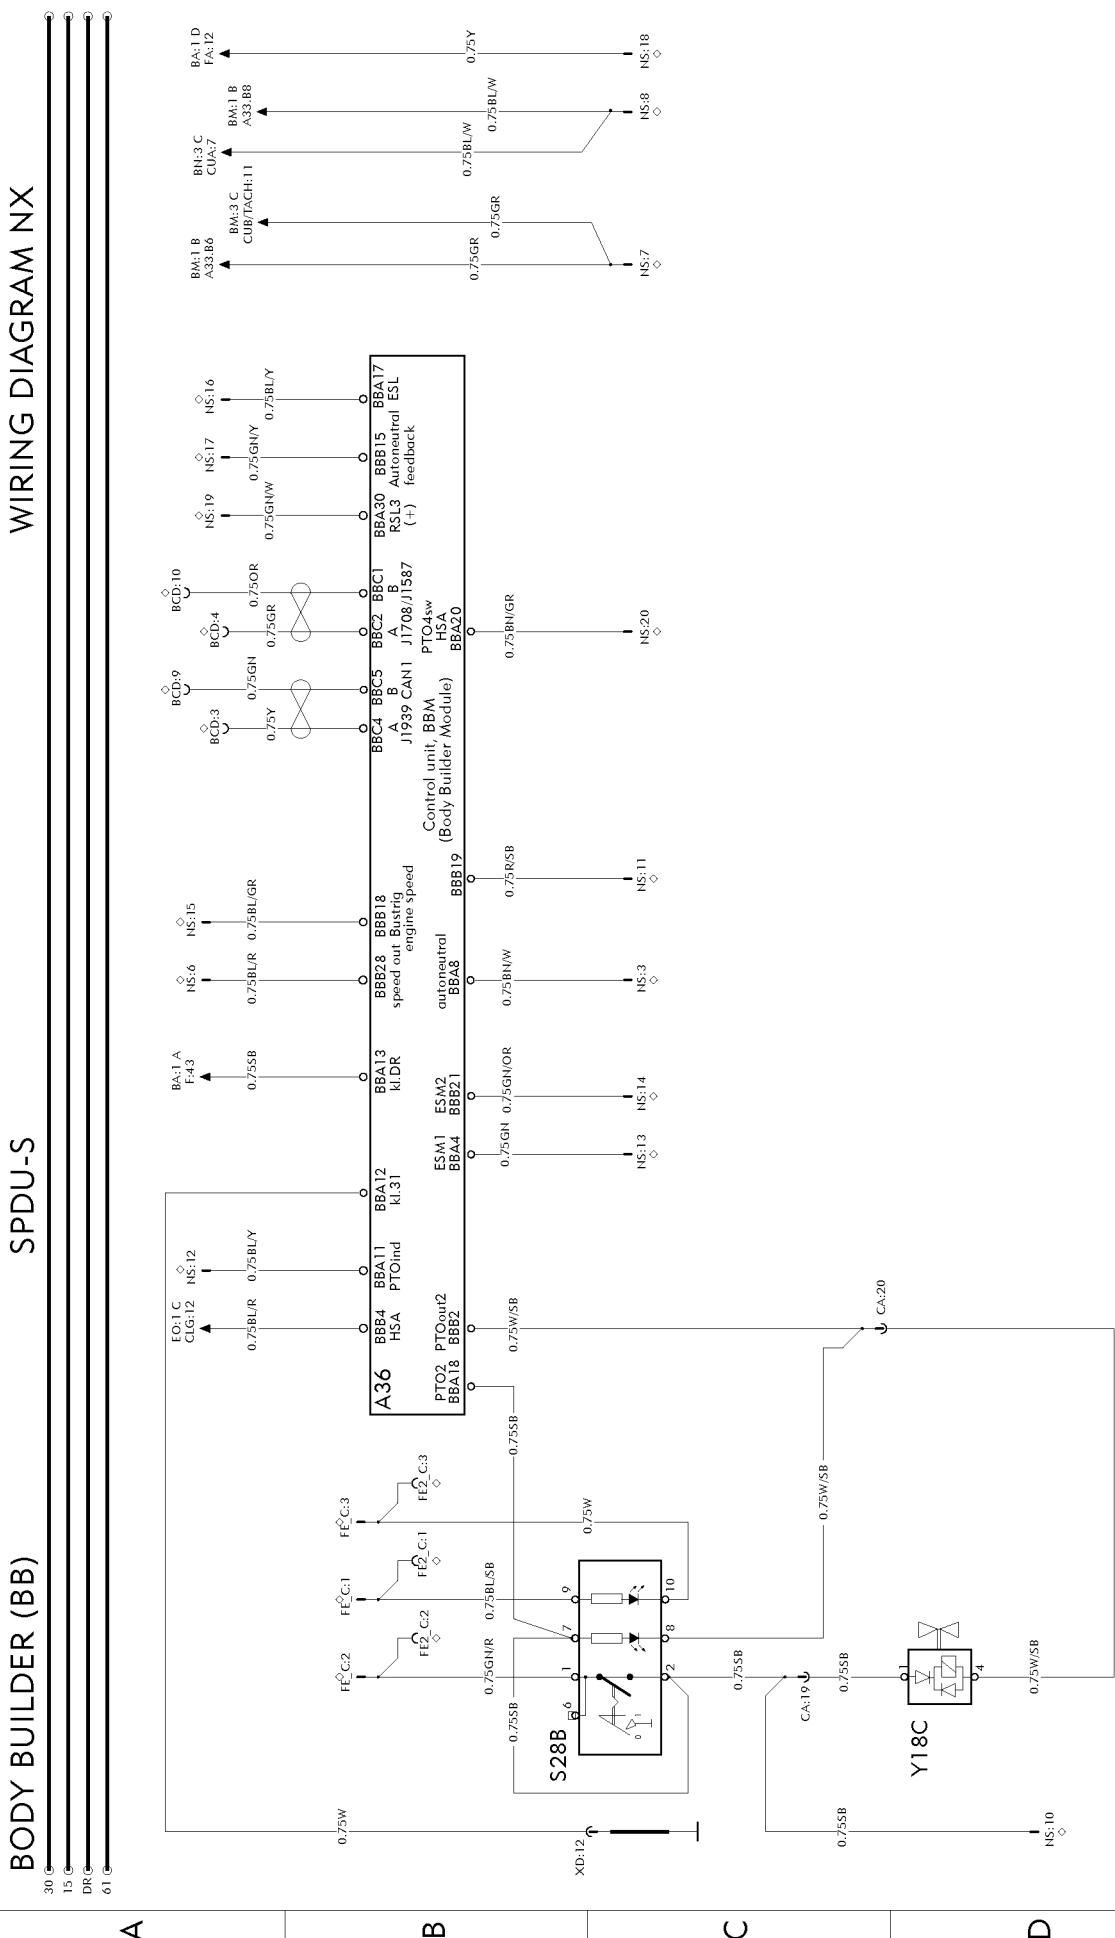


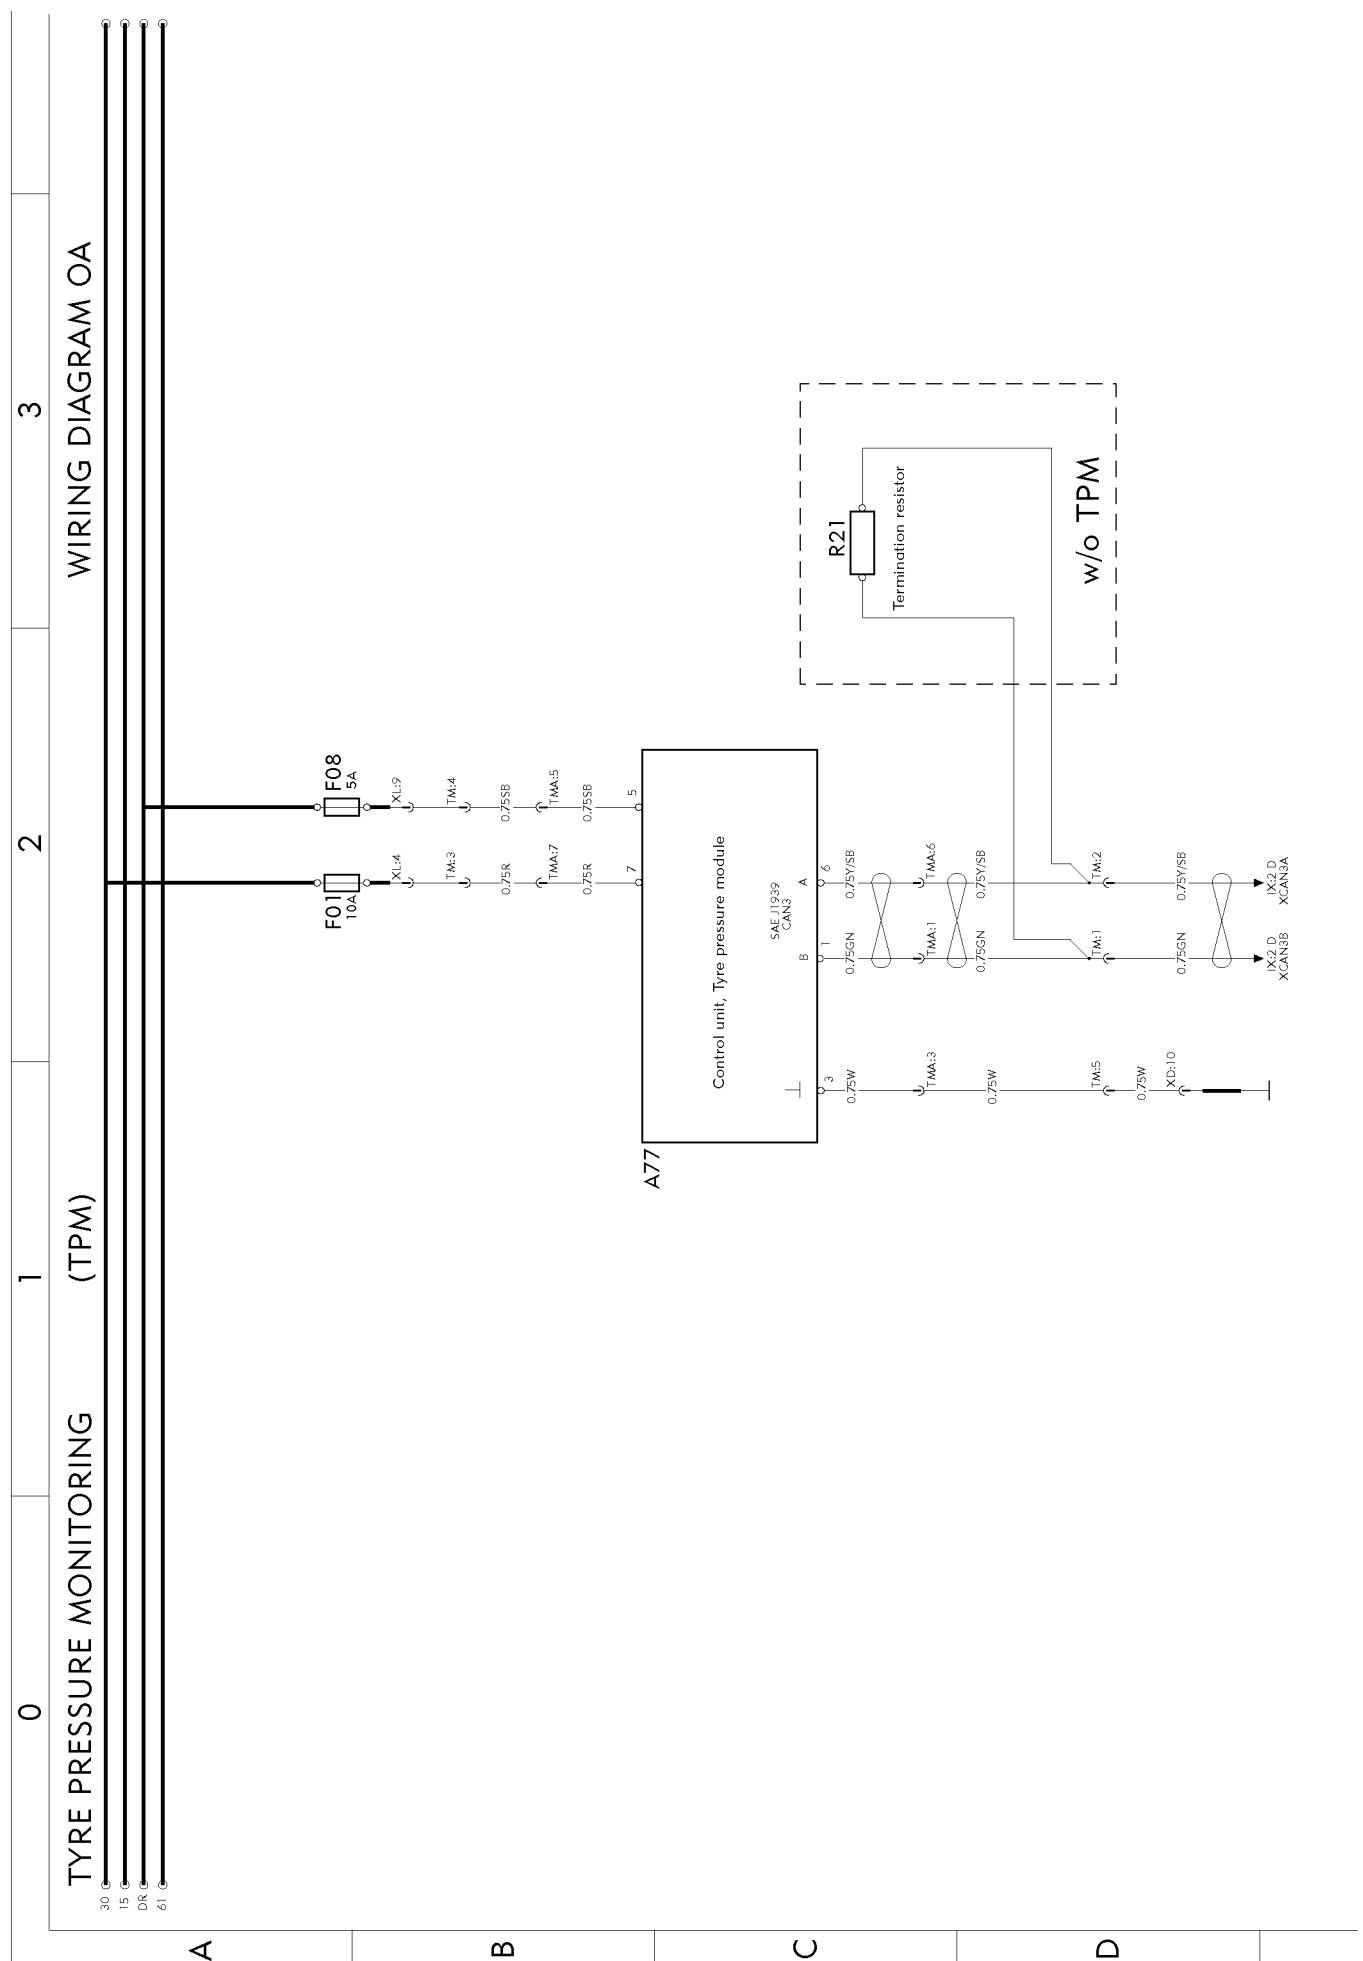


WIRING DIAGRAM XA

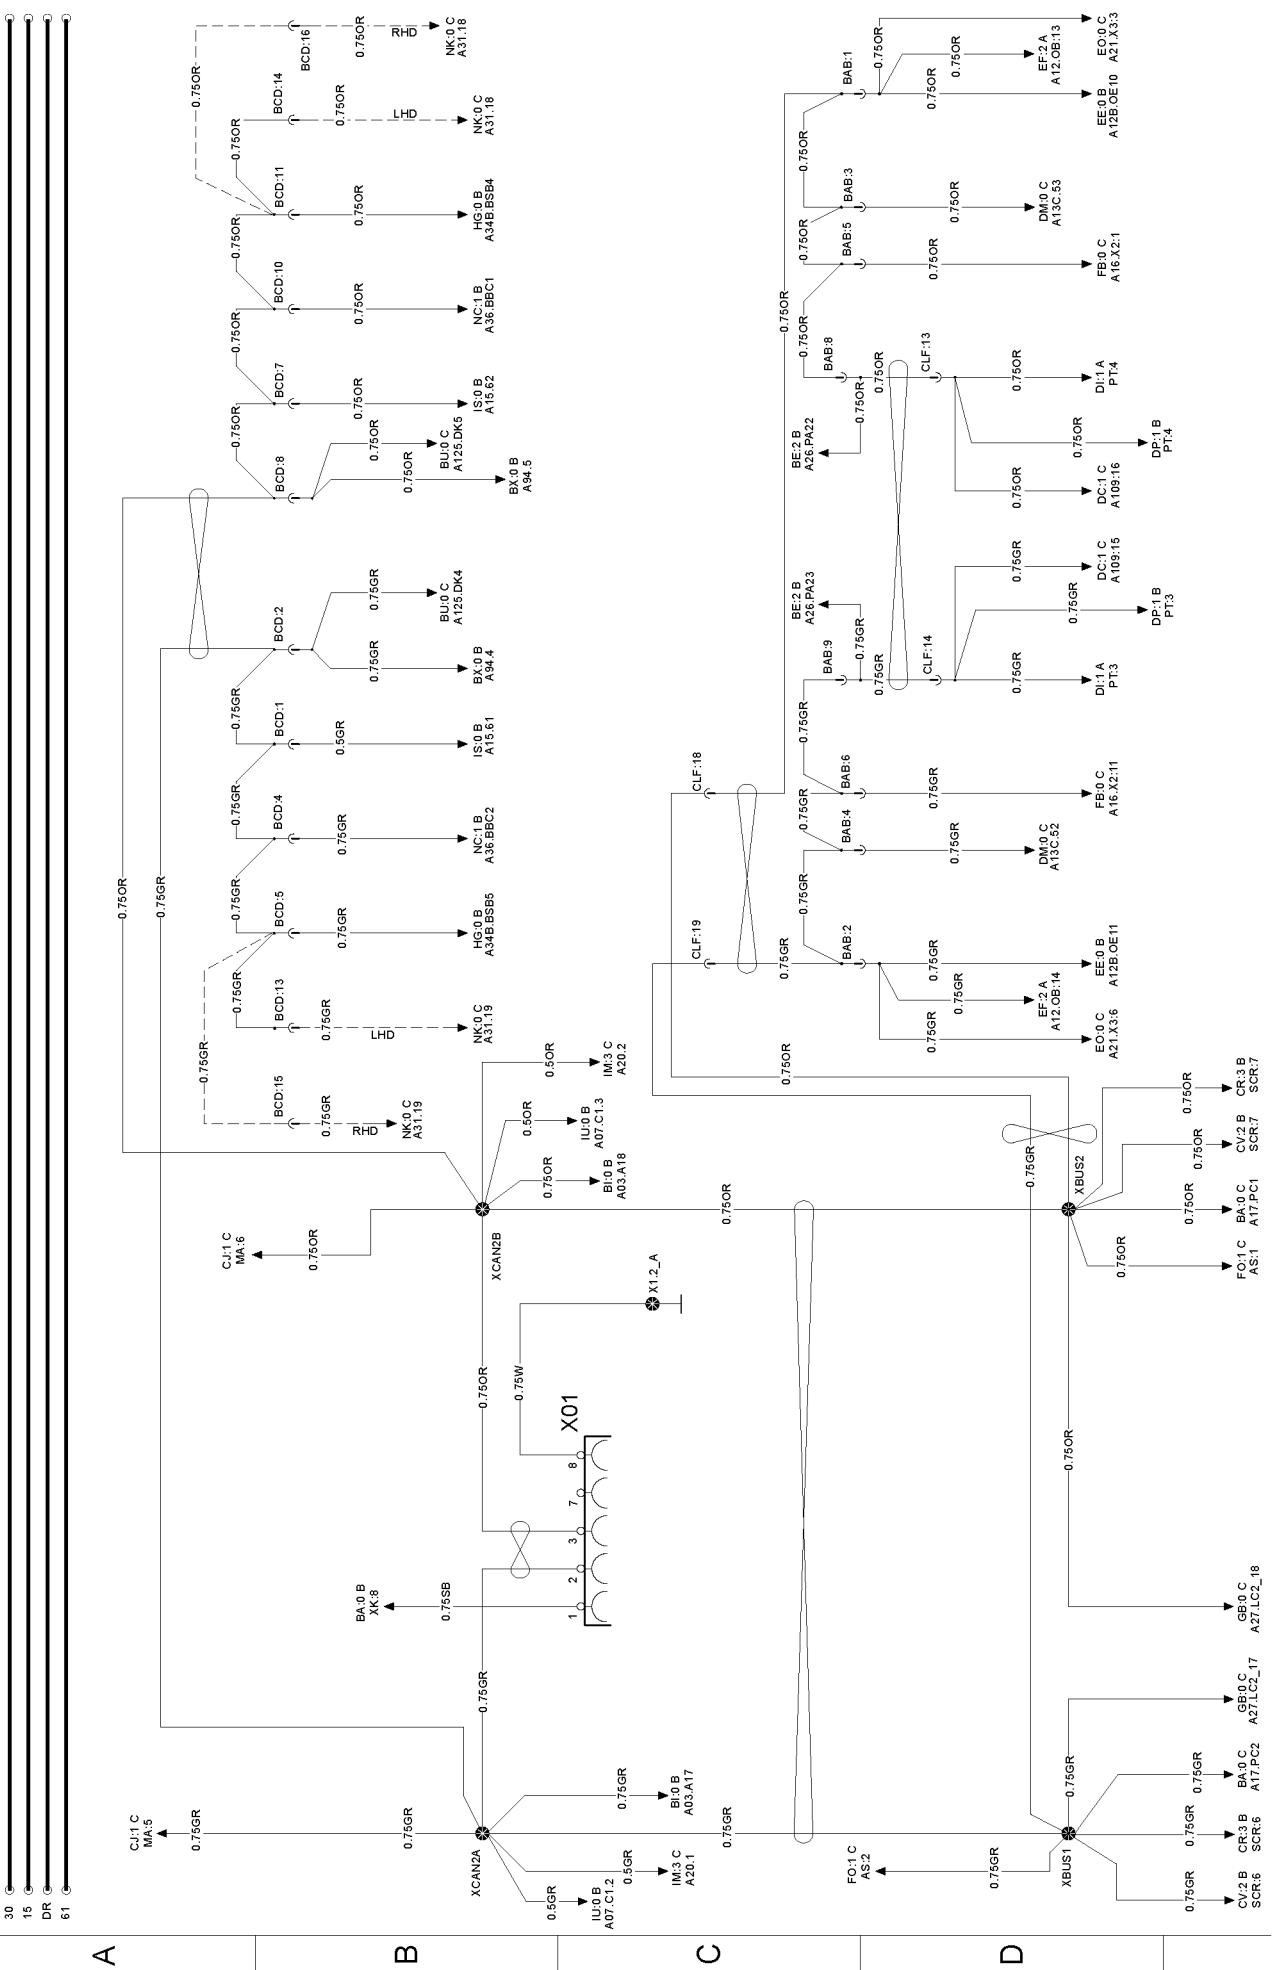

T3059904

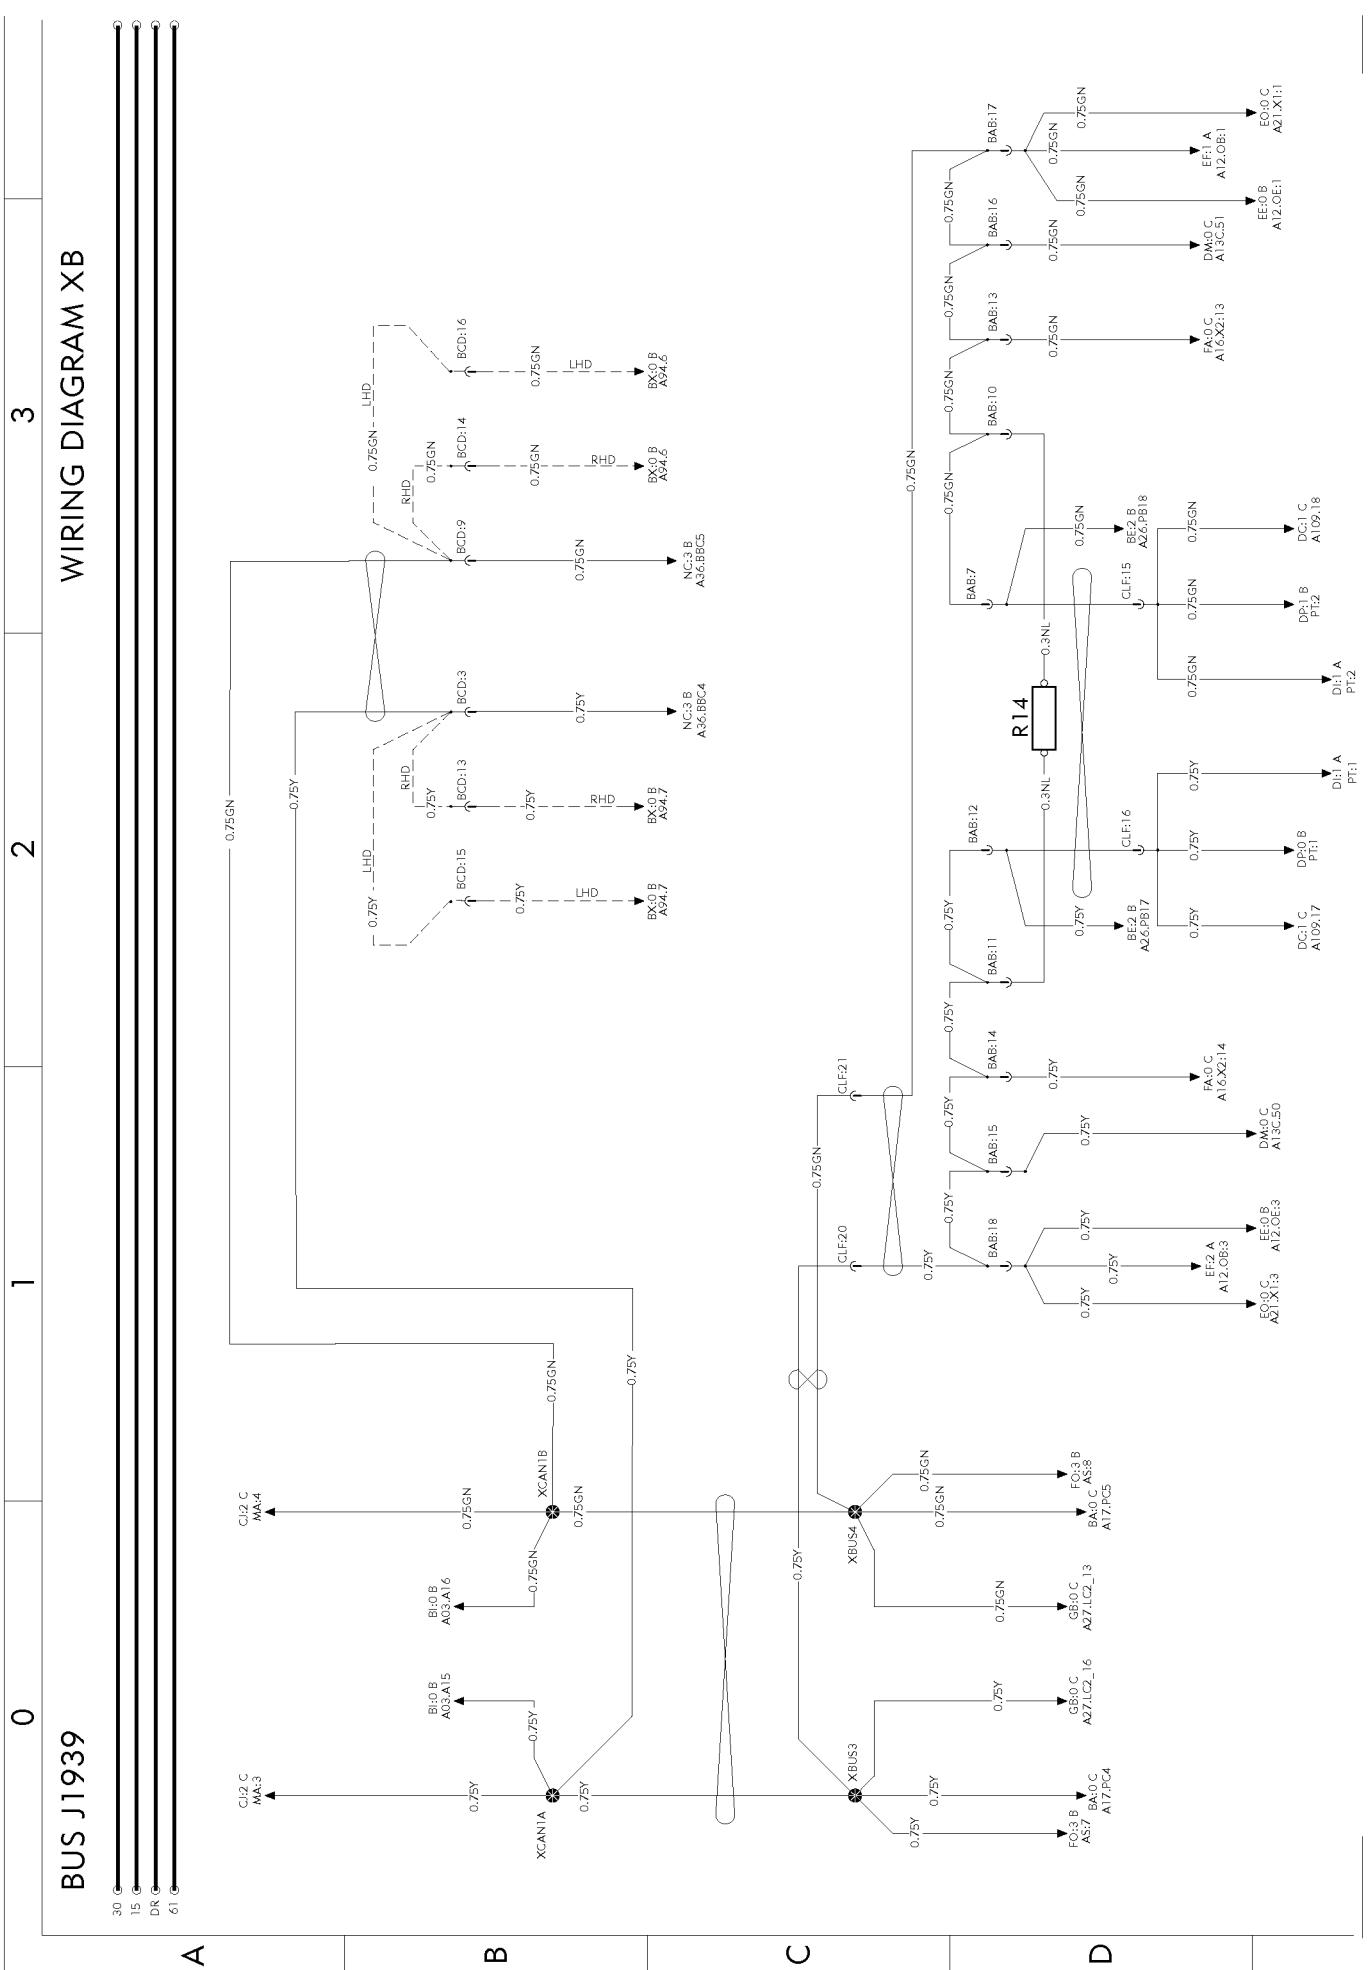

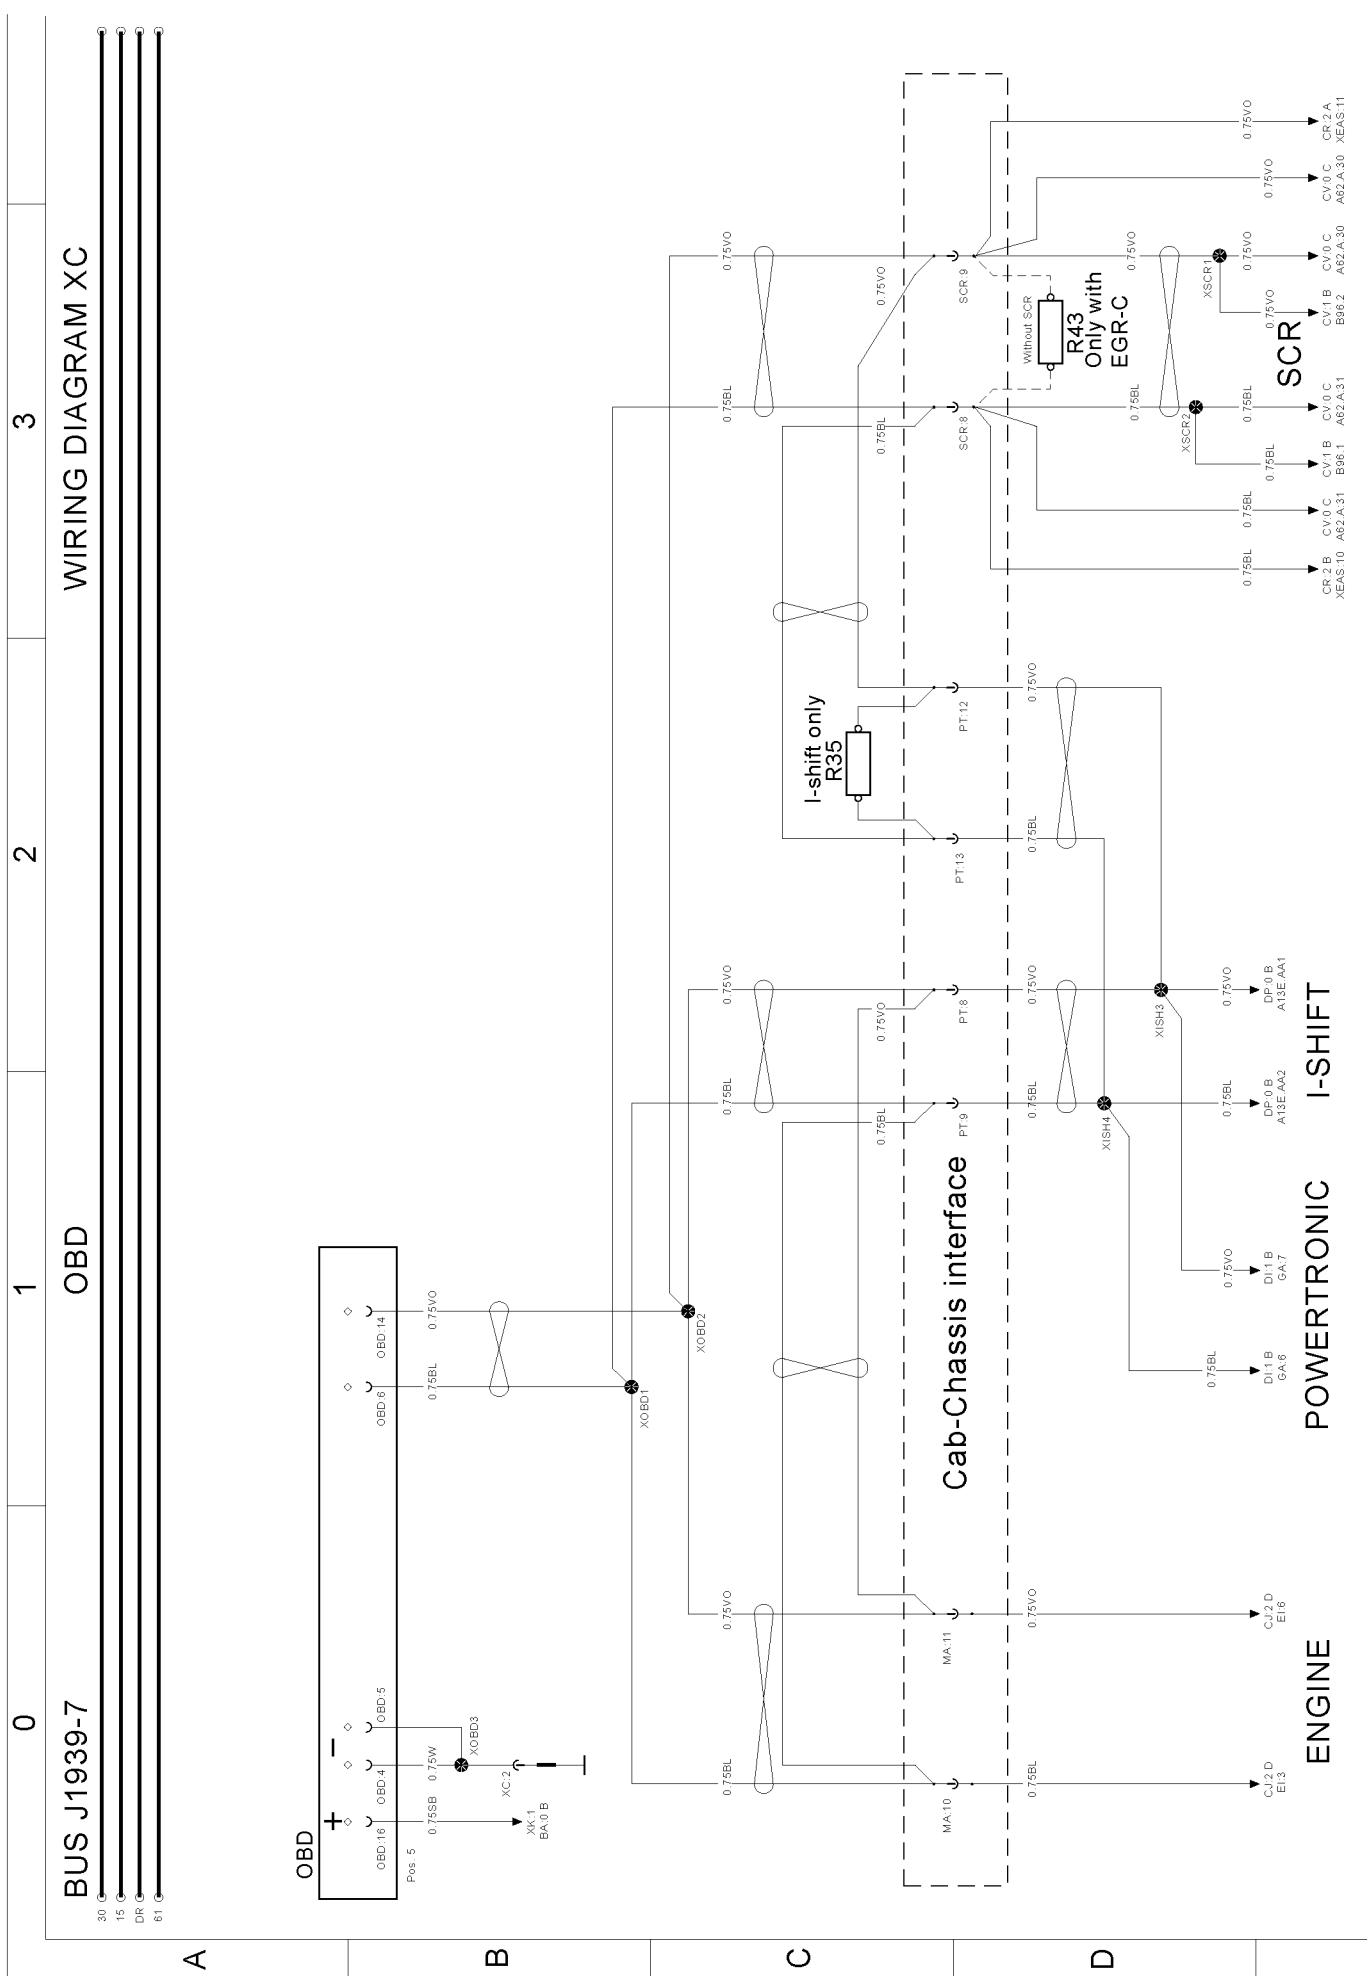

GROUND CONNECTOR

3

2

1

0

WIRING DIAGRAM YA

A

ED3_C_3 NI:2_A NI:4_C S76A_10

ED3_D_3 NI:3_A RL:4

2.5W 2.5W

0.75W 0.75W

1.5W 1.5W

0.75W 0.75W

BN:0_C S94_10

BN:1_B A3B:A6

GL:1_D IDB:1

S10_10

0.75W

1.5W

0.75W

2.5W

0.75W

1.5W

0.75W

S167_10

H3:1_B E93R:B1

H3:1_D E93L:B1

E93L:2

0.75W

1.5W

0.75W

2.5W

0.75W

1.5W

0.75W

H3:1_B E93R:B1

H3:1_D E93L:B1

E93L:2

0.75W

1.5W

0.75W

2.5W

0.75W

1.5W

0.75W

1.5W

H3:1_B E93R:B1

H3:1_D E93L:B1

E93L:2

0.75W

1.5W

0.75W

2.5W

0.75W

1.5W

0.75W

1.5W

H3:1_B E93R:B1

H3:1_D E93L:B1

E93L:2

0.75W

1.5W

0.75W

2.5W

0.75W

1.5W

0.75W

1.5W

H3:1_B E93R:B1

H3:1_D E93L:B1

E93L:2

0.75W

1.5W

0.75W

2.5W

0.75W

1.5W

0.75W

3

2

 
1

0

GND/MISC.

A

See sheet HI



CLLT20

0.75BN/W

CLC7

2.5W

2.5W

0.75W

6.0W

X1.3C

2.5W

2.5W

1.4

X1.4_A

6.0W

0.75W

CLT20

0.75W

2.5W

2.5W

0.75W


CLL7

2.5W


Illustrations index


-	Aerial	"", page 126
-	Battery cables	"", page 127
-	Cab/chassis interface	"", page 130
-	ECU in cab	"", page 132
-	Switches	"", page 134
1000	Wiring harness, instruments	"", page 136
1006	Wiring harness, roof	"", page 145
1007	Wiring harness, floor	"", page 149
1018	Wiring harness, air conditioning	"", page 155
1030	Wiring harness, engine	"", page 156
1037	Wiring harness, bogie lift	"", page 165
1040	Wiring harness, frame	"", page 167
1047	Wiring harness, roof beacon light	"", page 169
1056	Wiring harness, air dryer	"", page 171
1062	Wiring harness, parking heater, frame	"", page 172
1063	Wiring harness, trailer connections	"", page 173
1072	Wiring harness, air suspension chassis	"", page 178
1077	Wiring harness, side marking lamps	"", page 183
1083	Wiring harness, door	"", page 184
1086	Wiring harness, ABS chassis	"", page 186
1401	Wiring harness, solenoid valves	"", page 195
1403	Wiring harness, retarder	"", page 199
1435	Wiring harness, main switch	"", page 200
1436	Wiring harness, roof sign lighting	"", page 169
1458	Wiring harness, front wheel drive	"", page 207
1460	Wiring harness, cab-battery box	"", page 200
1470	Wiring harness, el.operated mirror arch	"", page 219
1472	Wiring harness, load indicator	"", page 208
1476	Wiring harness, cab-engine	"", page 156
1493	Wiring harness, power steering	"", page 209
1494	Wiring harness, gearbox	"", page 212
1499	Wiring harness, cab-gearbox	"", page 212
1501	Wiring harness, upper front	"", page 215
1502	Wiring harness, lower front left	"", page 215
1503	Wiring harness, lower front right	"", page 217
1504	Wiring harness, firewall	"", page 219
1505	Wiring harness, body builder connections	"", page 220
1506	Wiring harness, demountable (swap-body)	"", page 220
1507	Wiring harness, ESP chassis	"", page 221
1508	Wiring harness, TPM	"", page 222
1510	Wiring harness, SCR	"", page 223



Illustrations

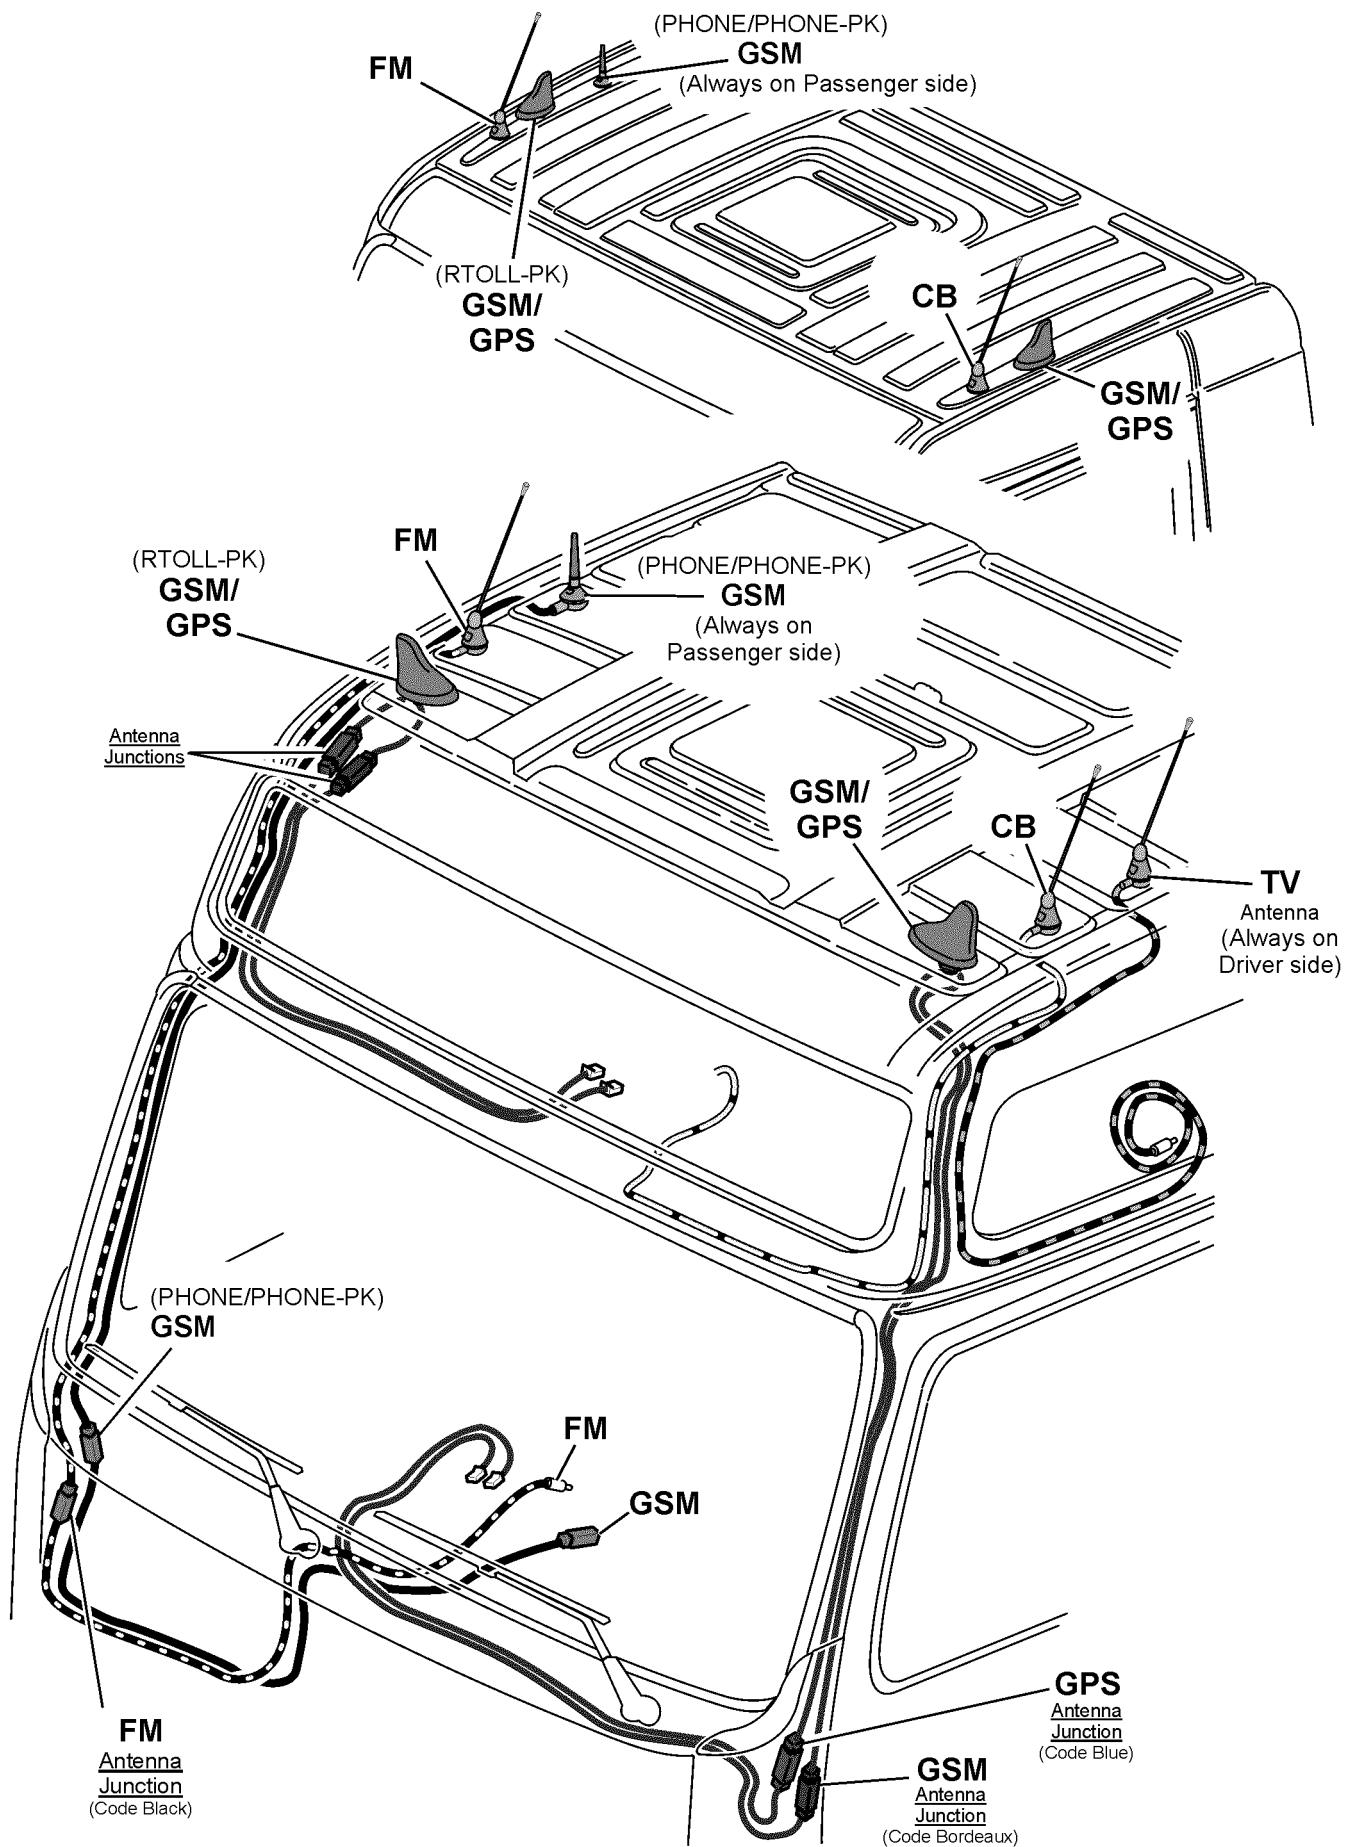


T3057735

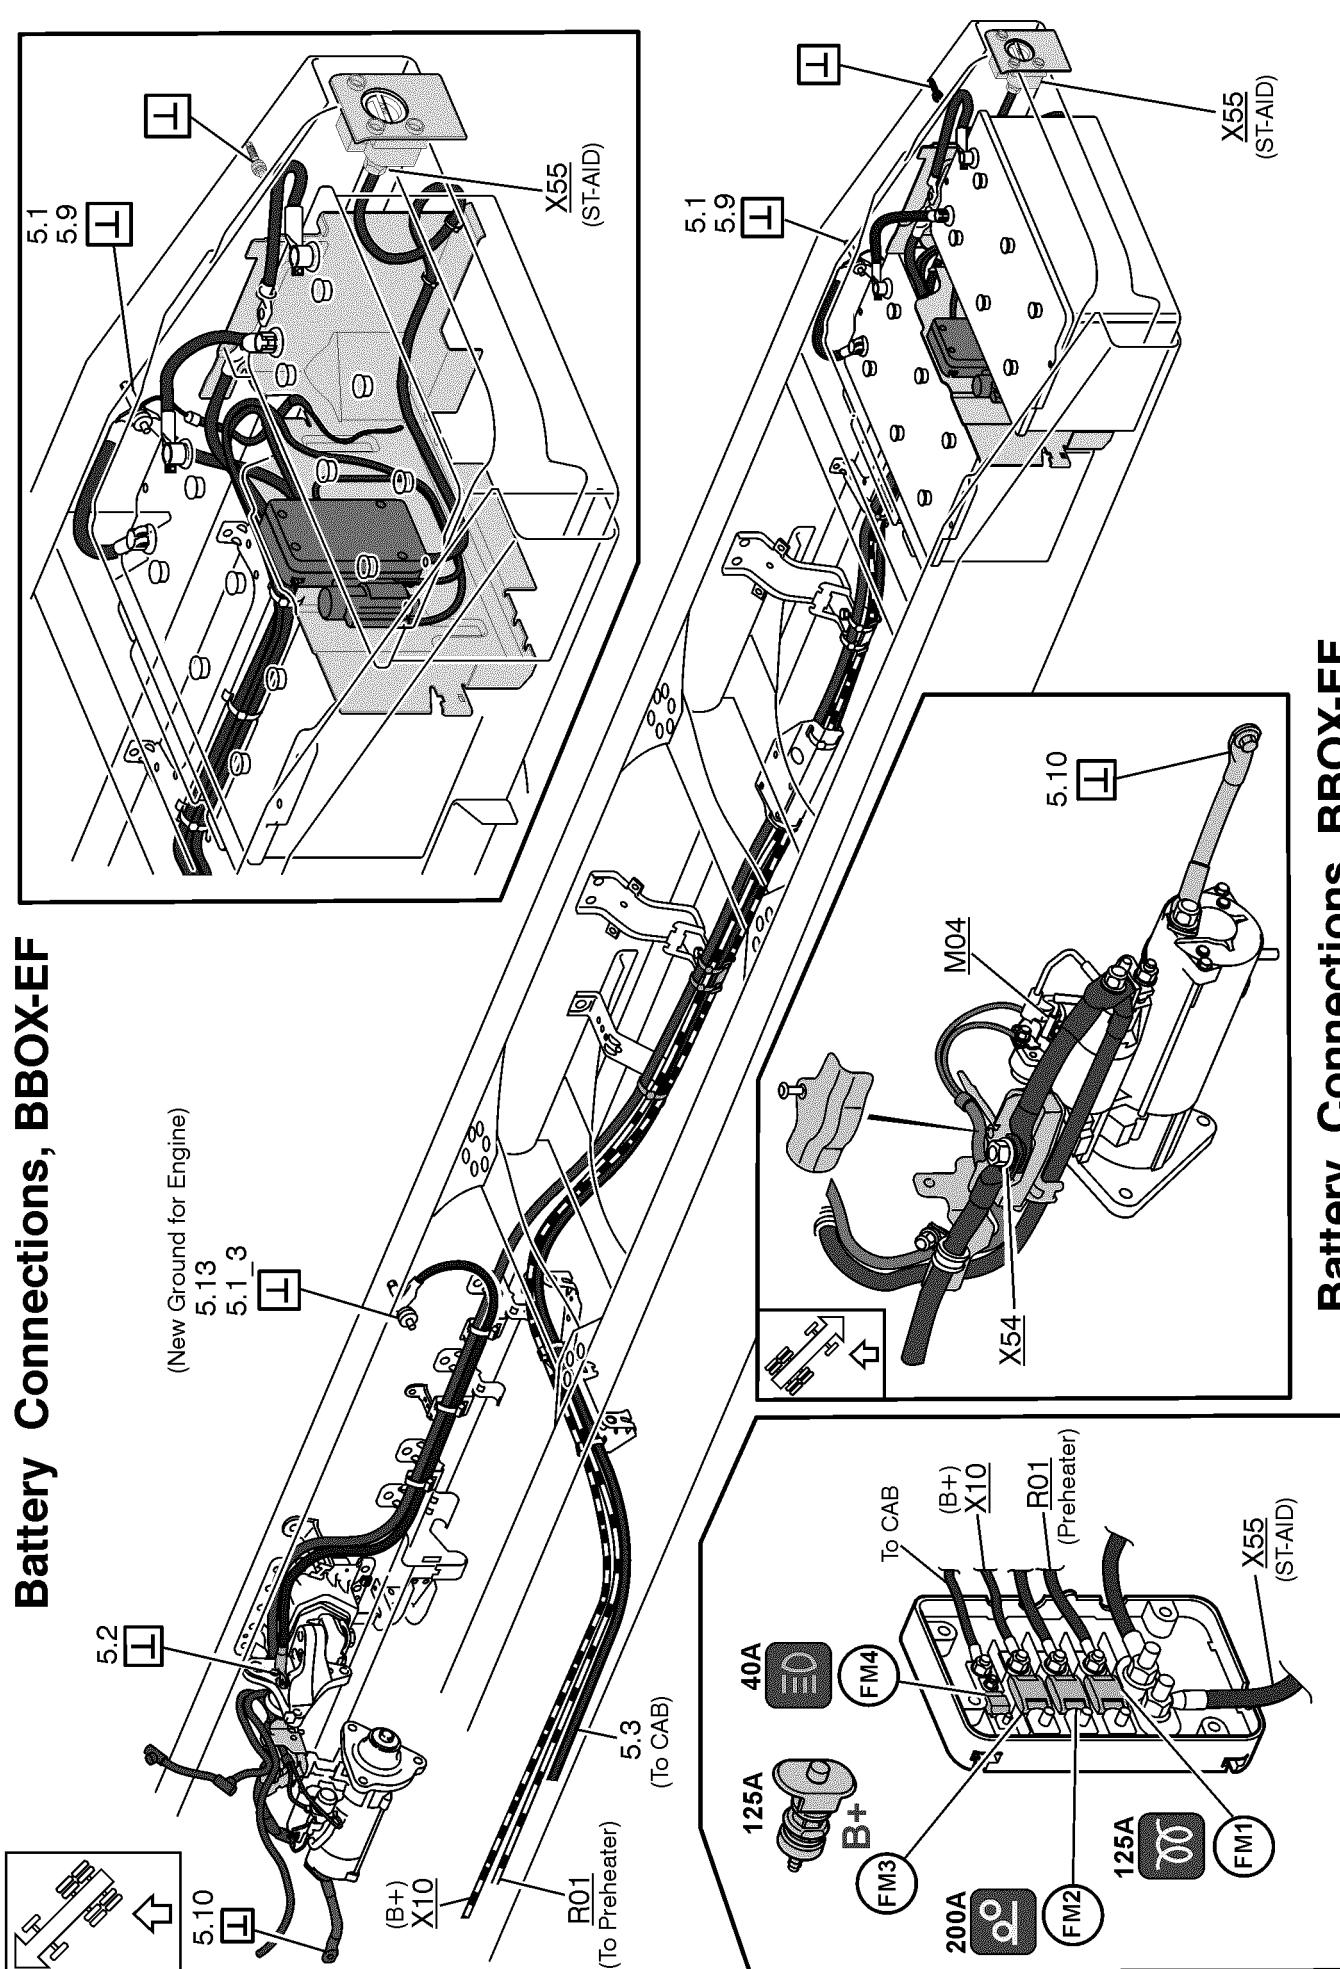**Battery Connections, BBOX-EF**

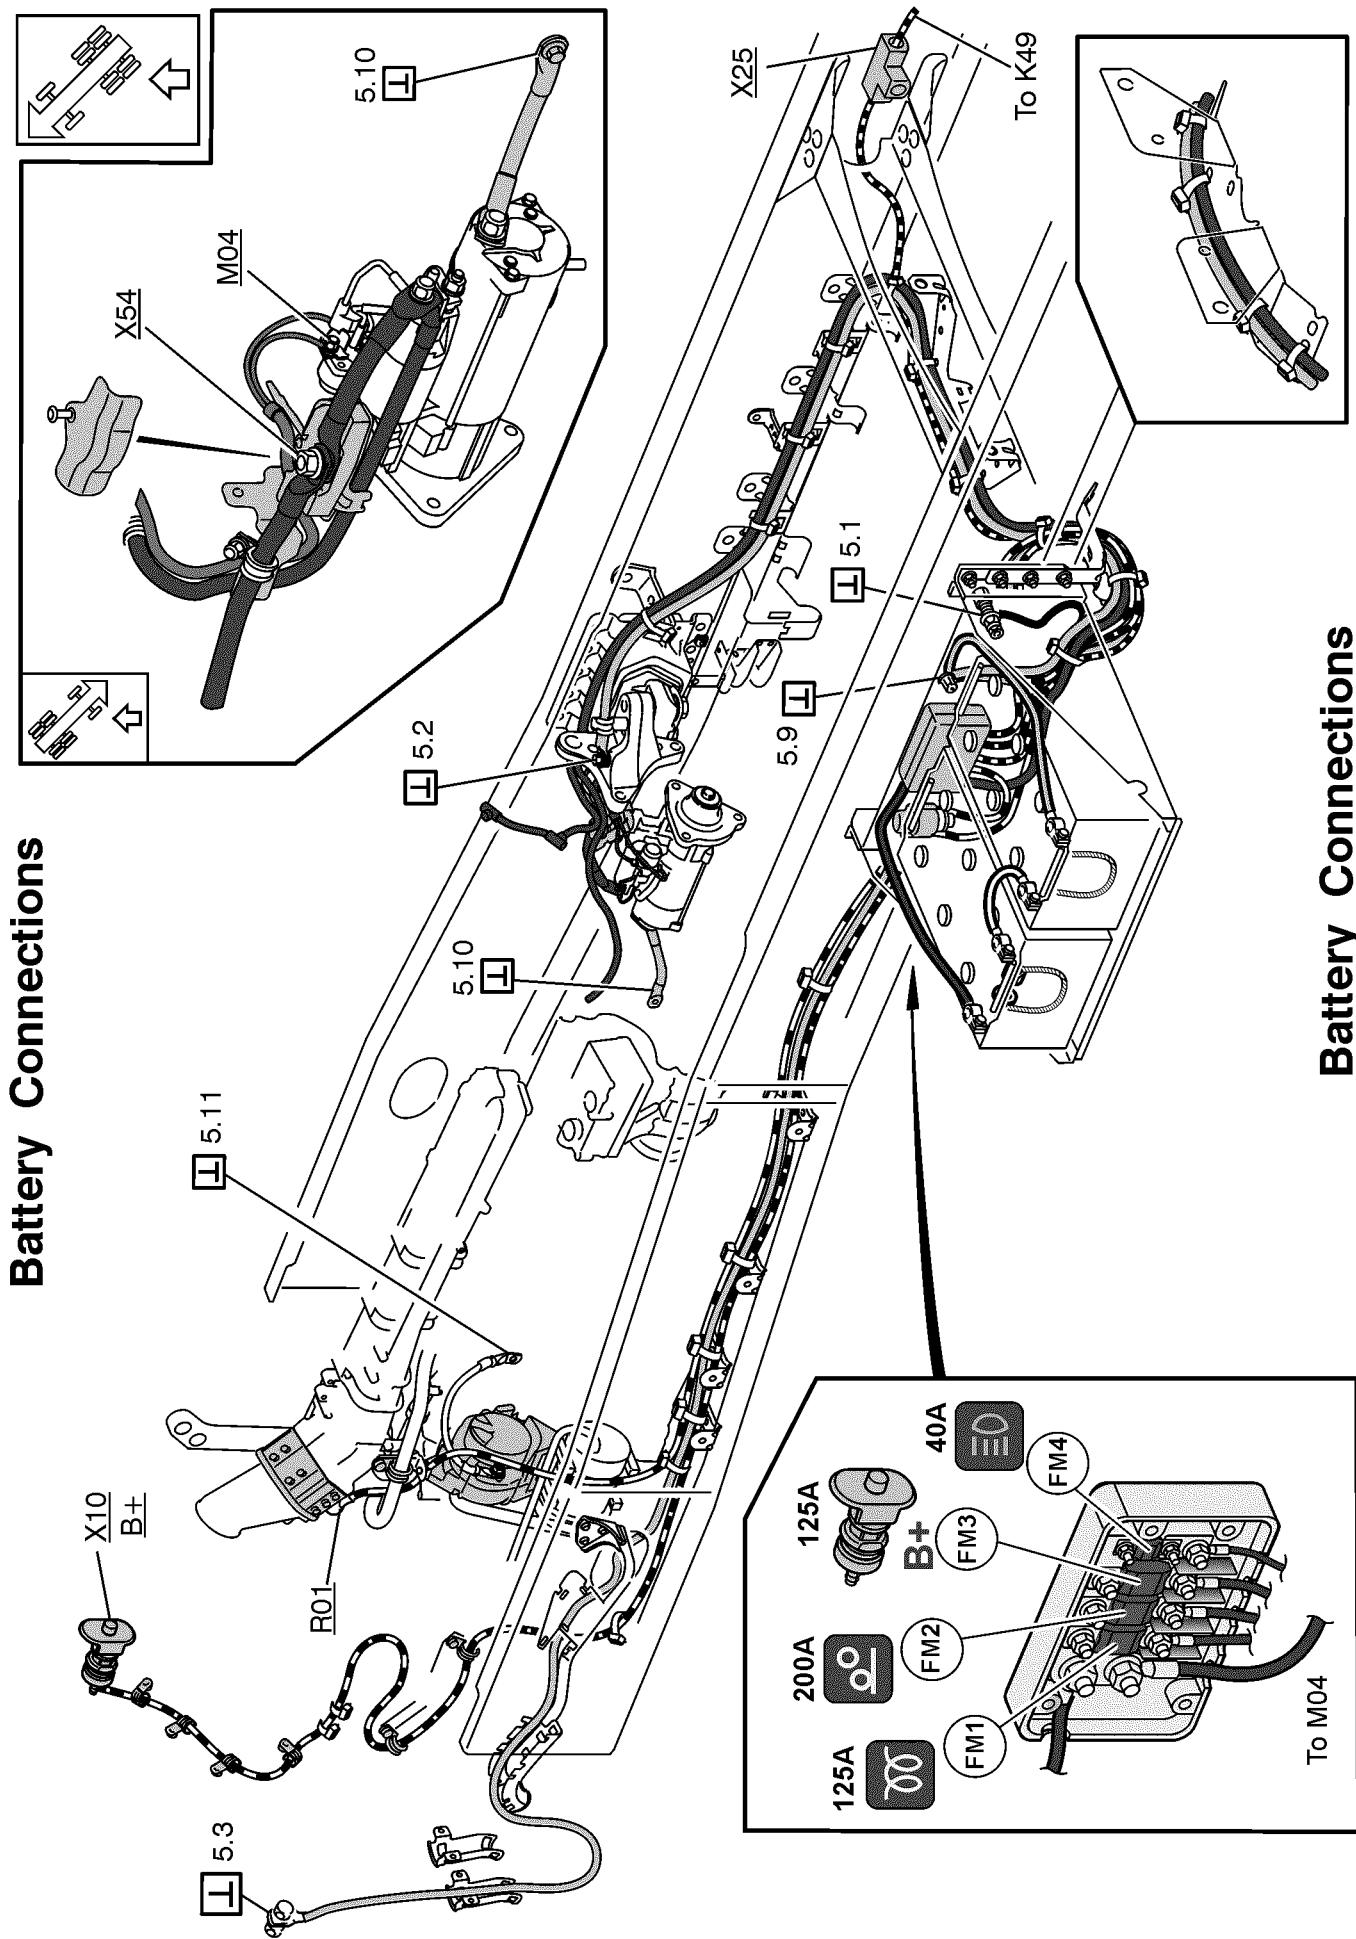
**Battery Connections**

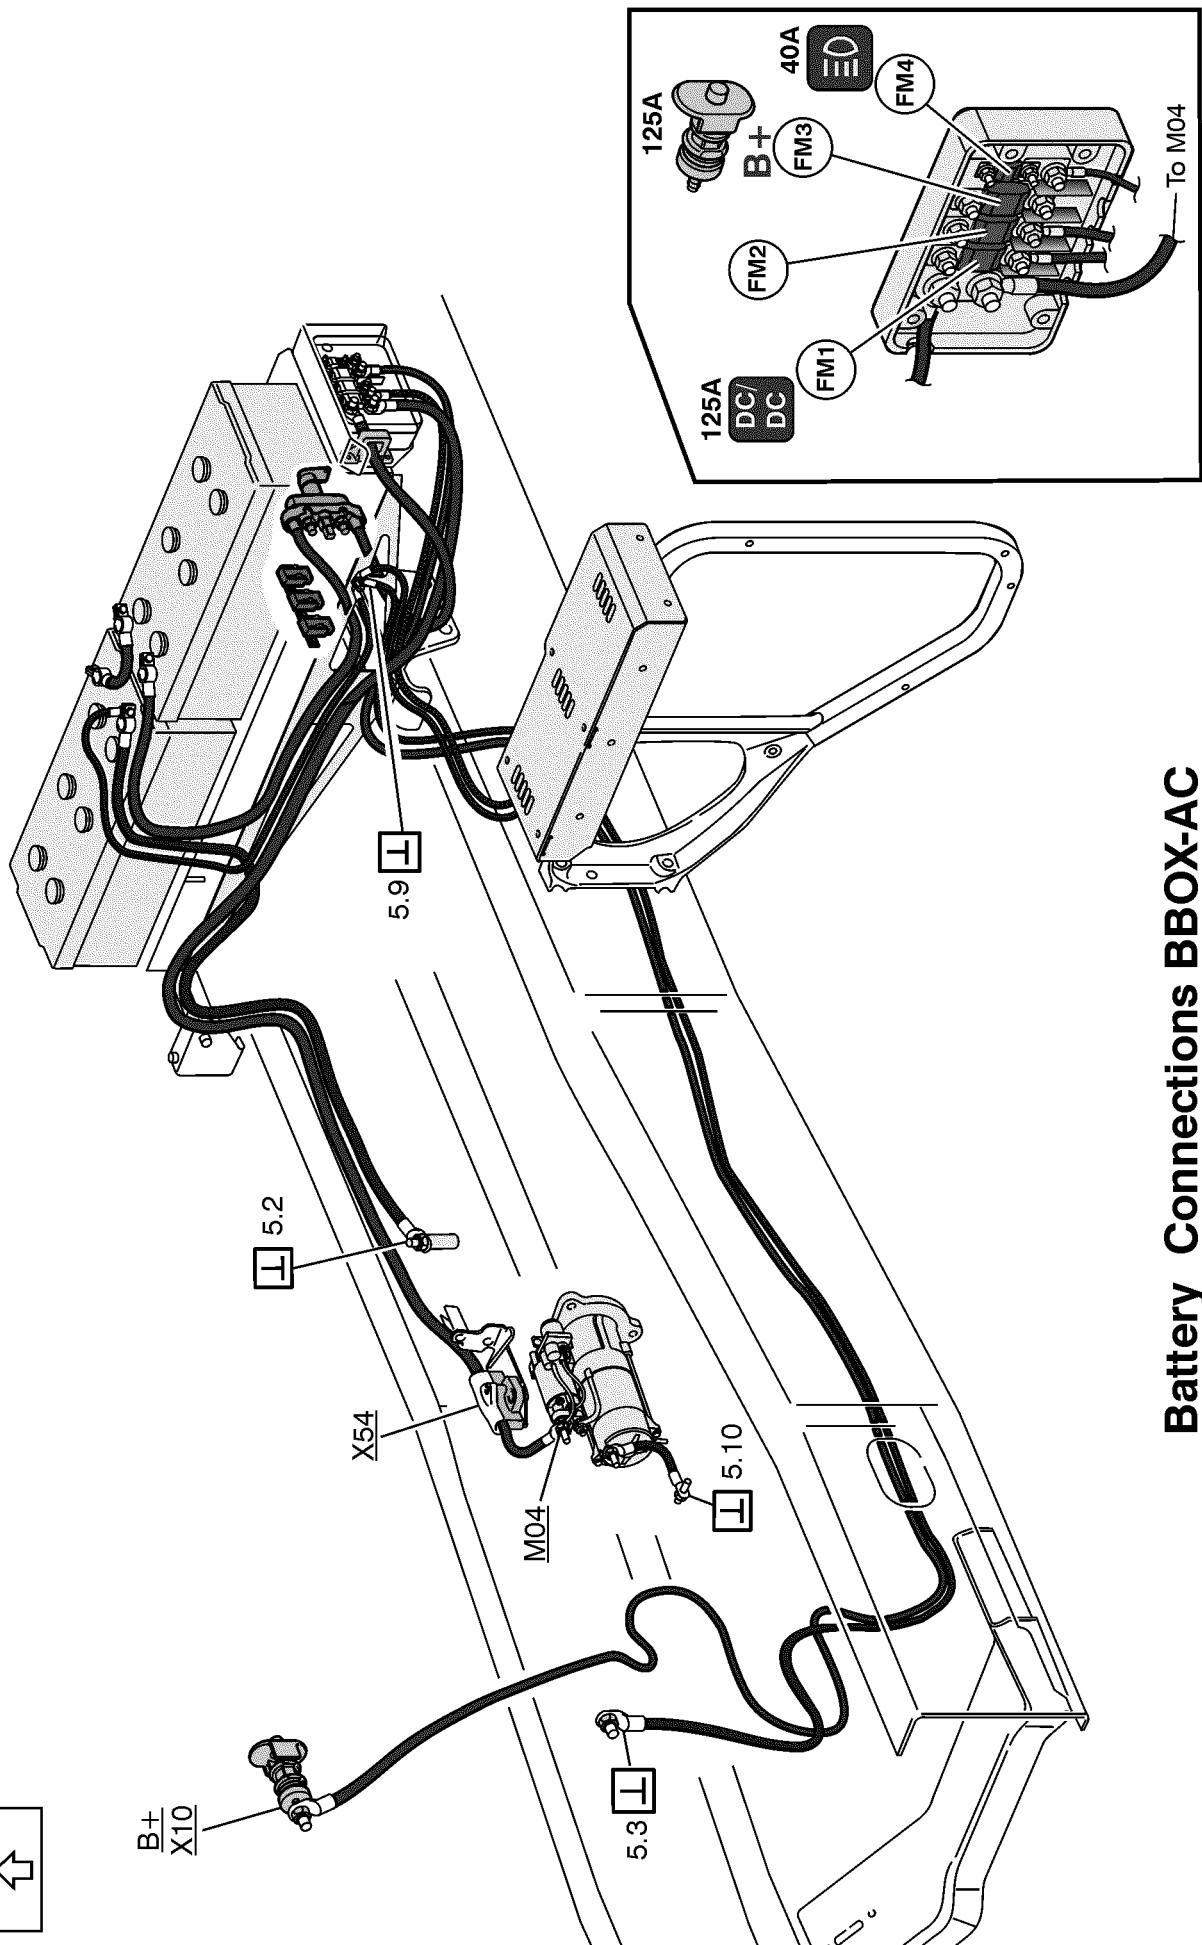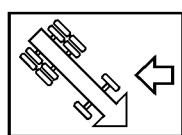Battery Connections BBOX-AC

T3020632

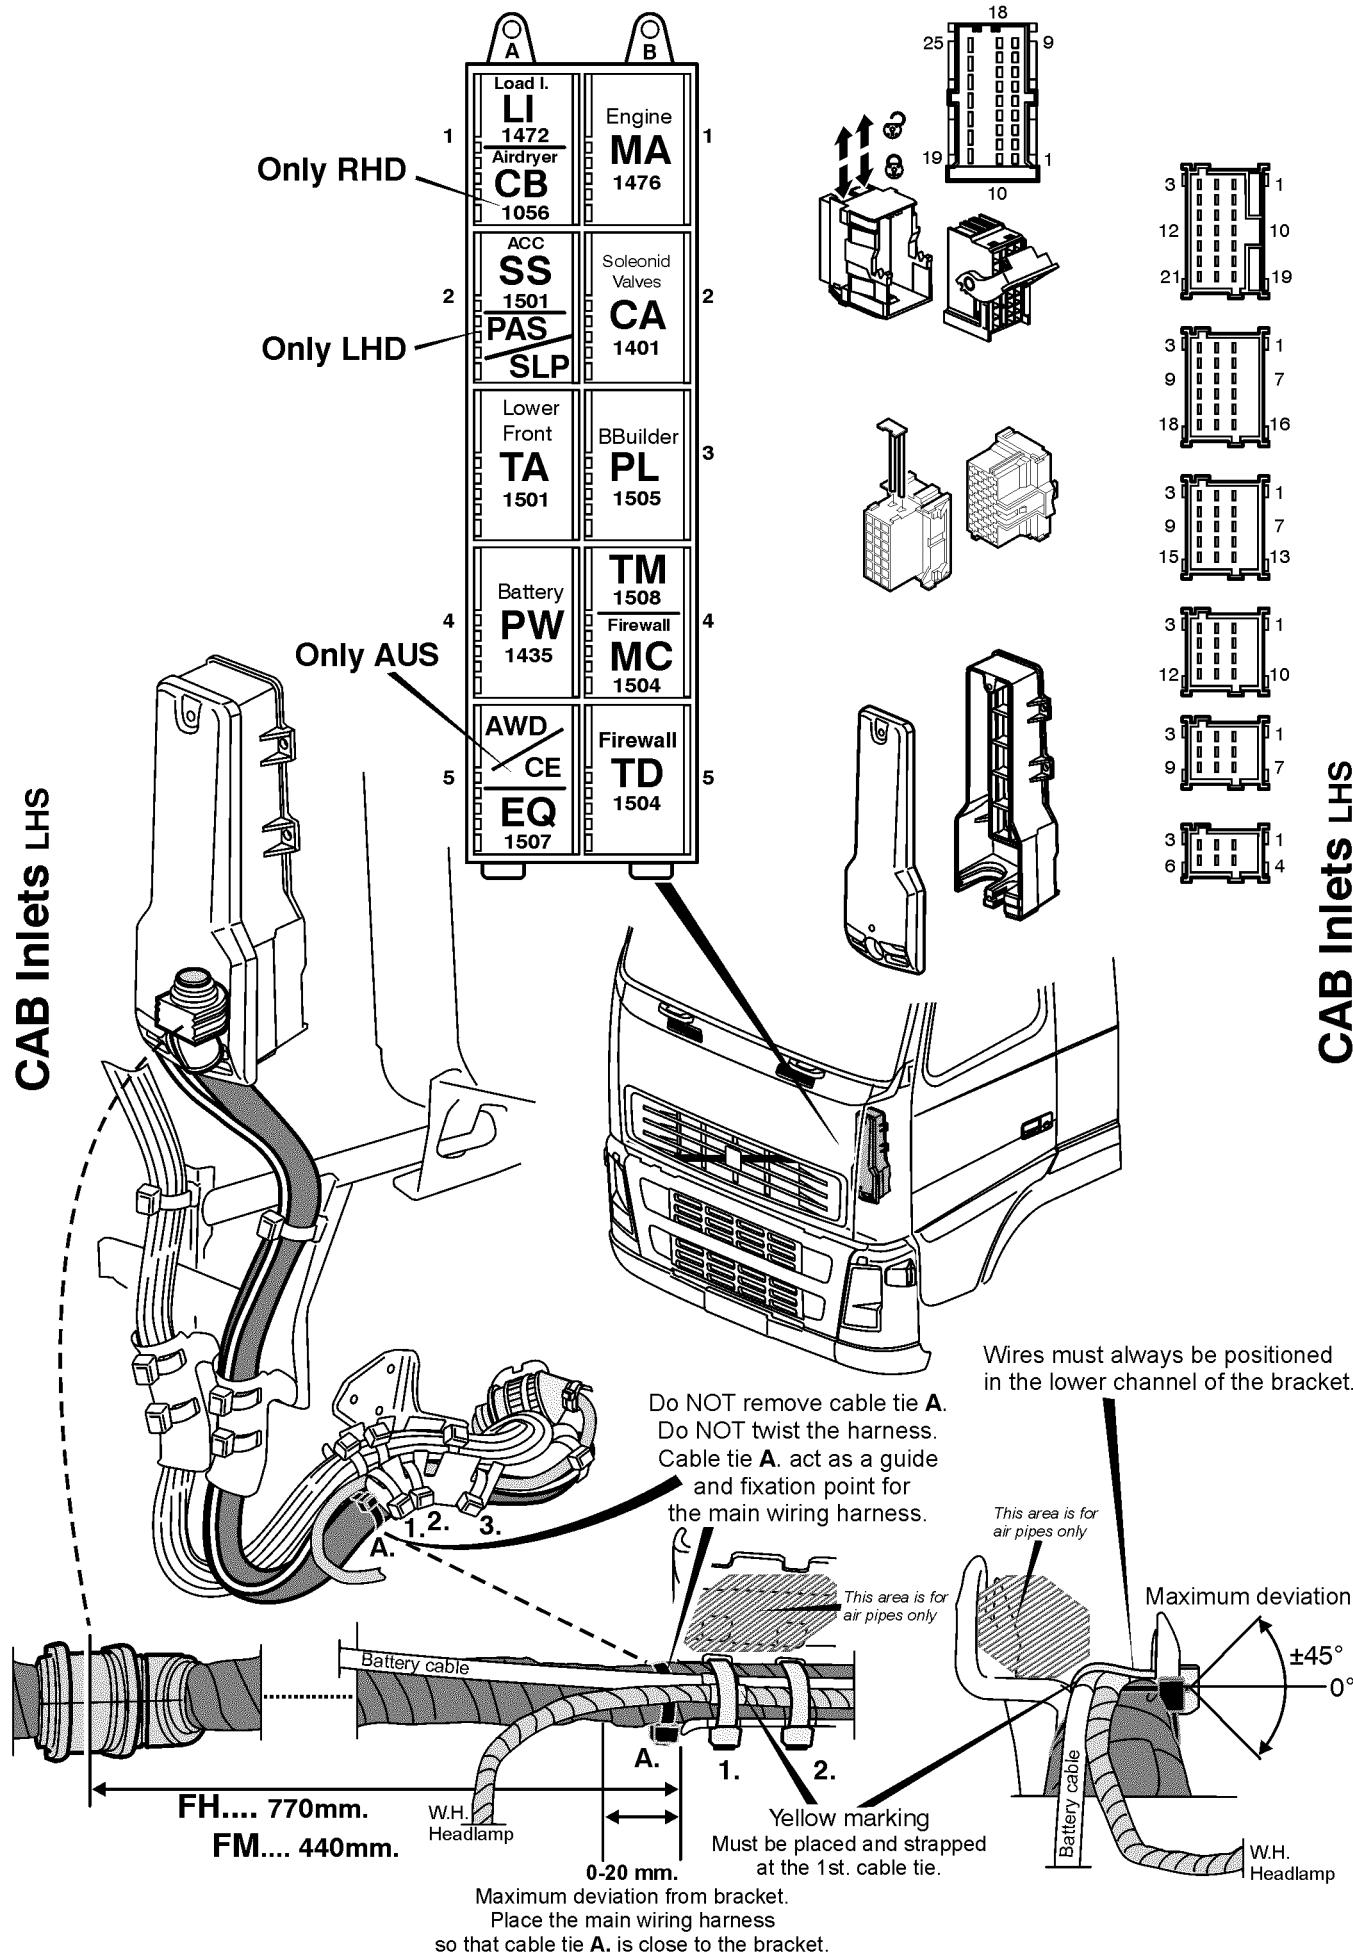



CAB Inlets RHS

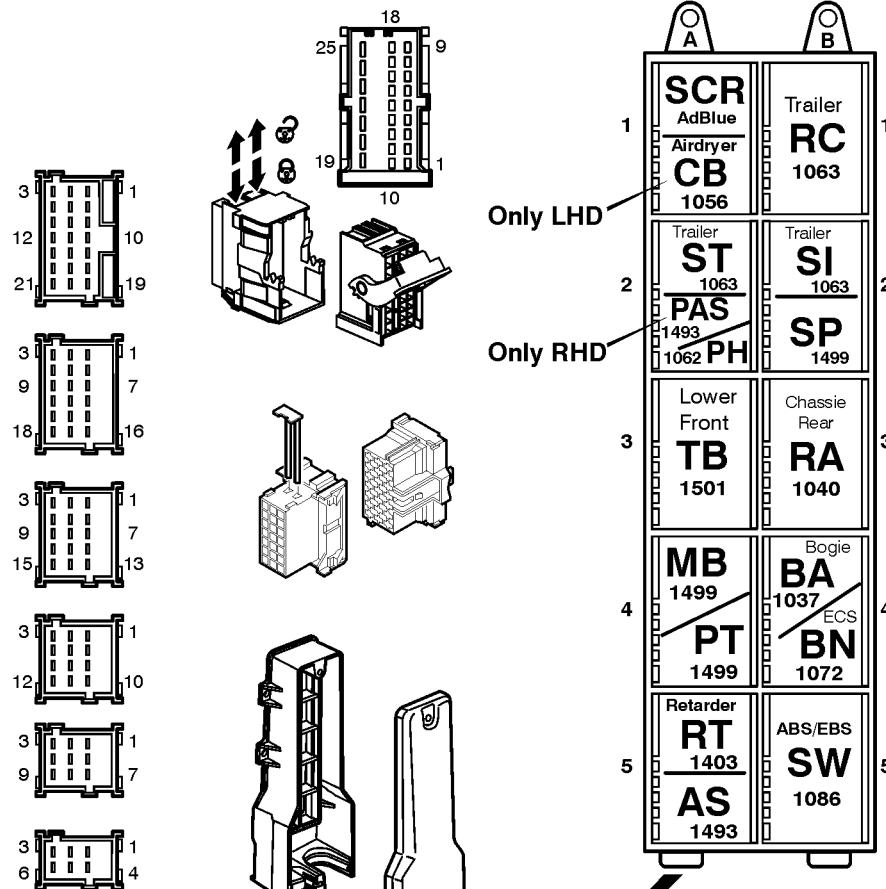

CAB Inlets RHS


Wires must always be positioned in the lower channel of the bracket.

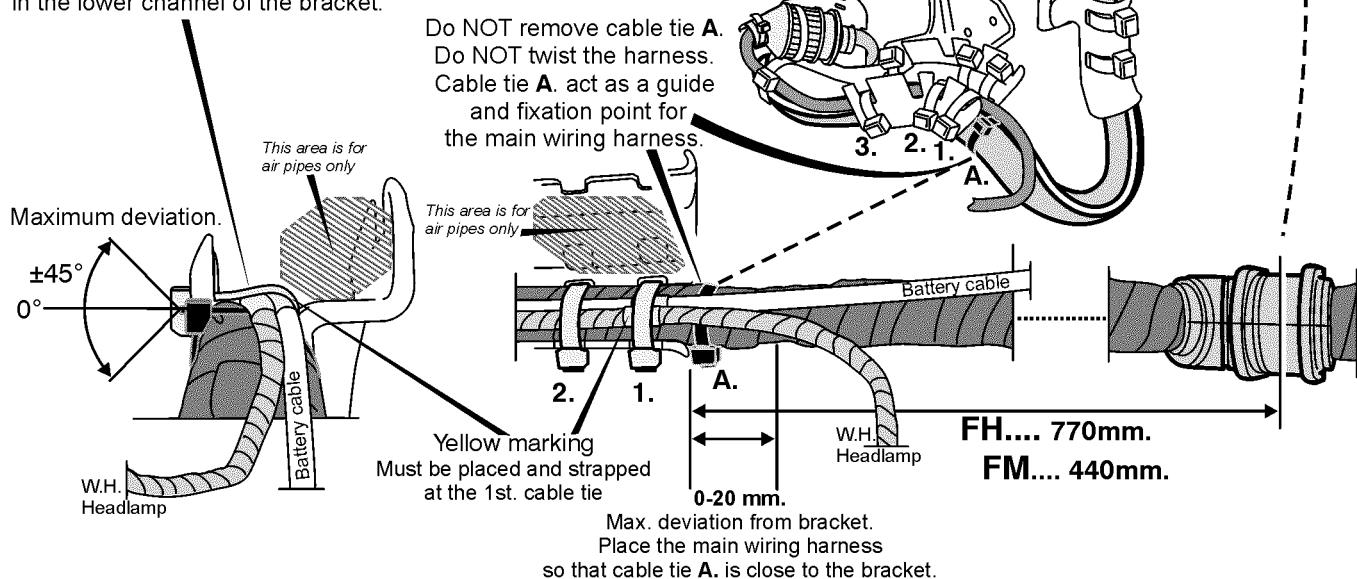


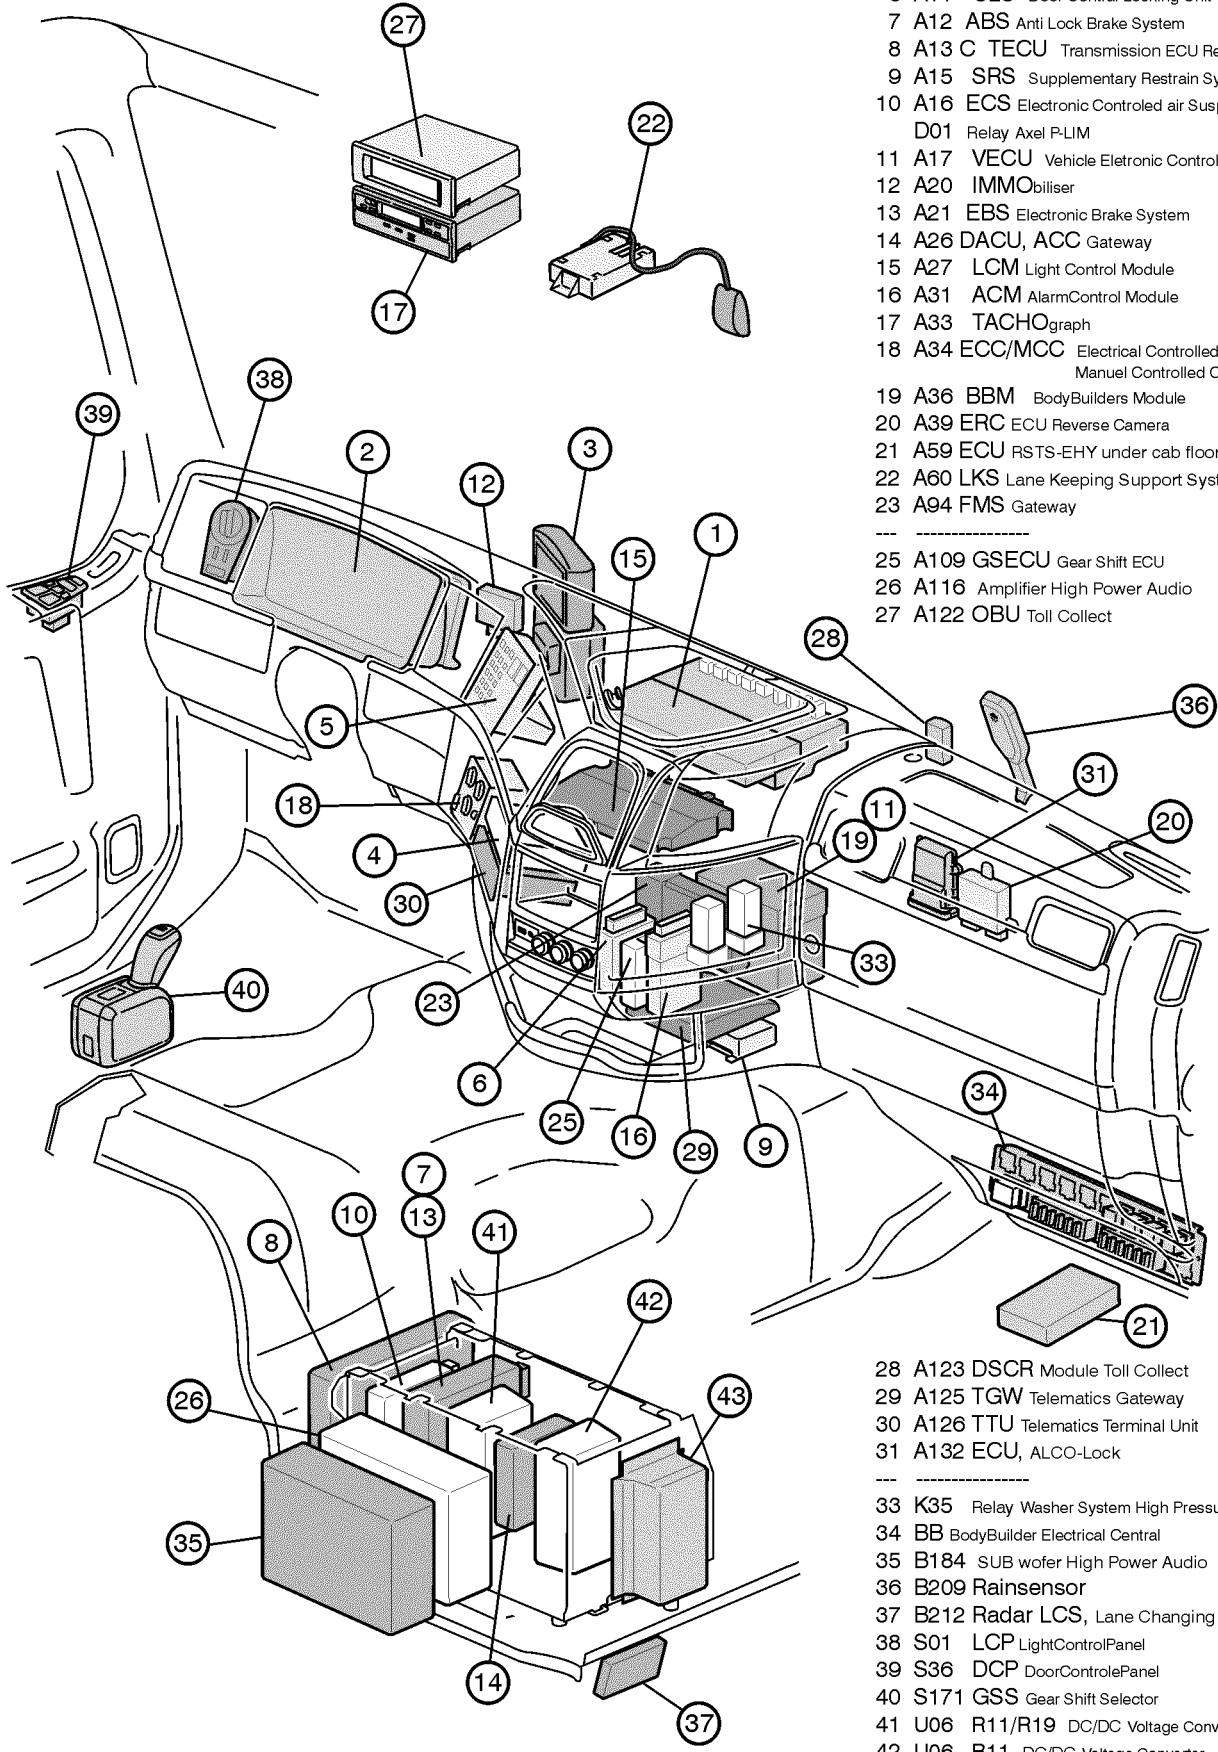


Cross index component number-MID number


Component number	MID number
A03 Instrument cluster	MID 140
A07 Radio	MID 206
A09 Telephone	MID 231
A12 Control unit ABS (Anti-lock Brake System)	MID 136
A13B Control unit TECU (Automatic transmission)	MID 130
A13C Control unit Retarder	MID 222
A13E Control unit TECU (Automatic transmission)	MID 130
A14 Control unit EMS (Engine Management System)	MID 128
A15 Control unit SRS (Supplementary Restraint System)	MID 232
A16 Control unit ECS (Electronic Controlled air Suspension)	MID 150
A17 Control unit VECU (Vehicle ECU)	MID 144
A20 Control unit Immobiliser	MID 163
A21 Control unit EBS (Electronic Brake System)	MID 136
A26 Control unit DACU	MID 238
A27 Control unit LCM (Light Control Module)	MID 216
A31 Control unit burglar alarm	MID 214
A33 Tachograph	MID 220
A34 Control unit climate unit	MID 146
A36 Control unit BBM (Body Builder Module)	MID 249
A59 Control unit RAS (Rear Axle Steering)	MID 184
A60 Control unit LKS (Lane Keeping Support System)	MID 248
A77 Control unit TPM (Tyre pressure monitoring)	MID 166
A94 Control unit FMS Gateway (Fleet Management System)	MID 179
A109 Control unit GSECU (Gearshift ECU)	MID 223
A125 Control unit TGW (Telematics Gateway)	MID 141
A126 Control unit TTU (Telematics Terminal Unit)	MID 203
B120 Radar ACC (Adaptive Cruise Control)	MID 219
B212 Radar LCS (Lane Change Support)	MID 204

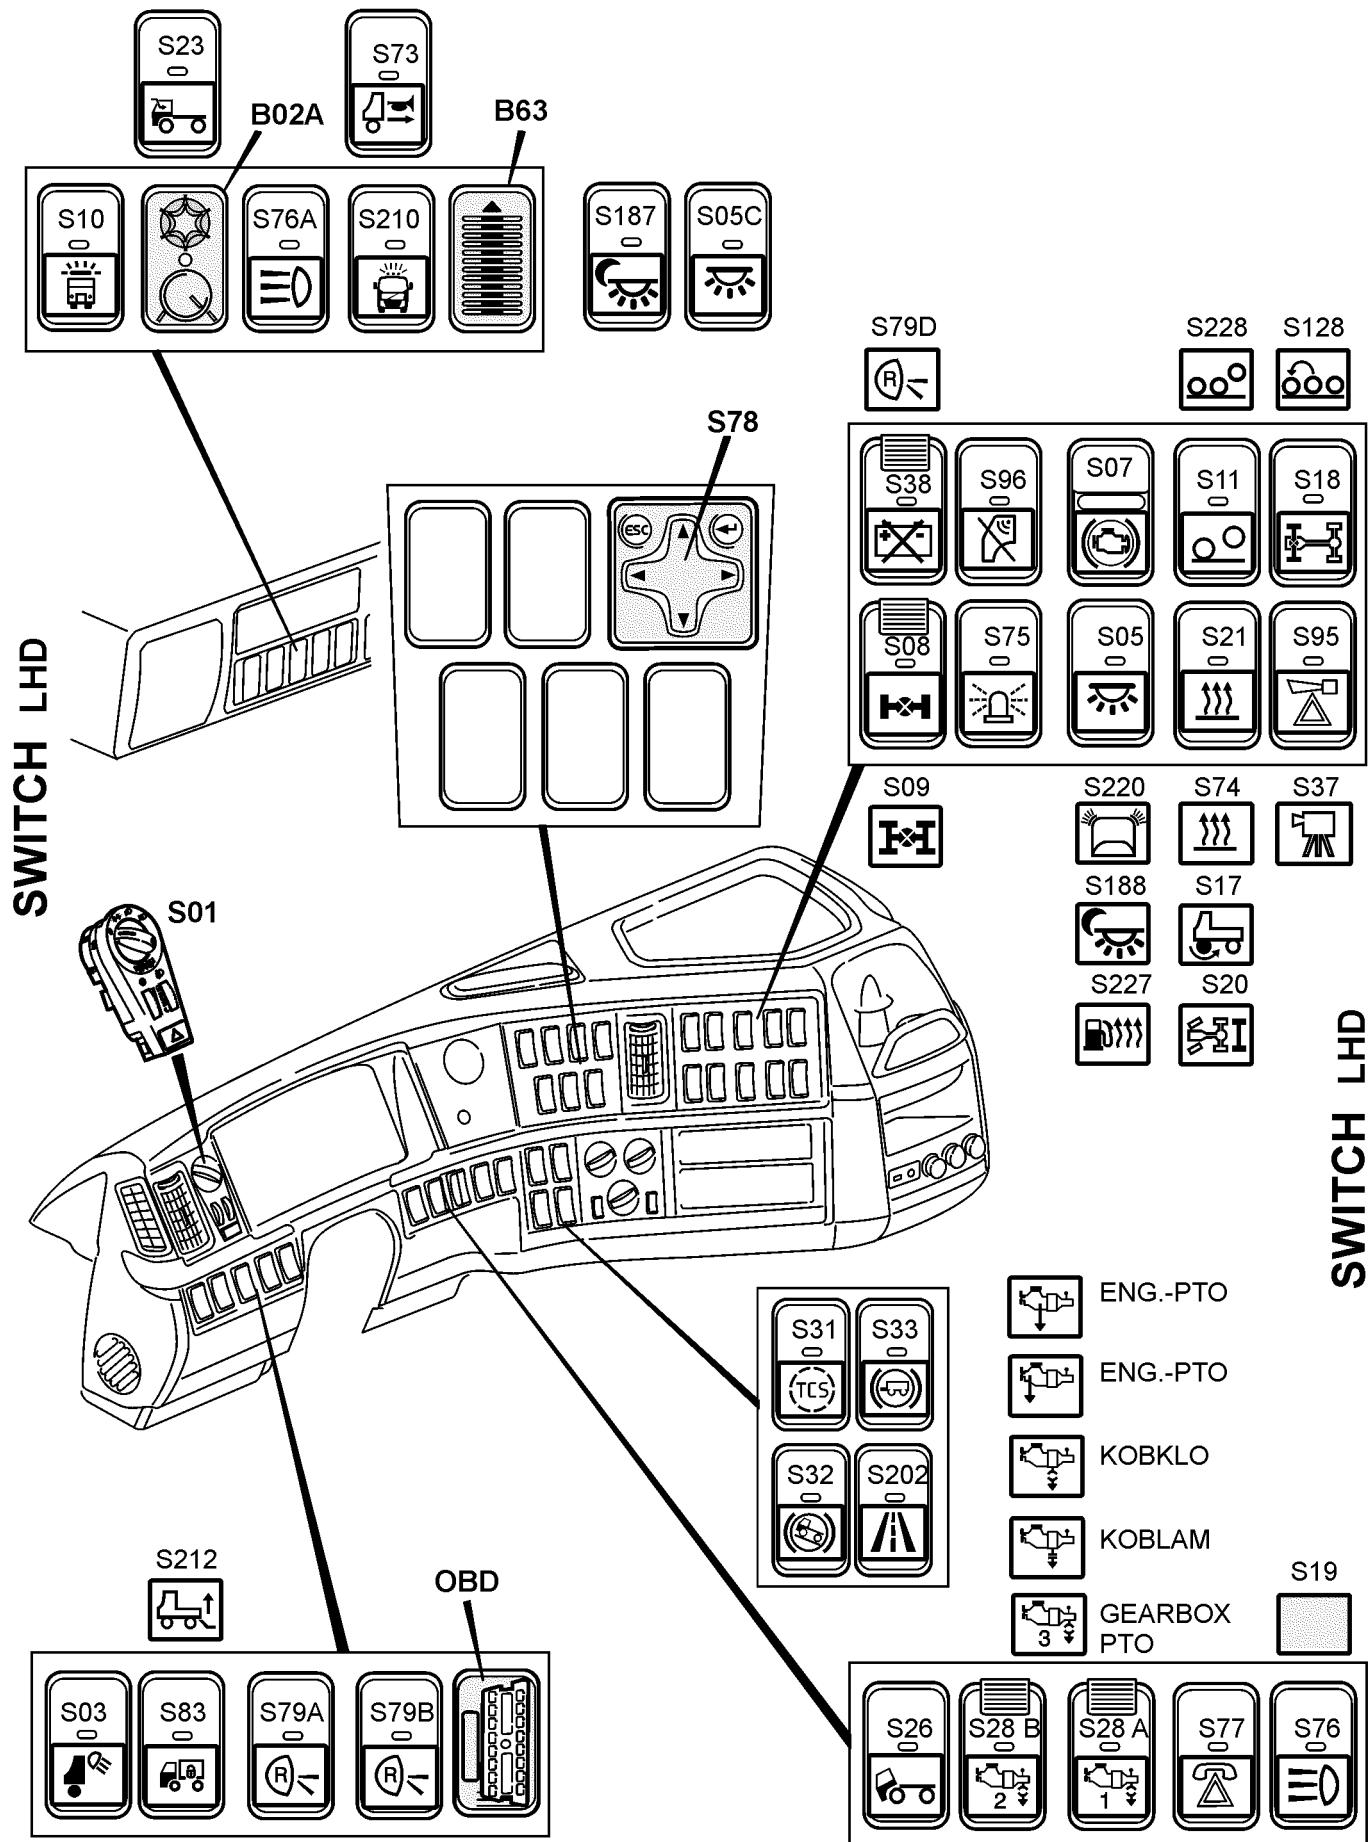


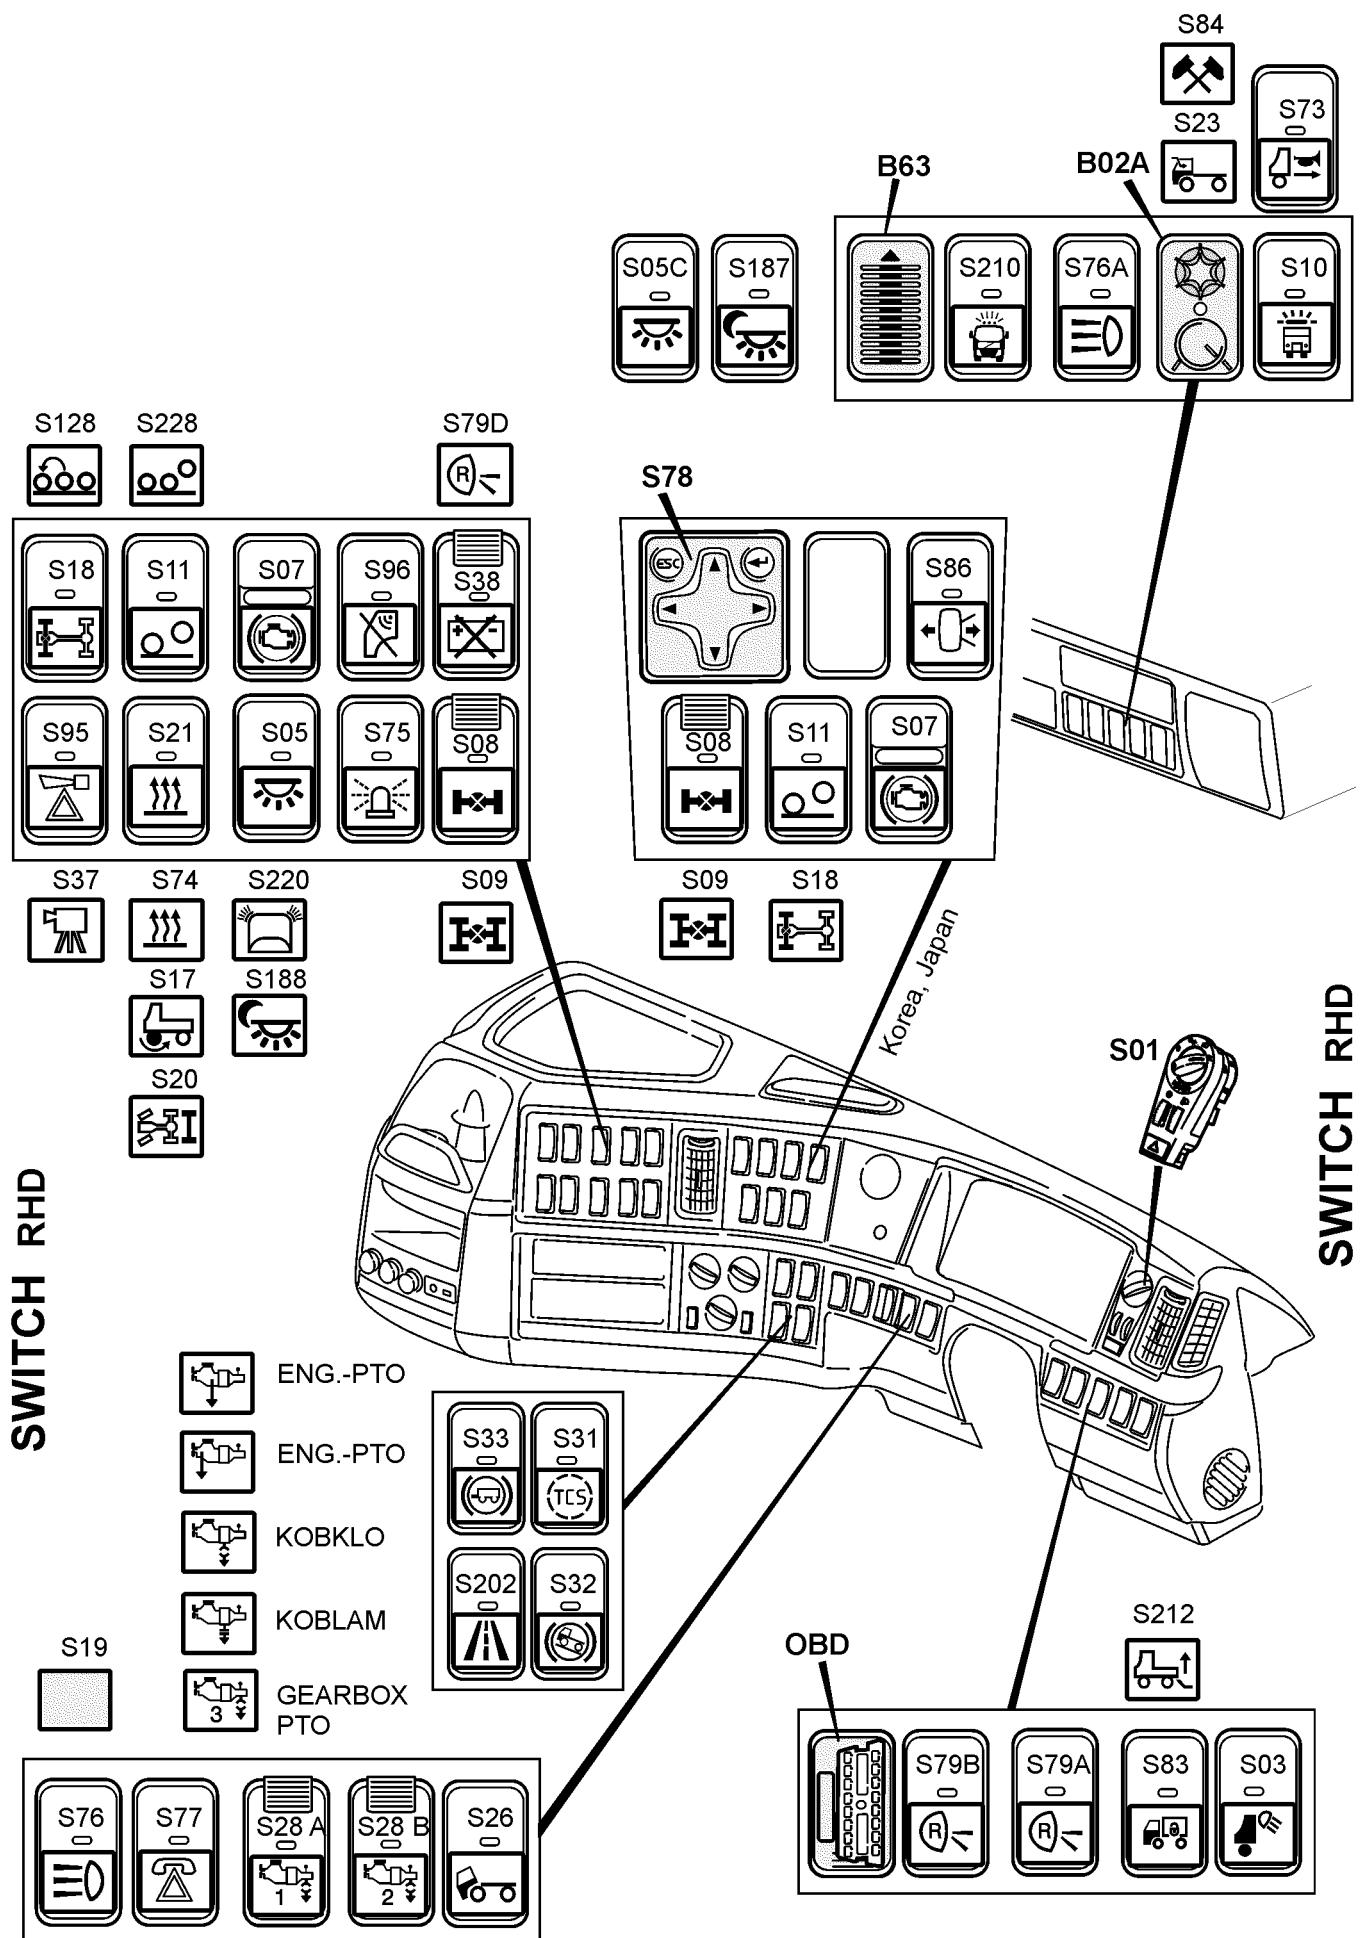


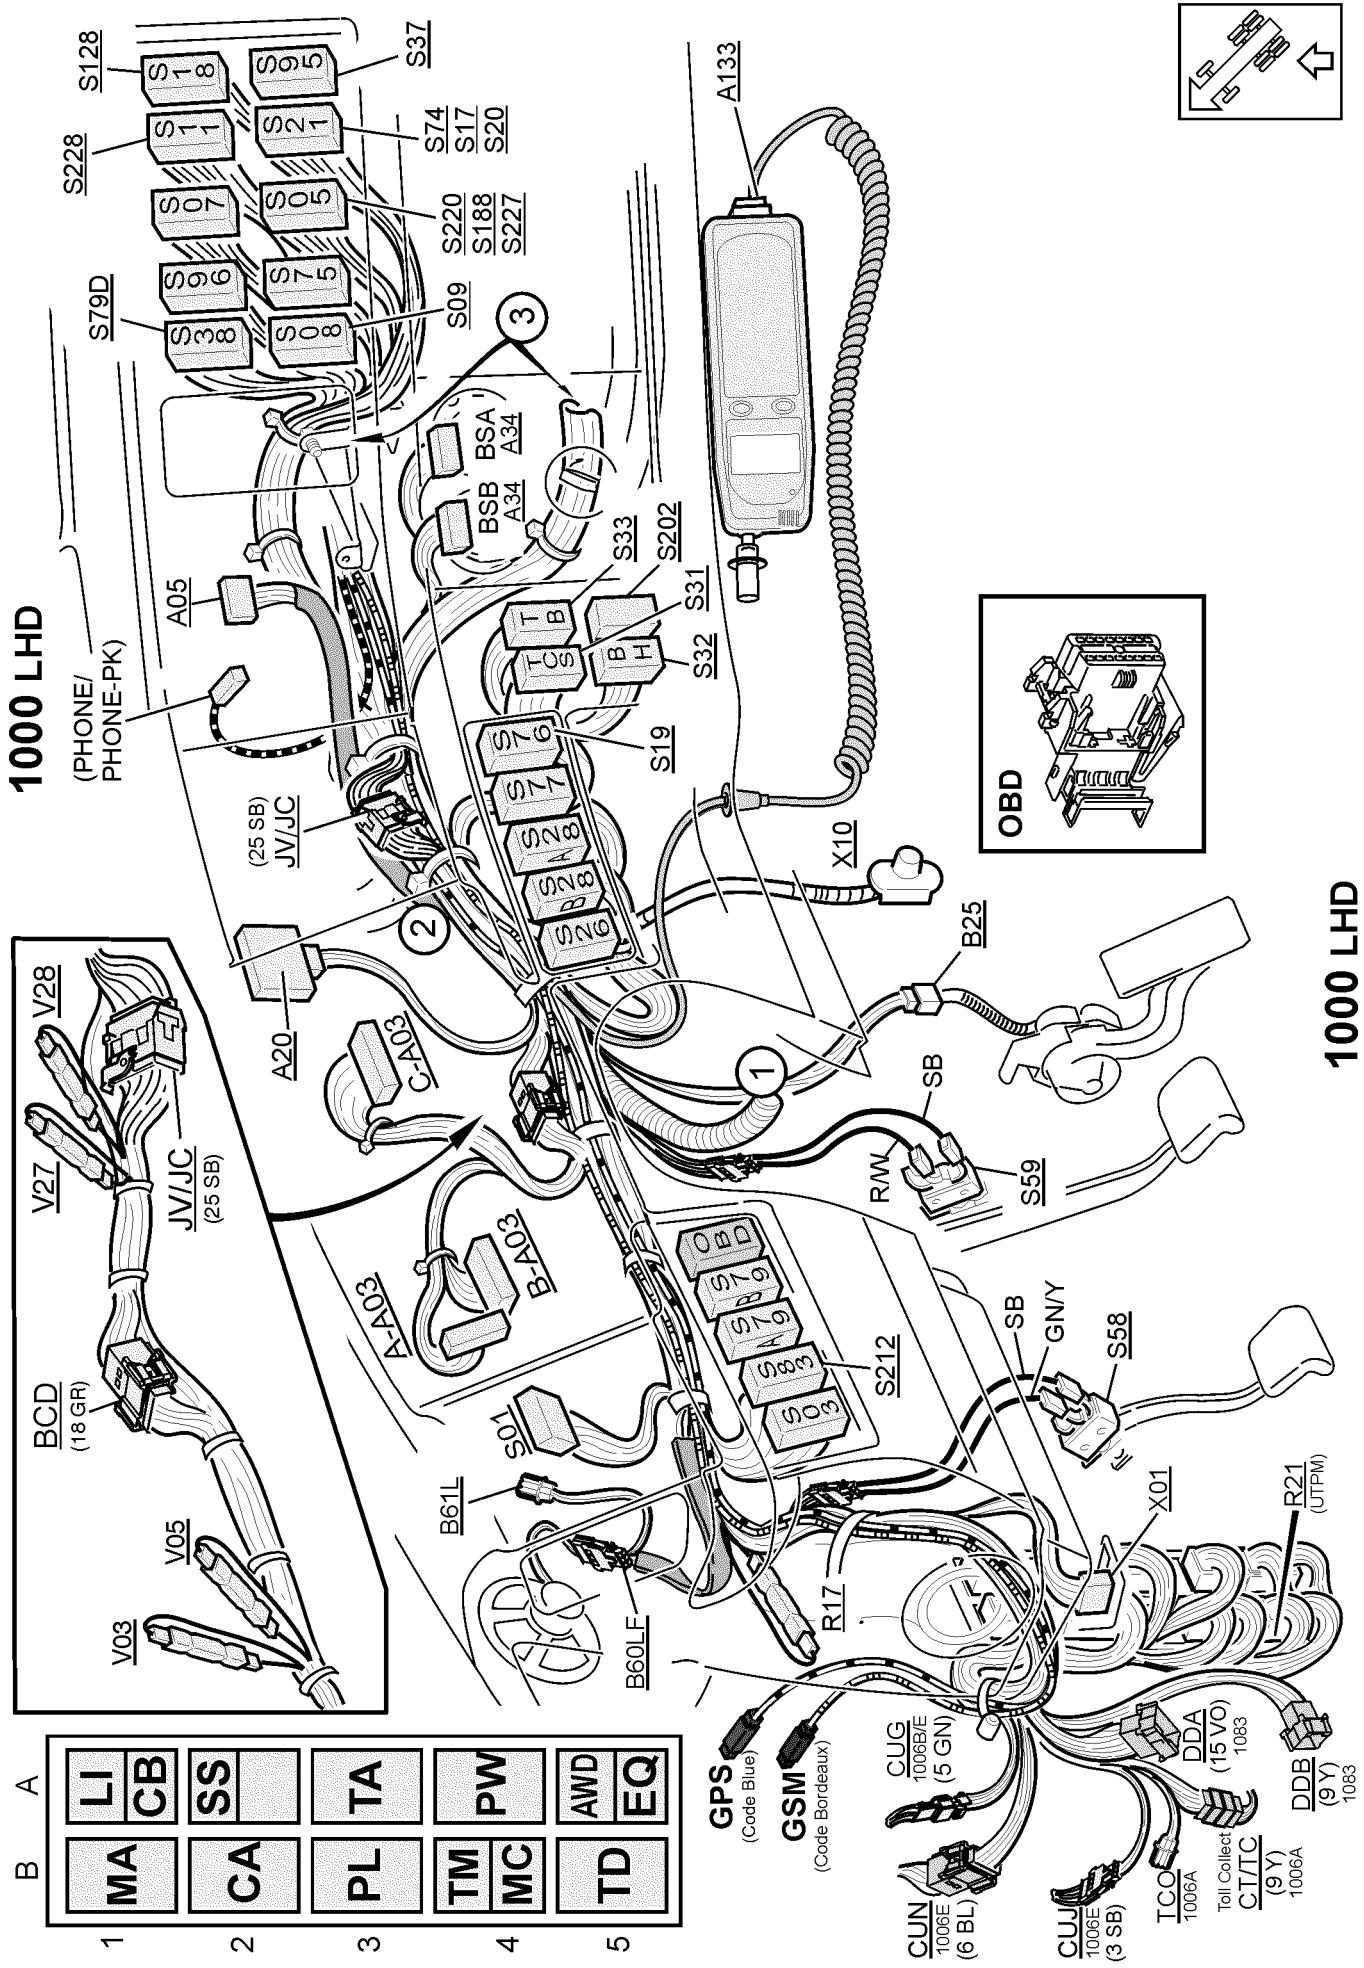


T3059933

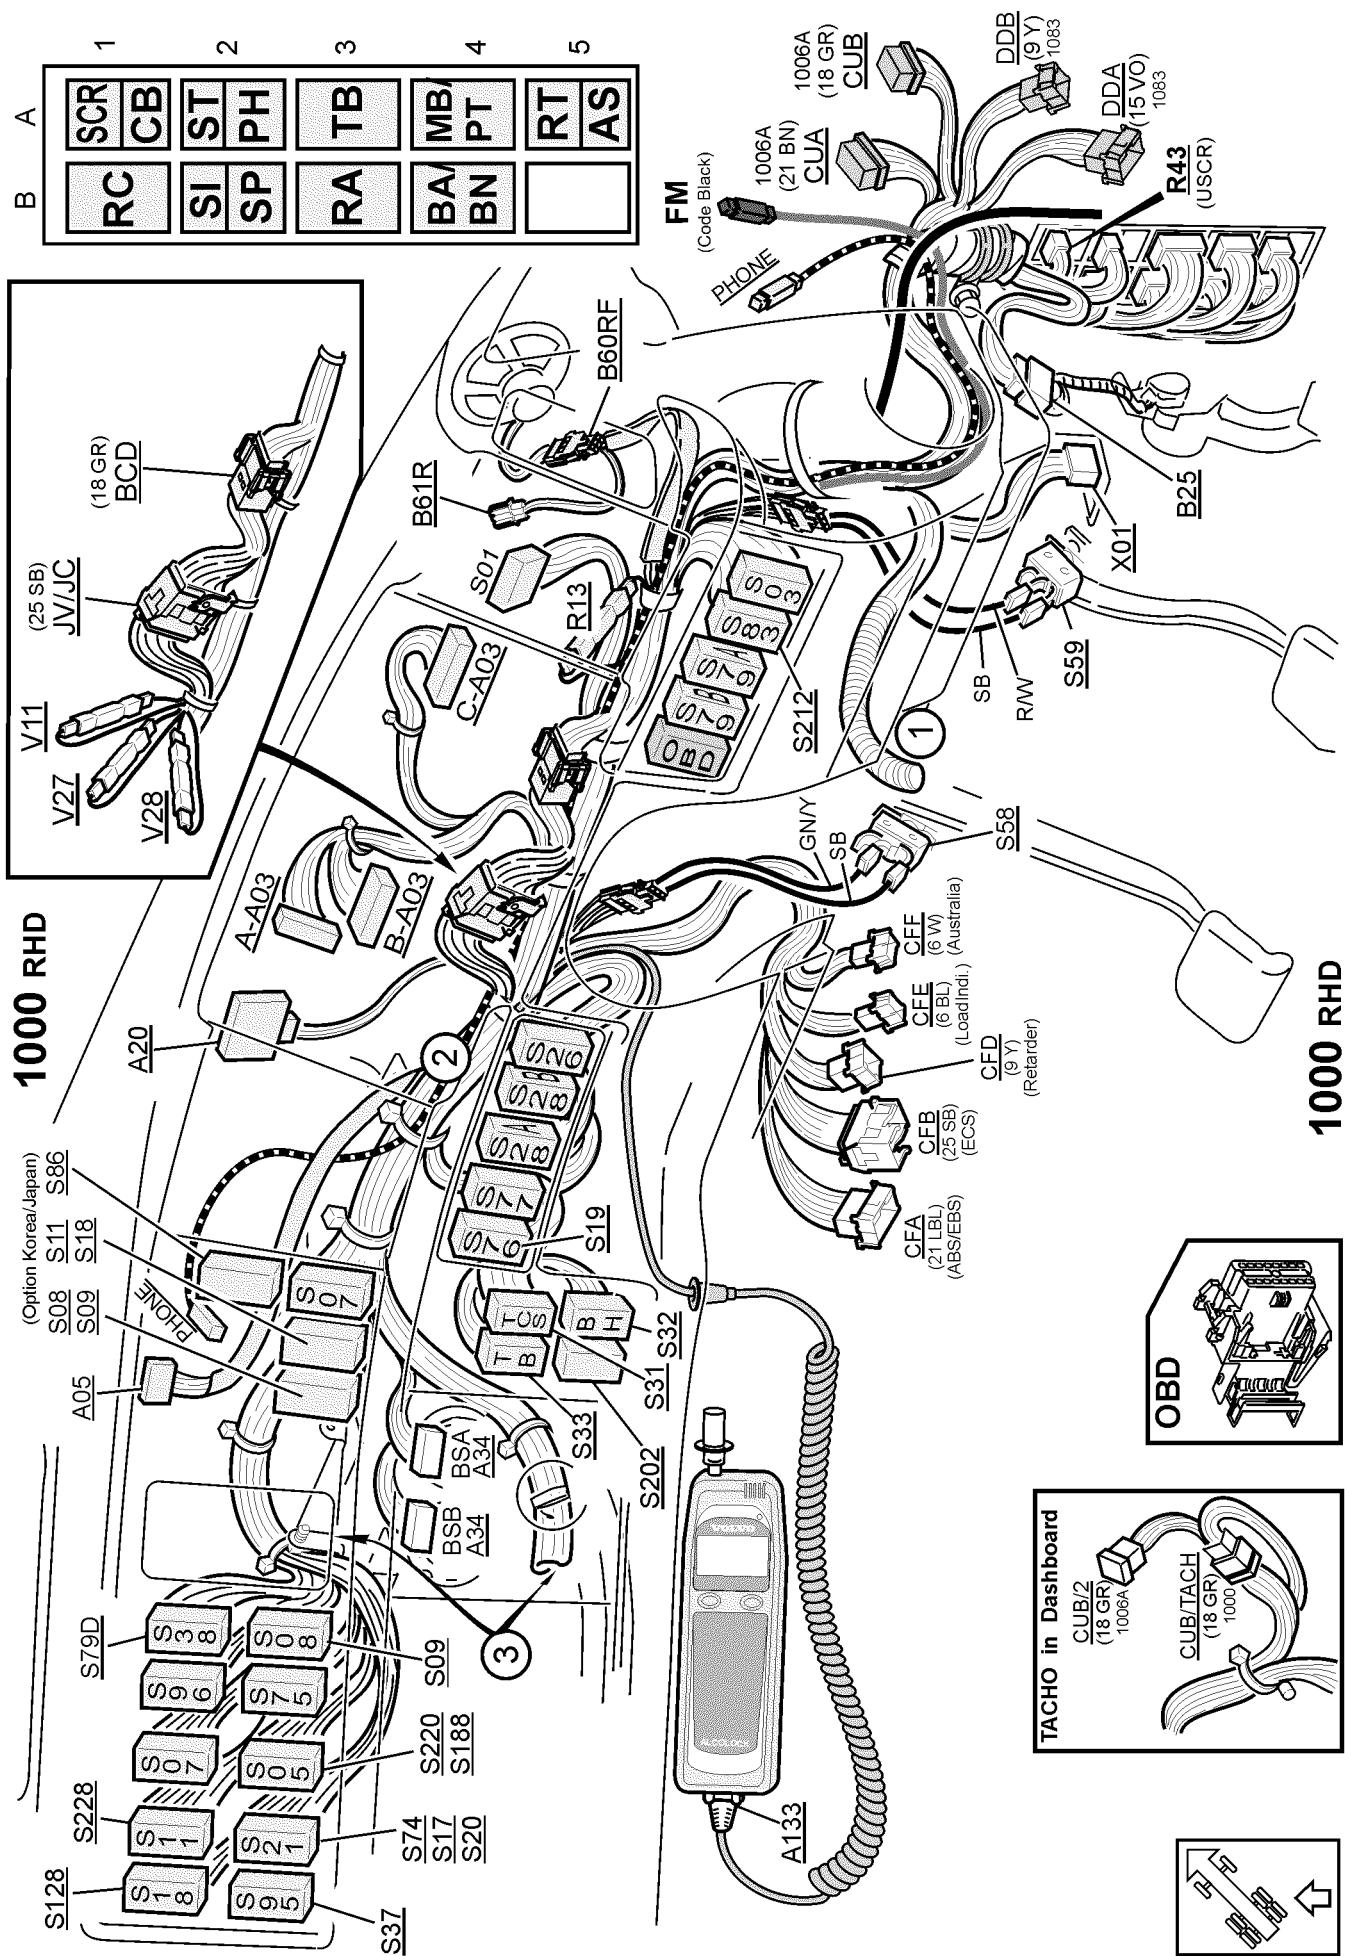

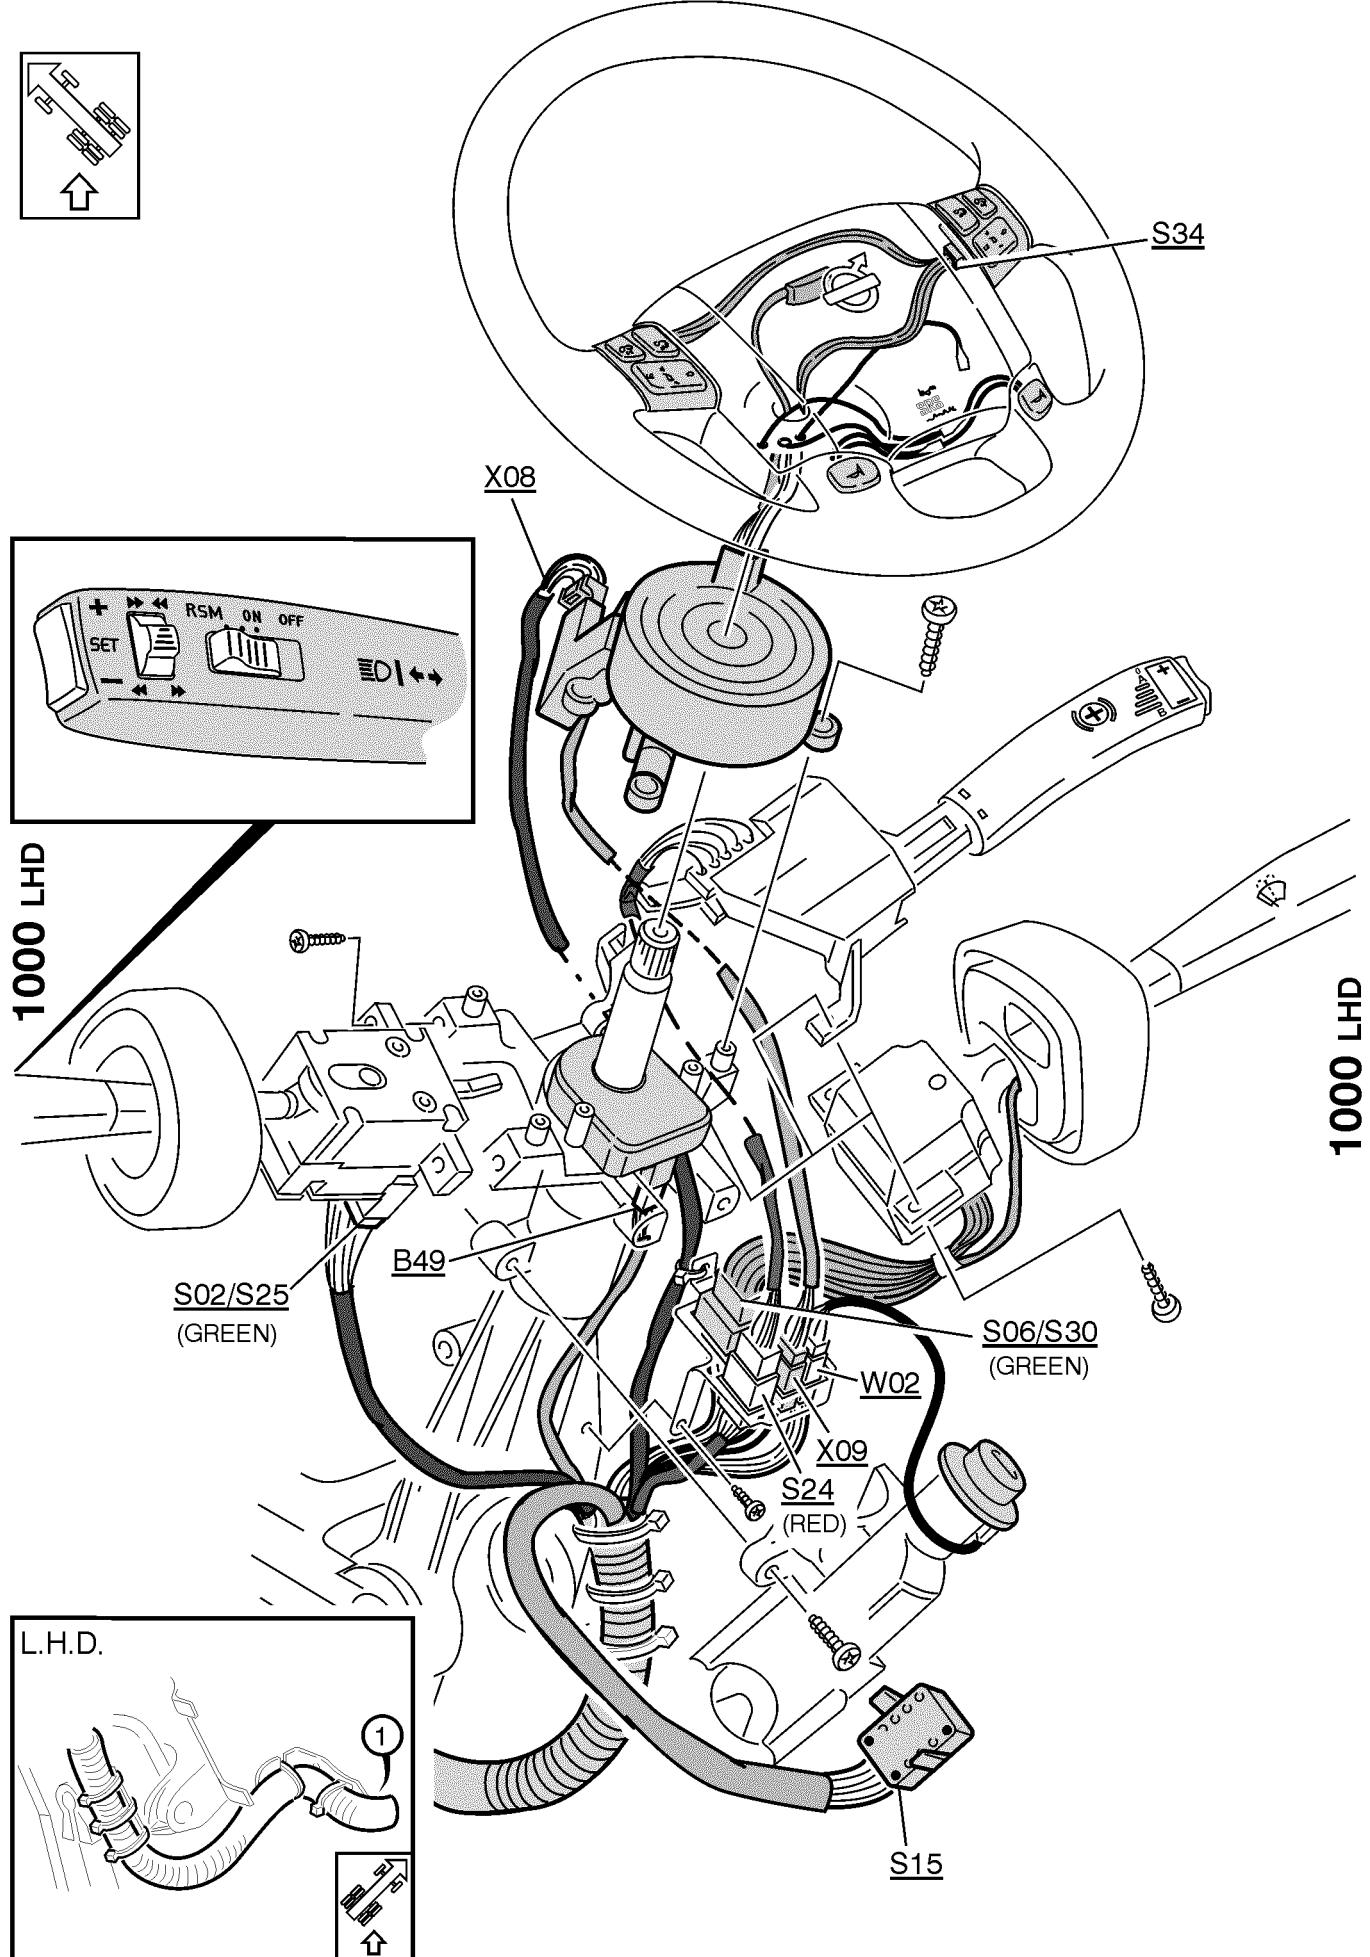


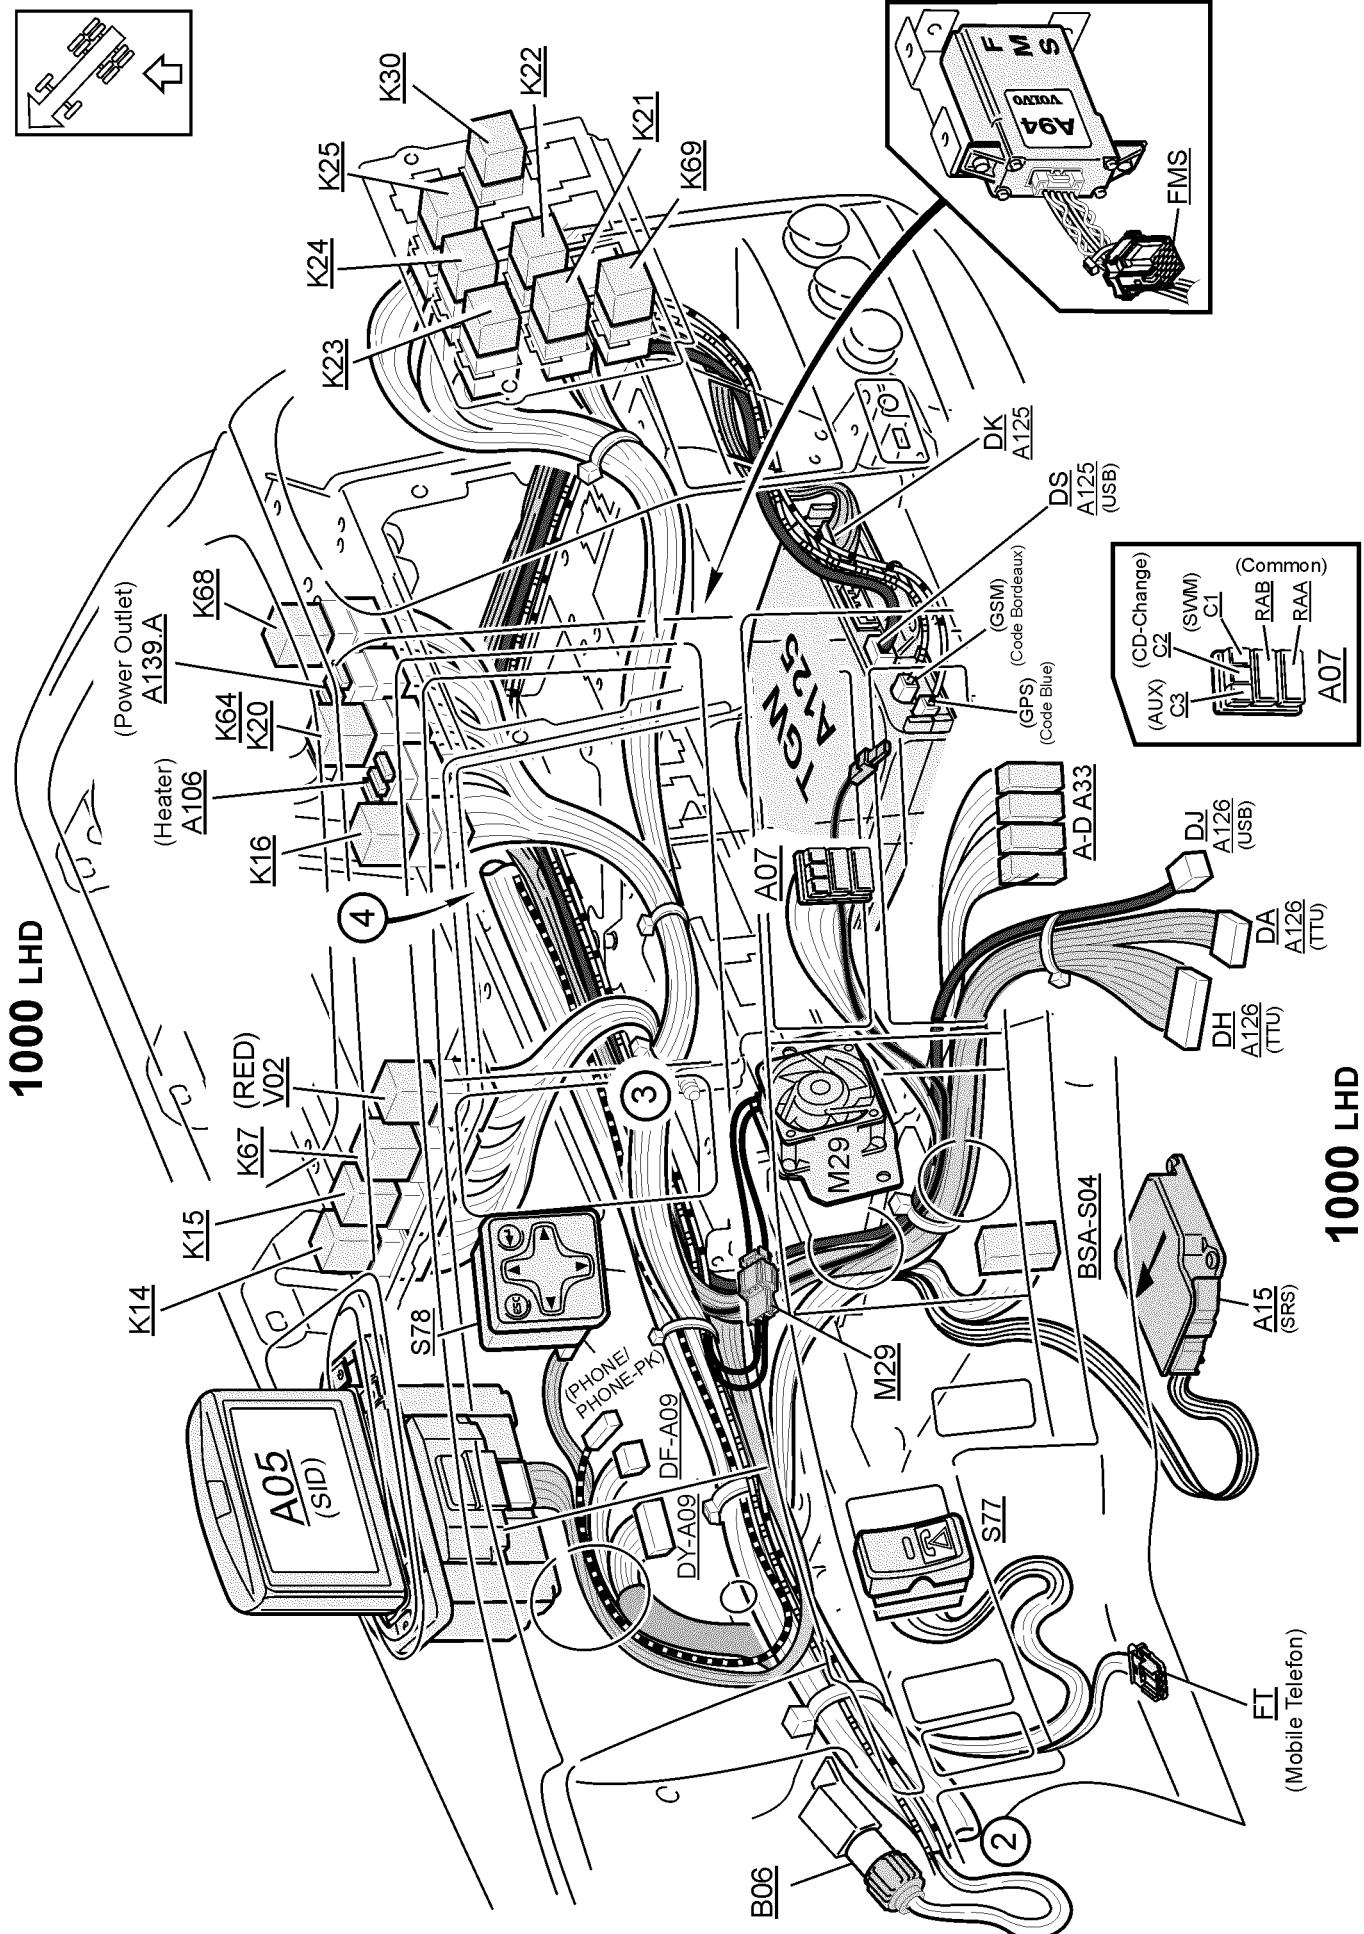



1000 RHD

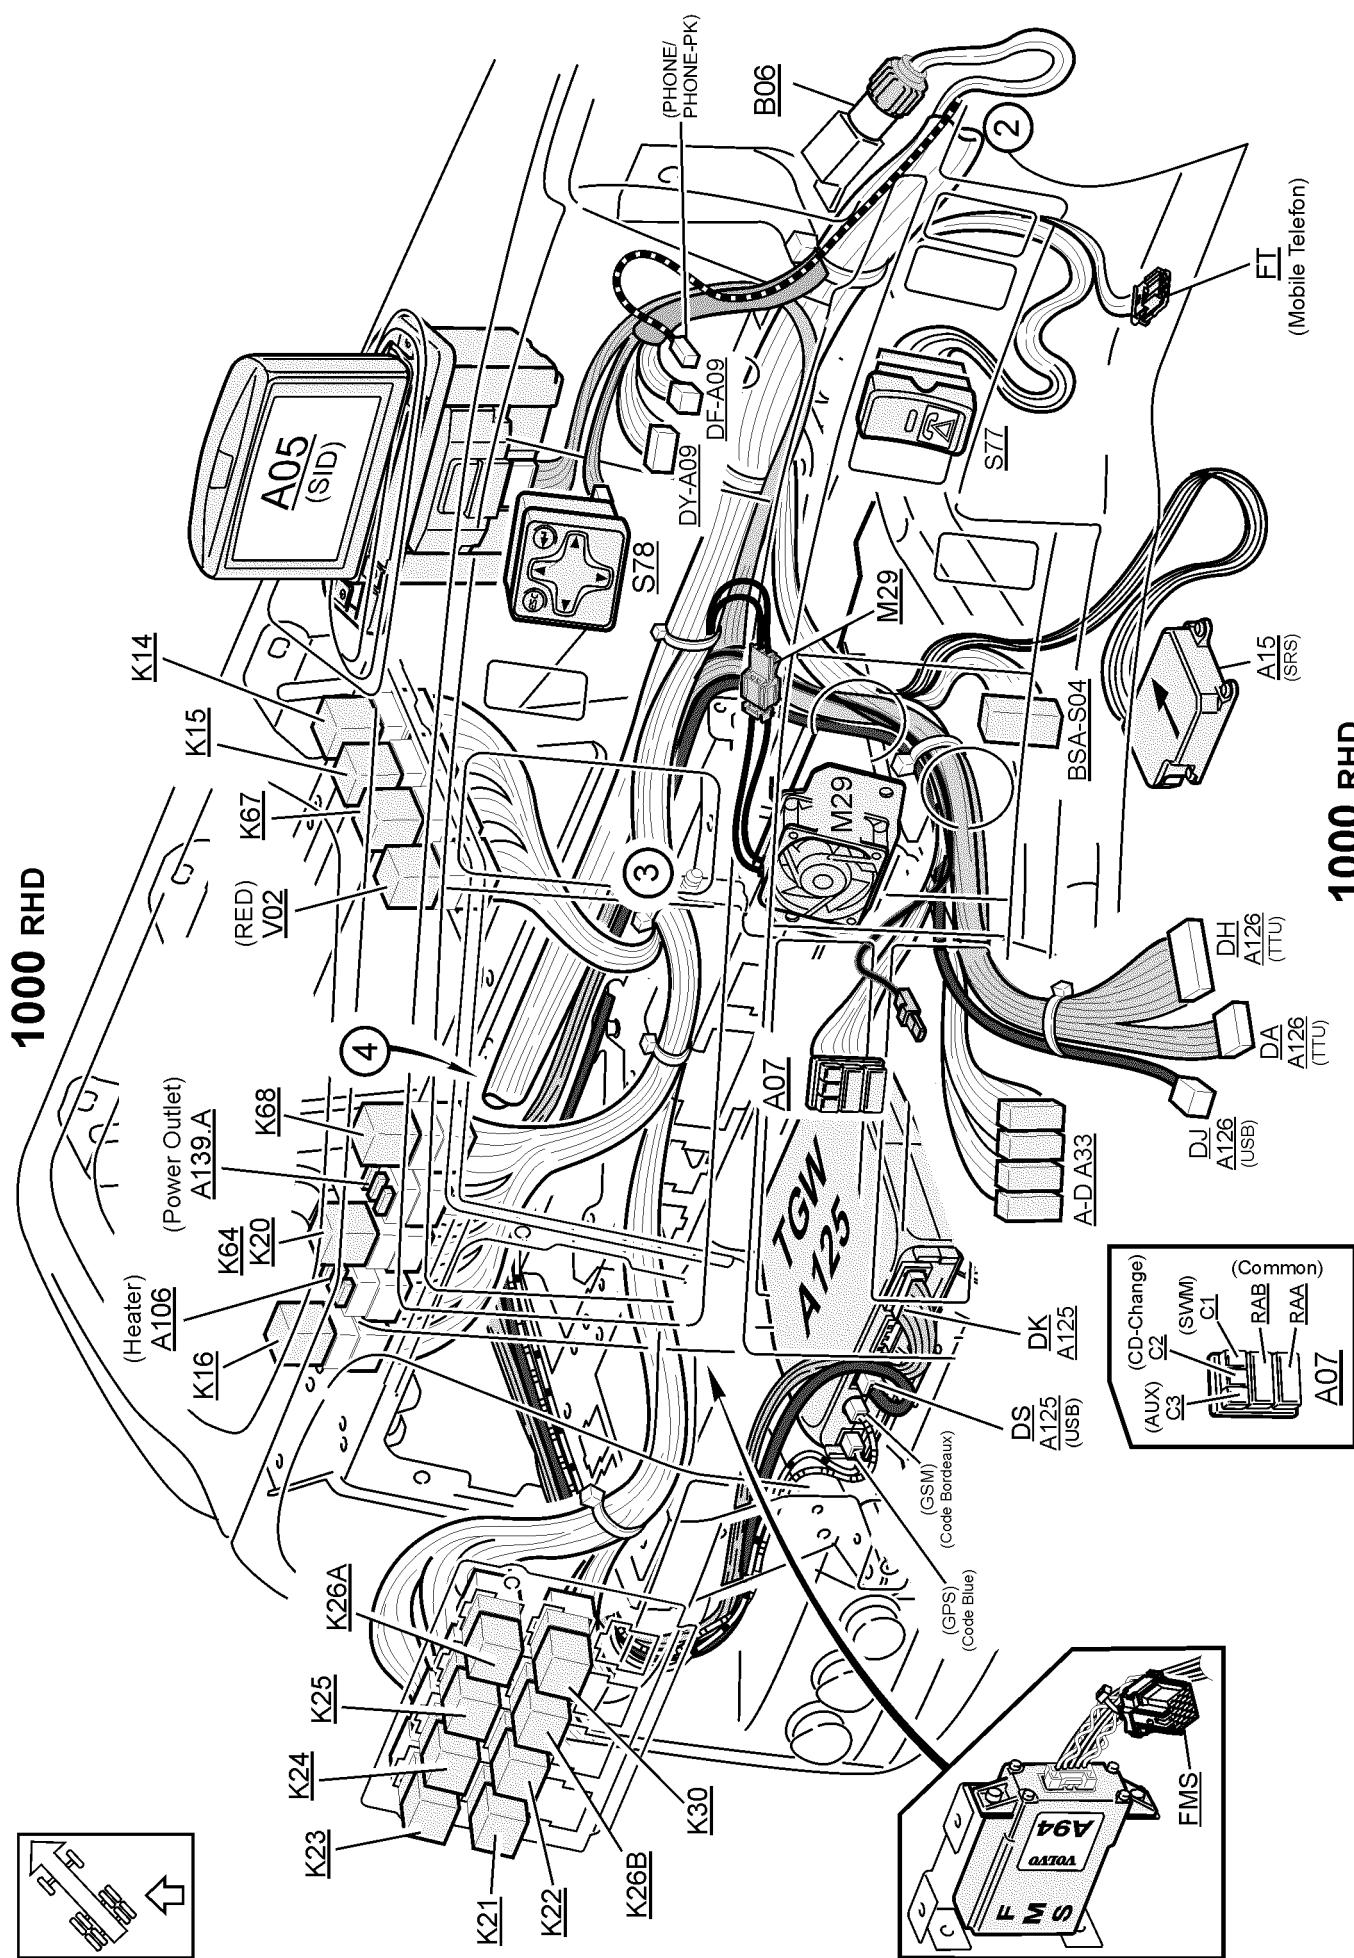



T3059937

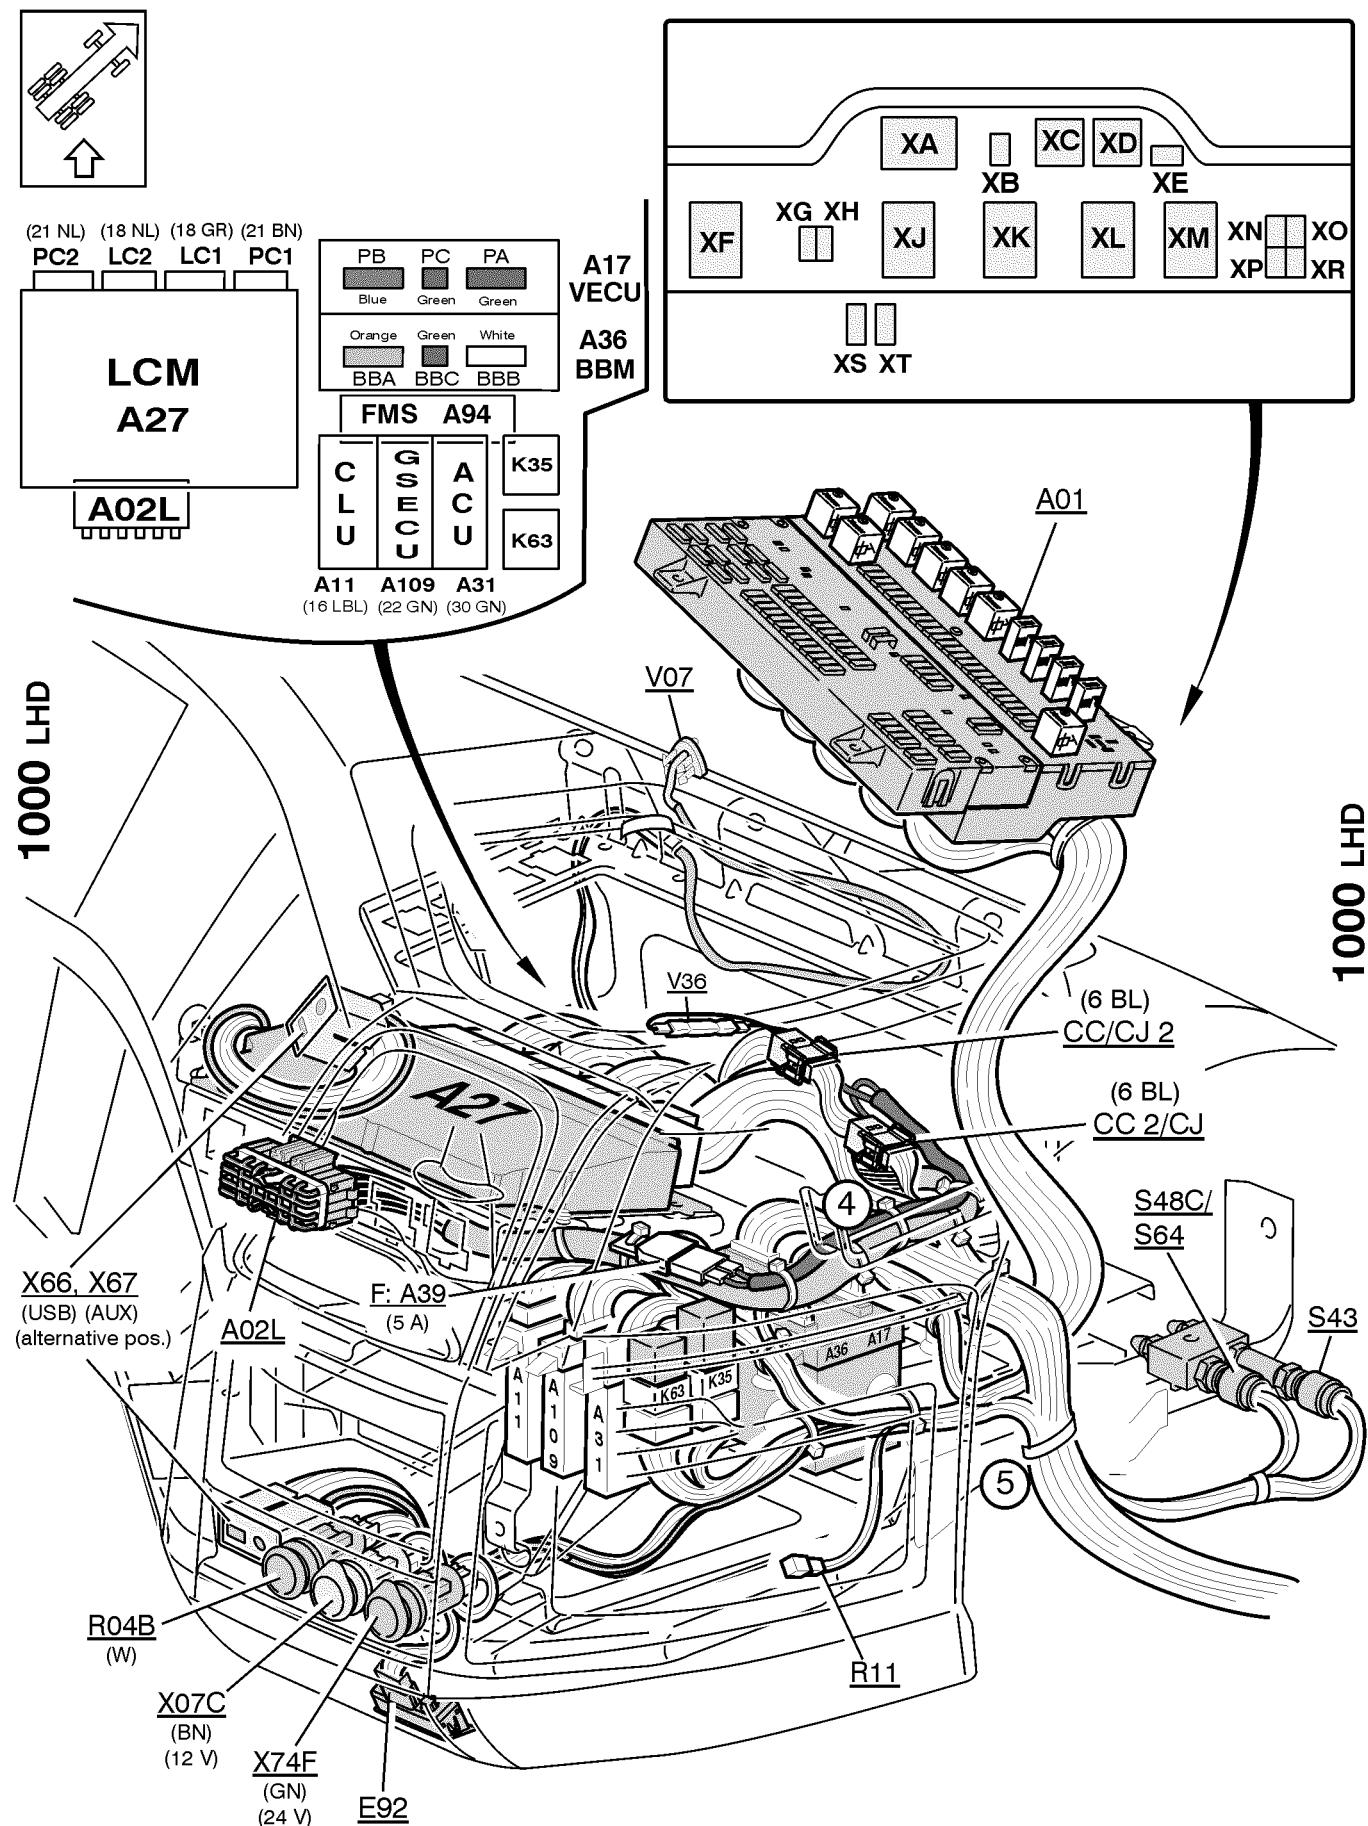


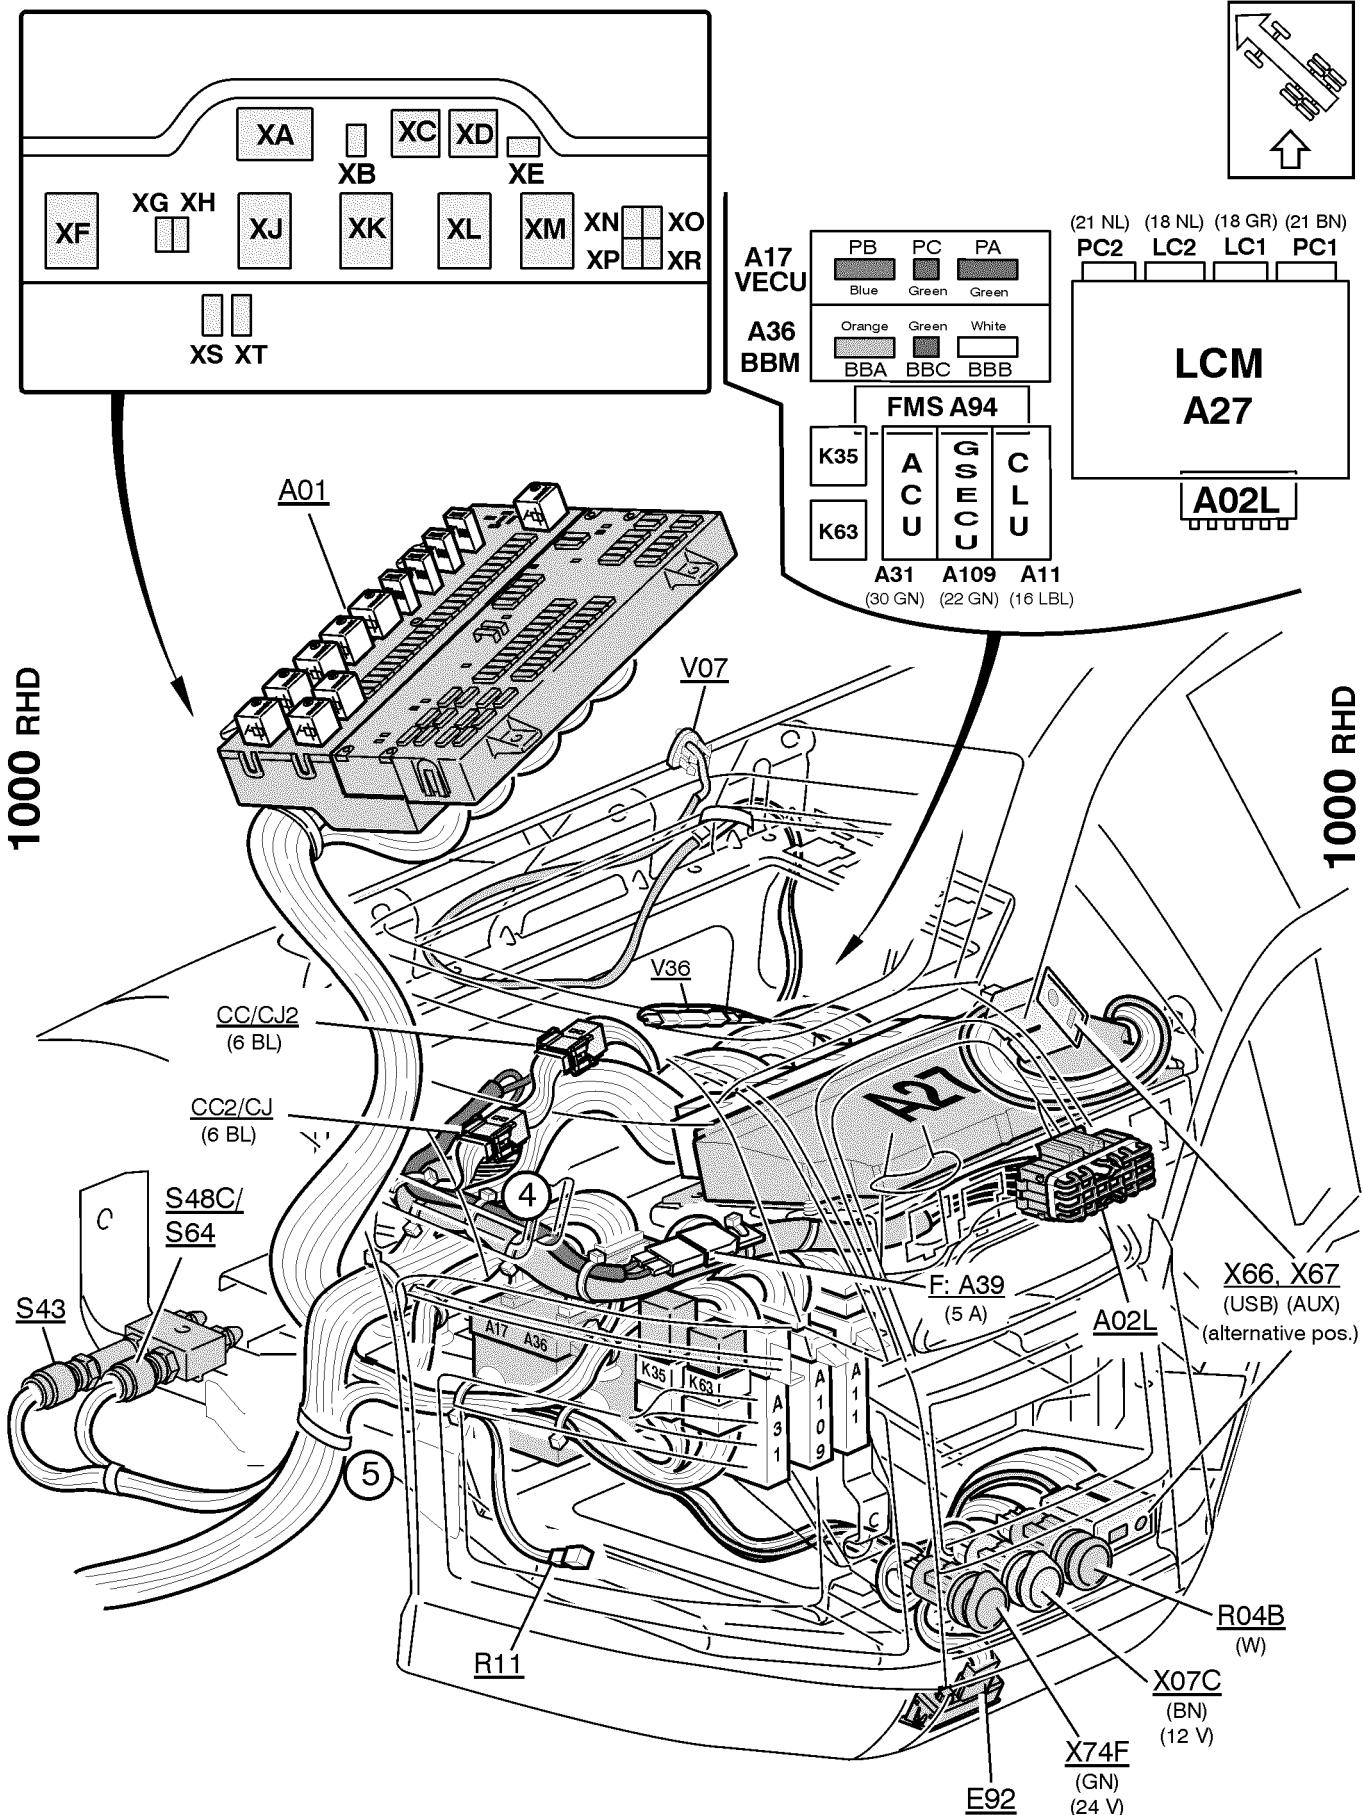


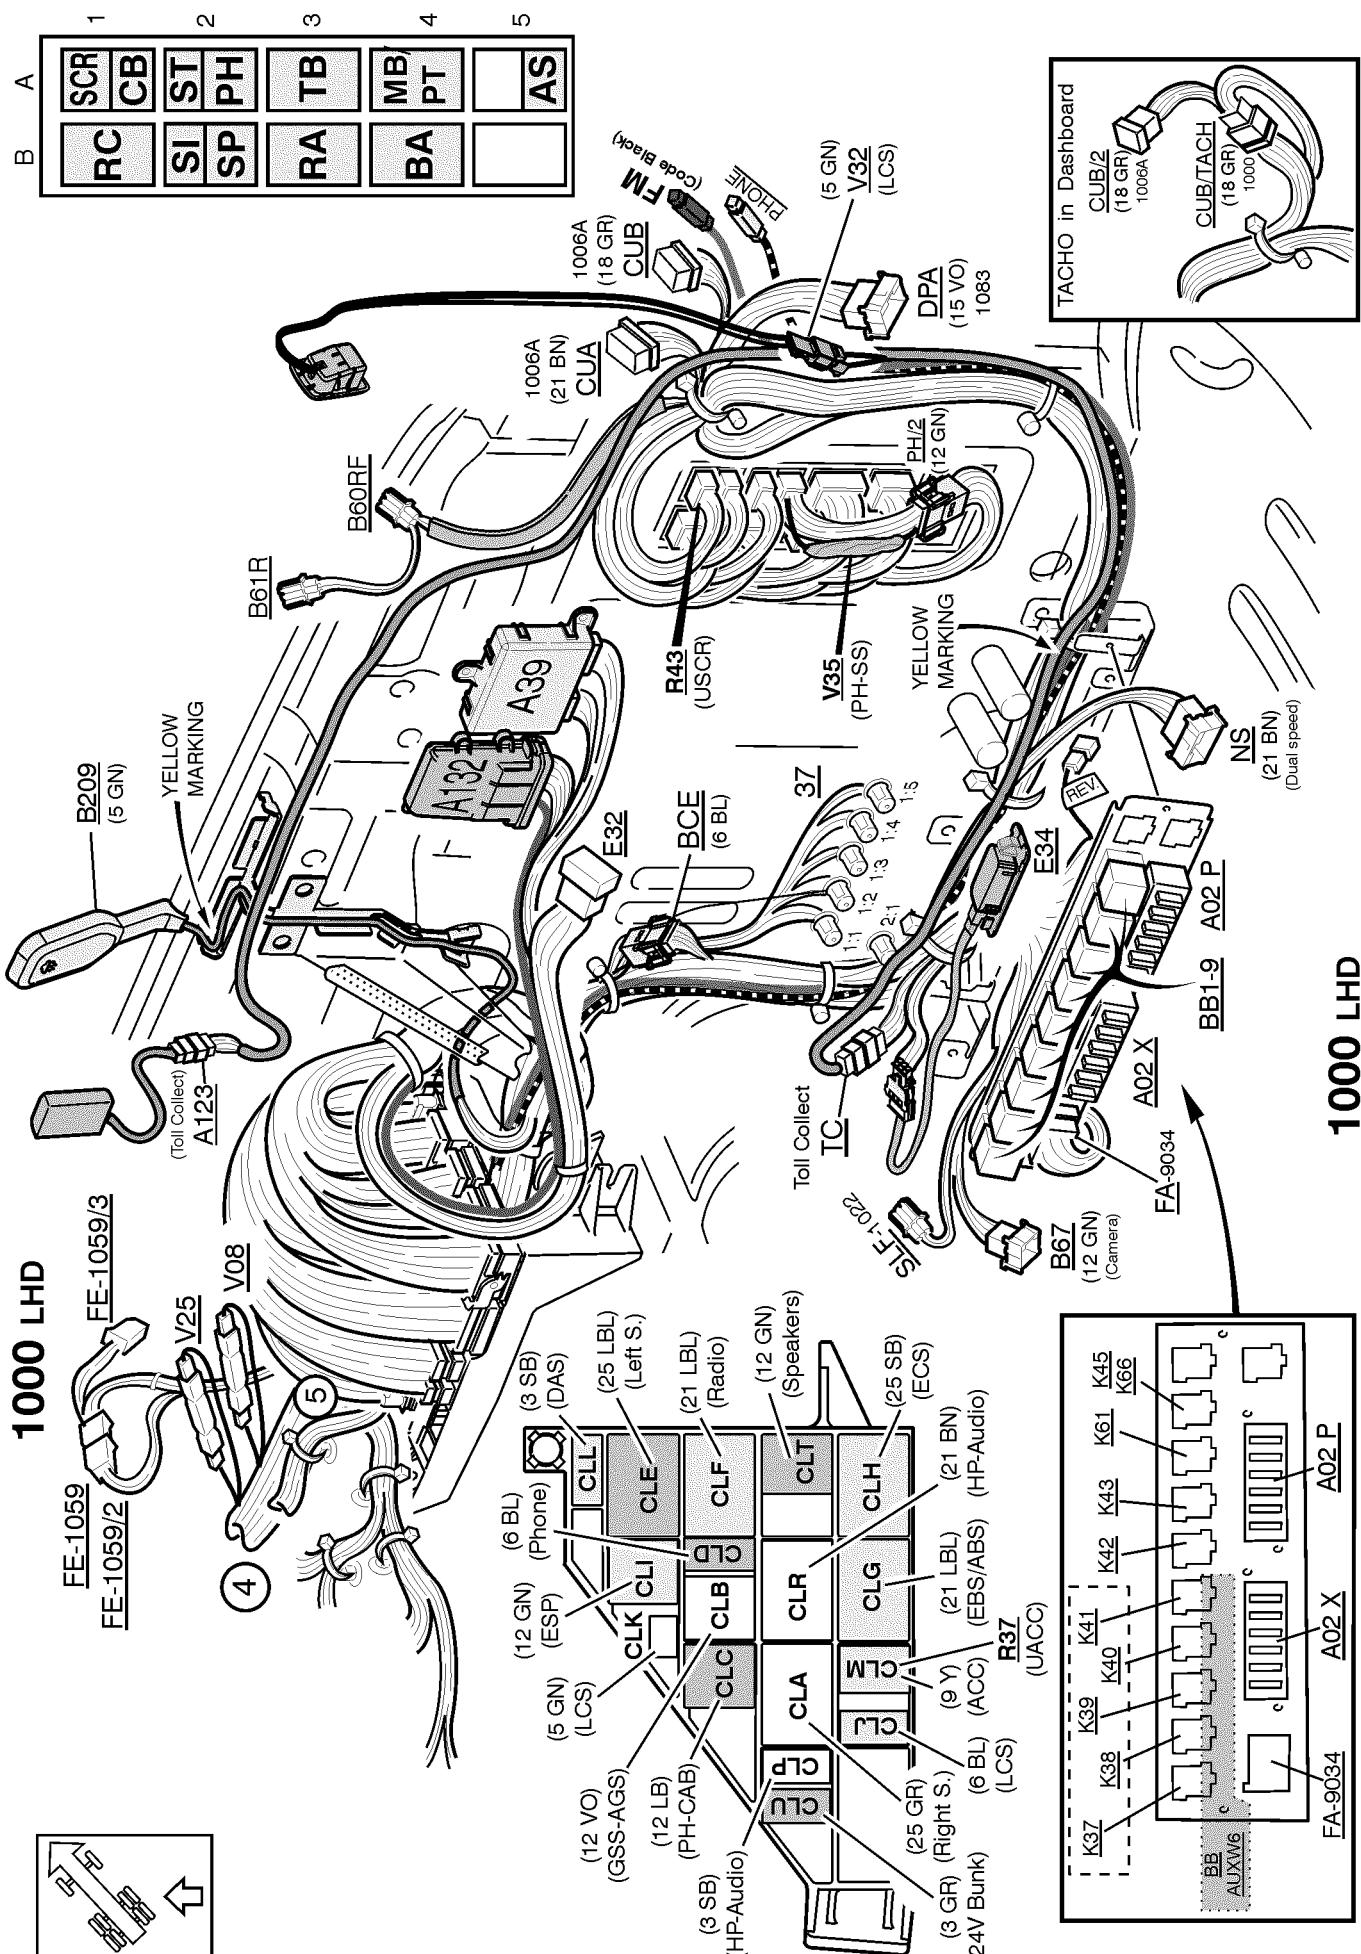


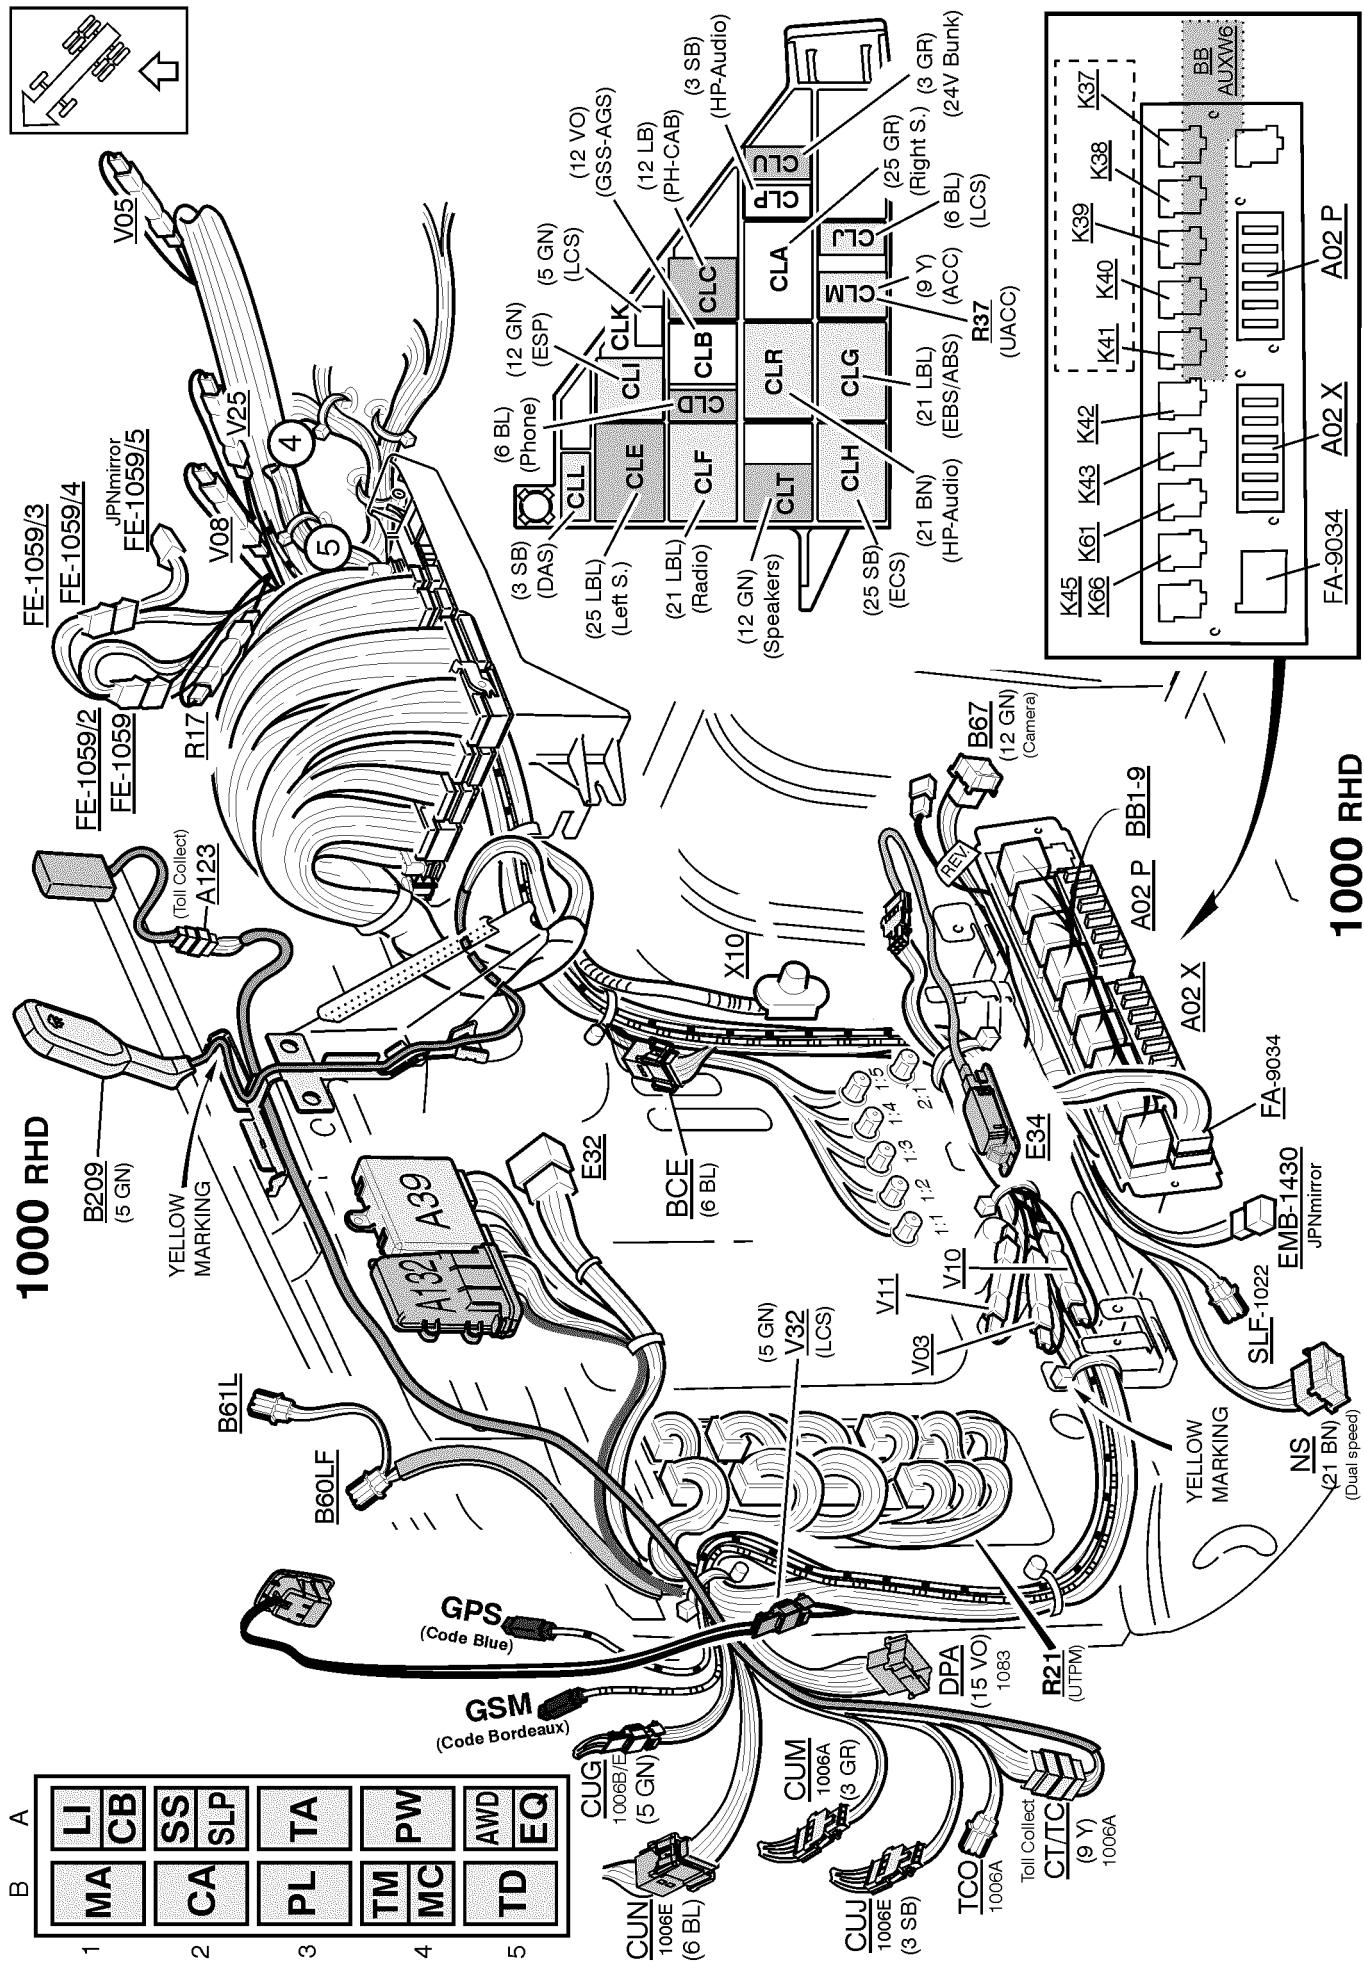


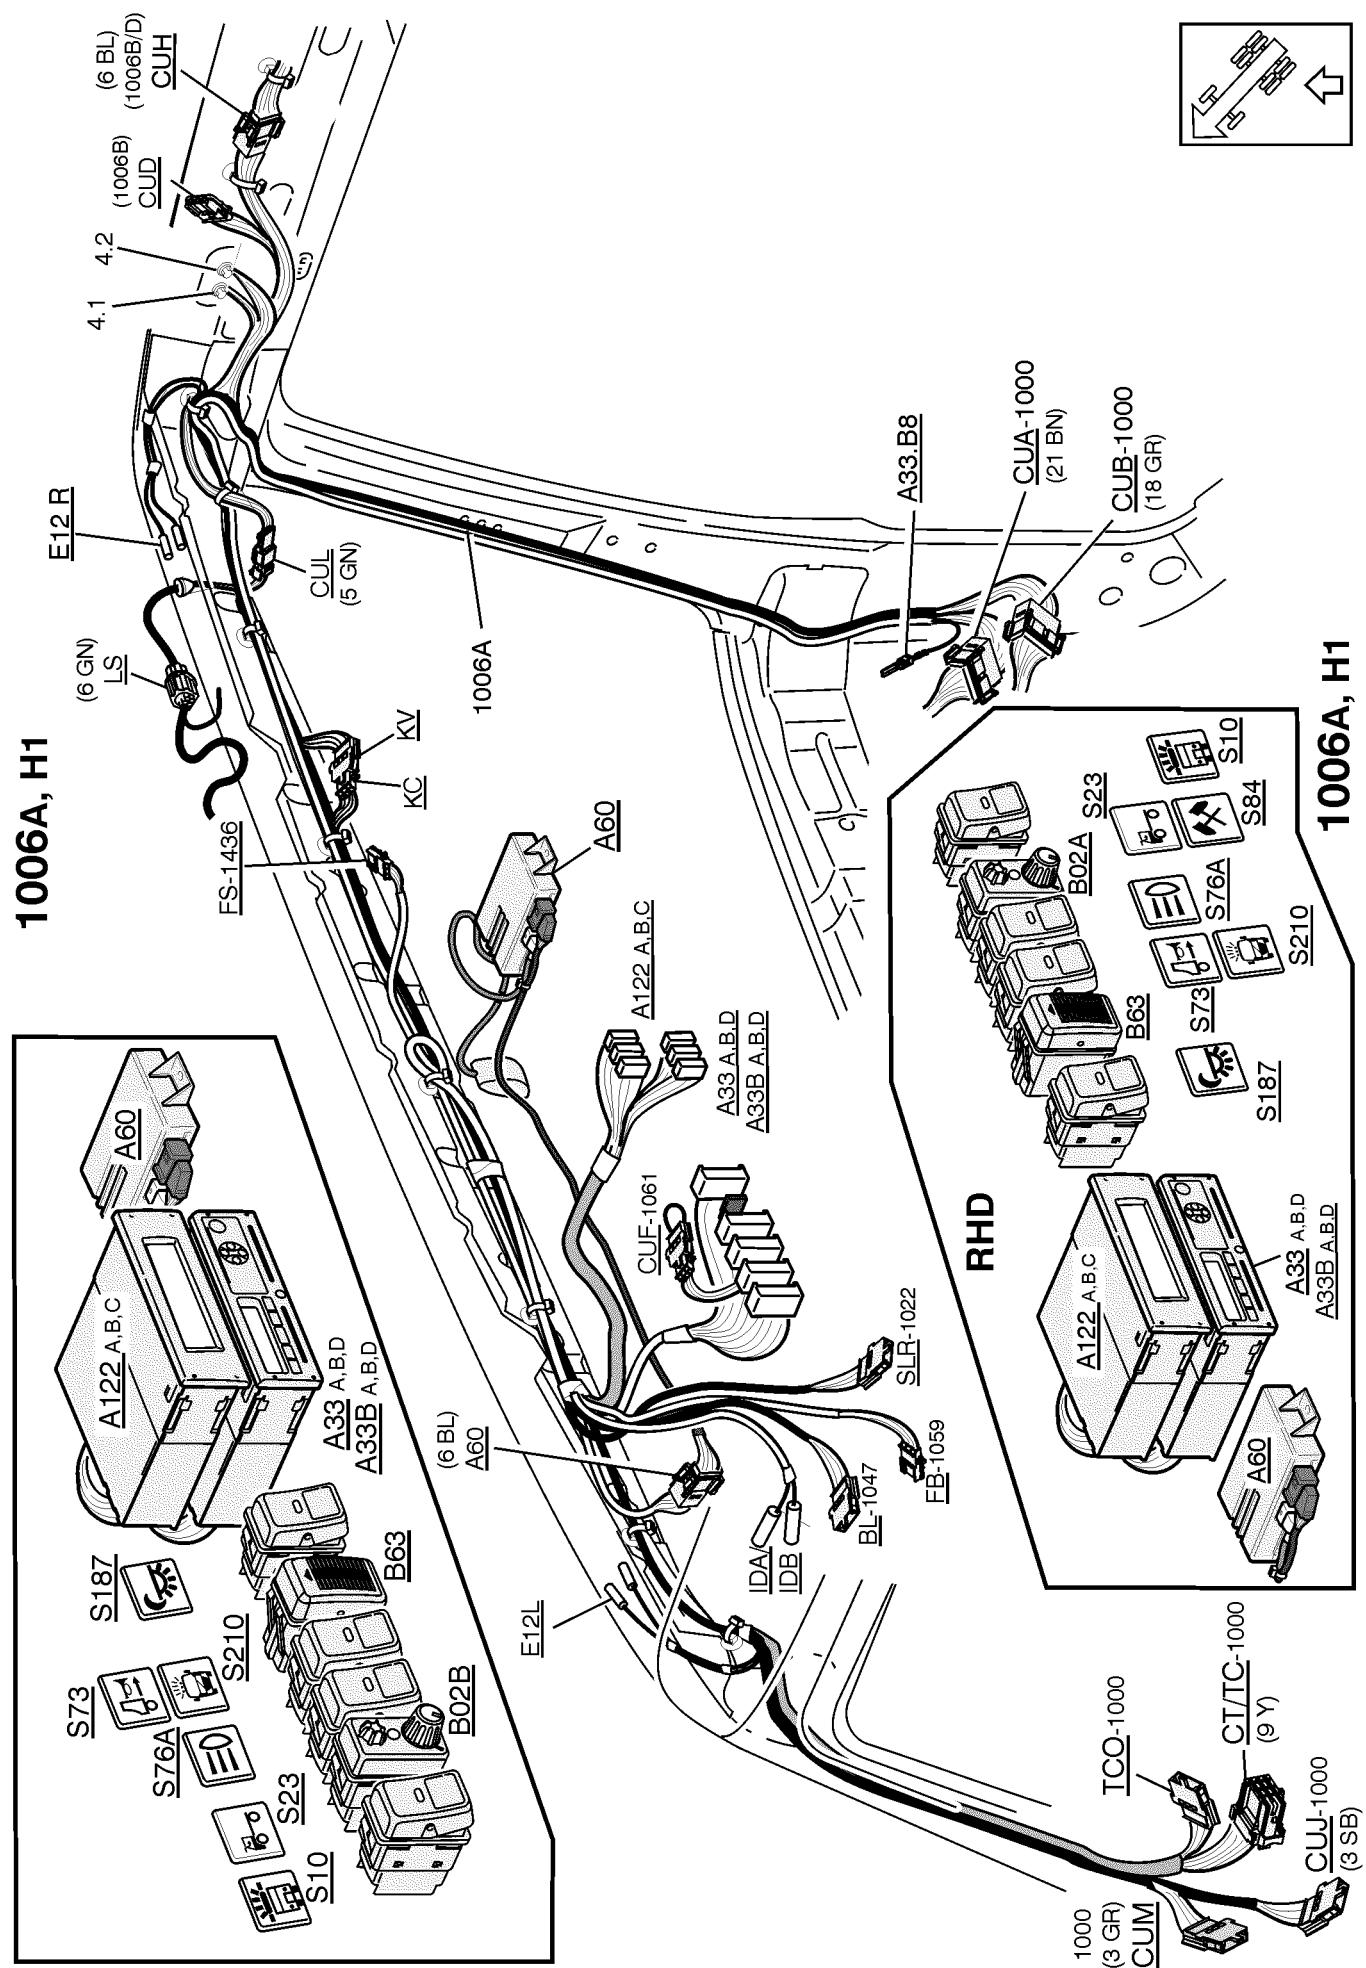


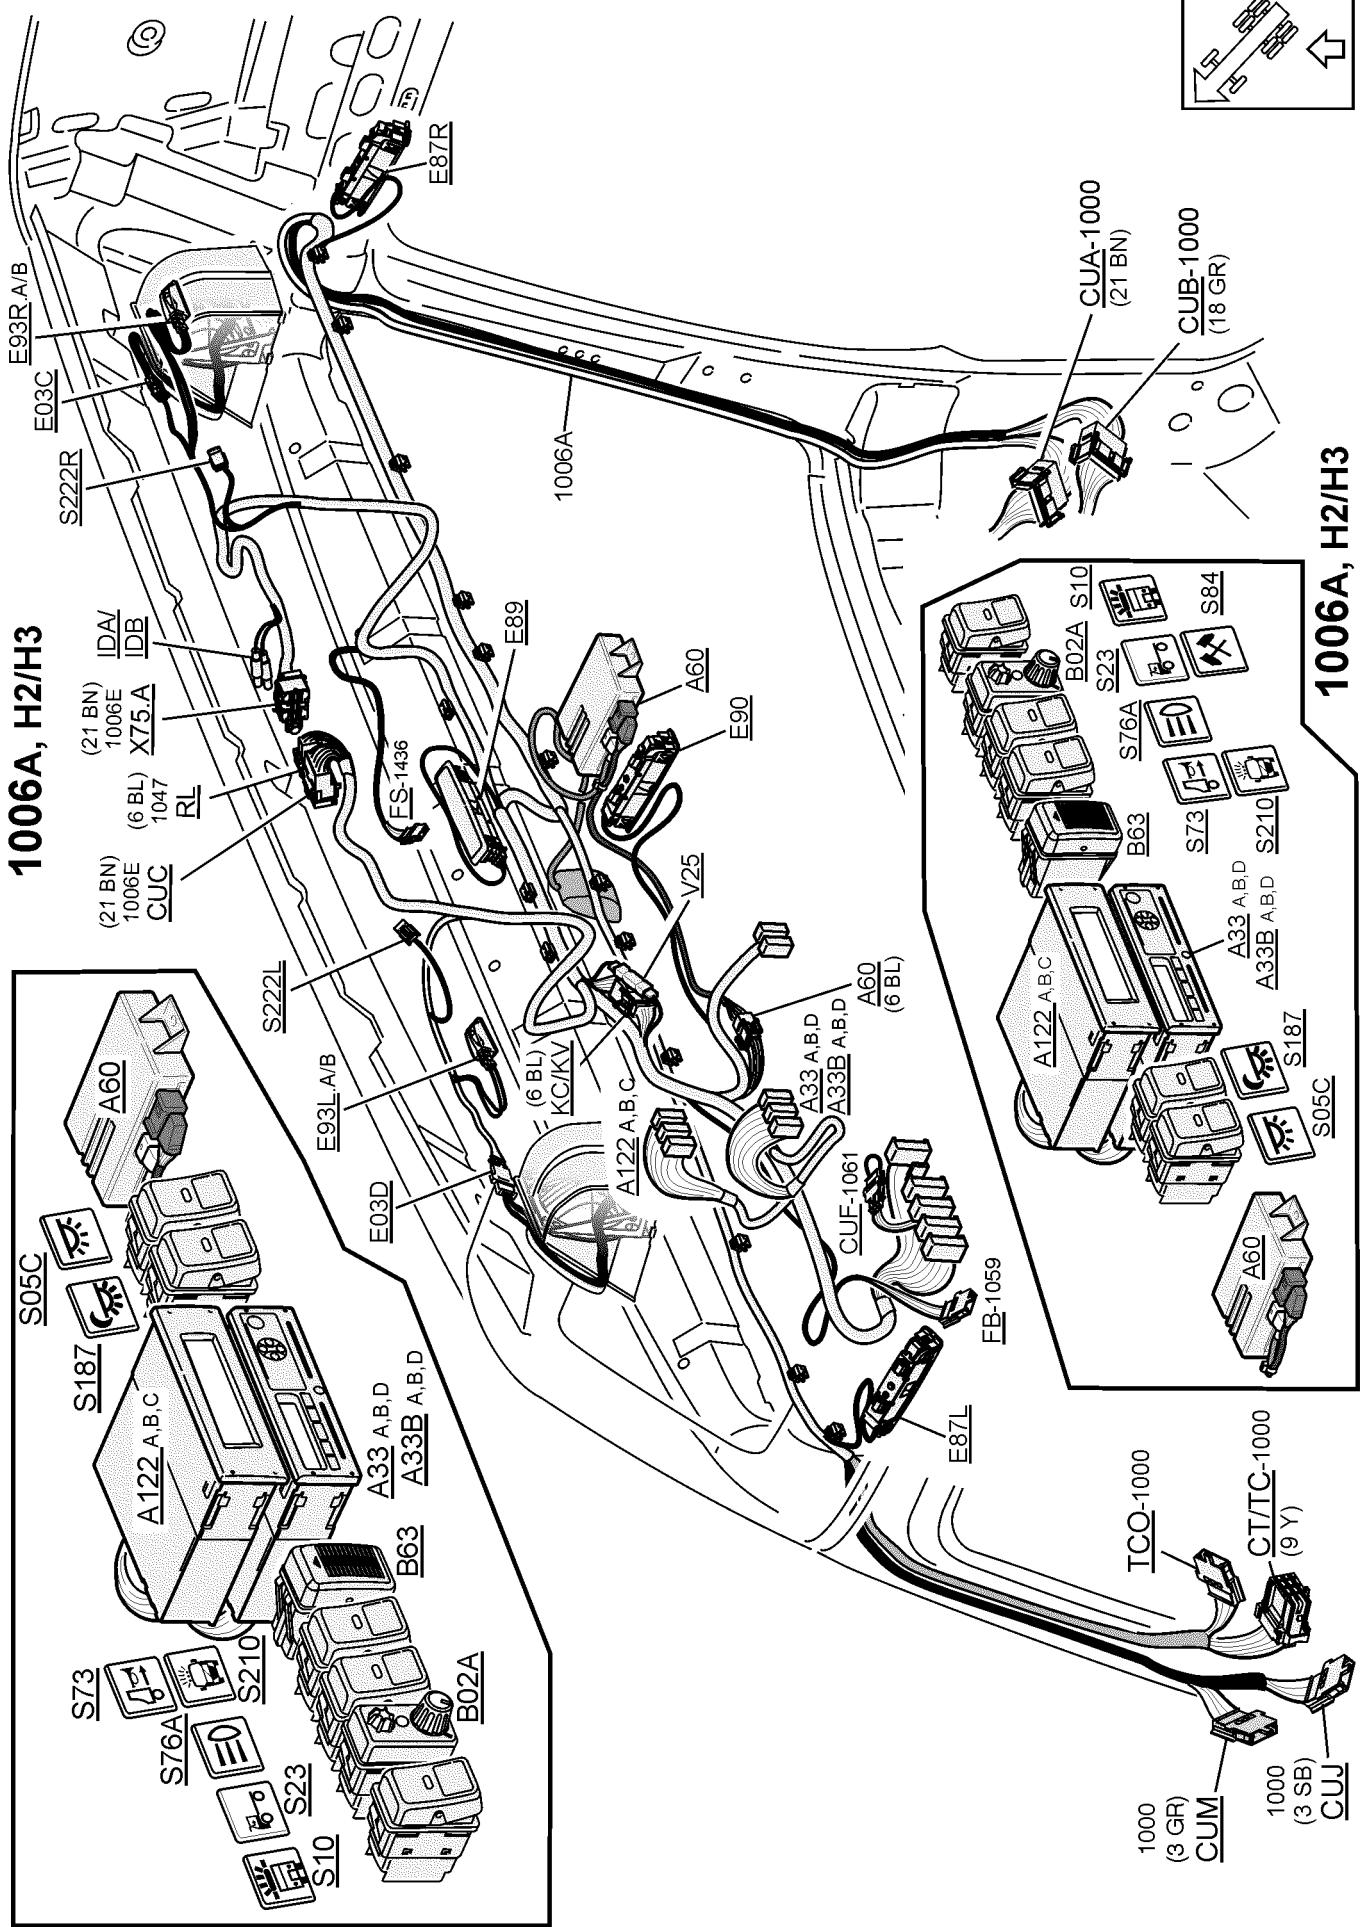

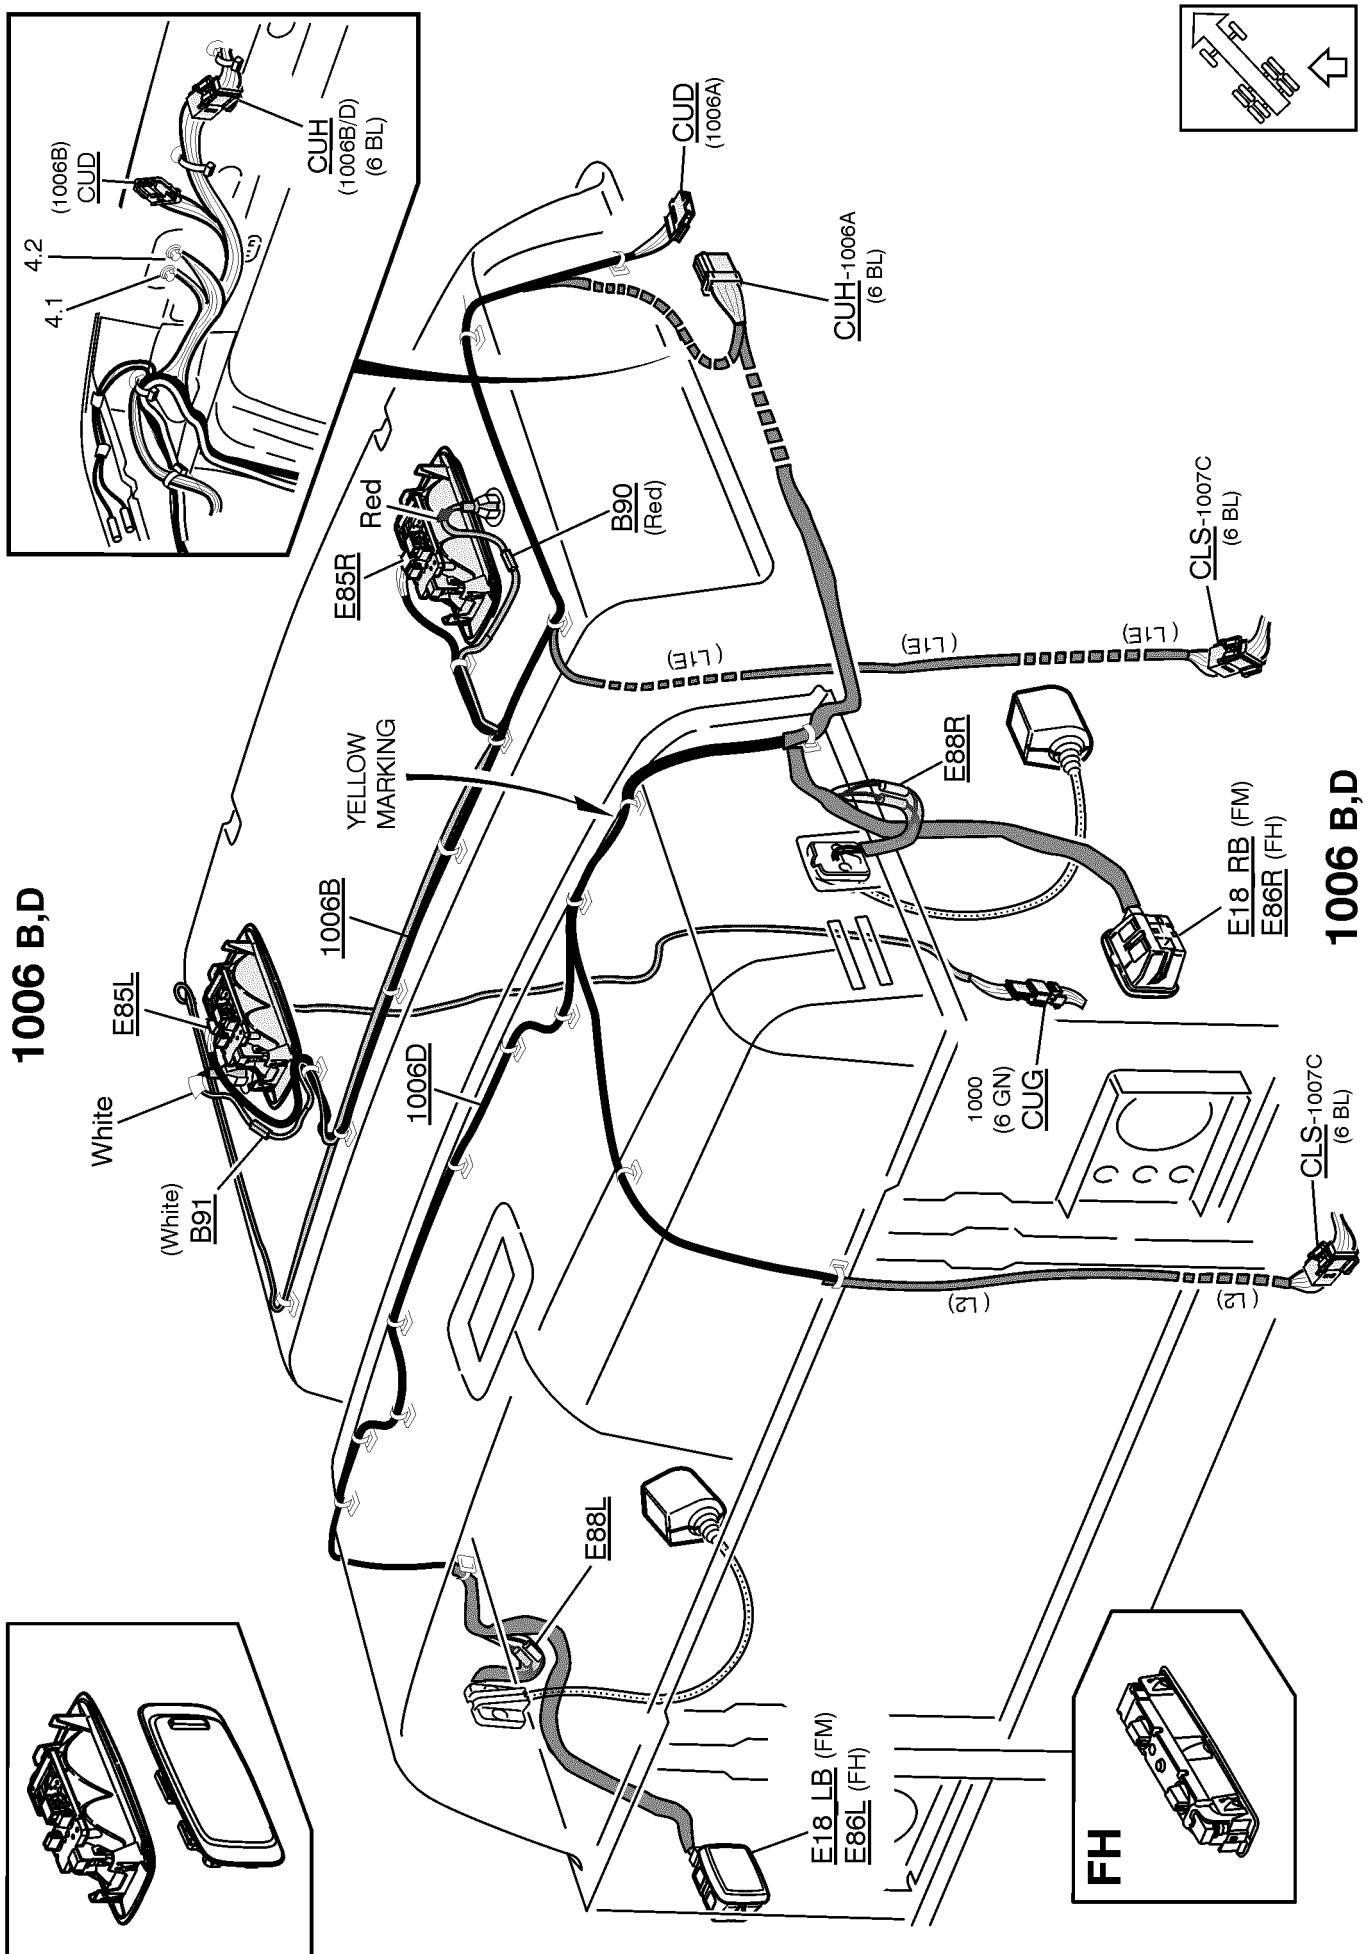


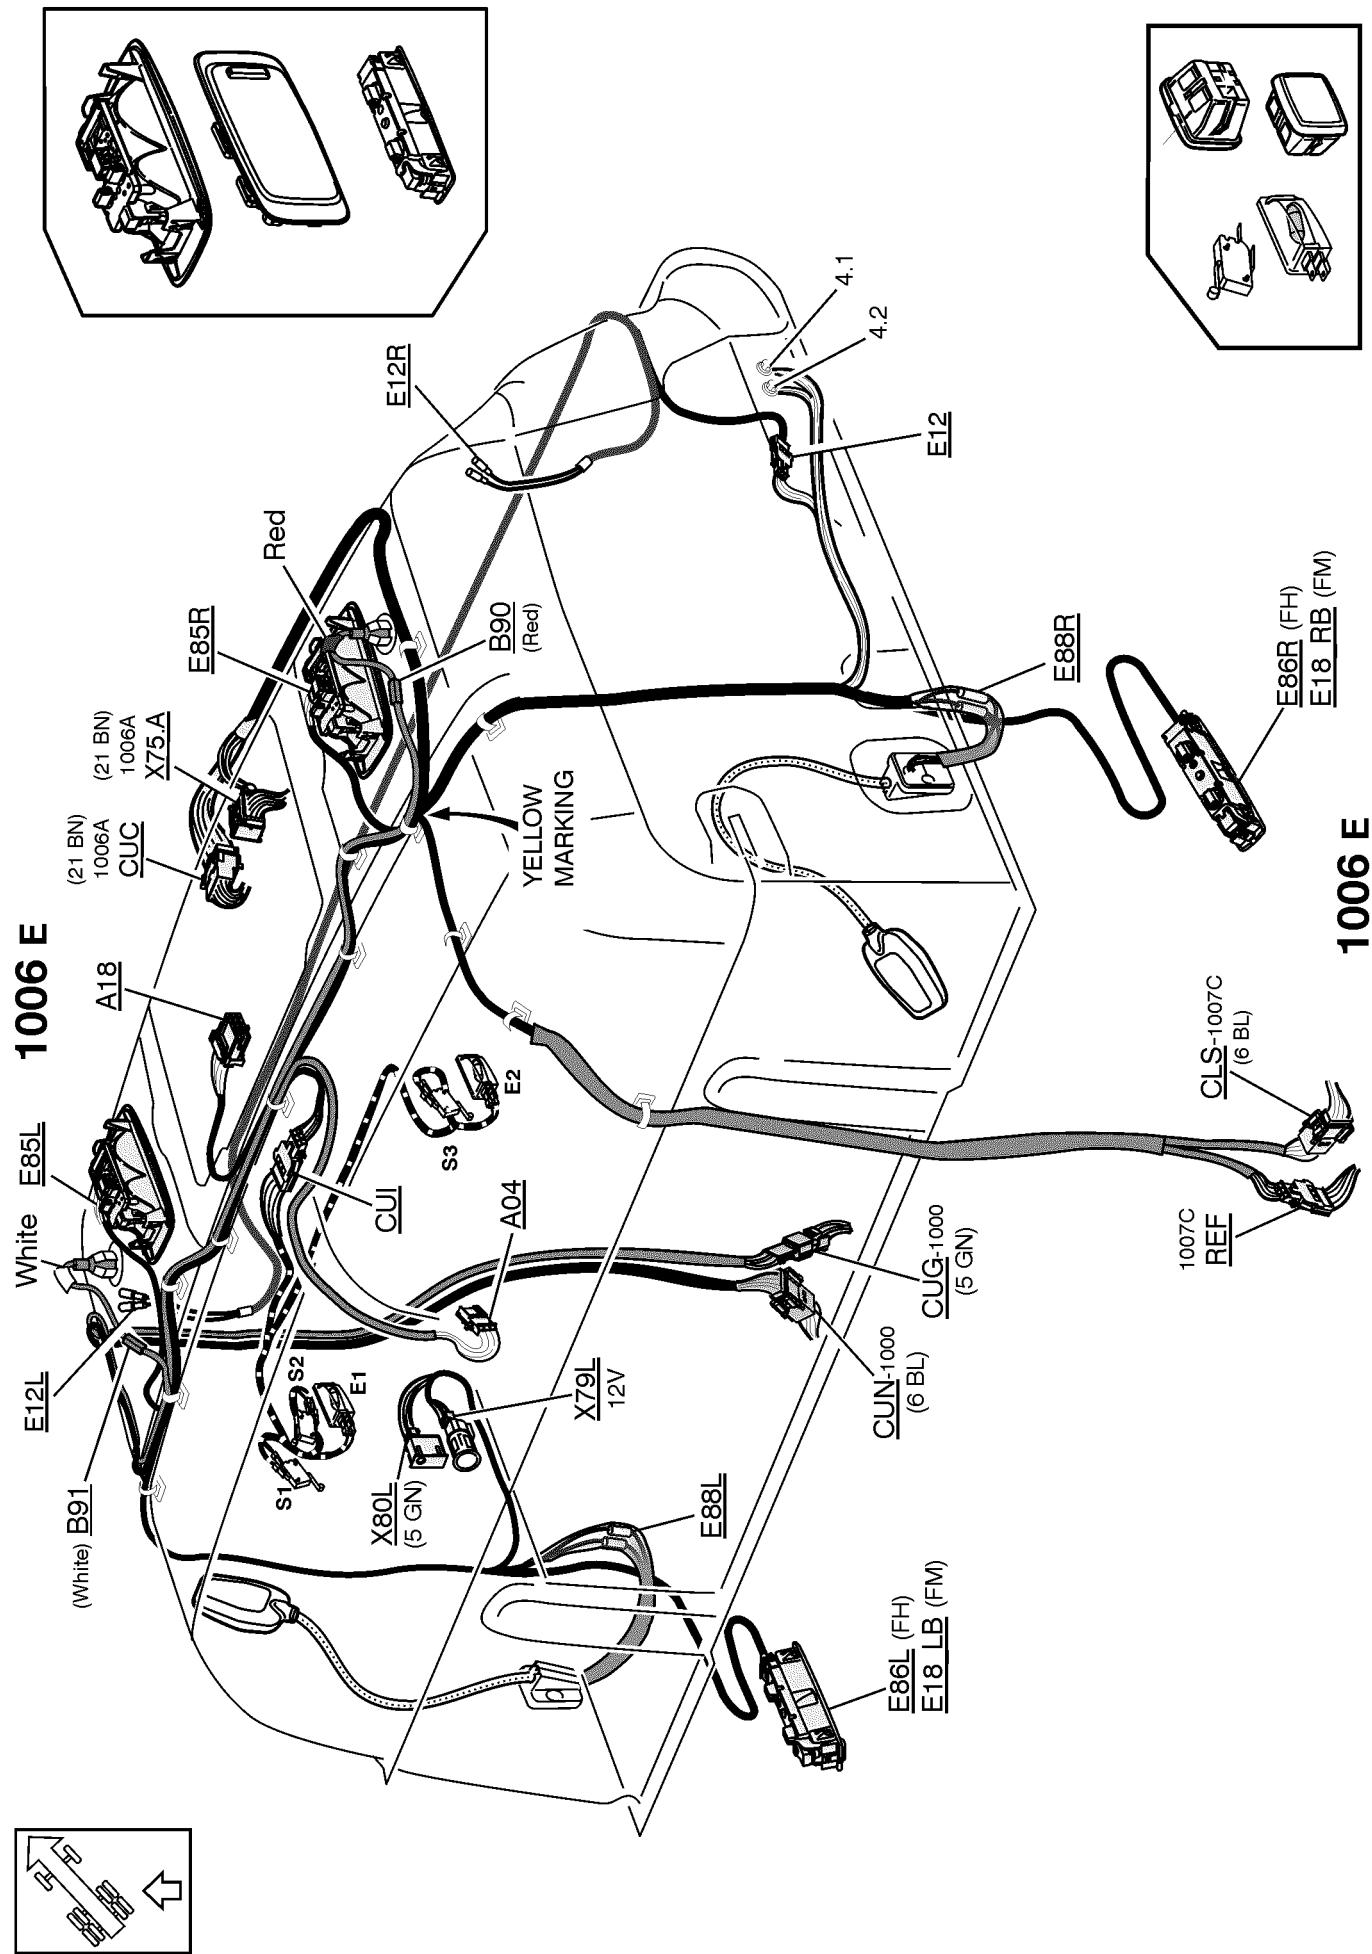


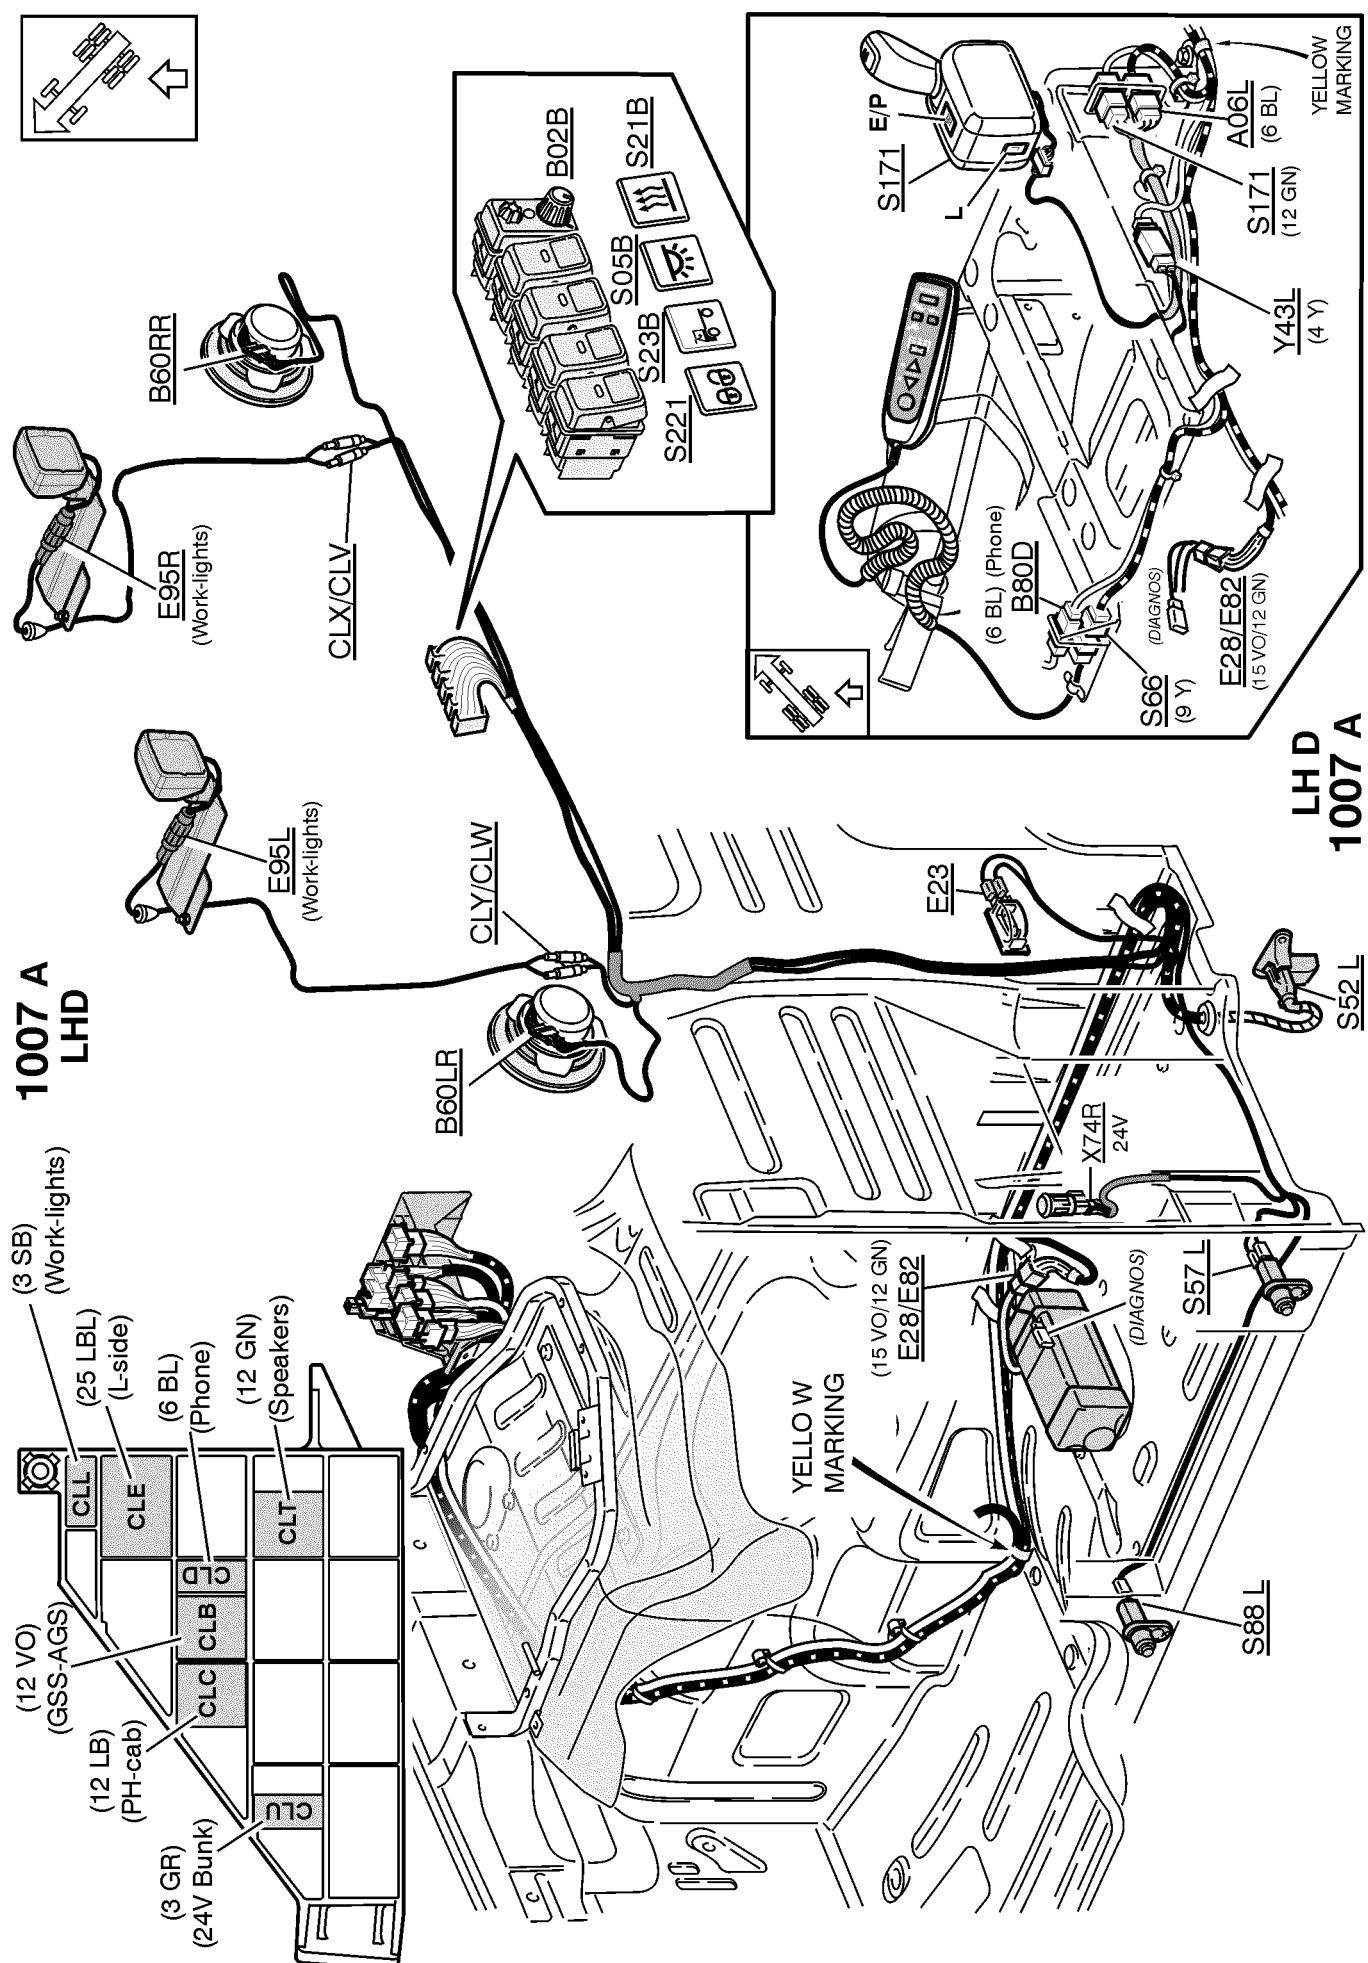


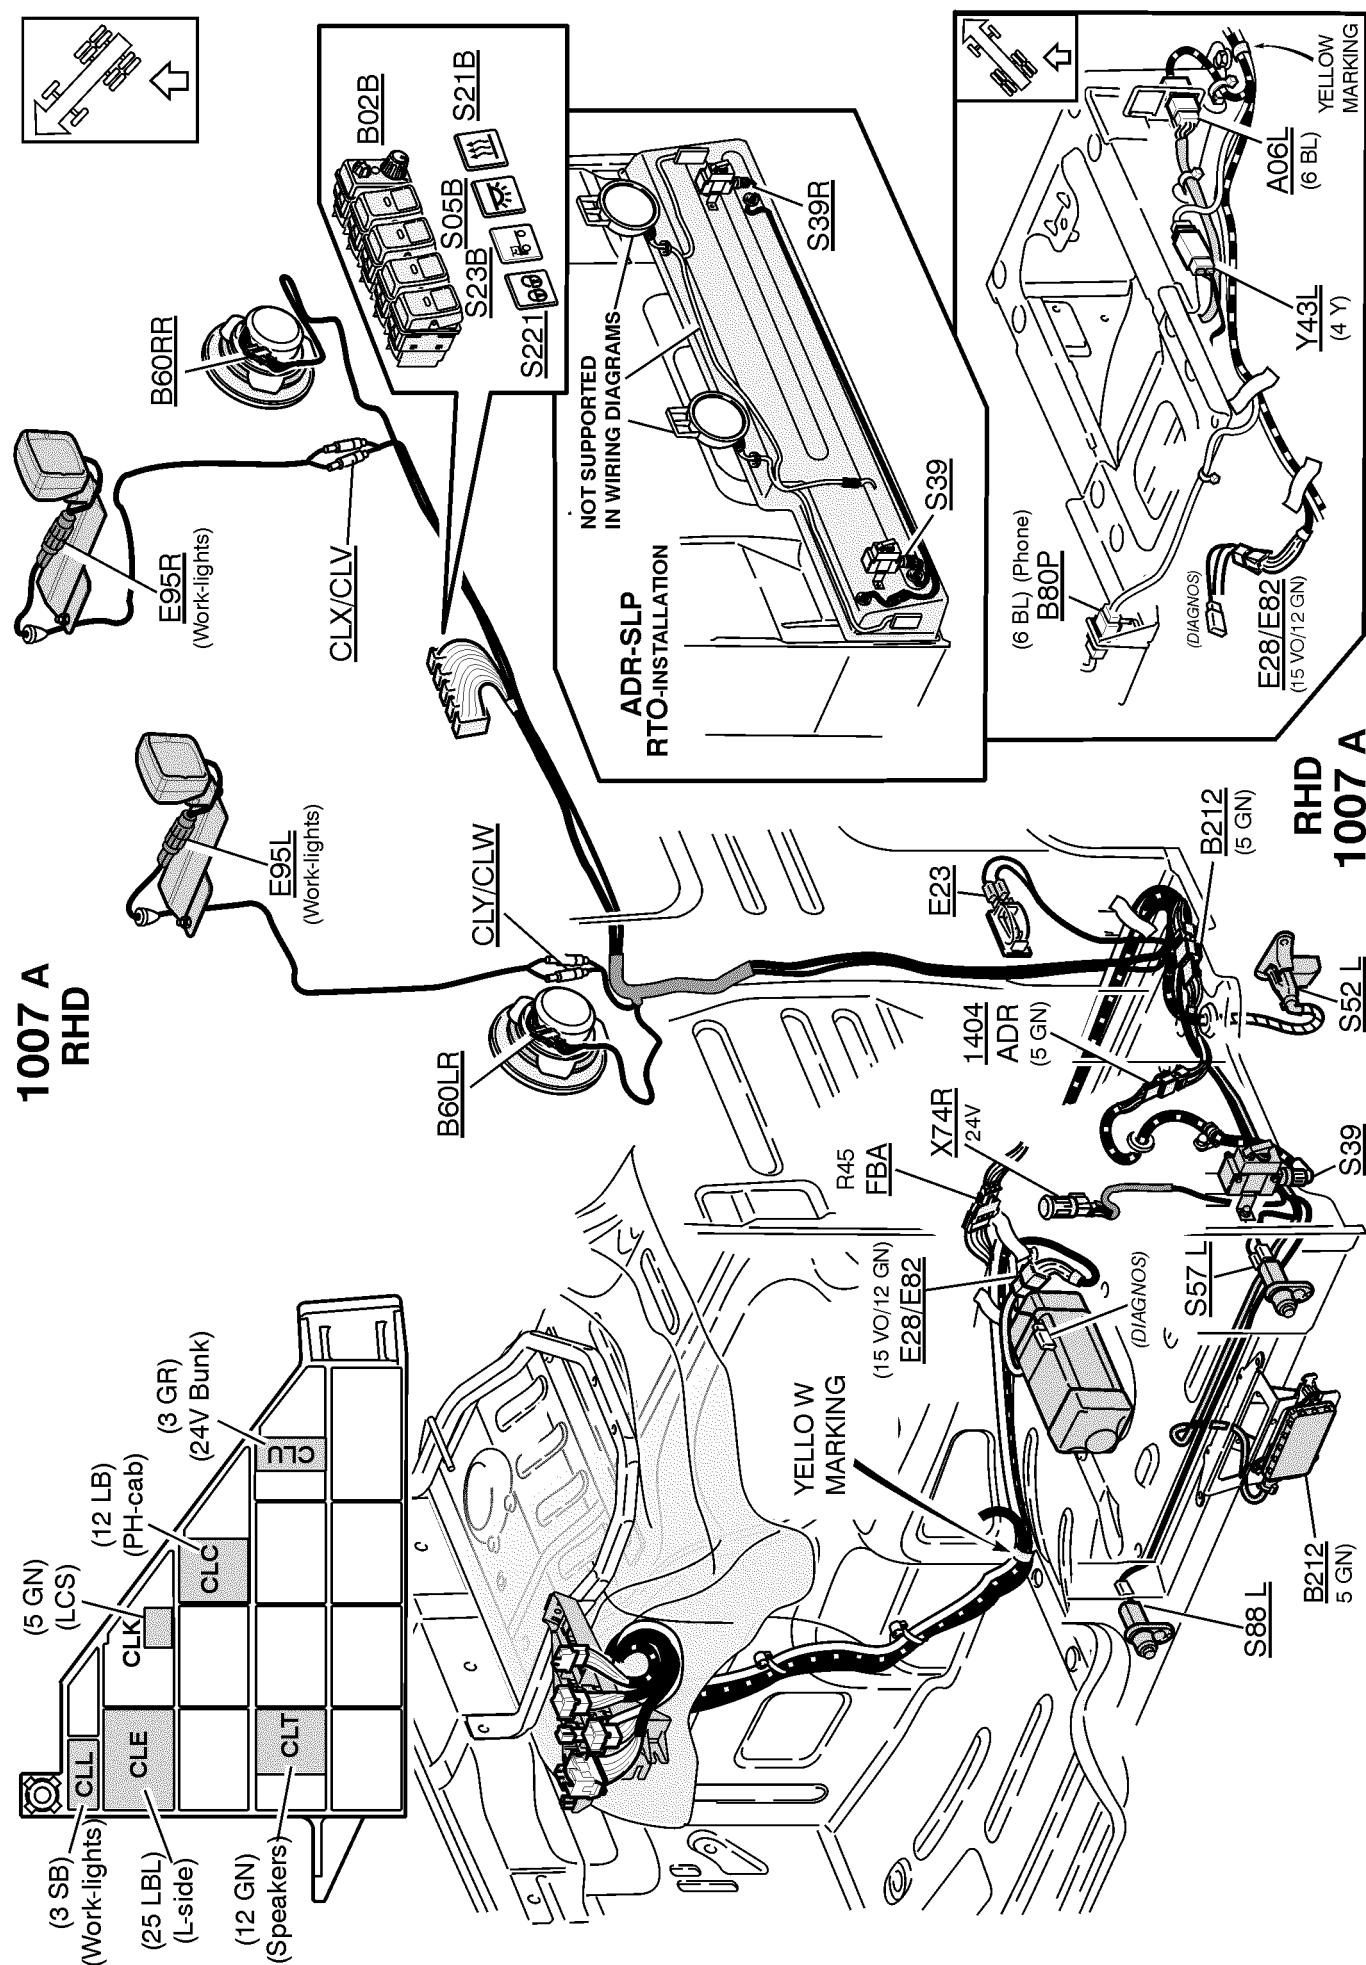


T3057080

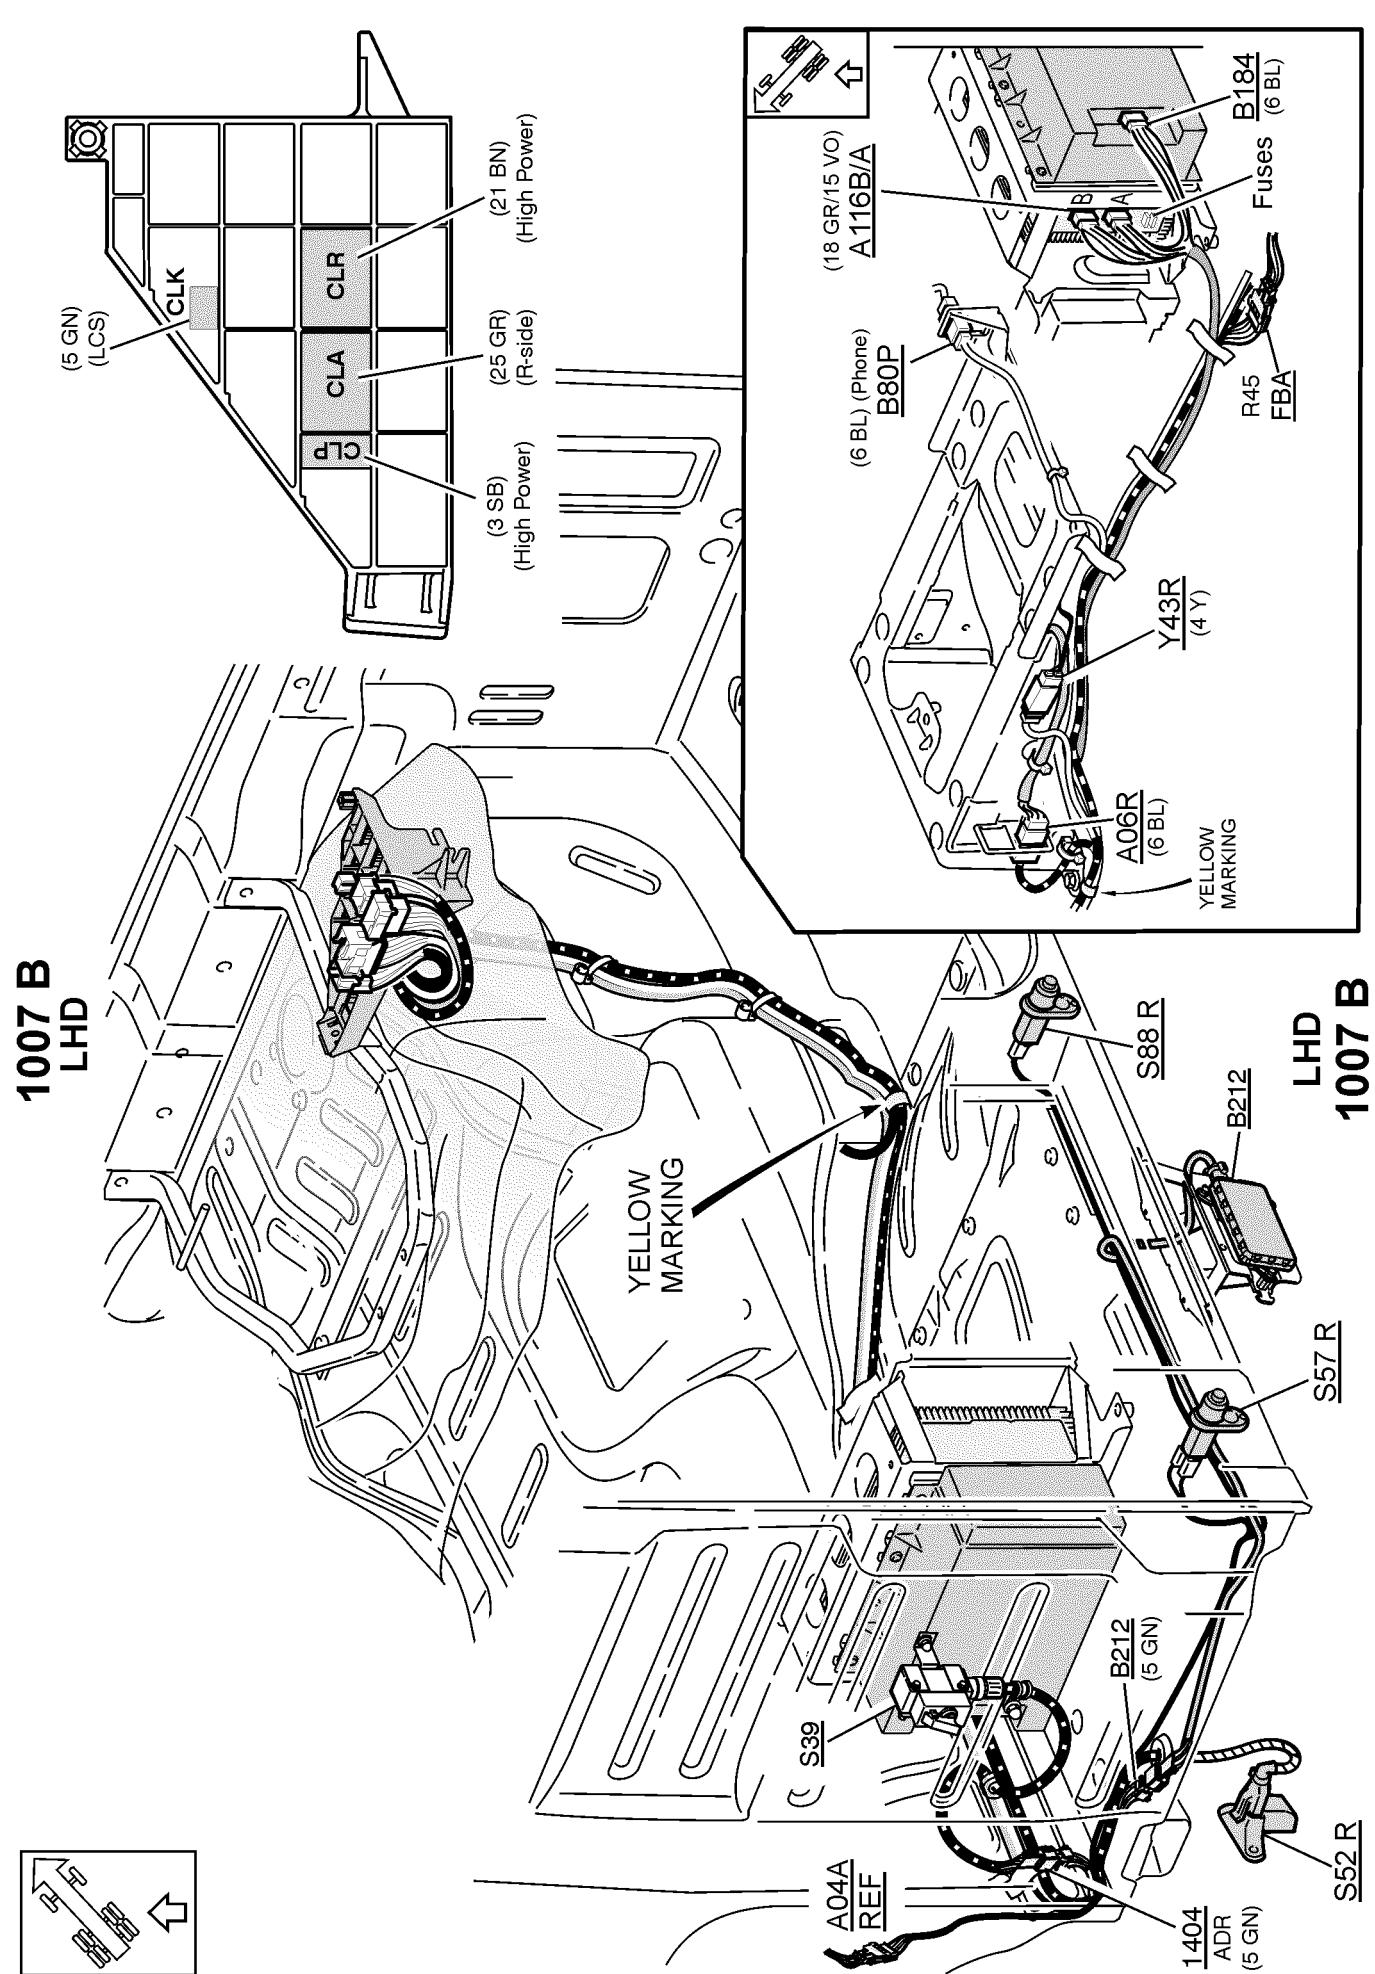




**1007 B
RHD**

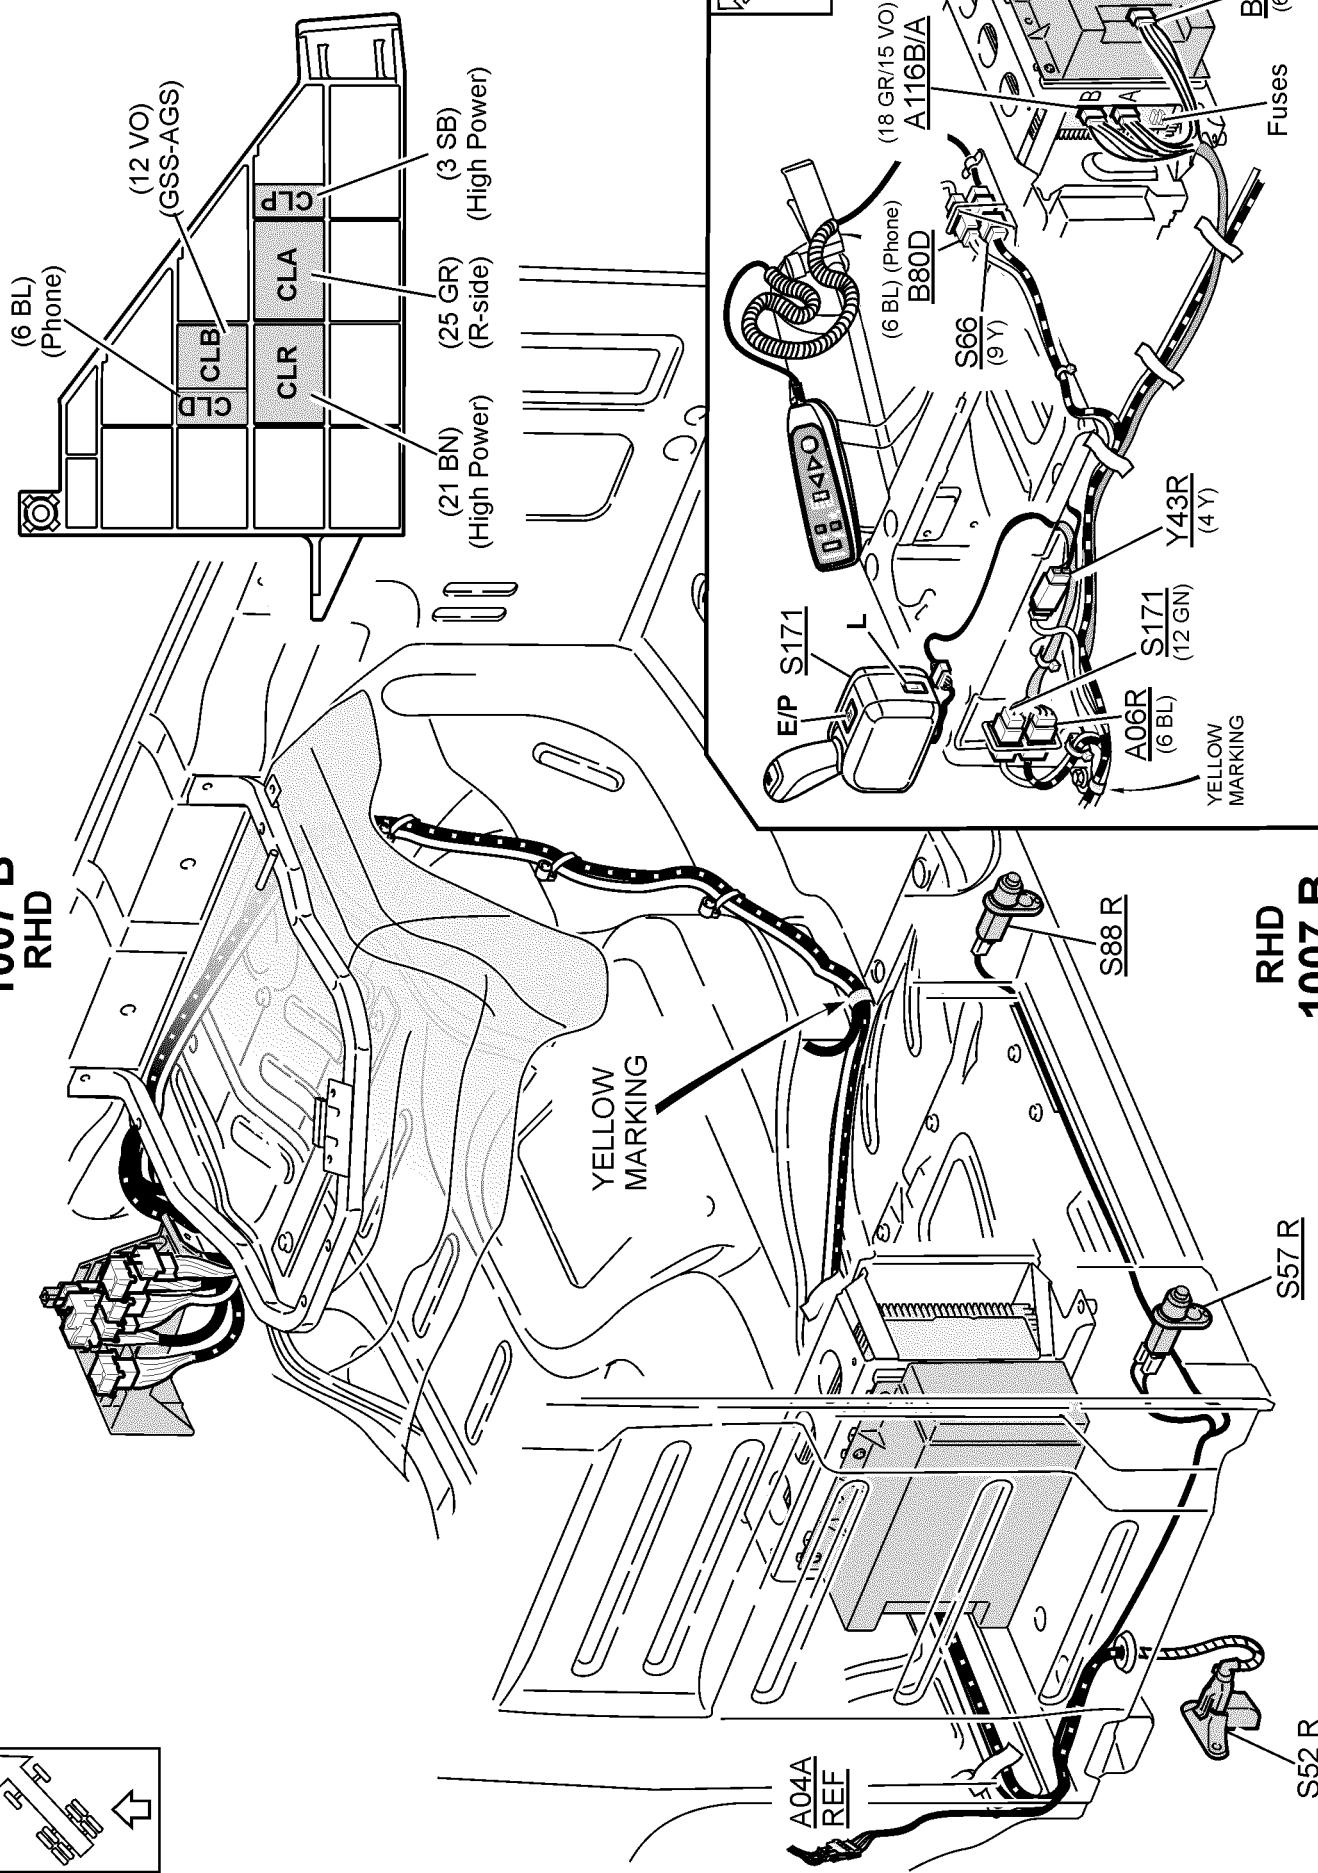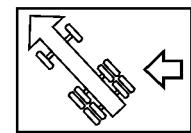


**1007 B
RHD**

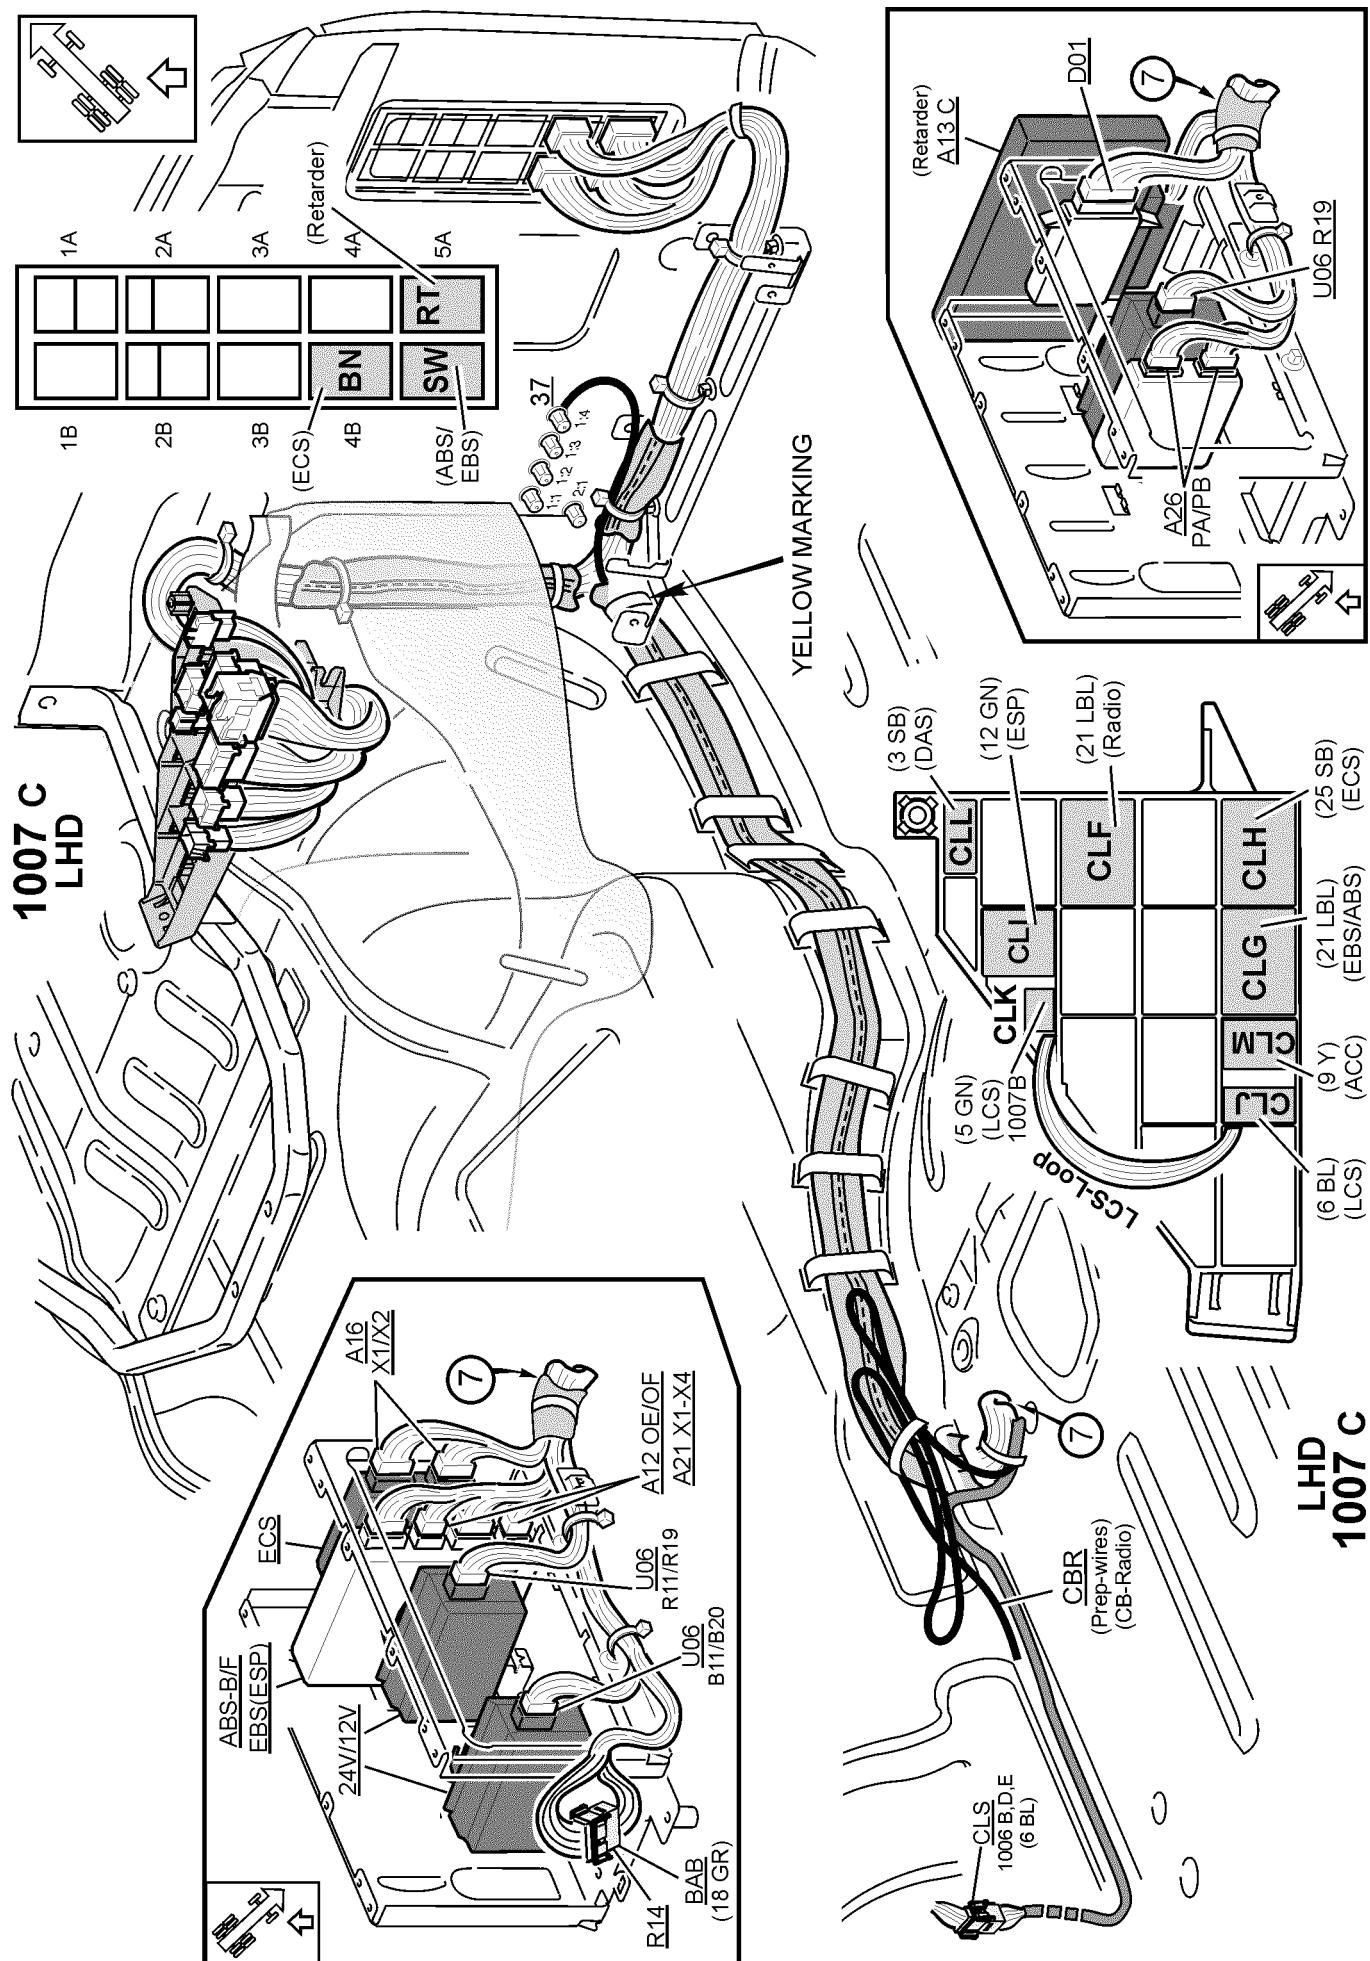



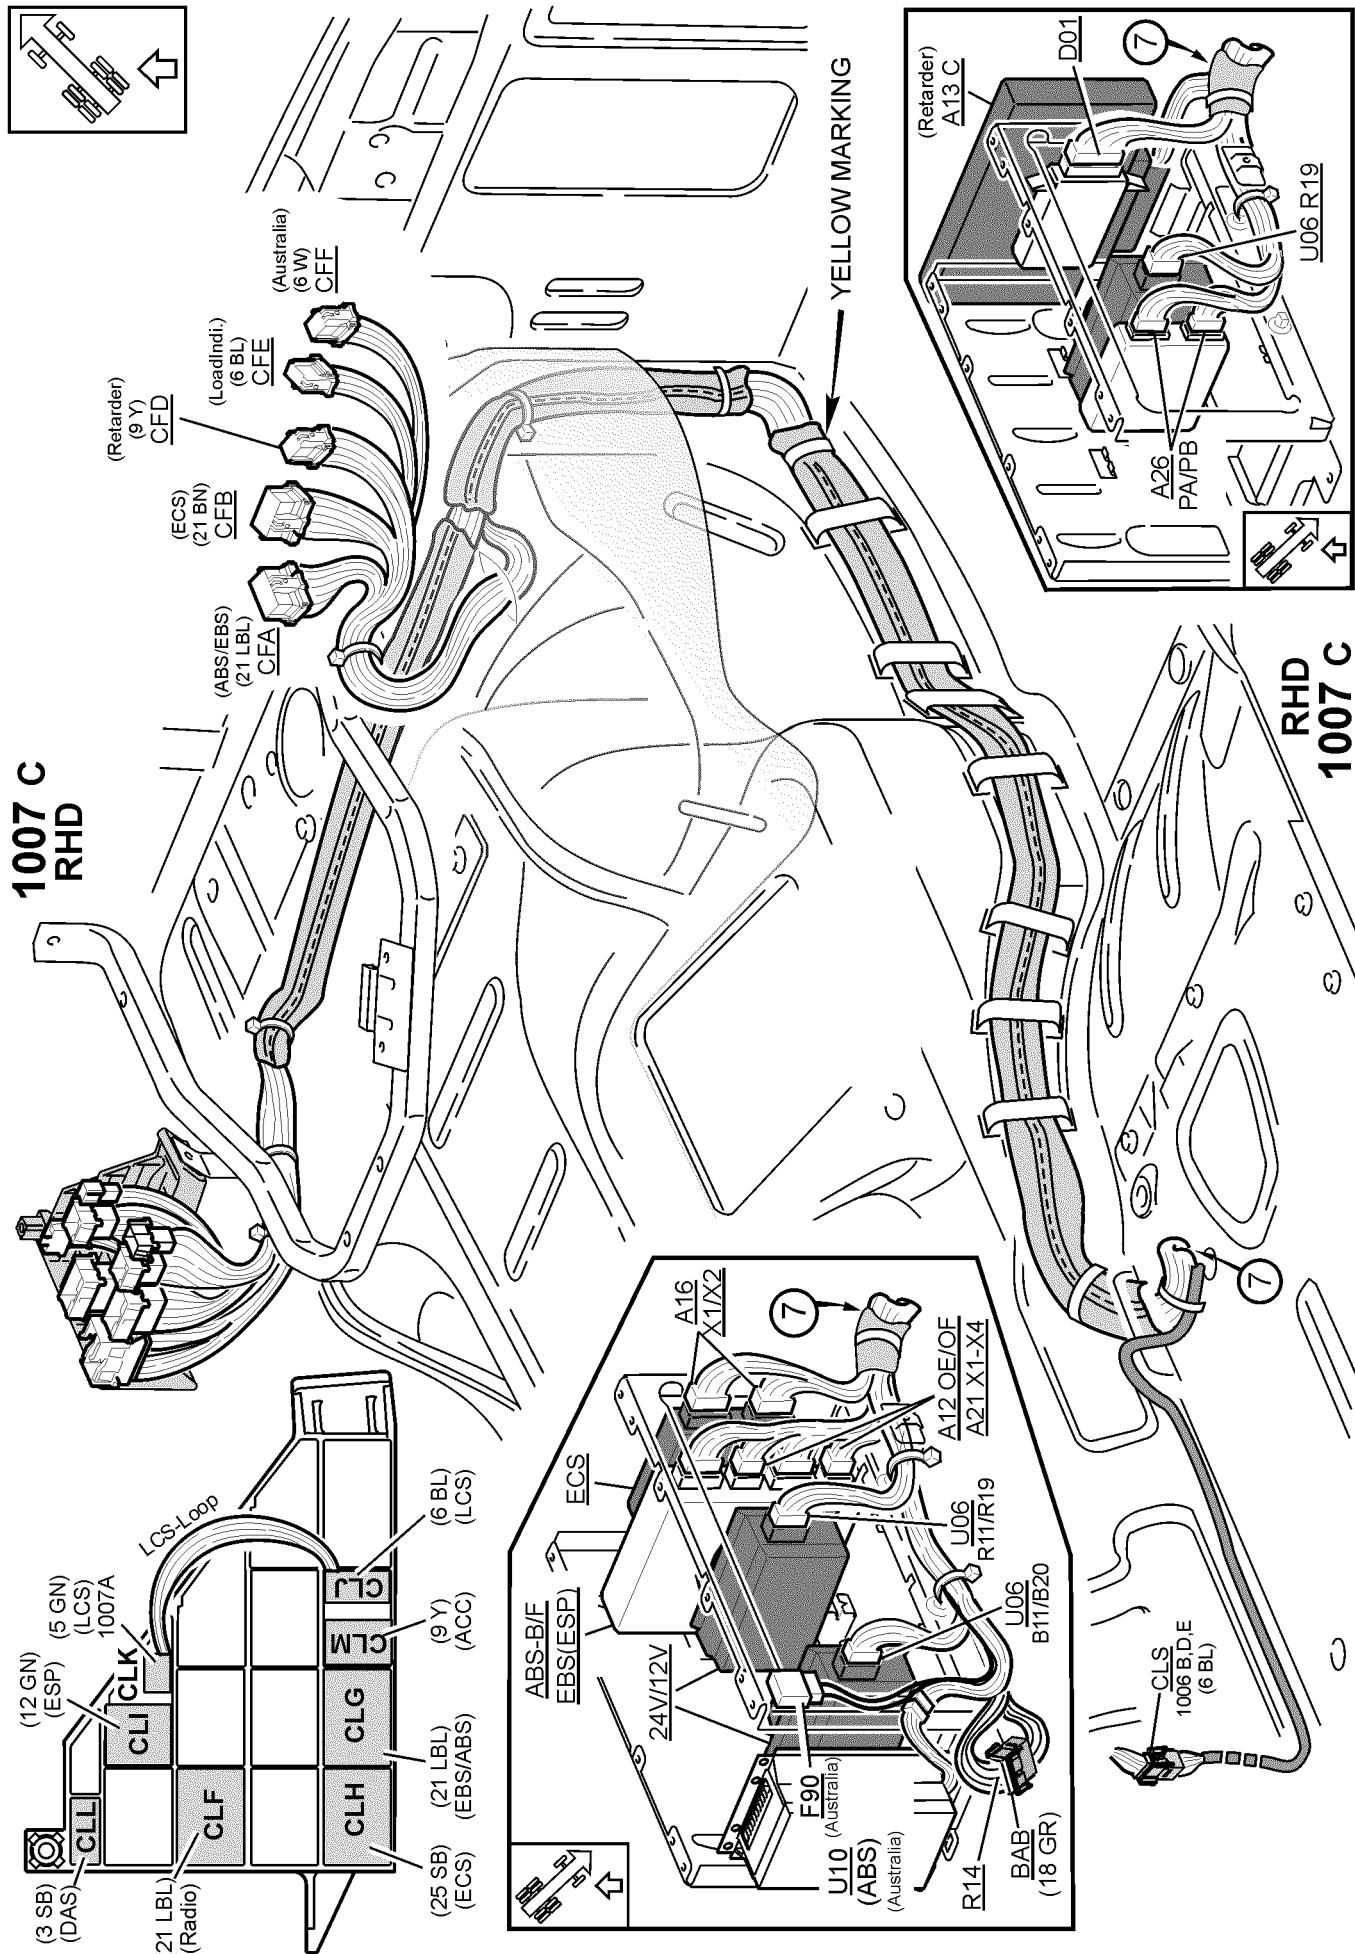


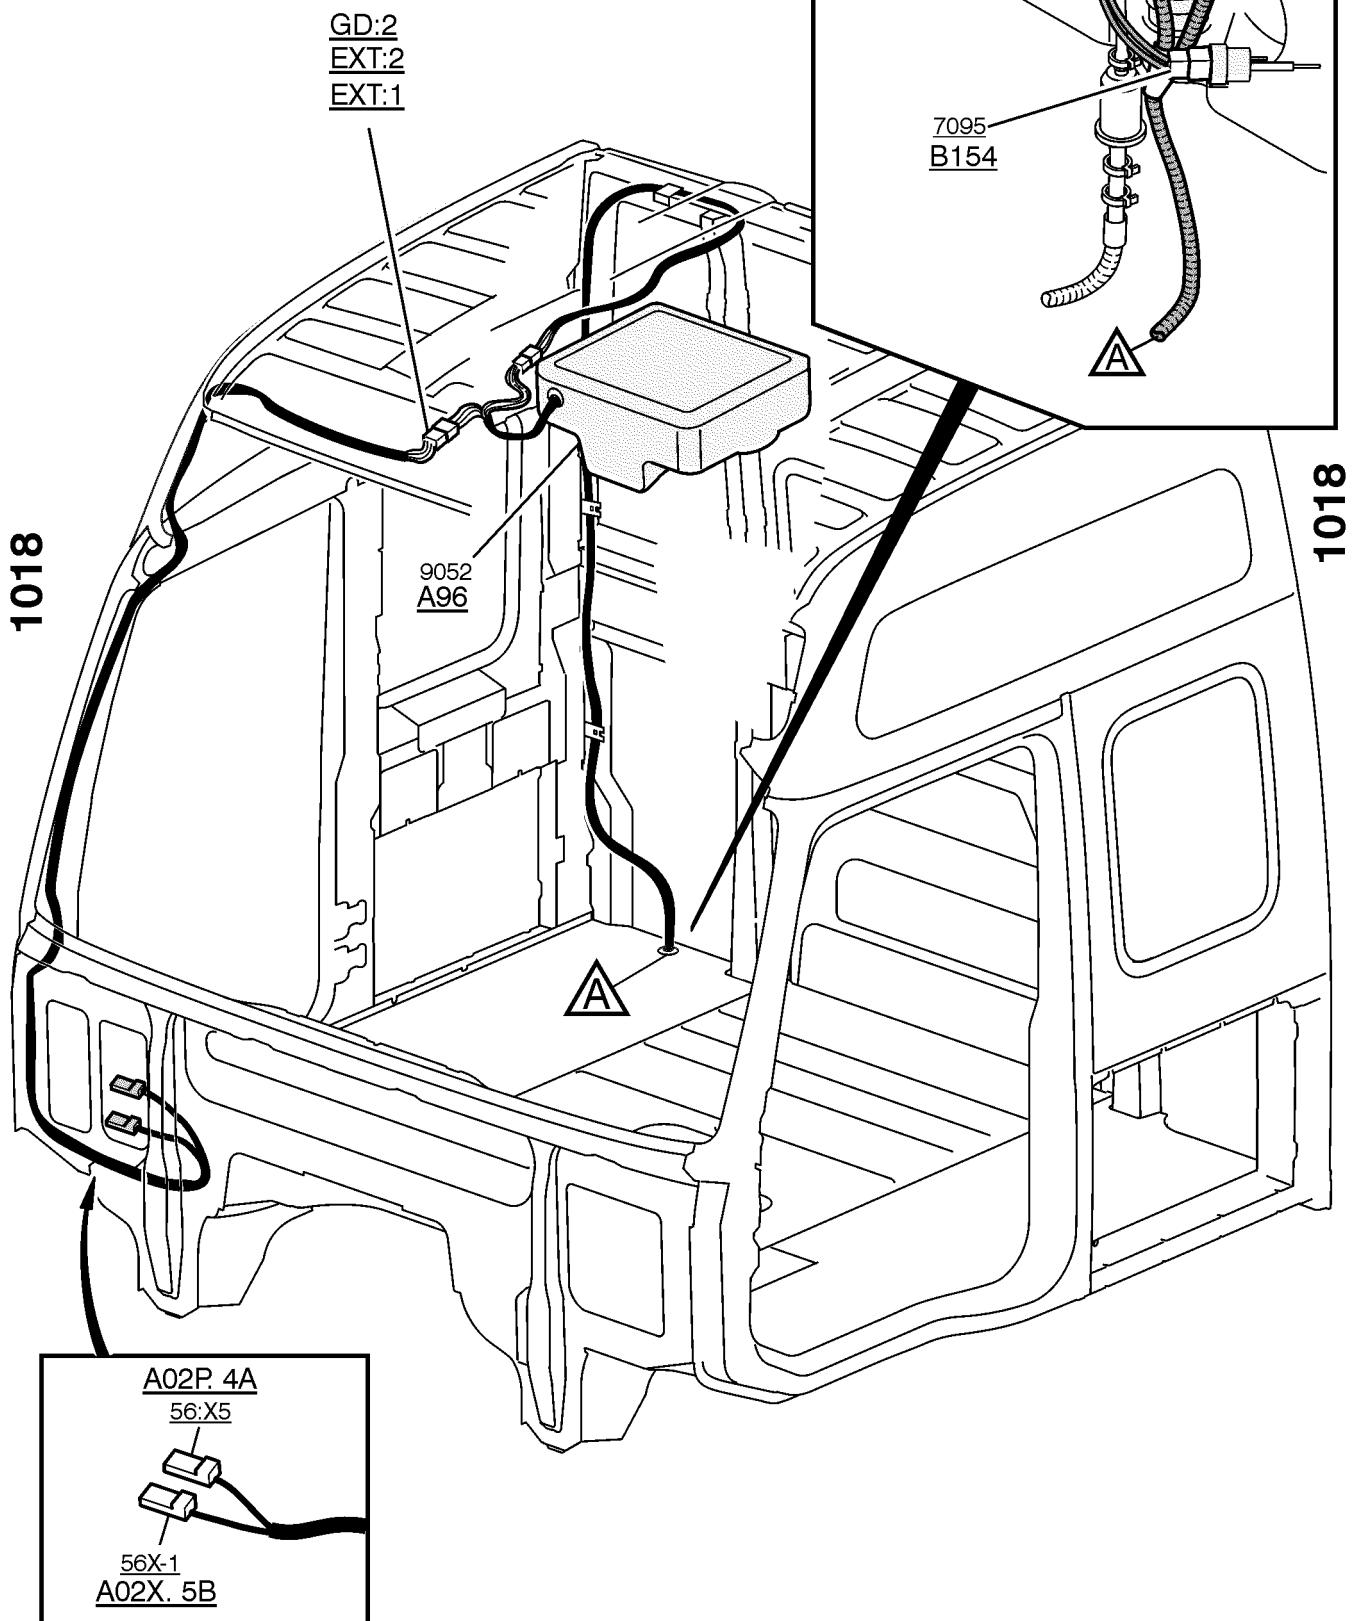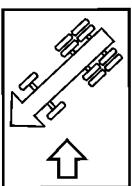


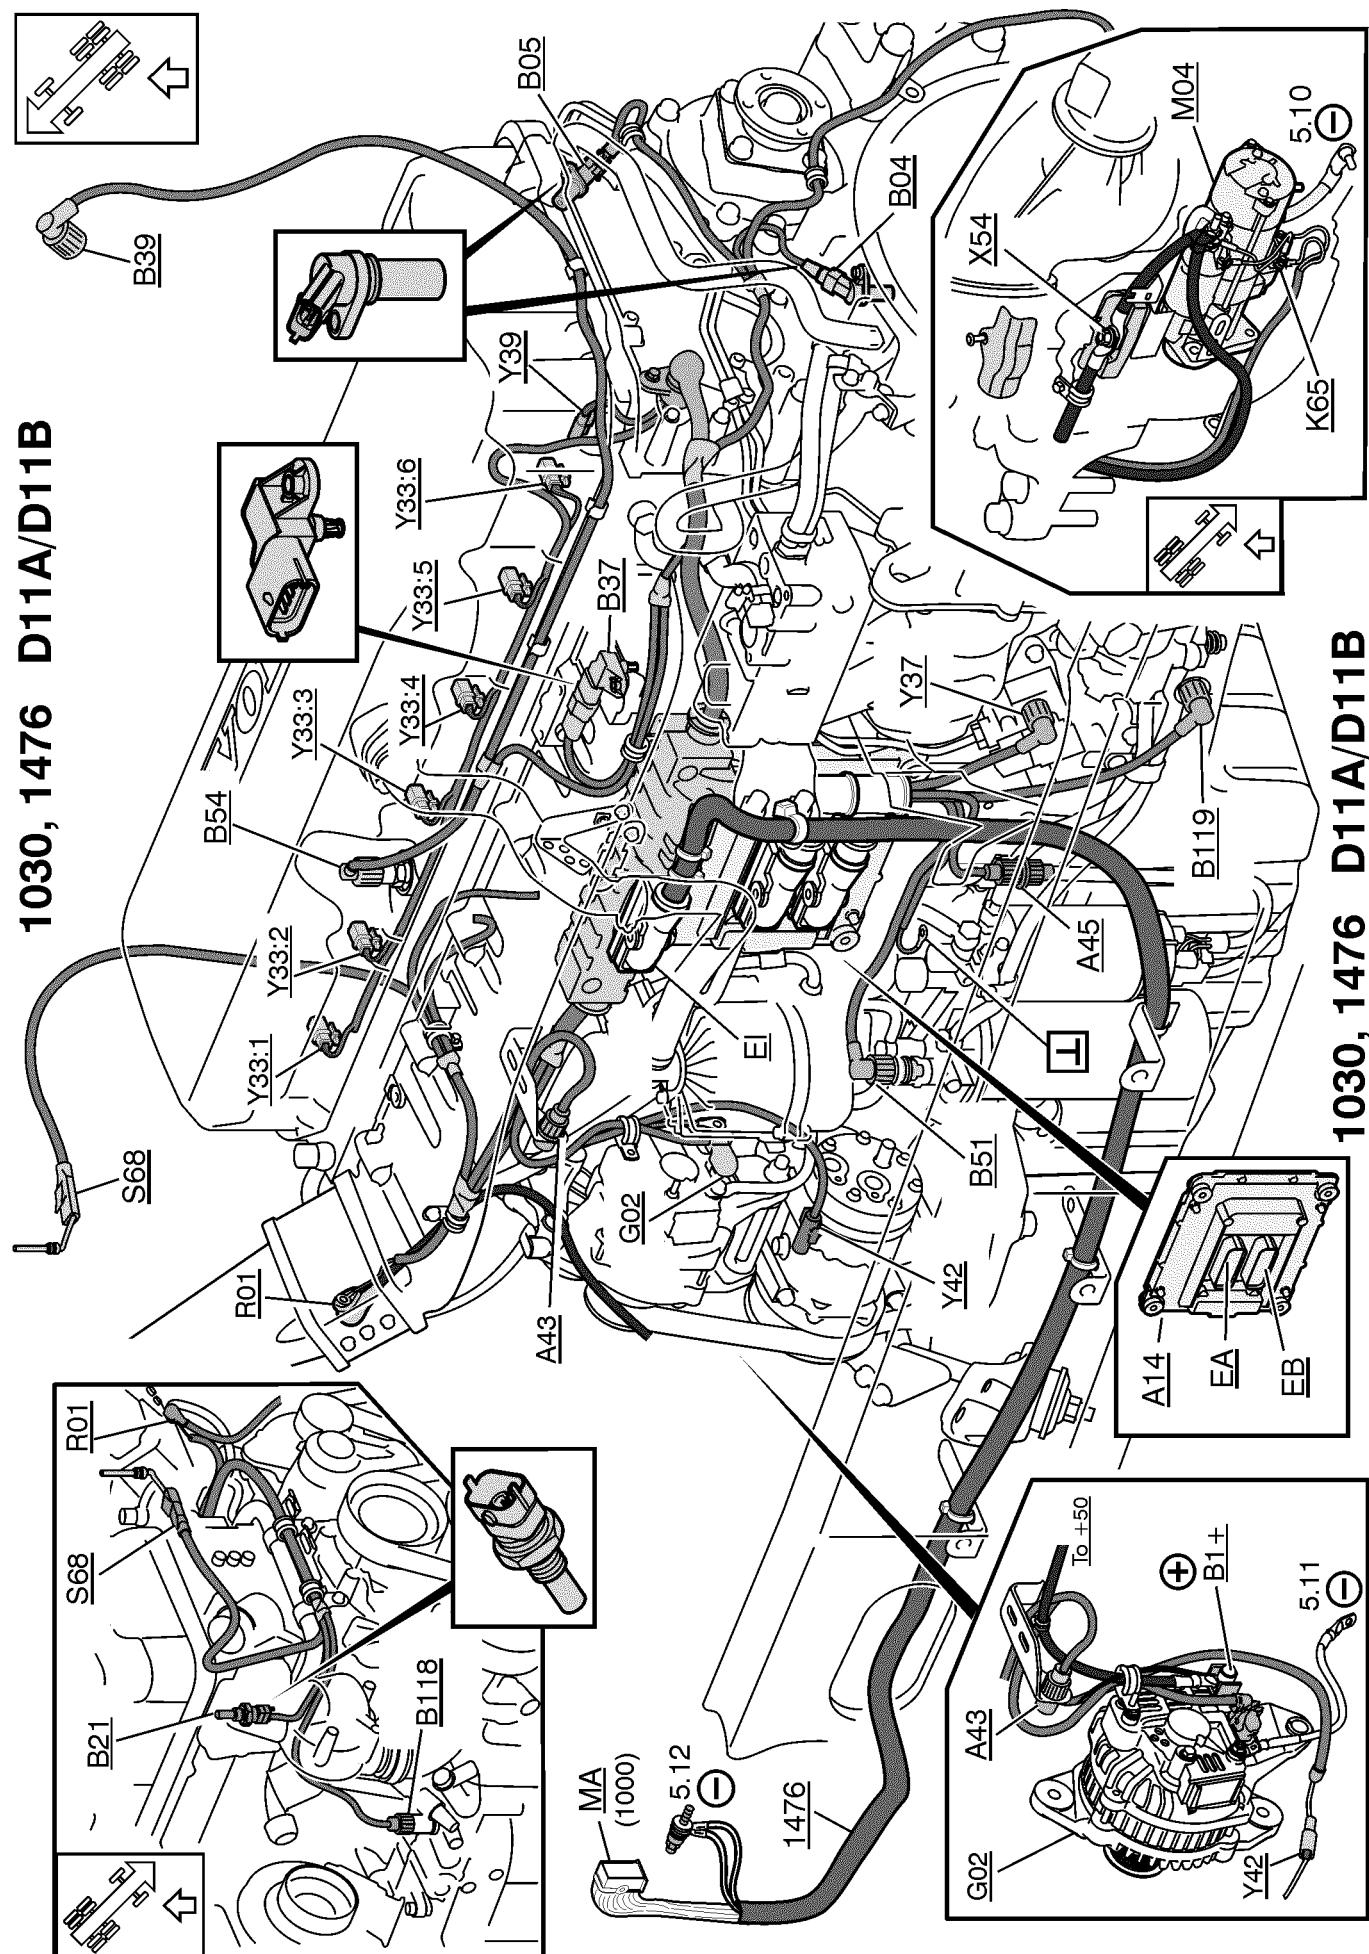


T3059943

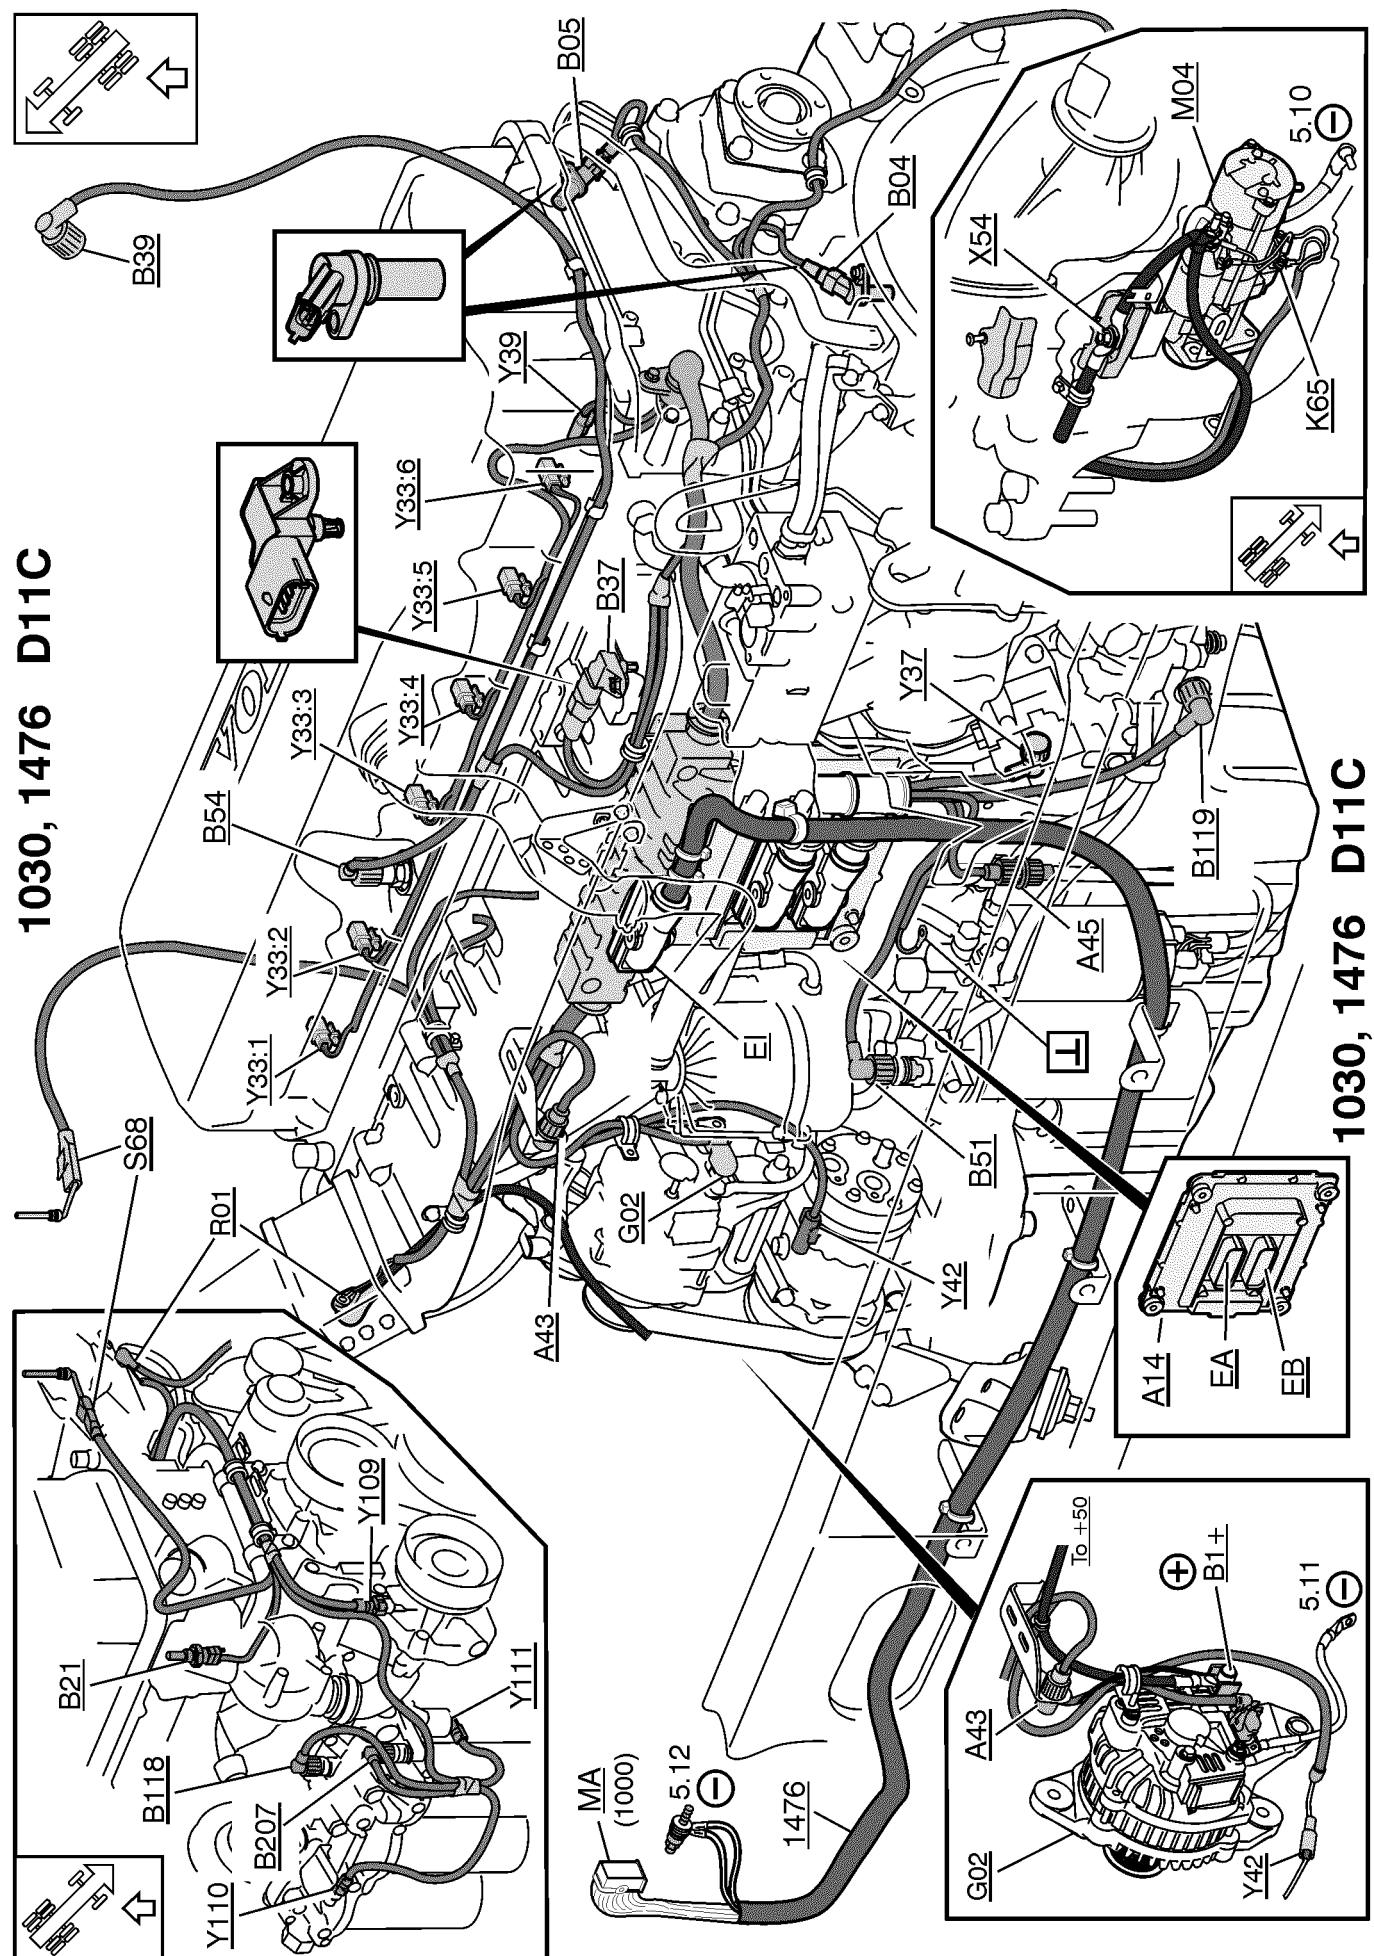


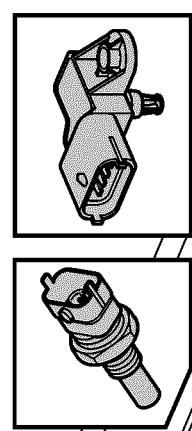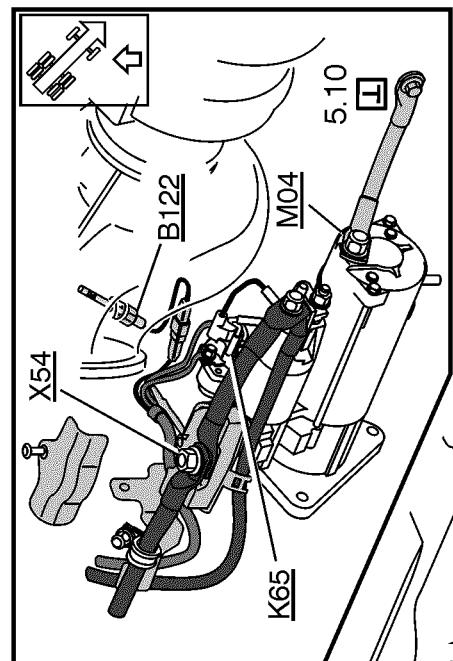



1030, 1476 ENG-VE13A

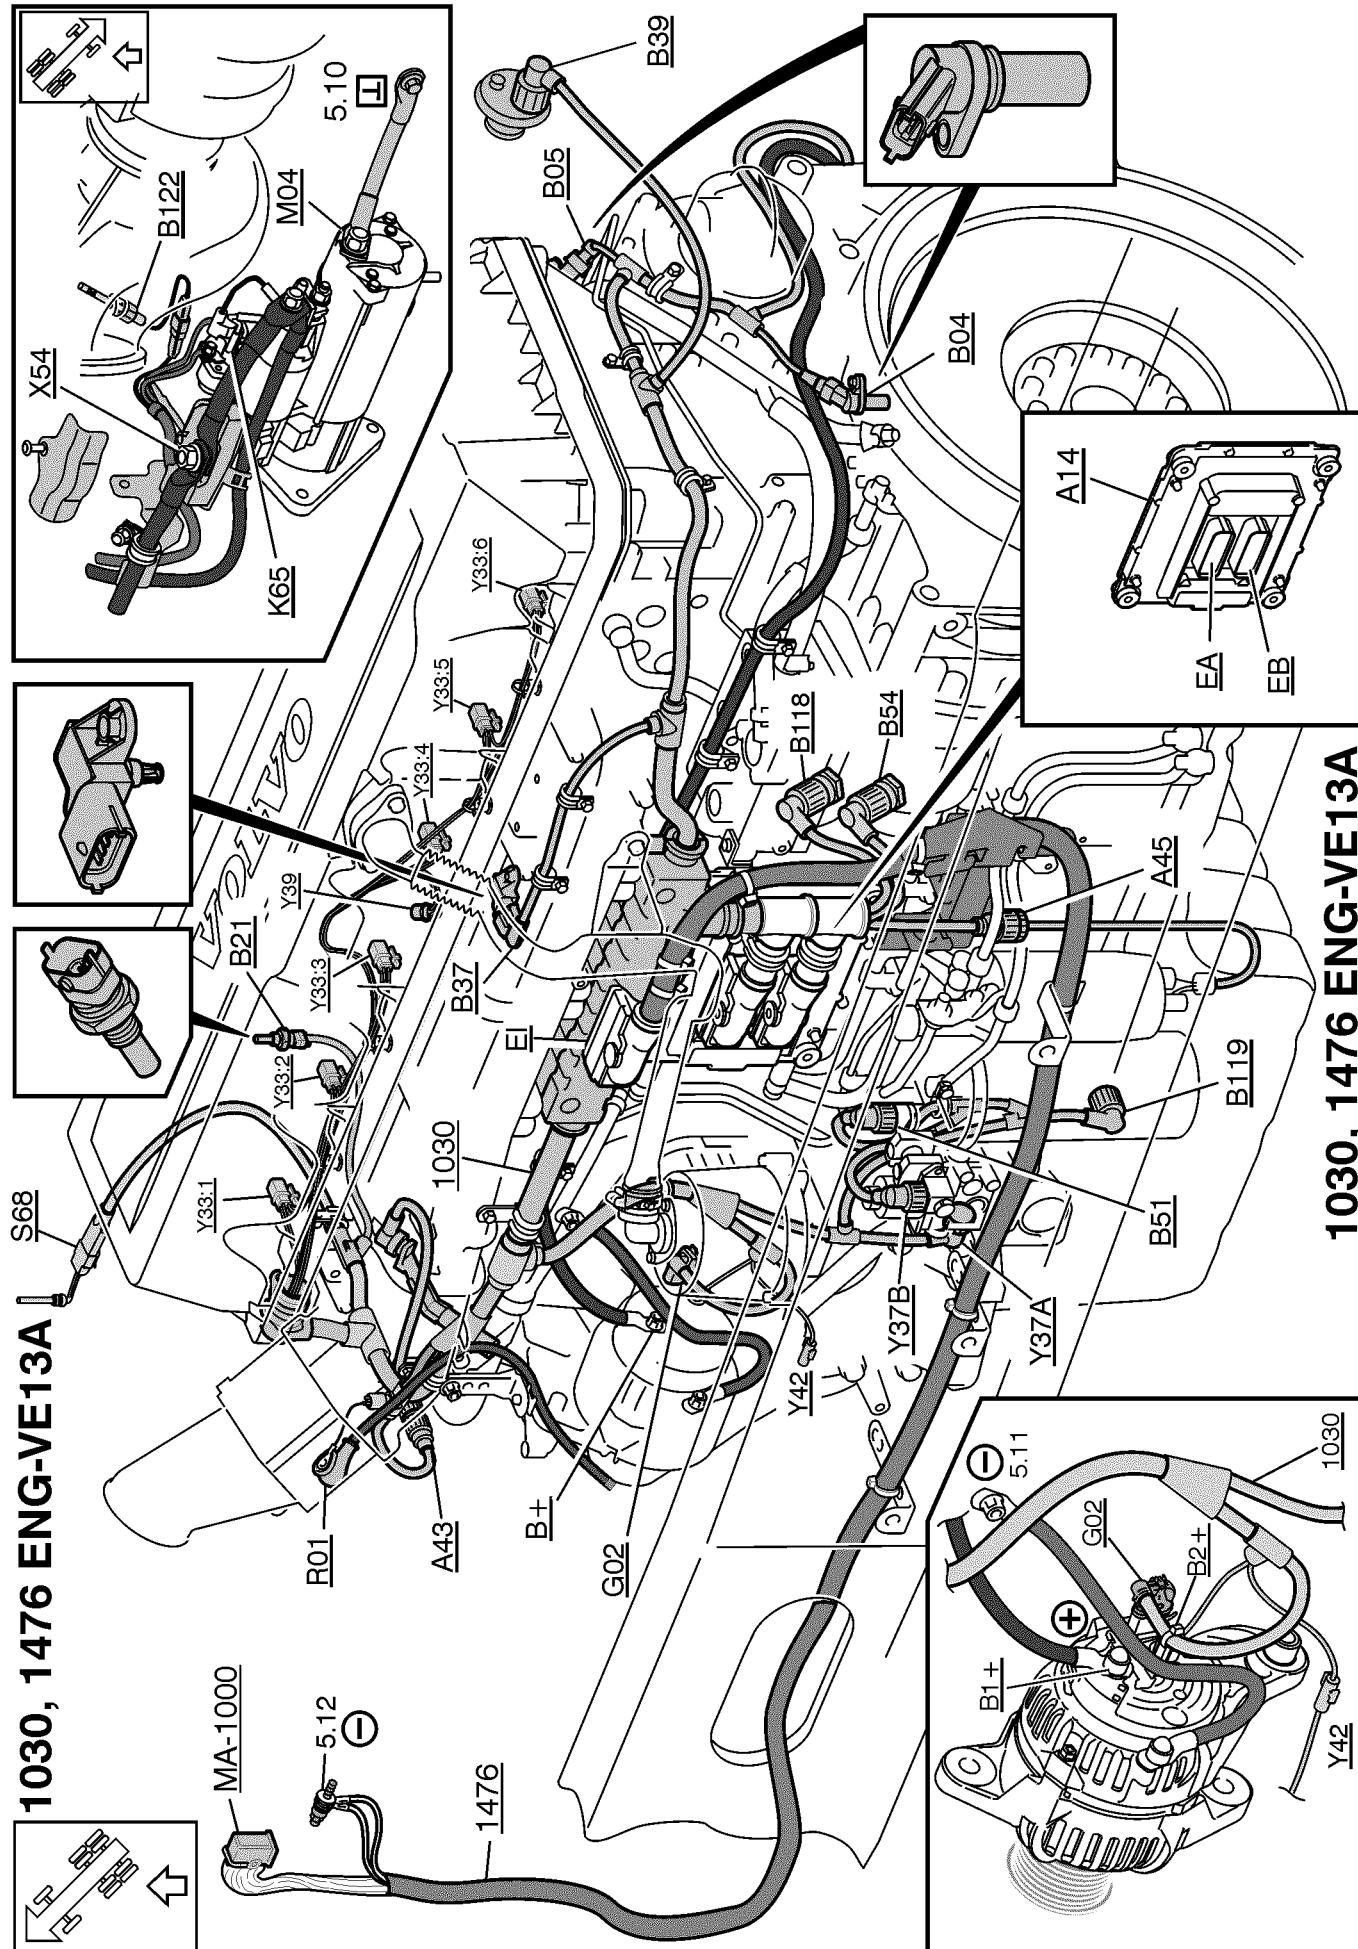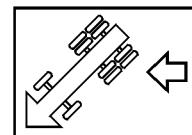


1030, 1476 ENG-VE13A

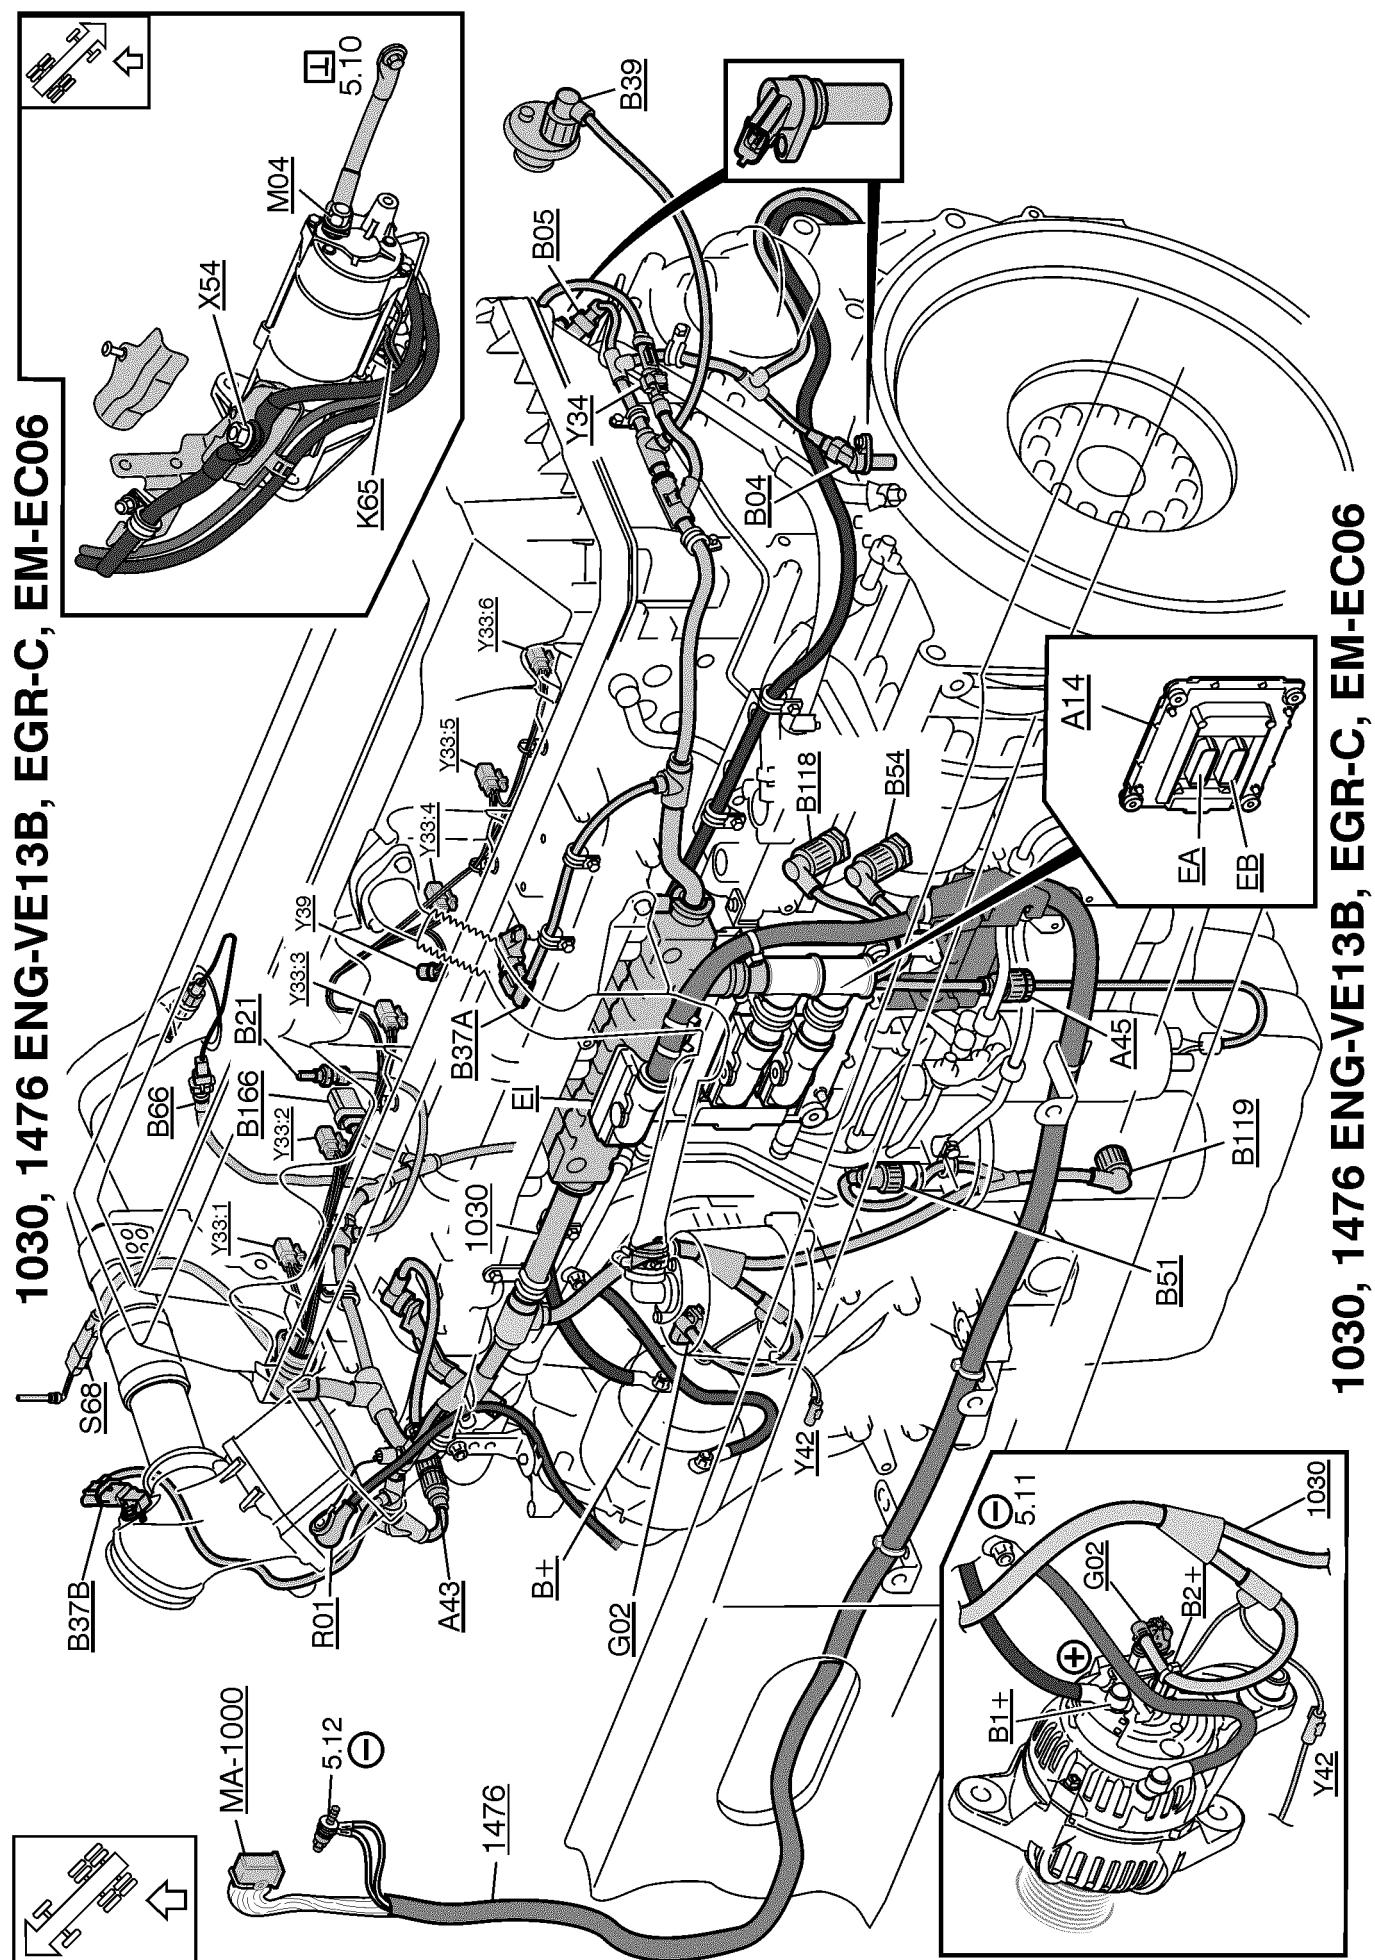




1030 ENG-VE13B, EGR-C, EM-EC06

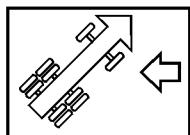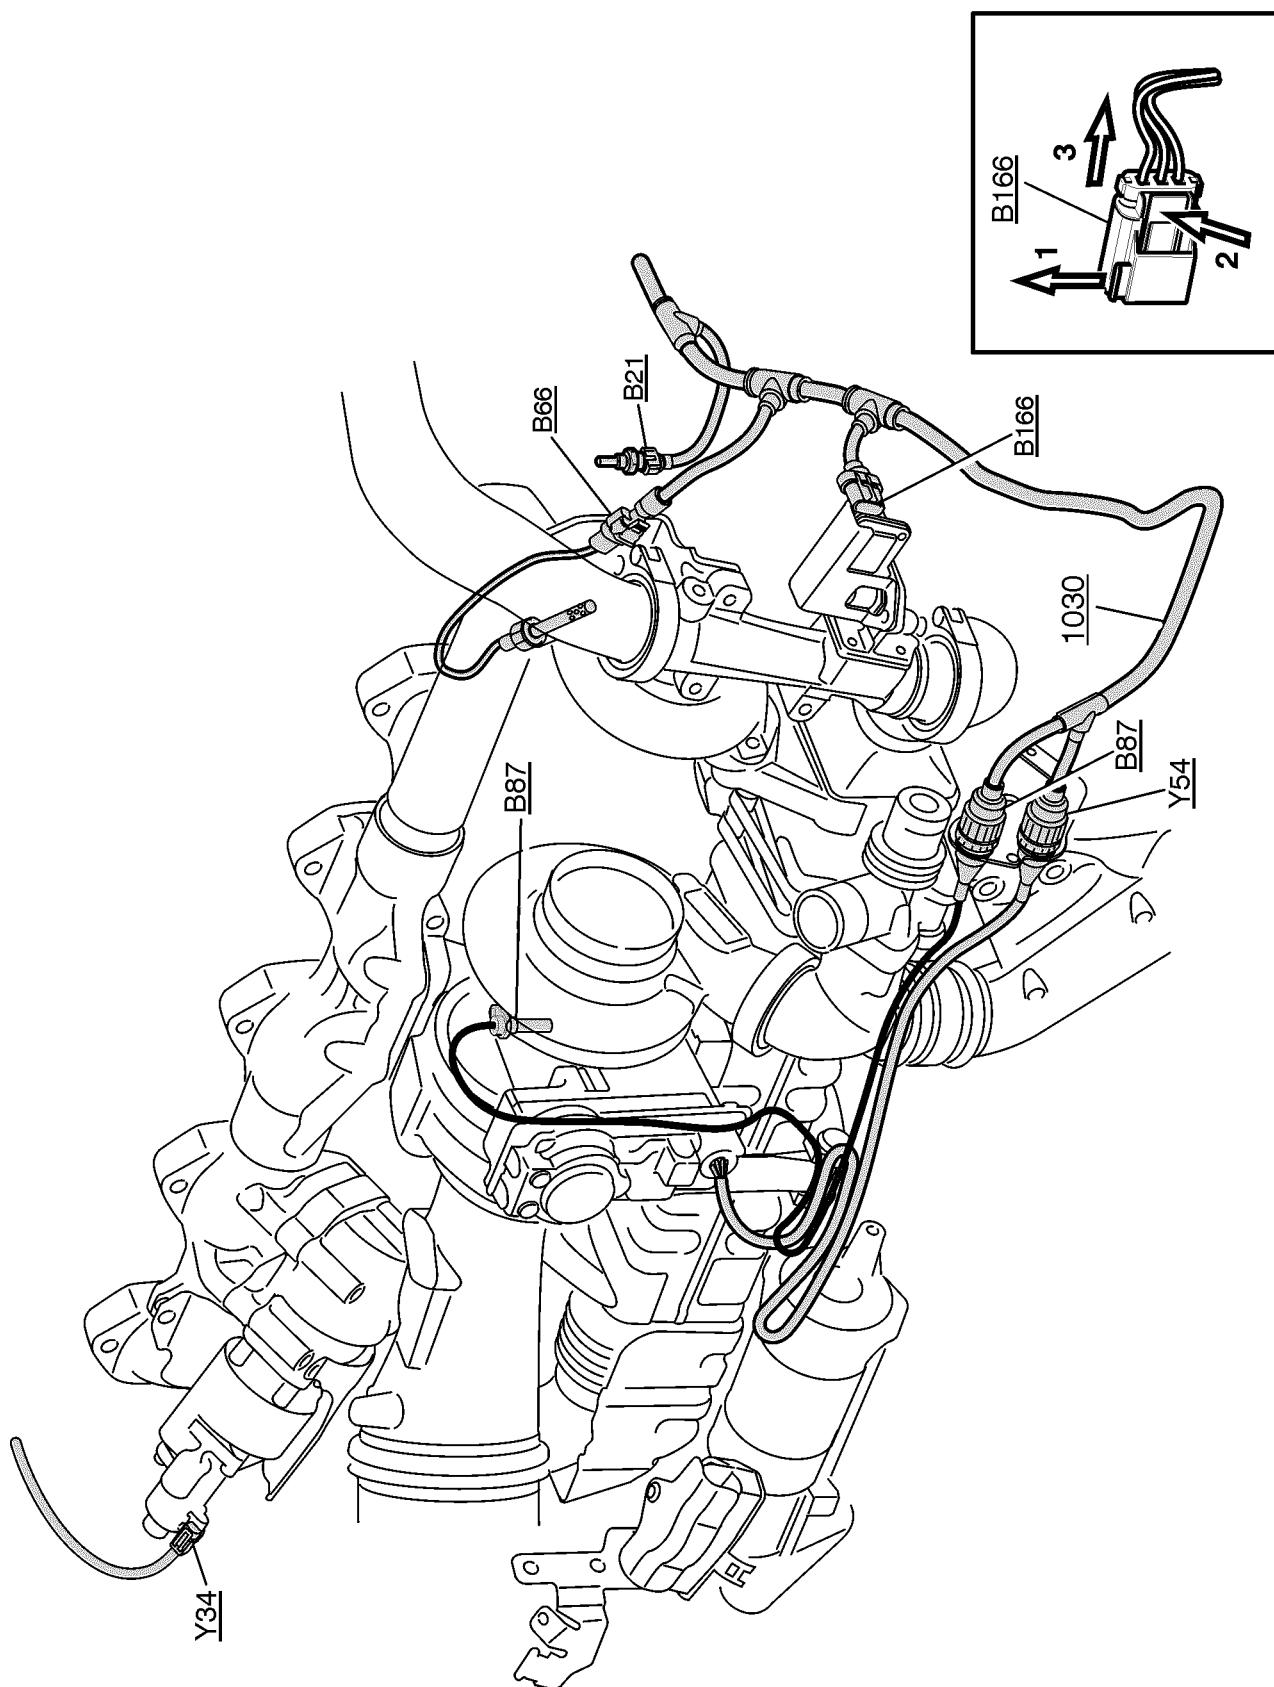


1030 ENG-VE13B, EGR-C, EM-EC06

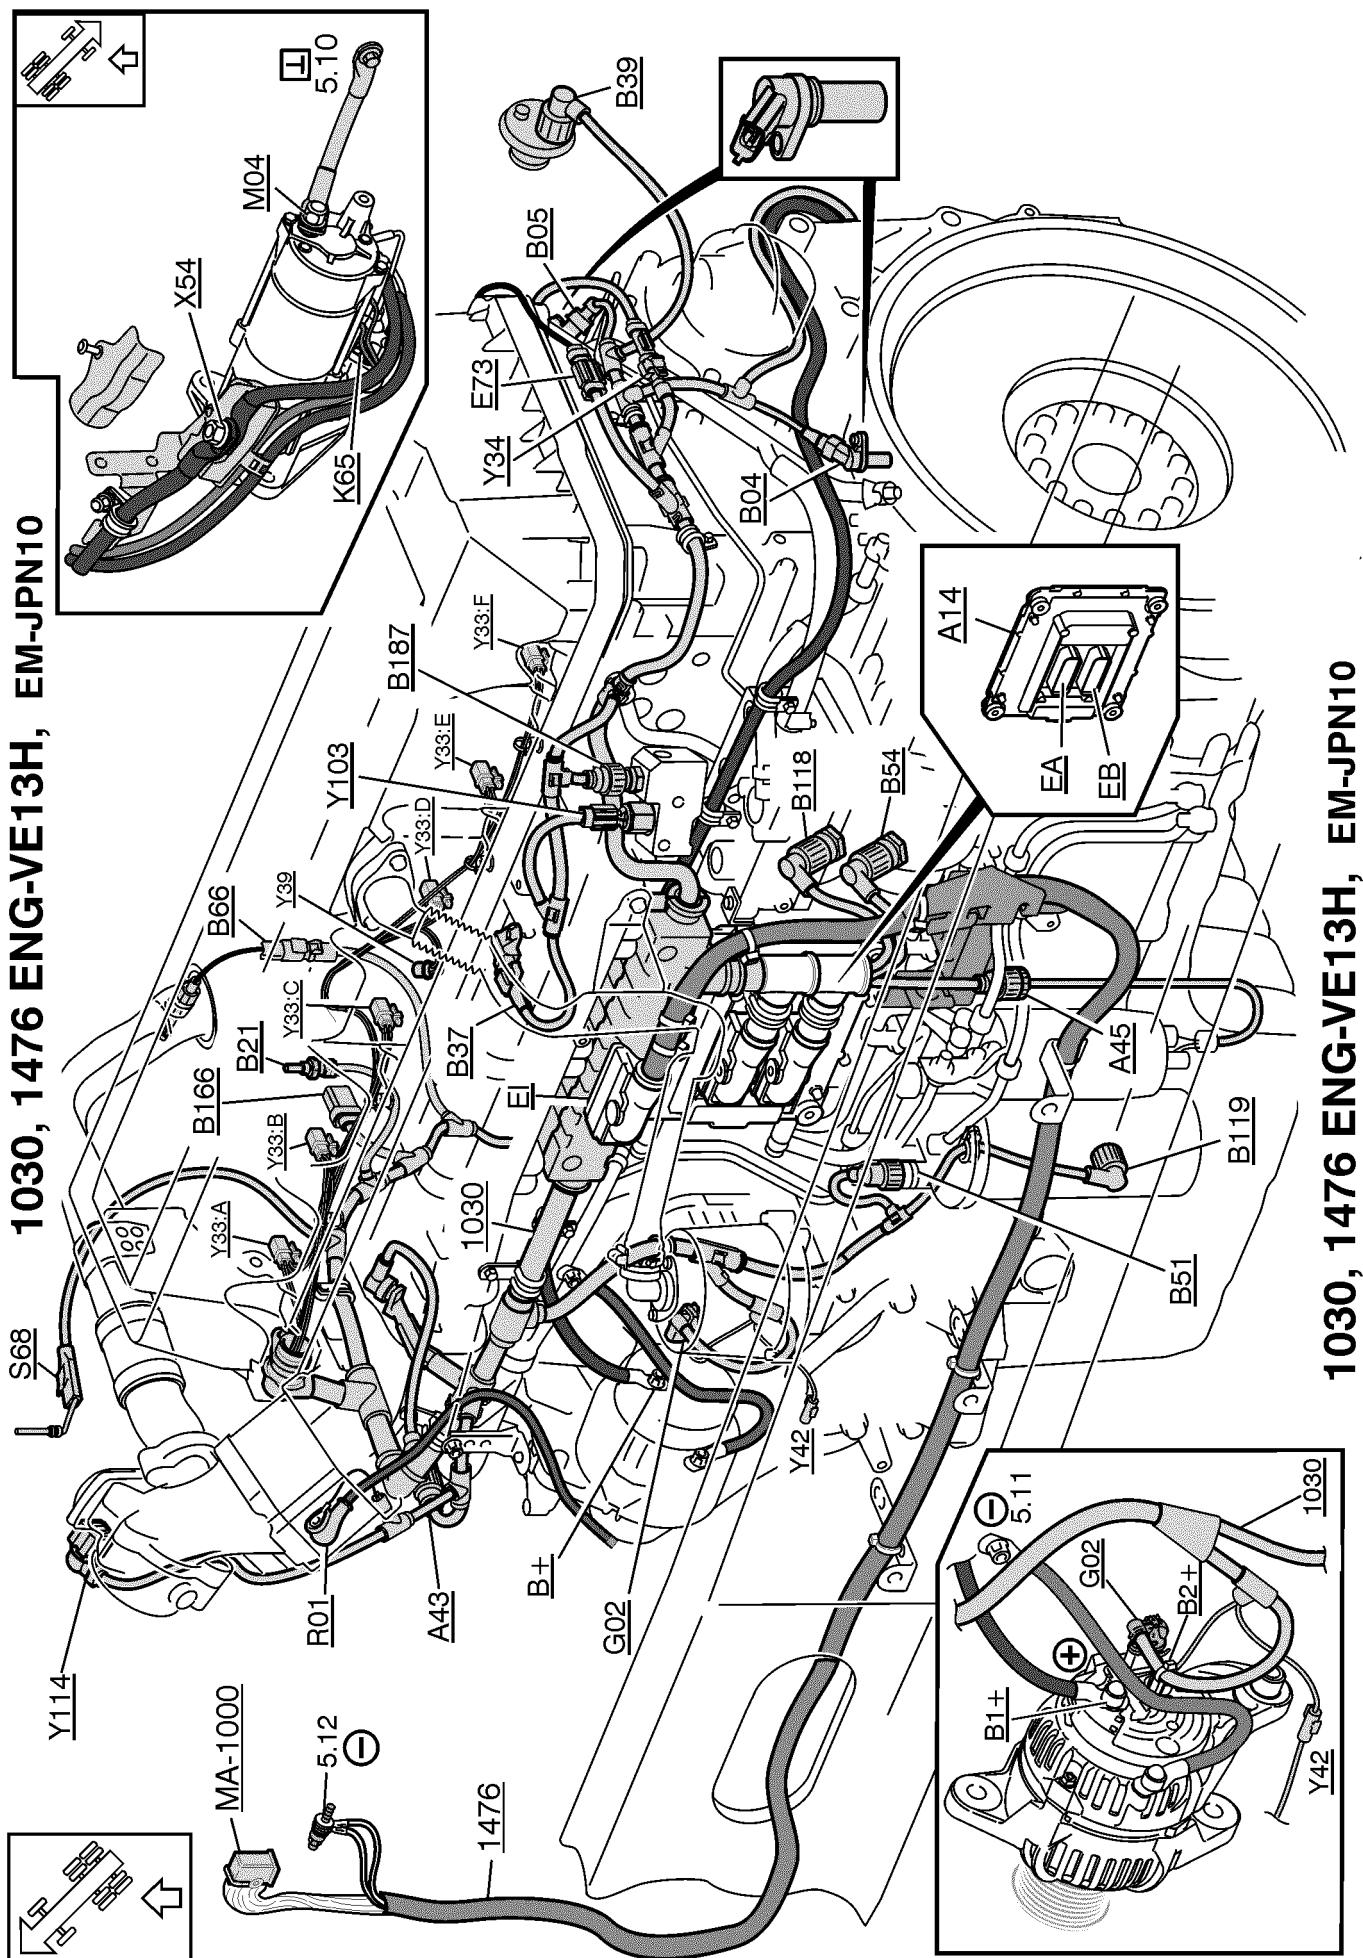


1030, 1476 ENG-VE13H, EM-JPN10

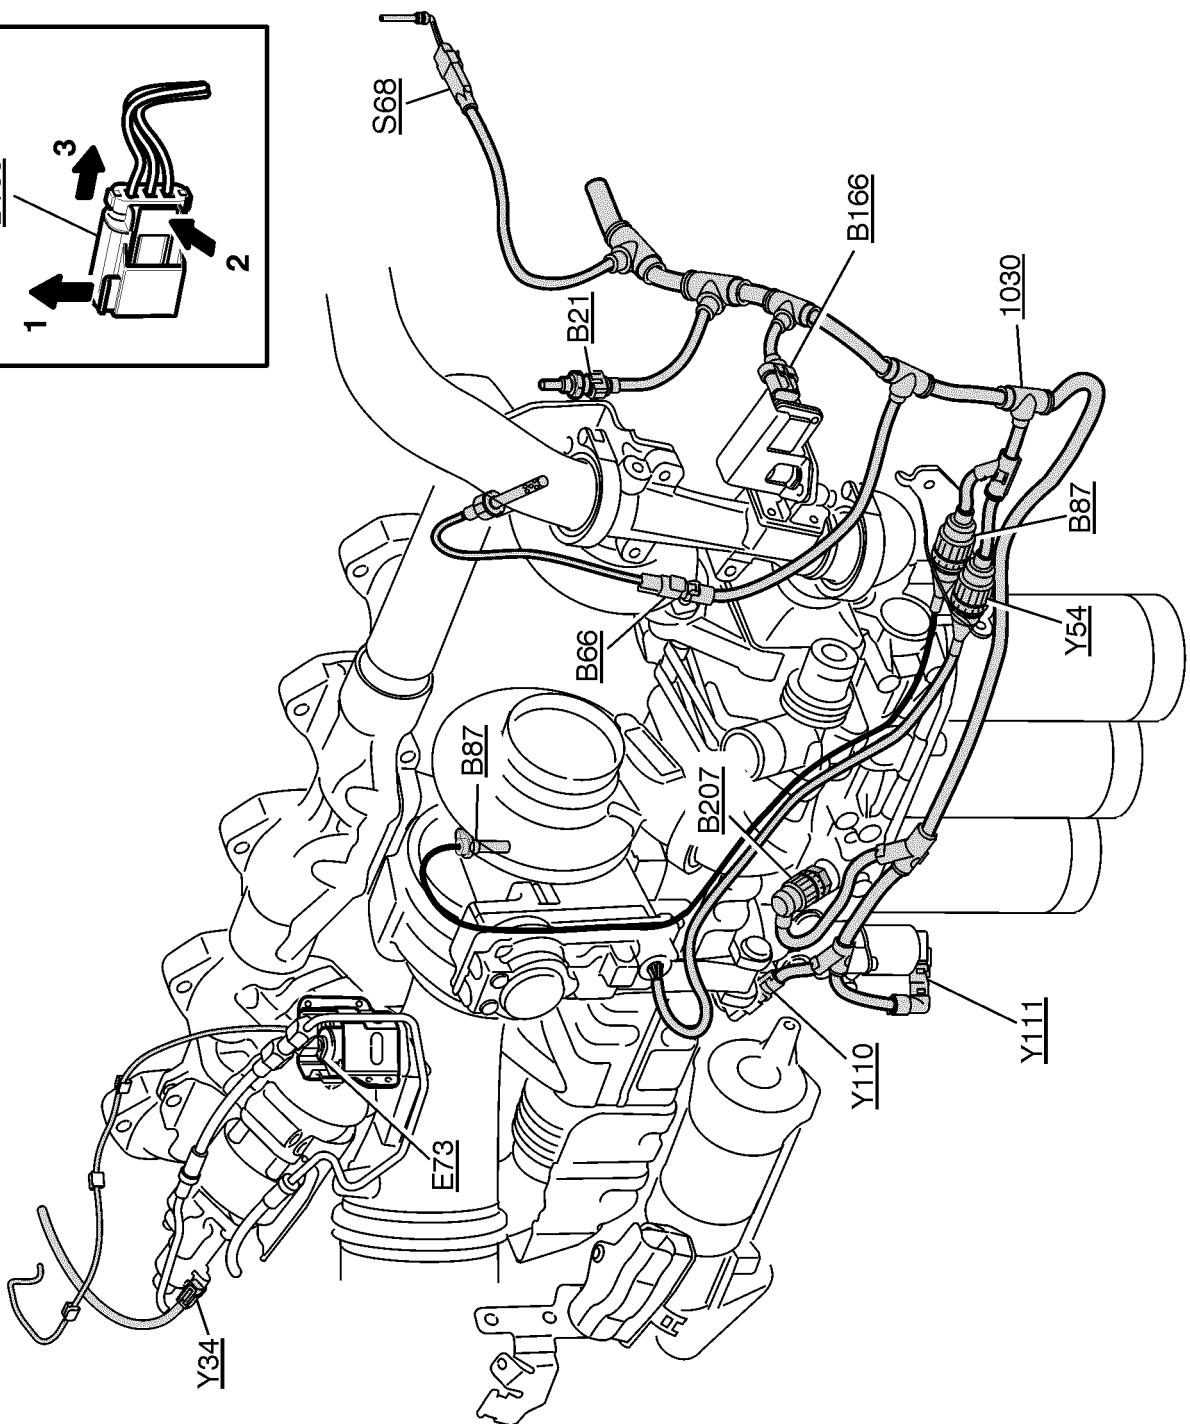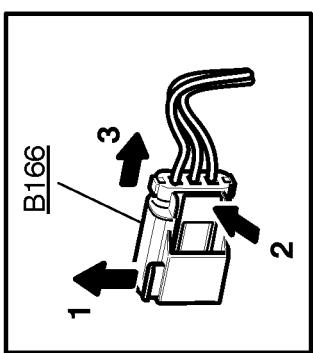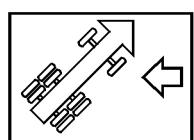


1030, 1476 ENG-VE13H, EM-JPN10

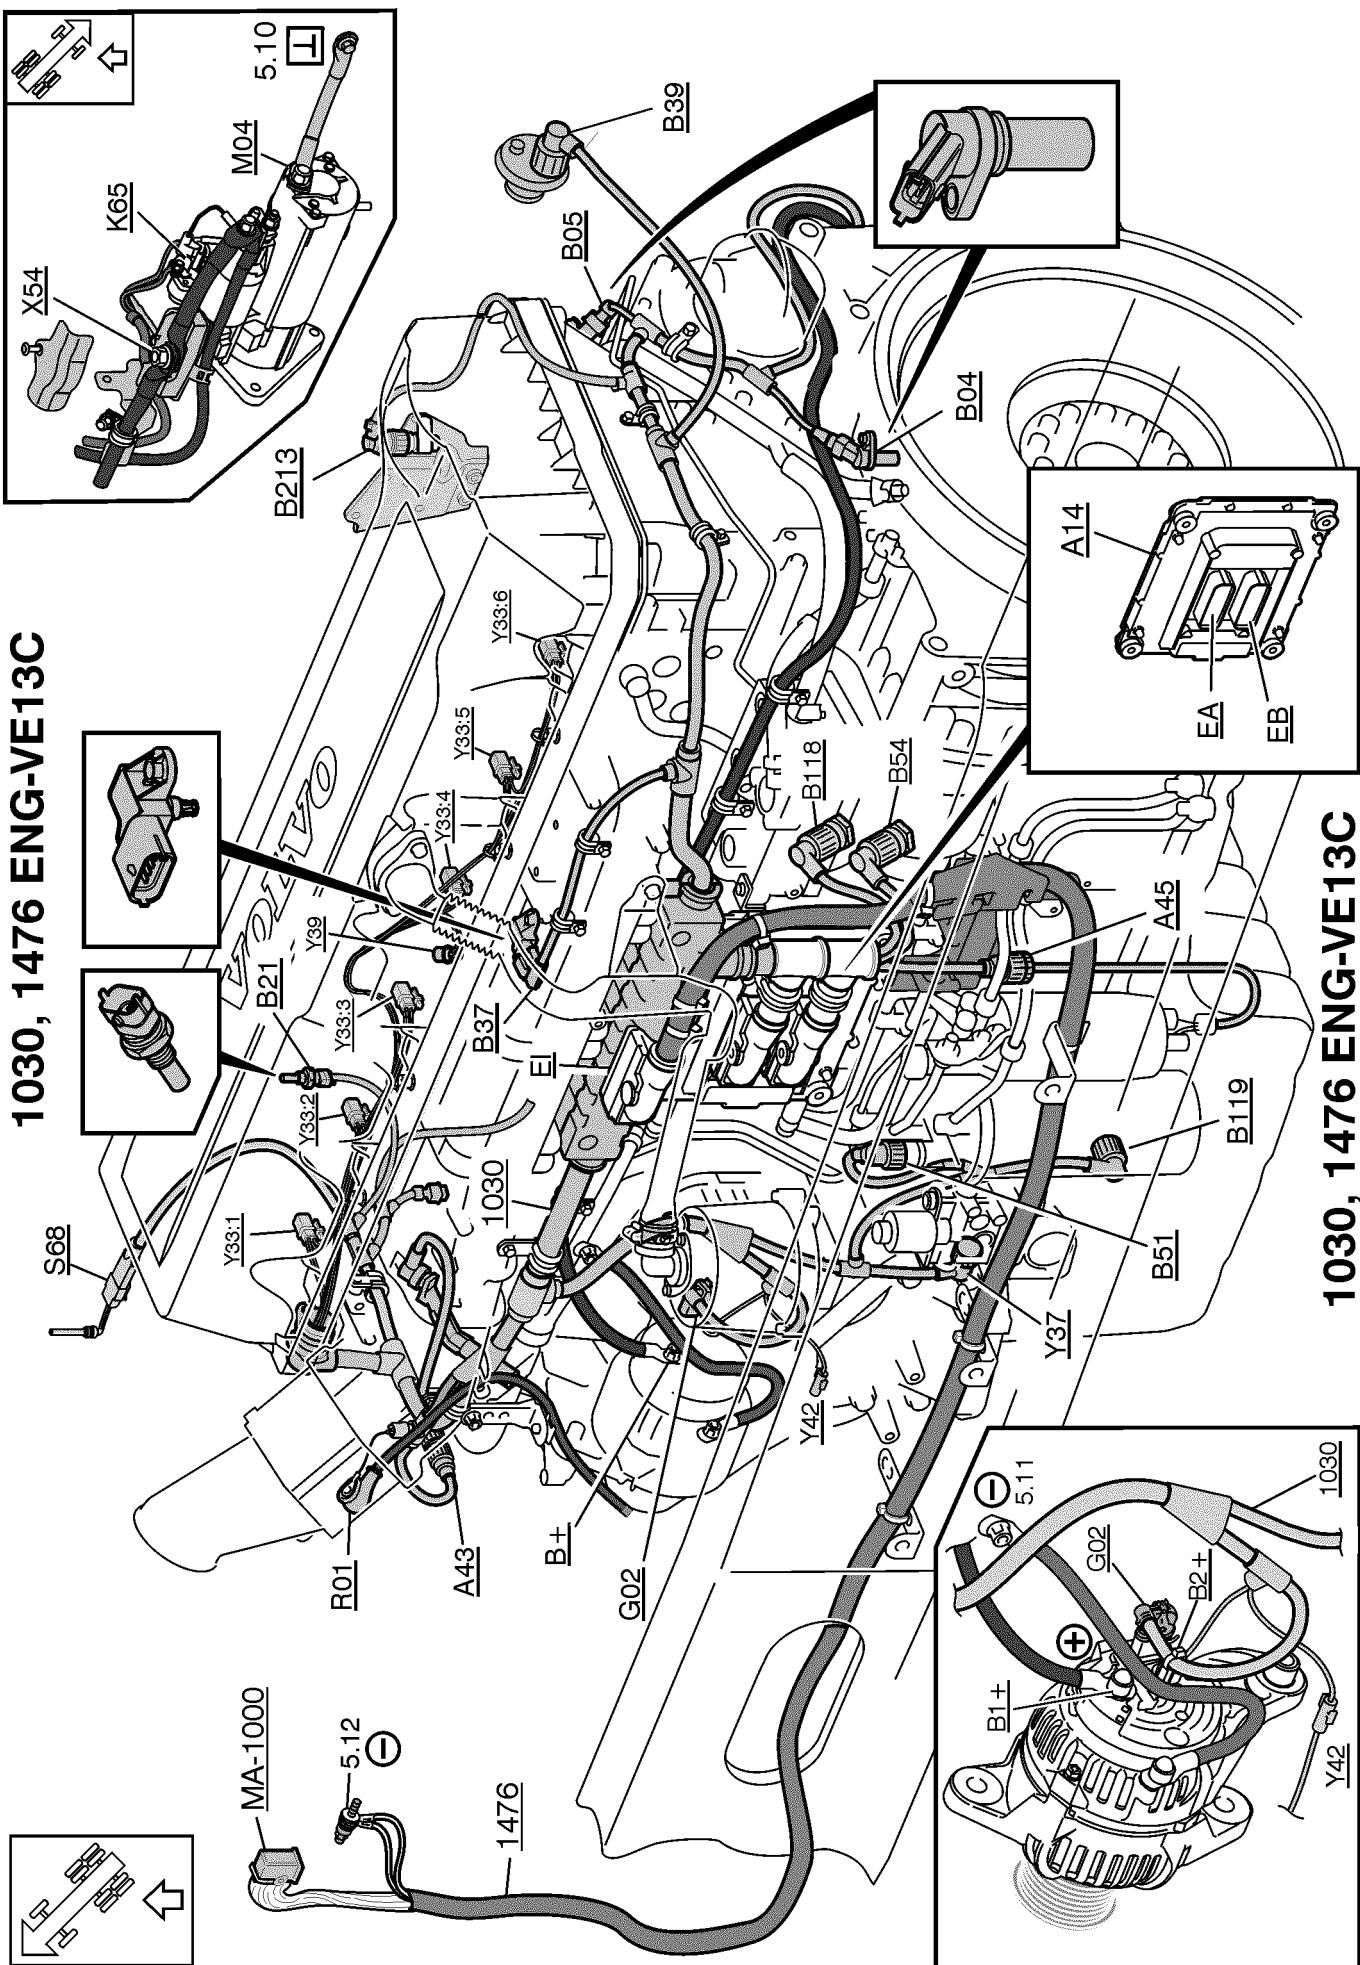


1030 ENG-VE13C

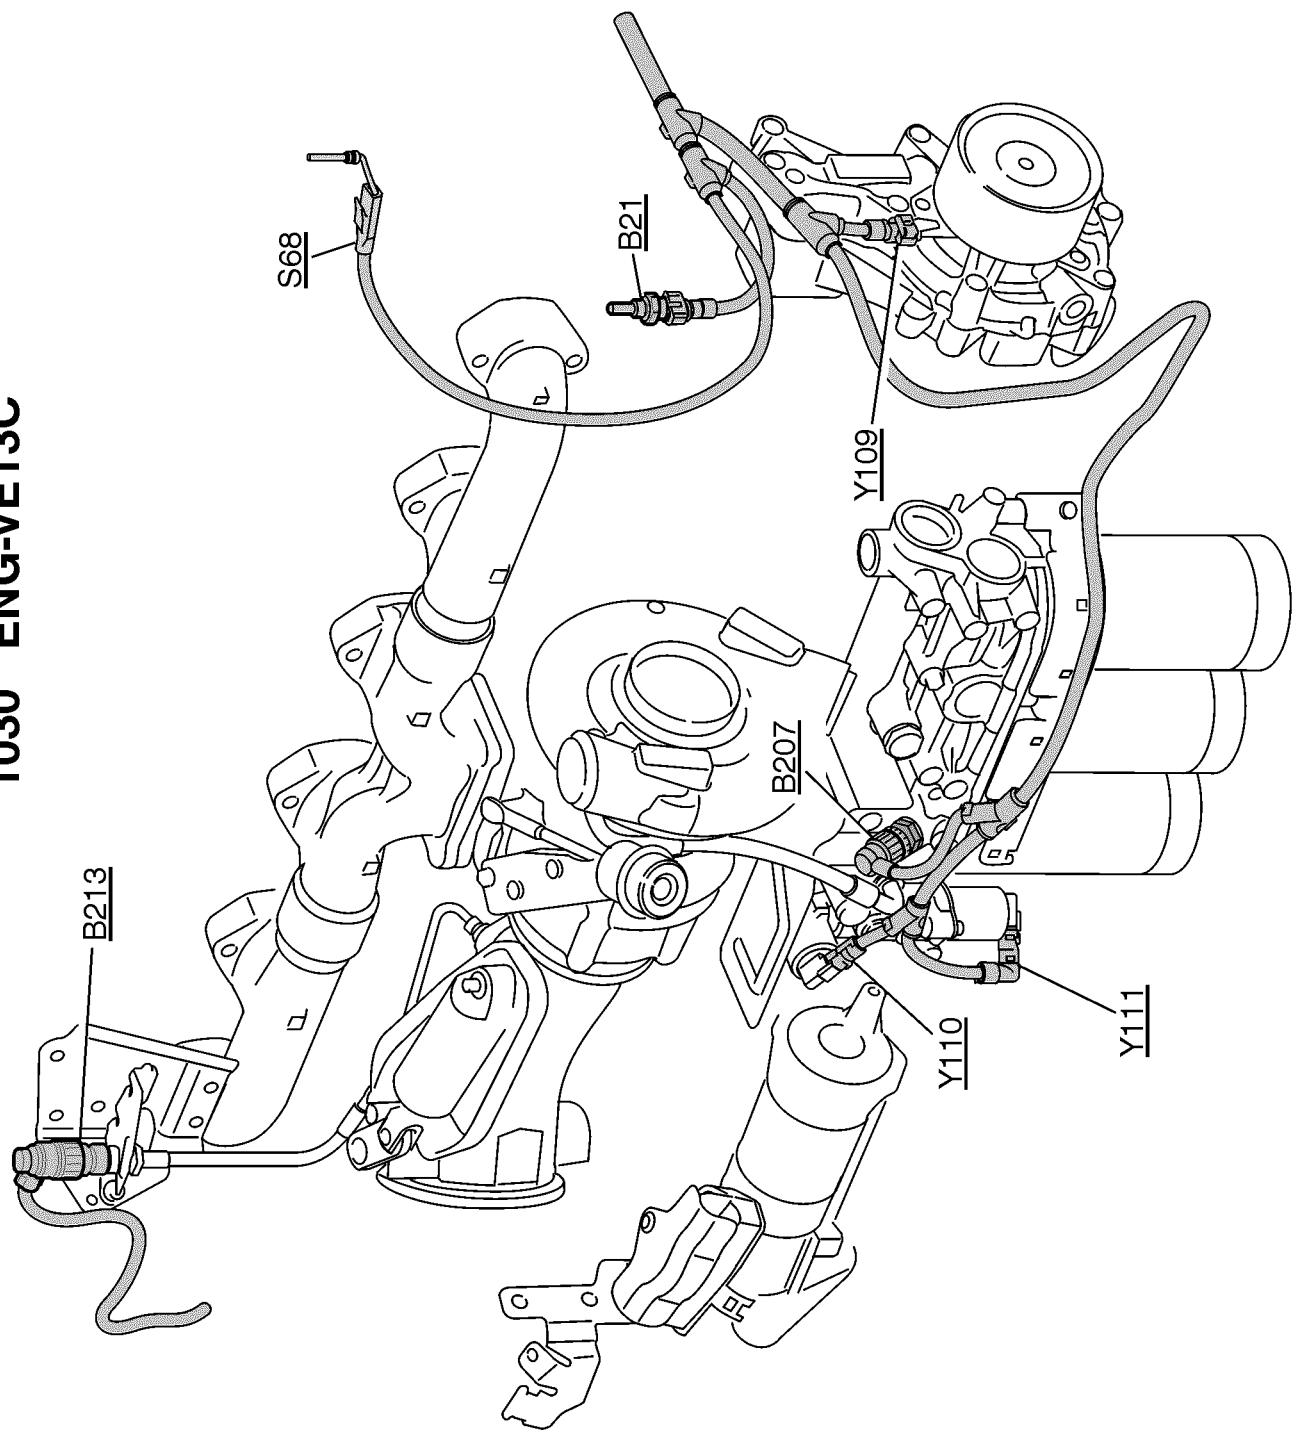


1030 ENG-VE13C

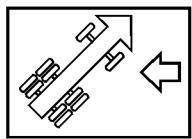


T3029521

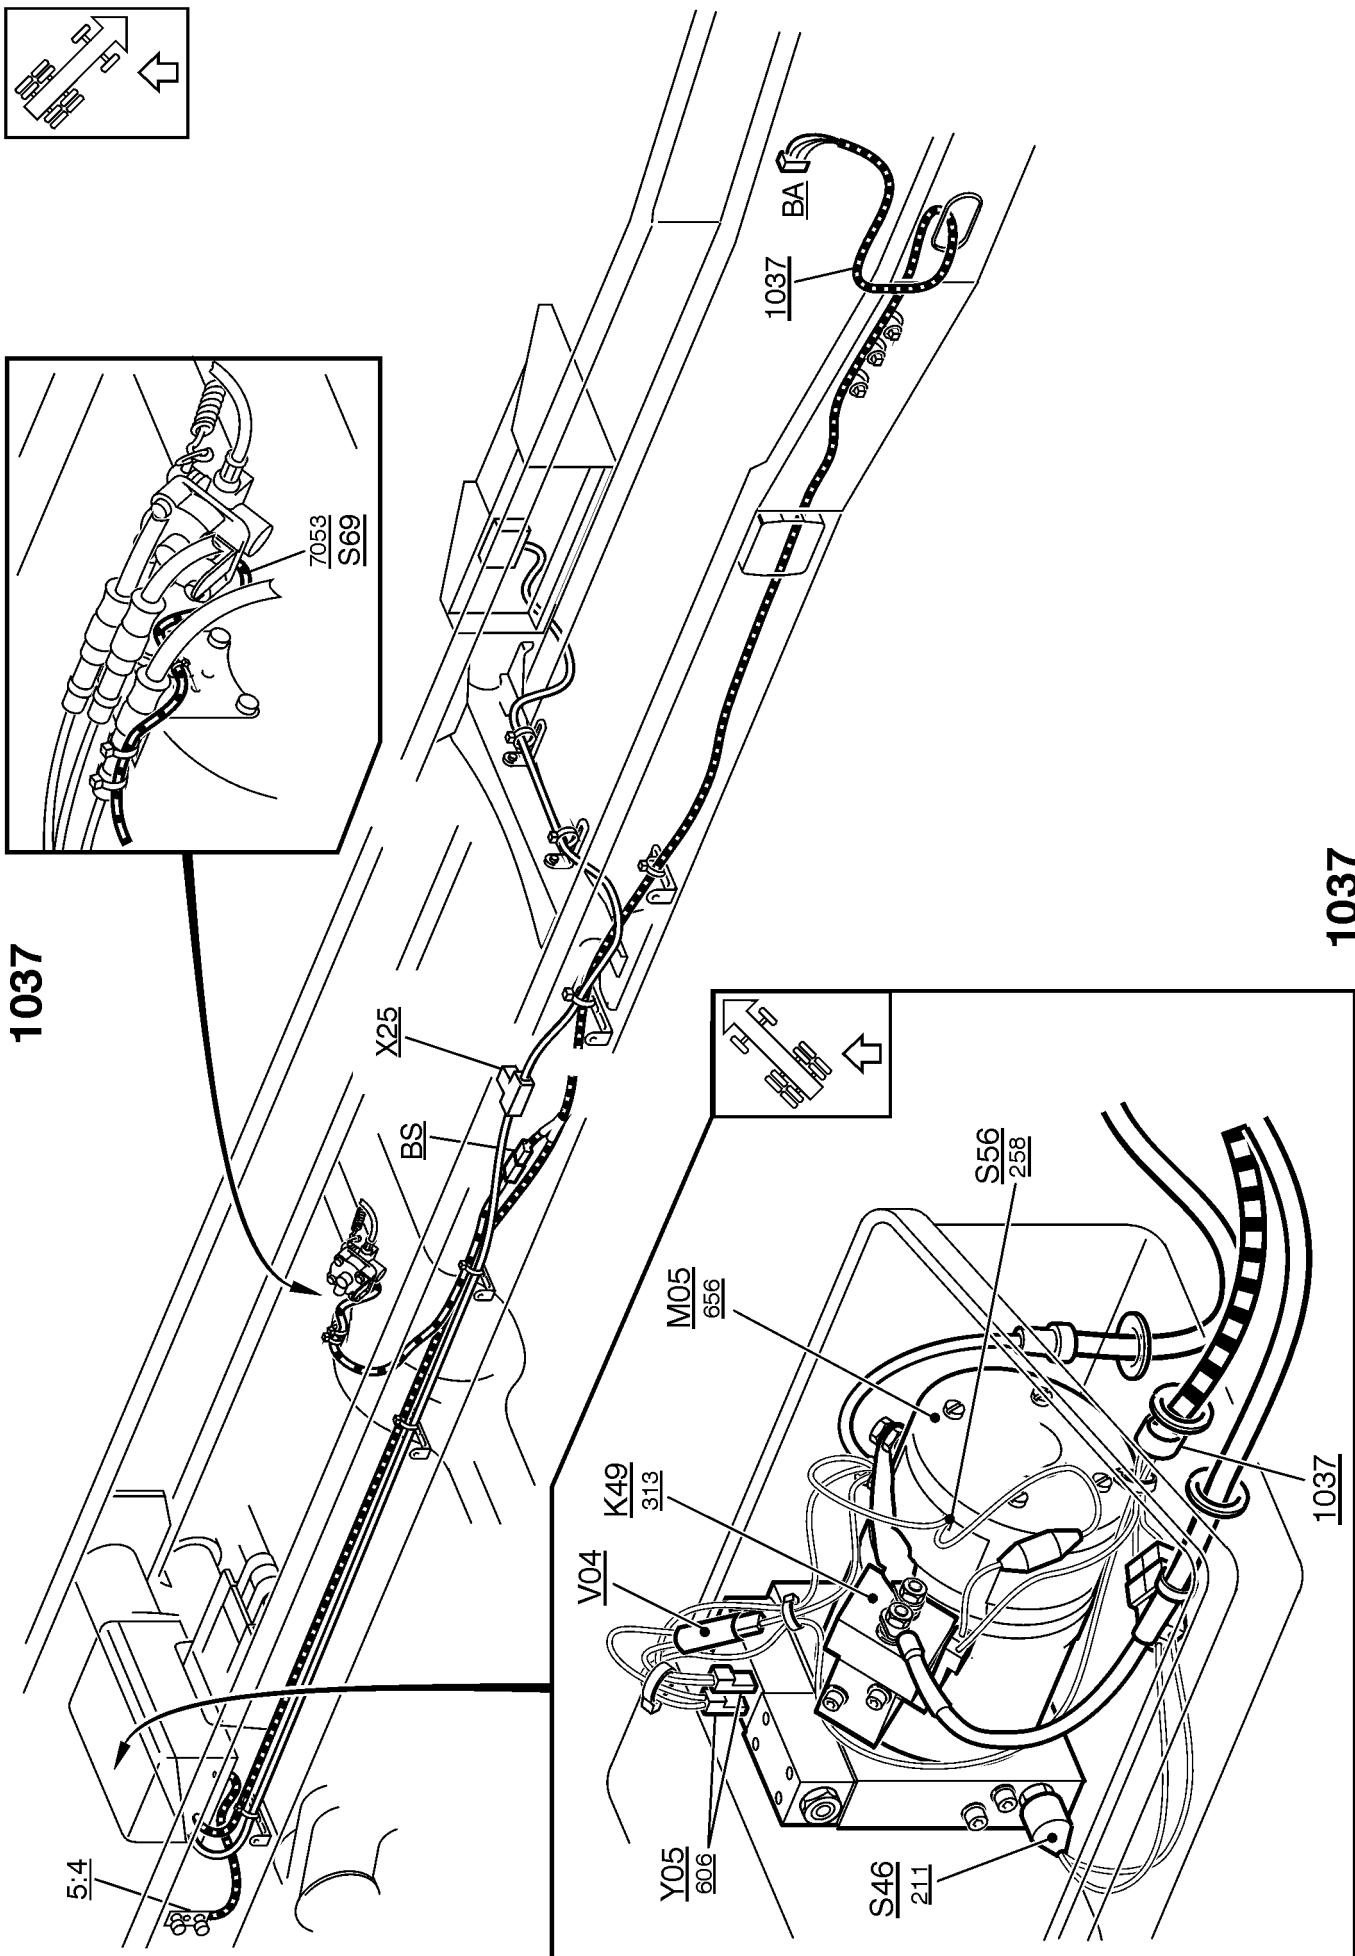


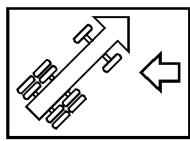


1037, J-RIDE

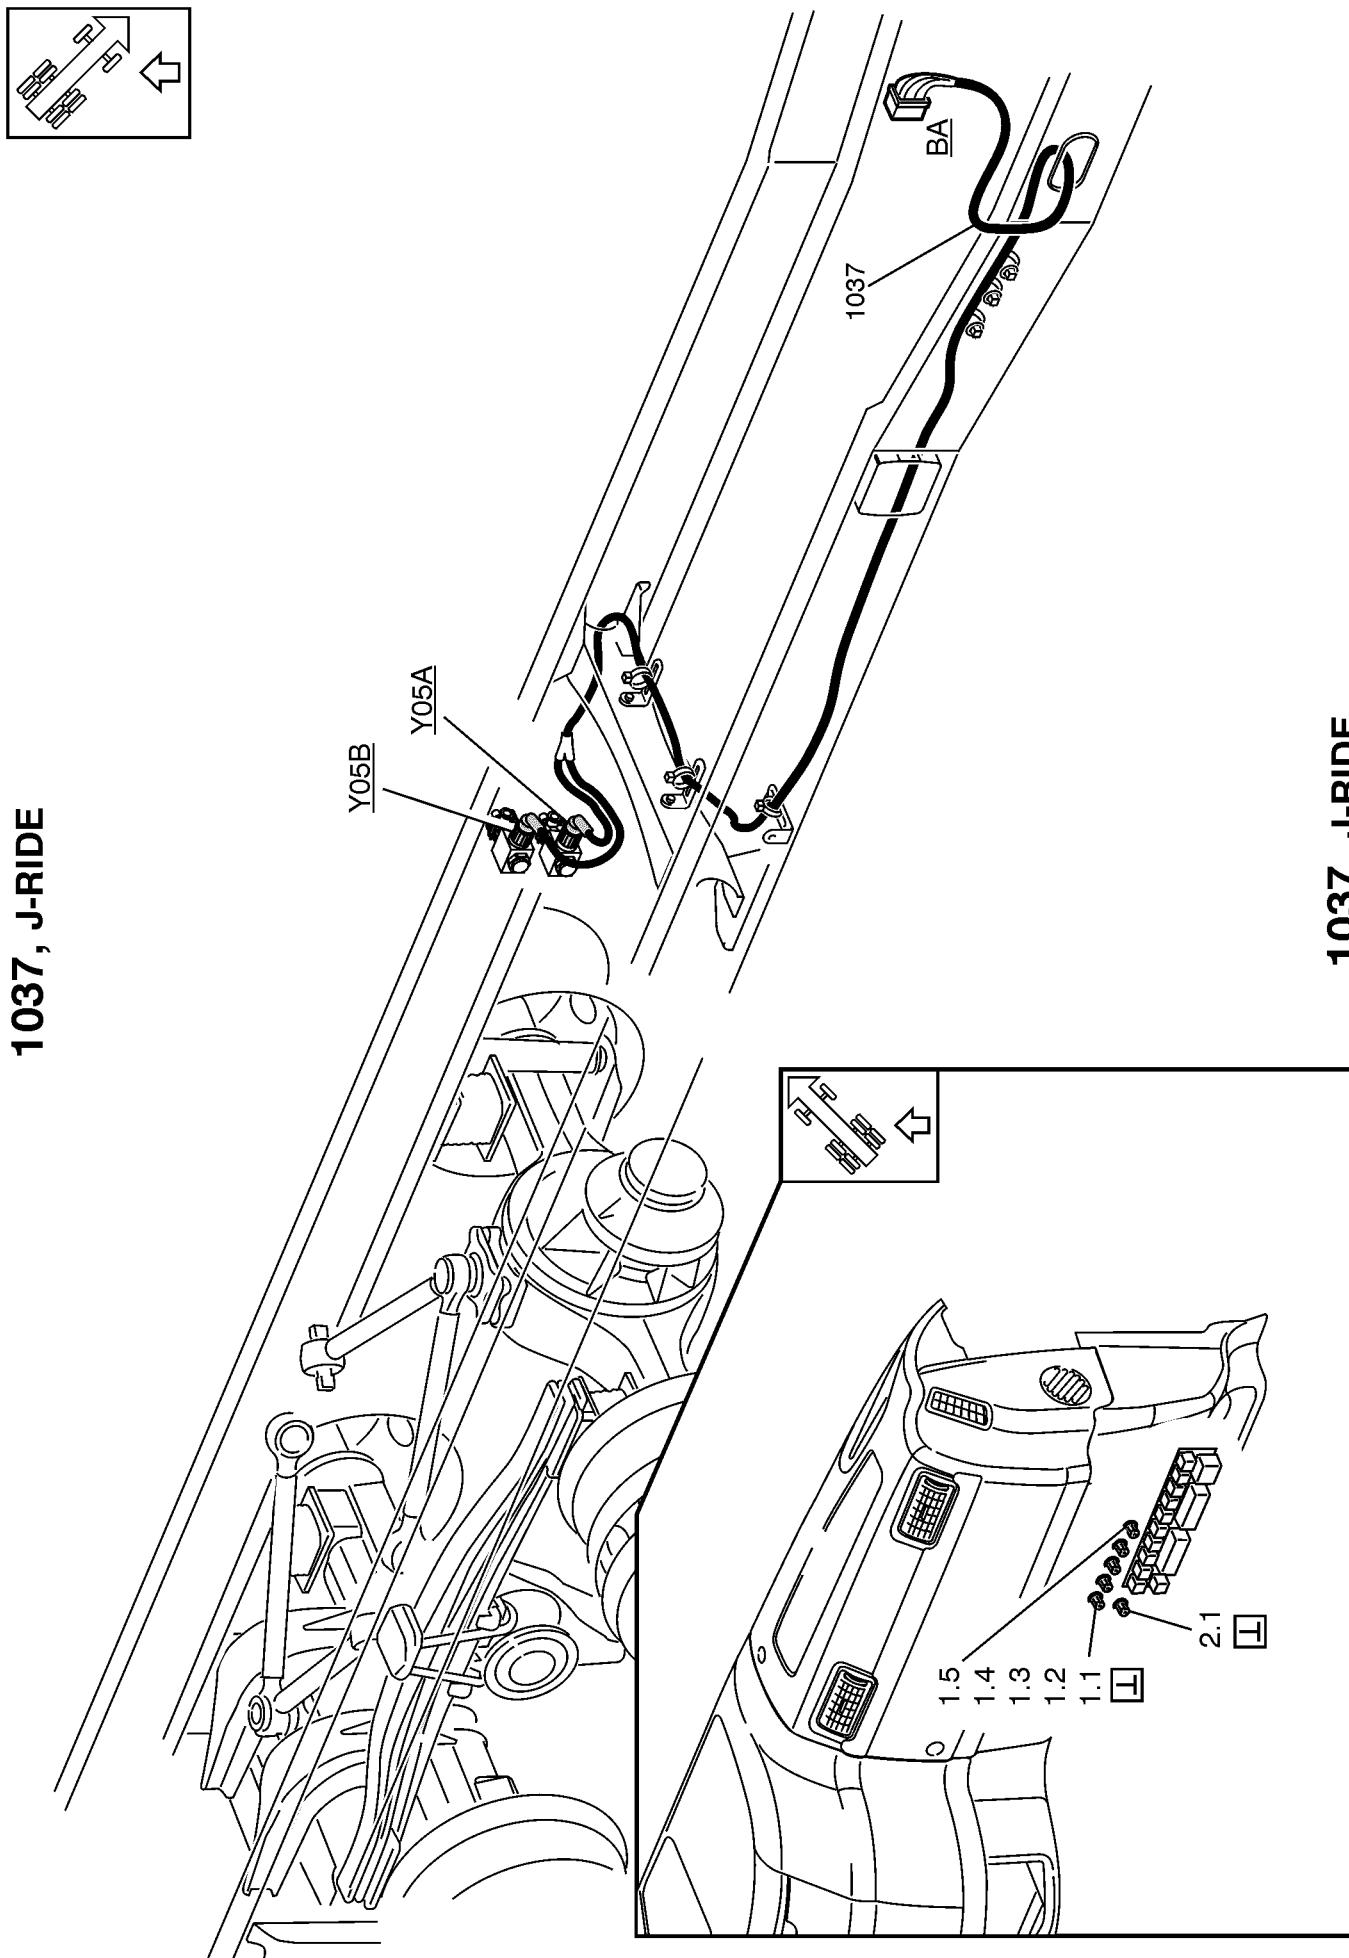


T3021578

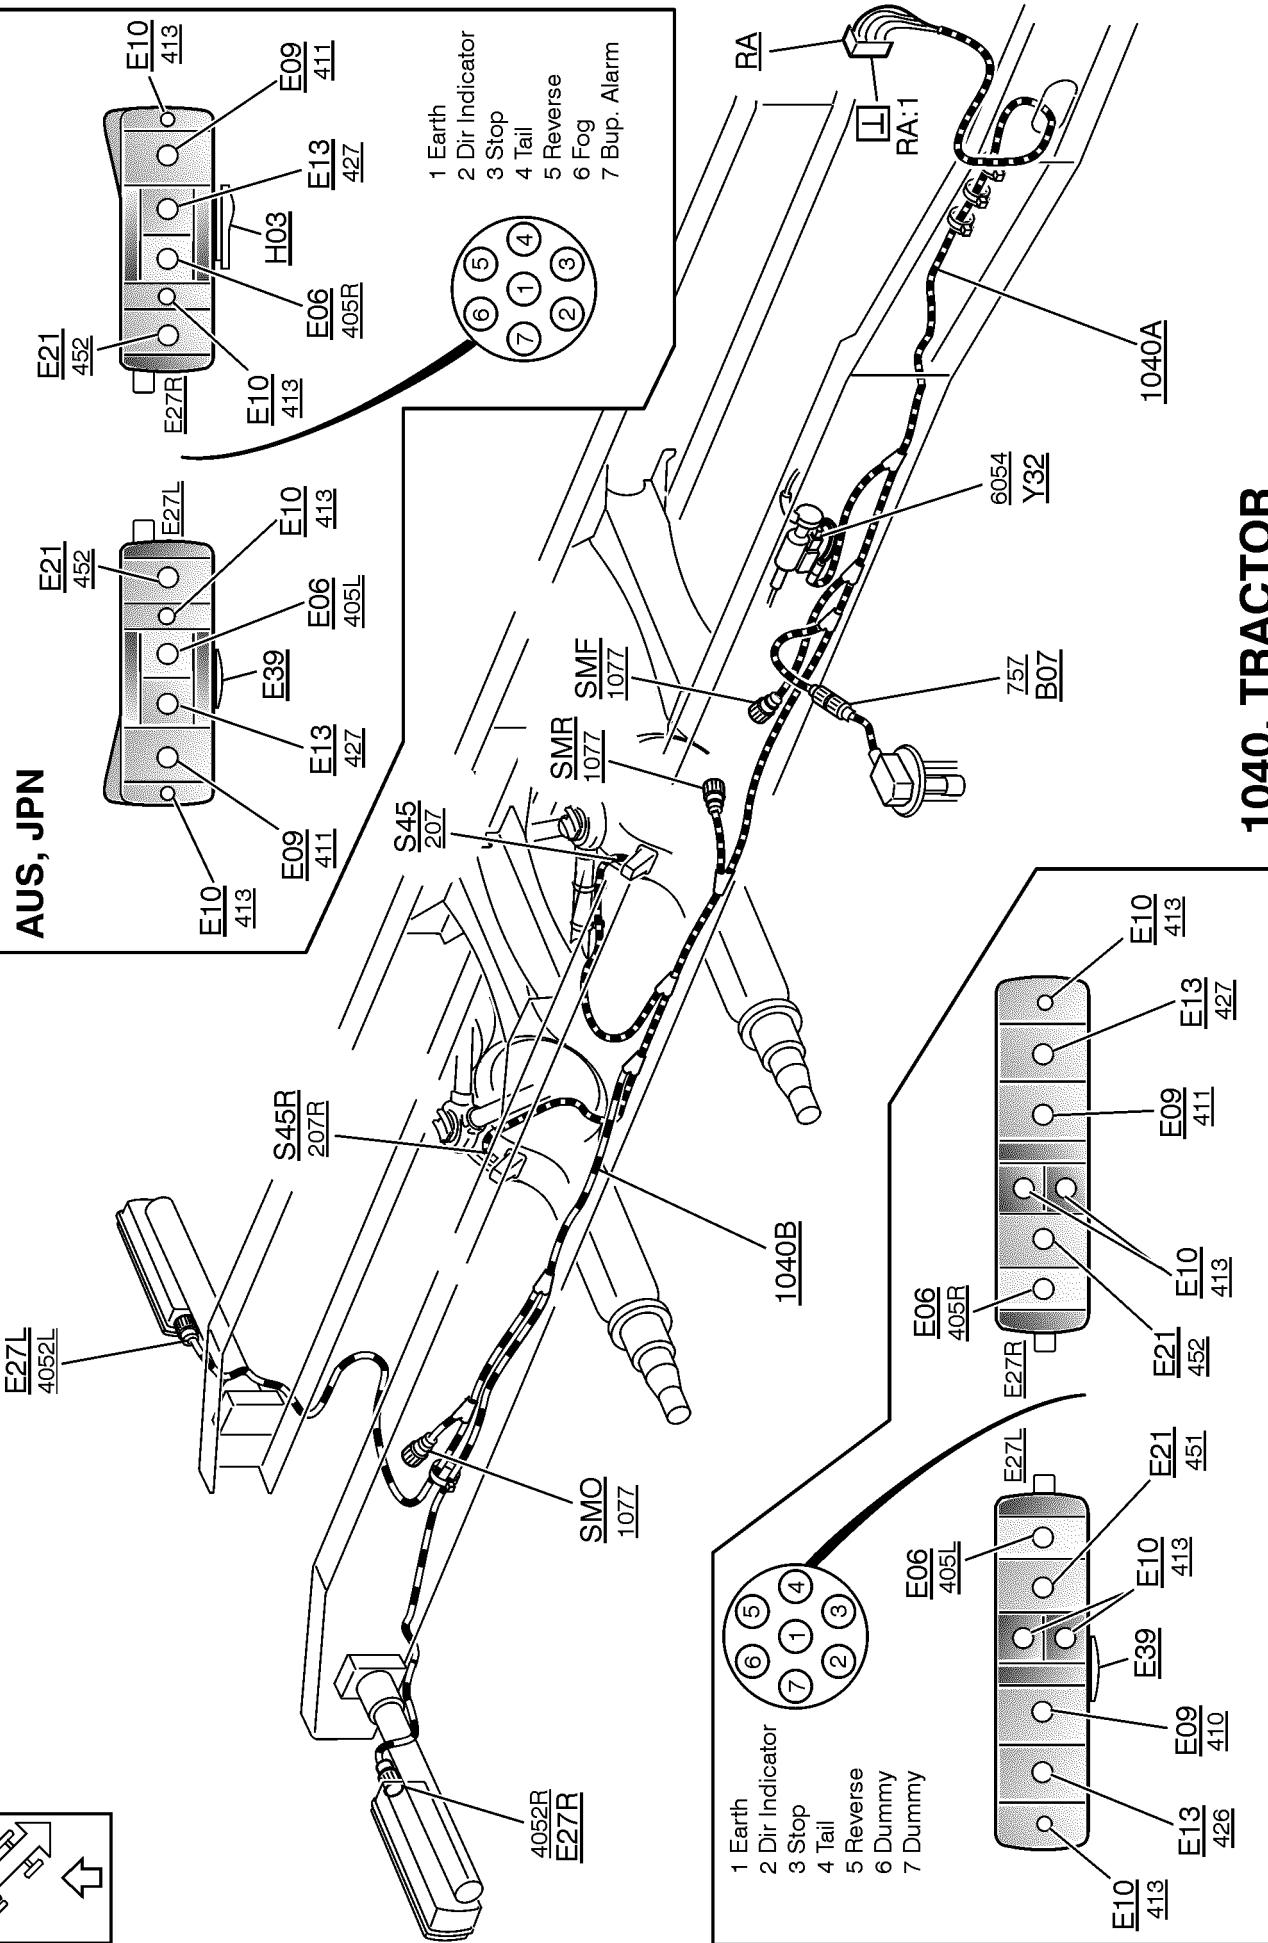
1040, TRACTOR


T3017727

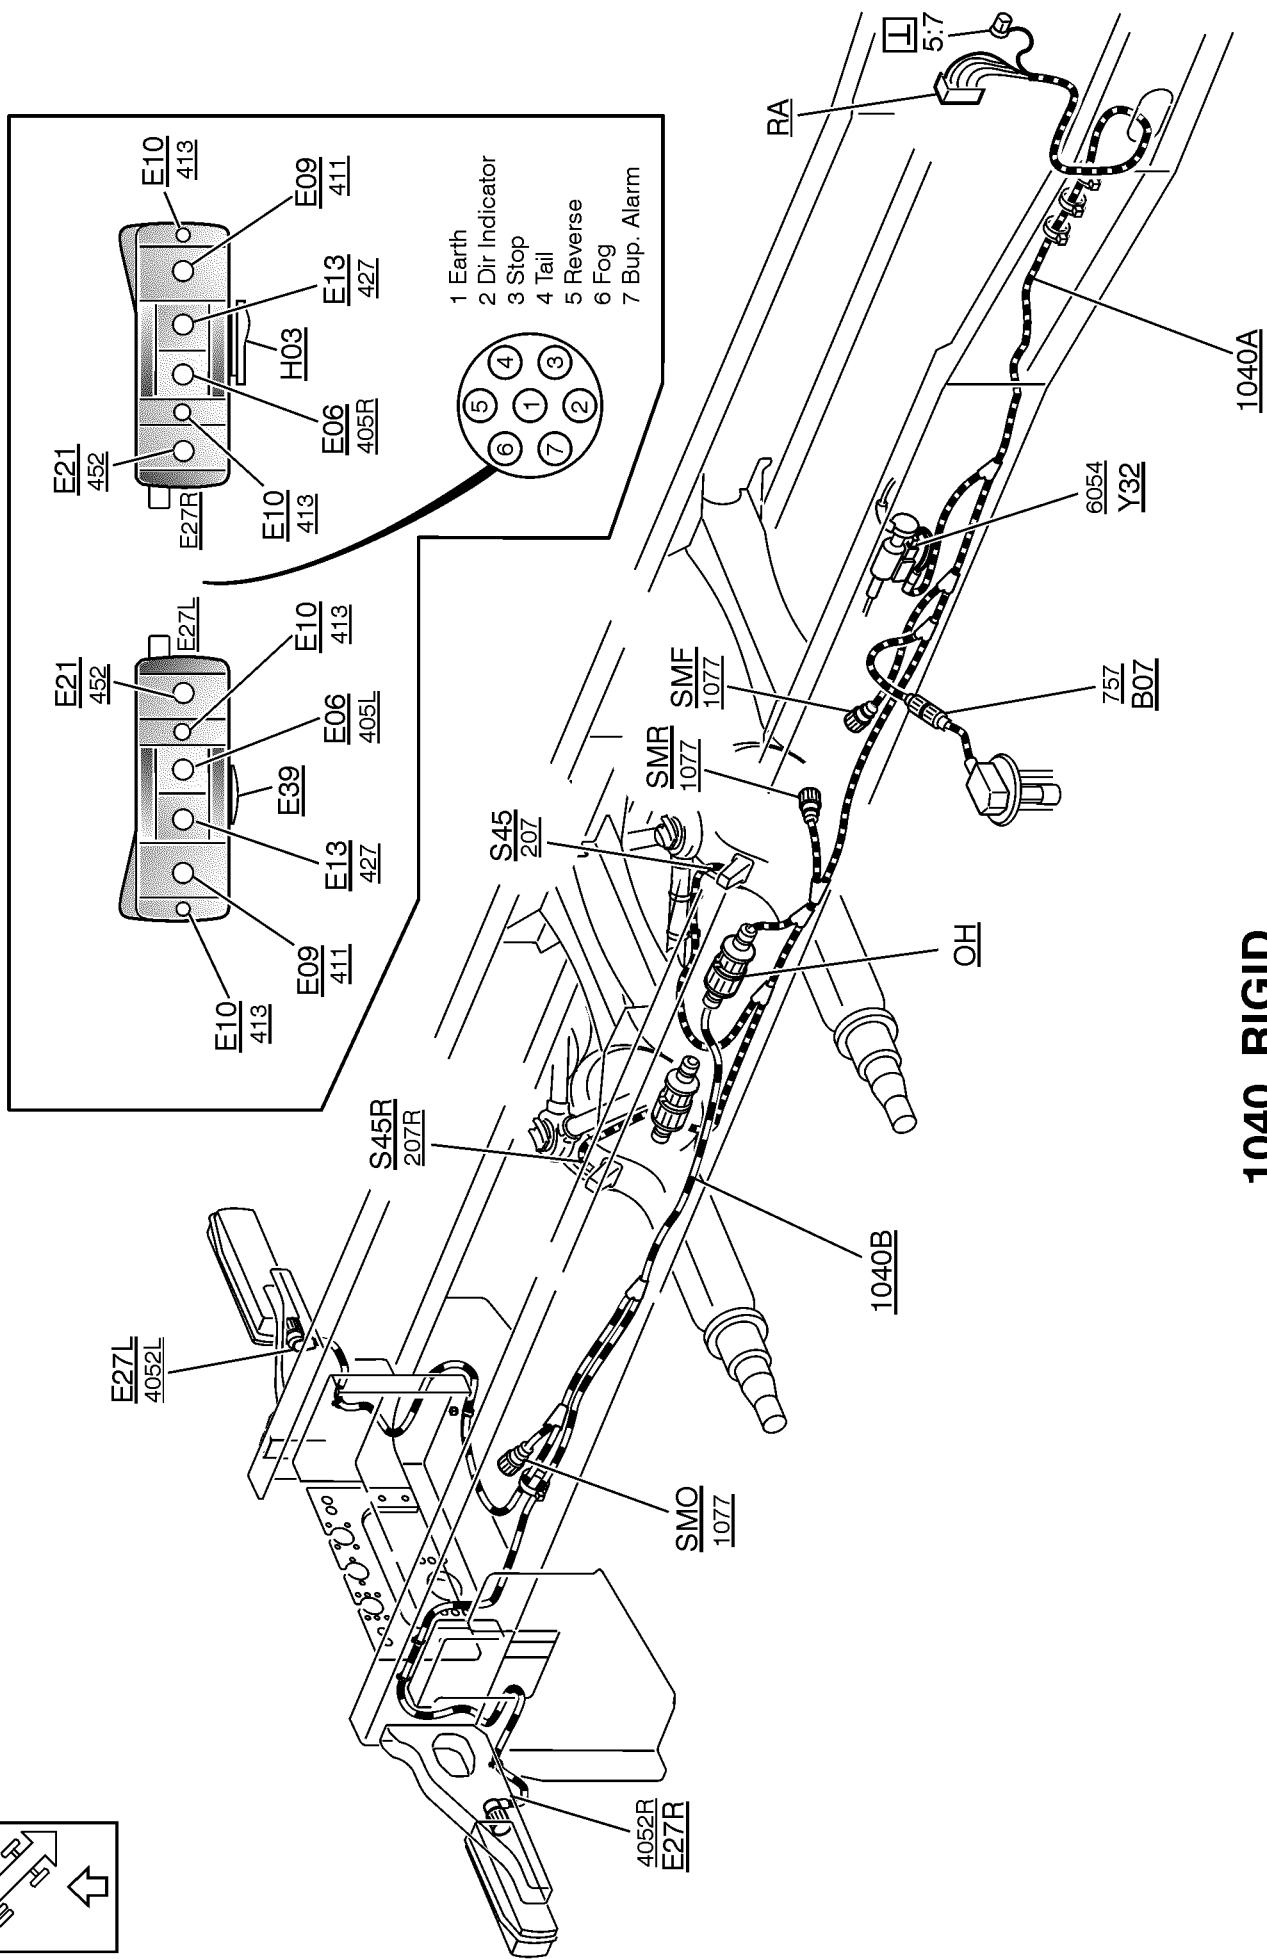
1040, RIGID


T3017728

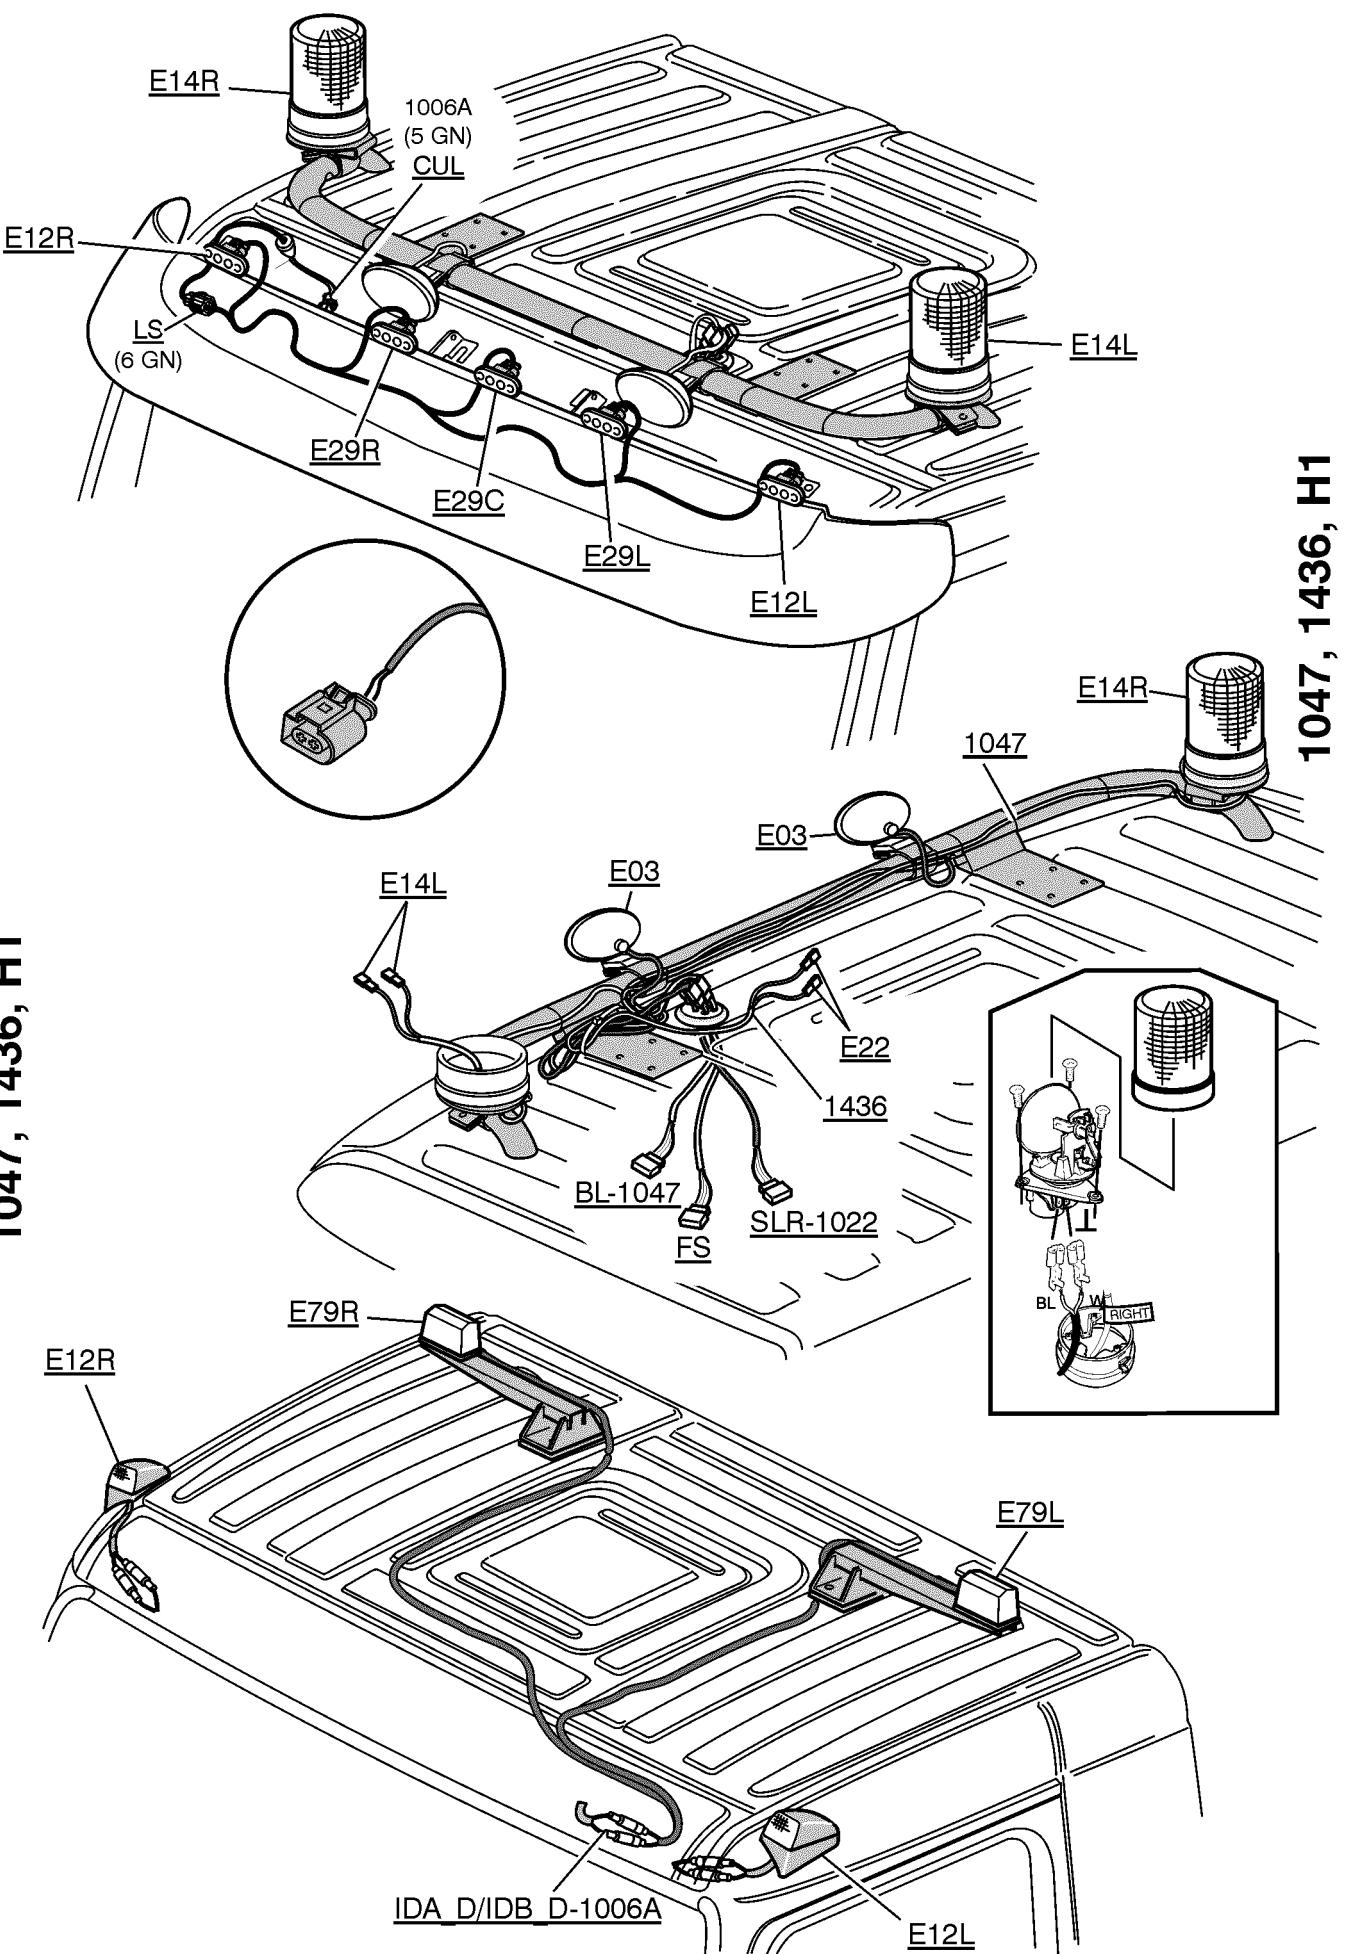
1047, 1436, H1**1047, 1436, H1**

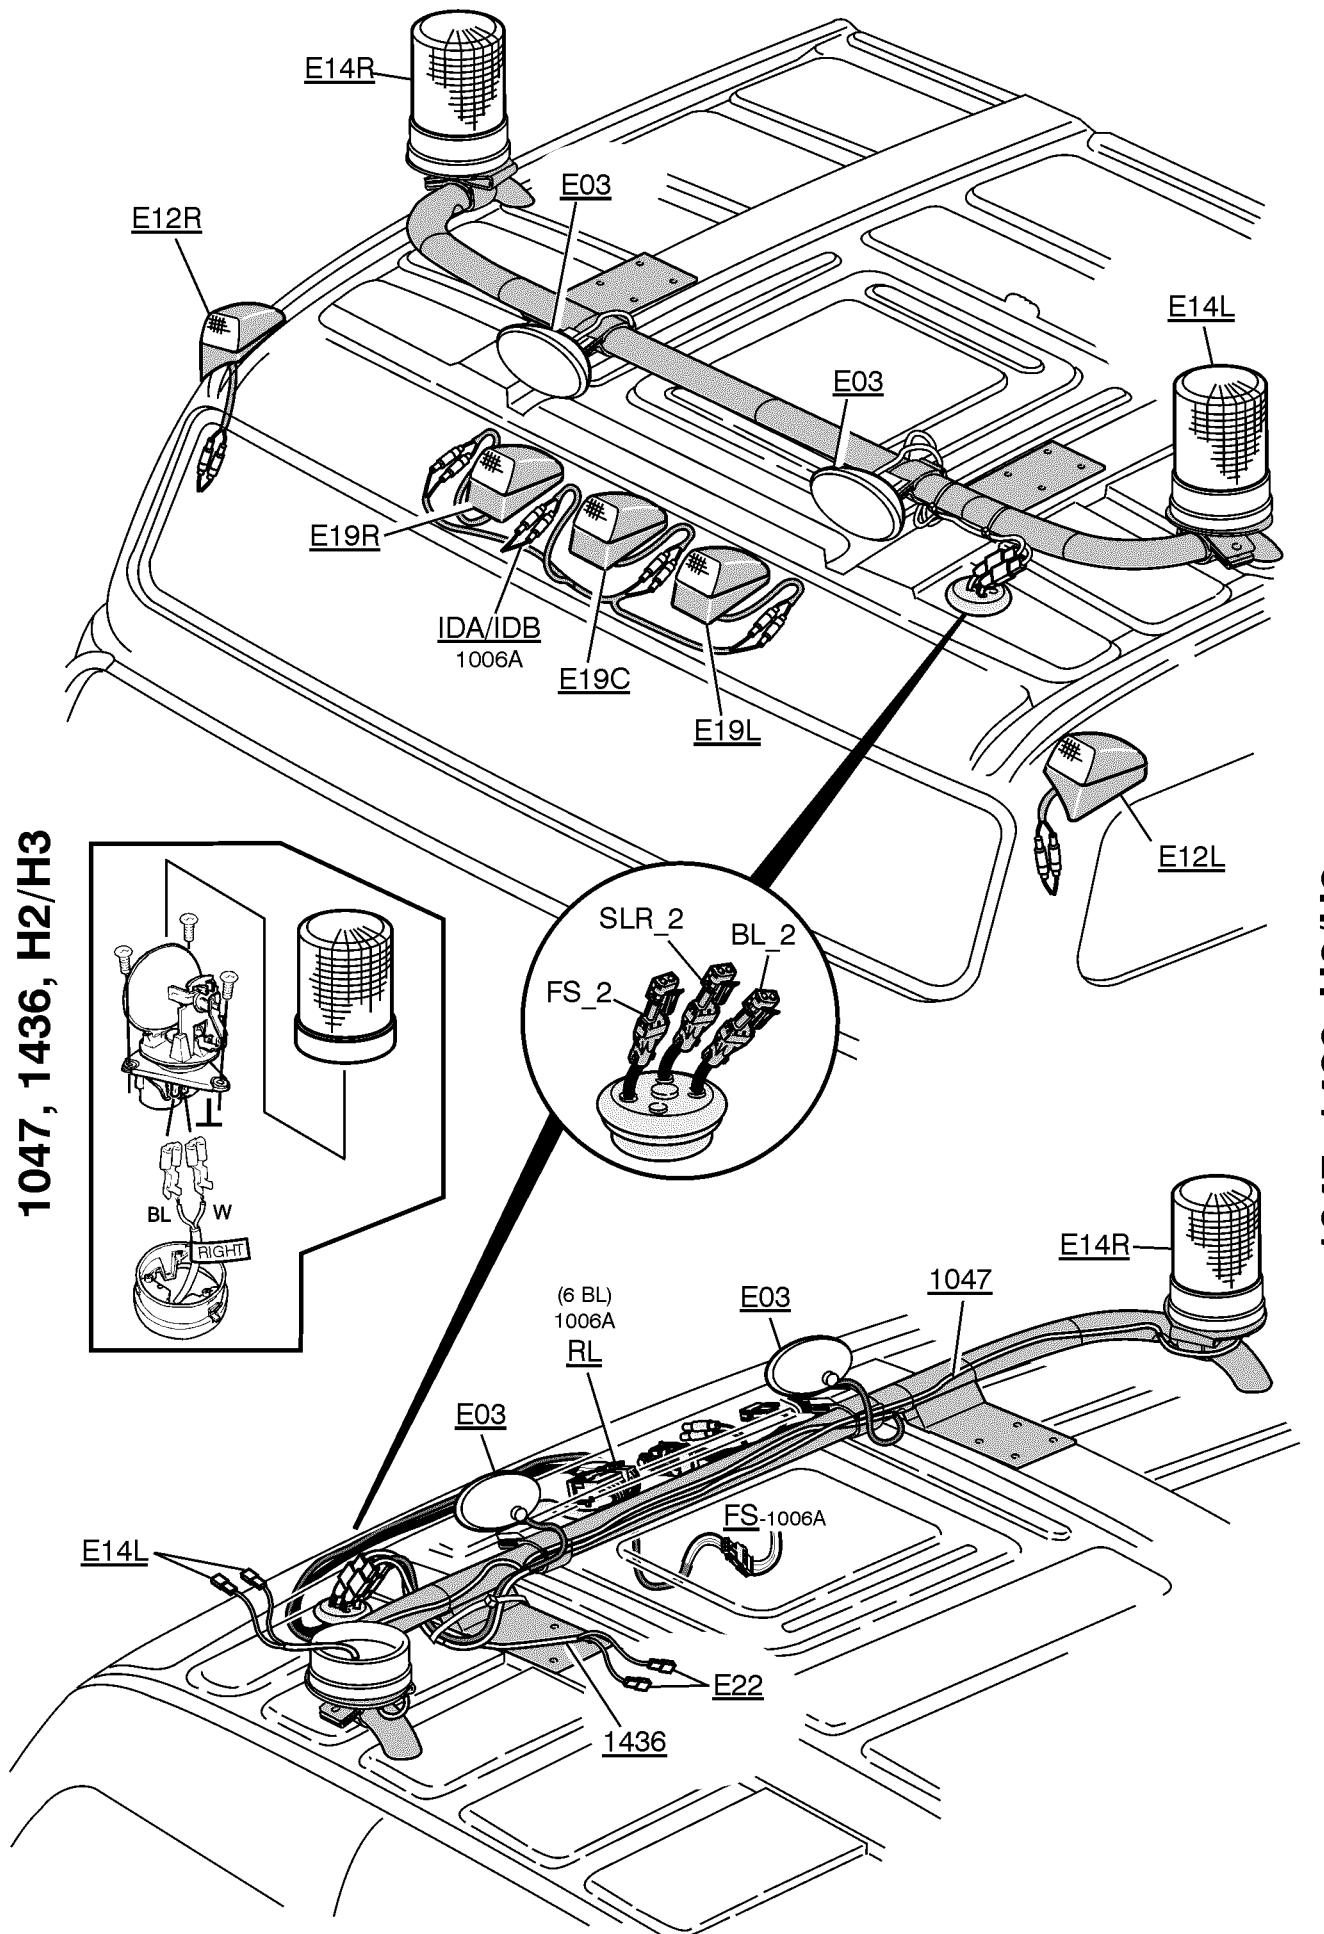

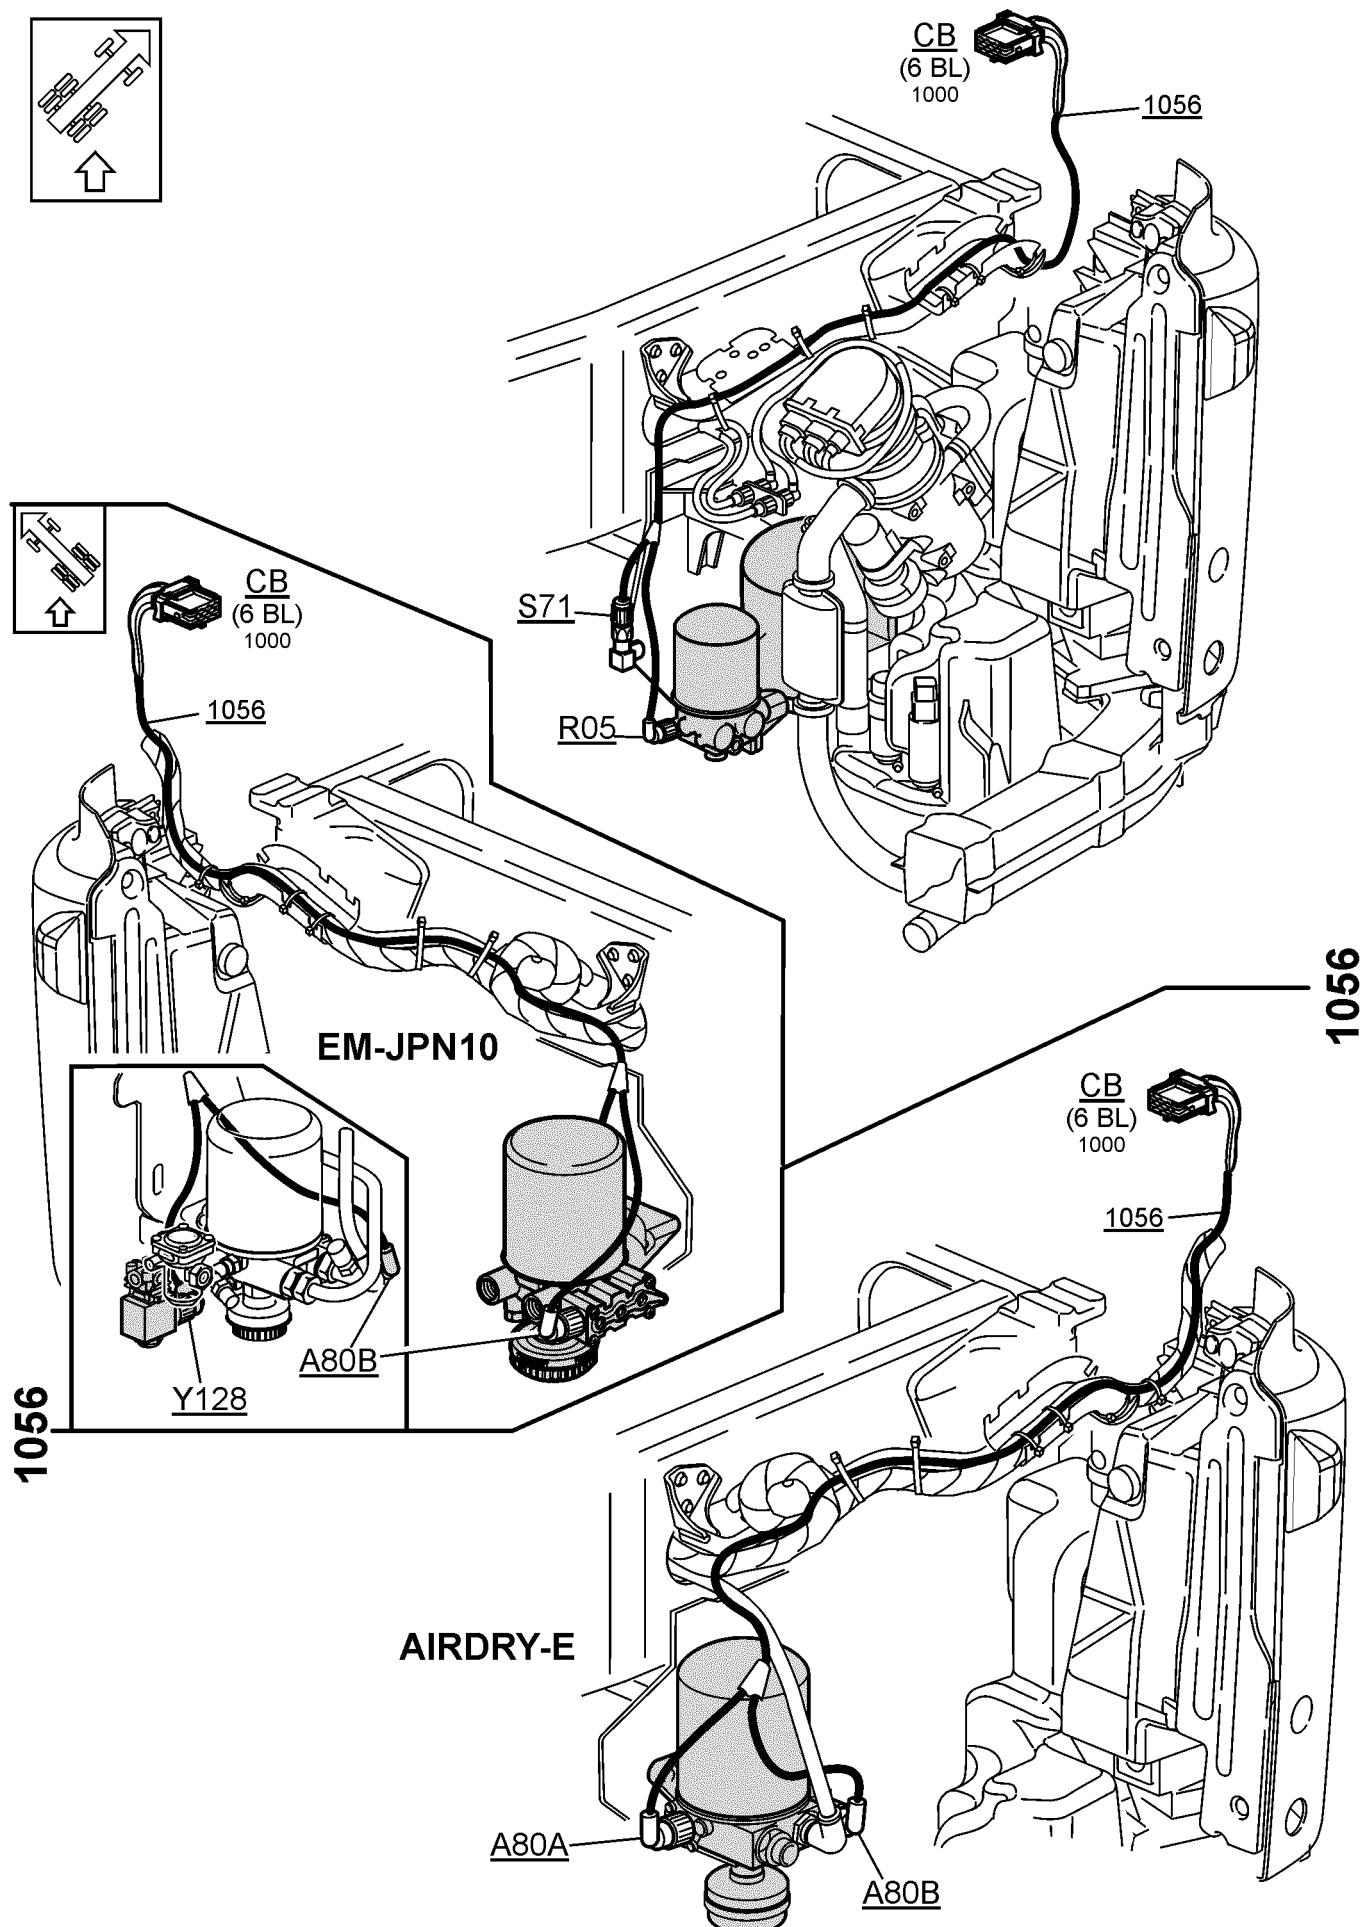


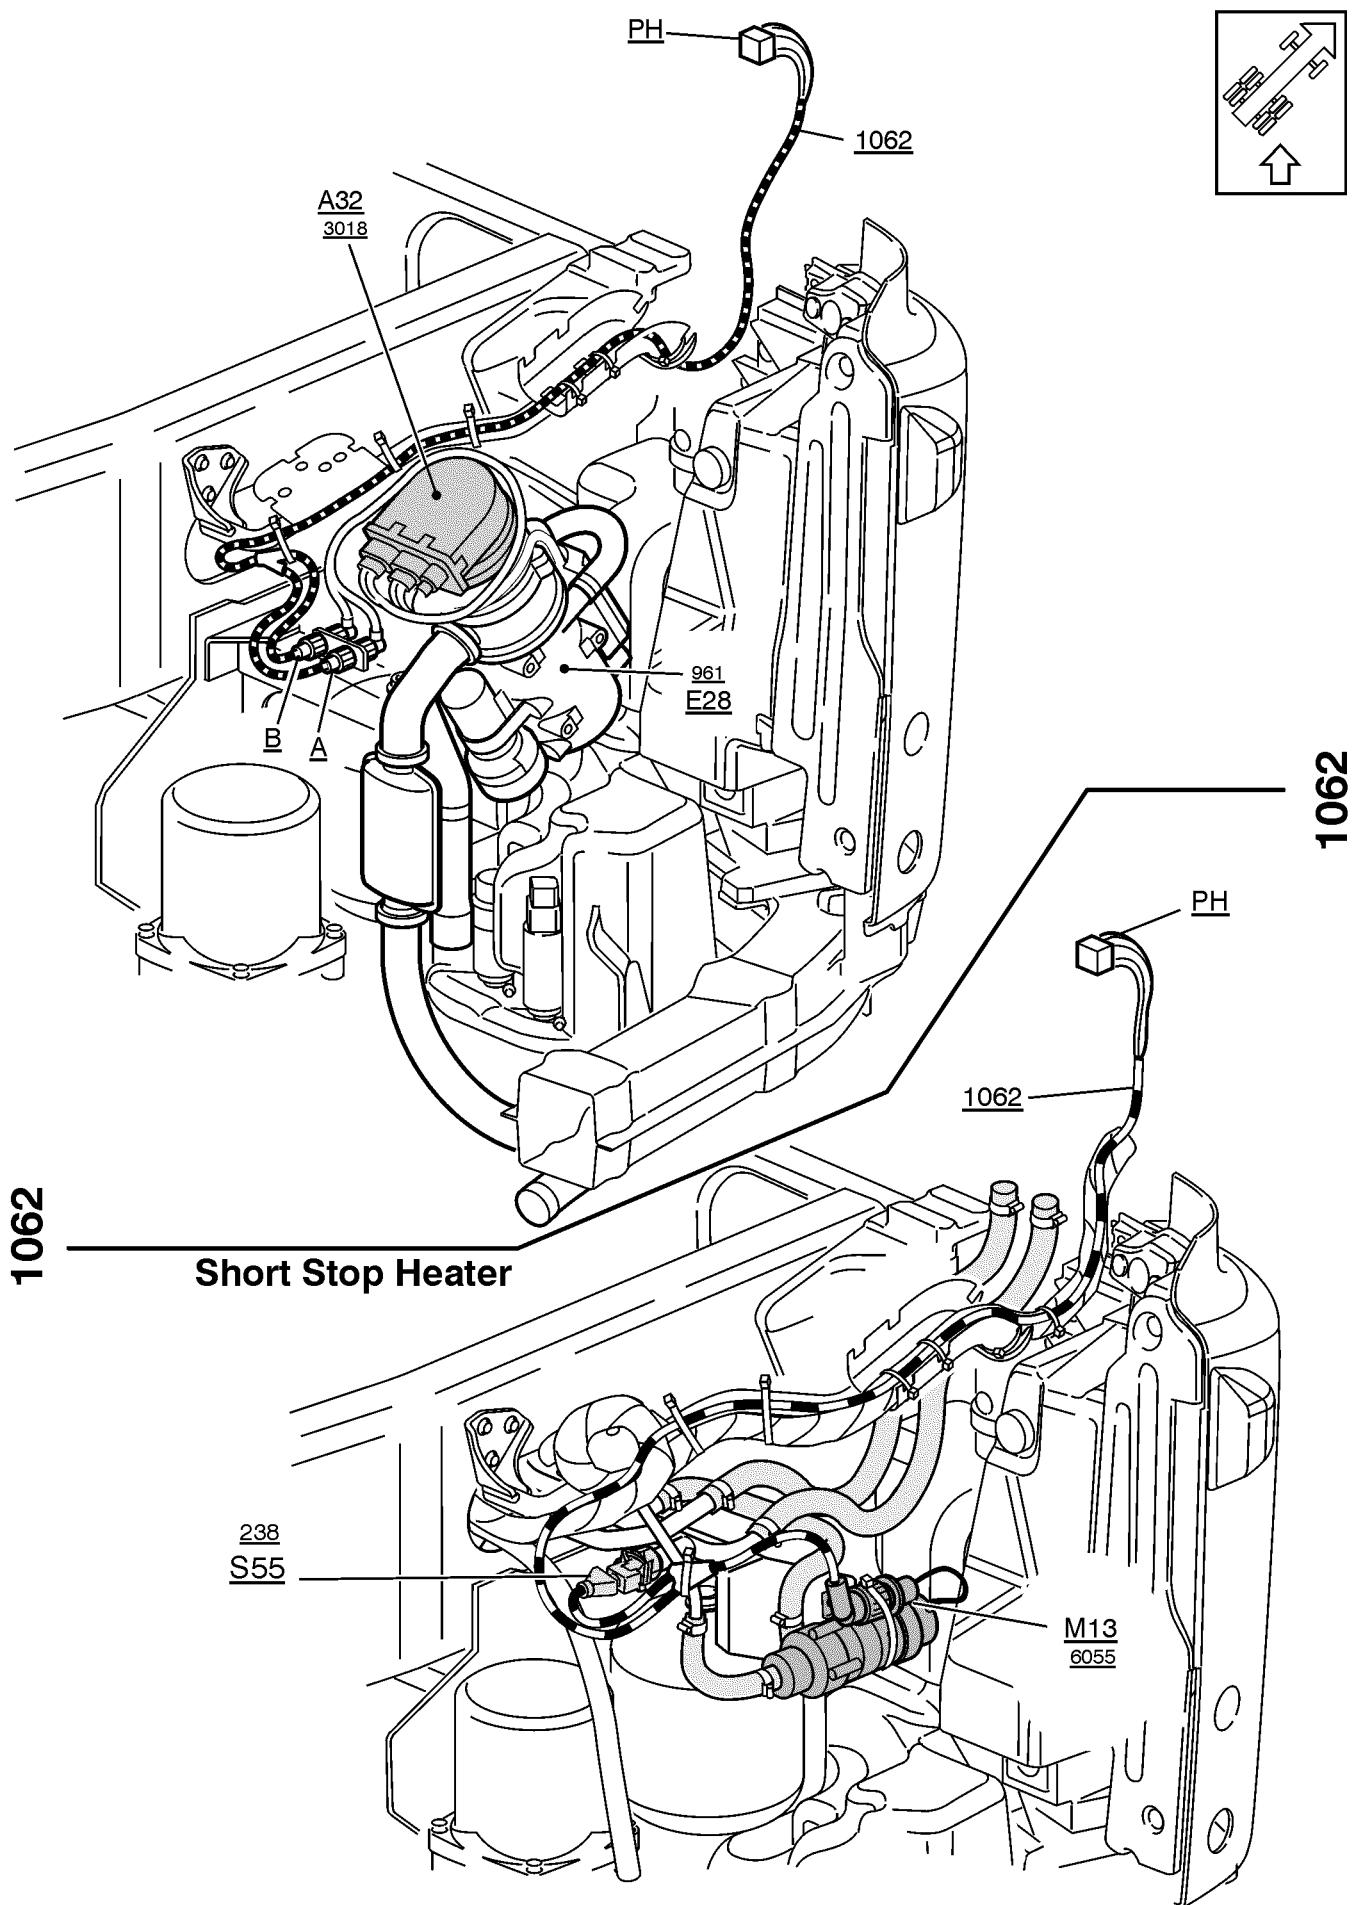


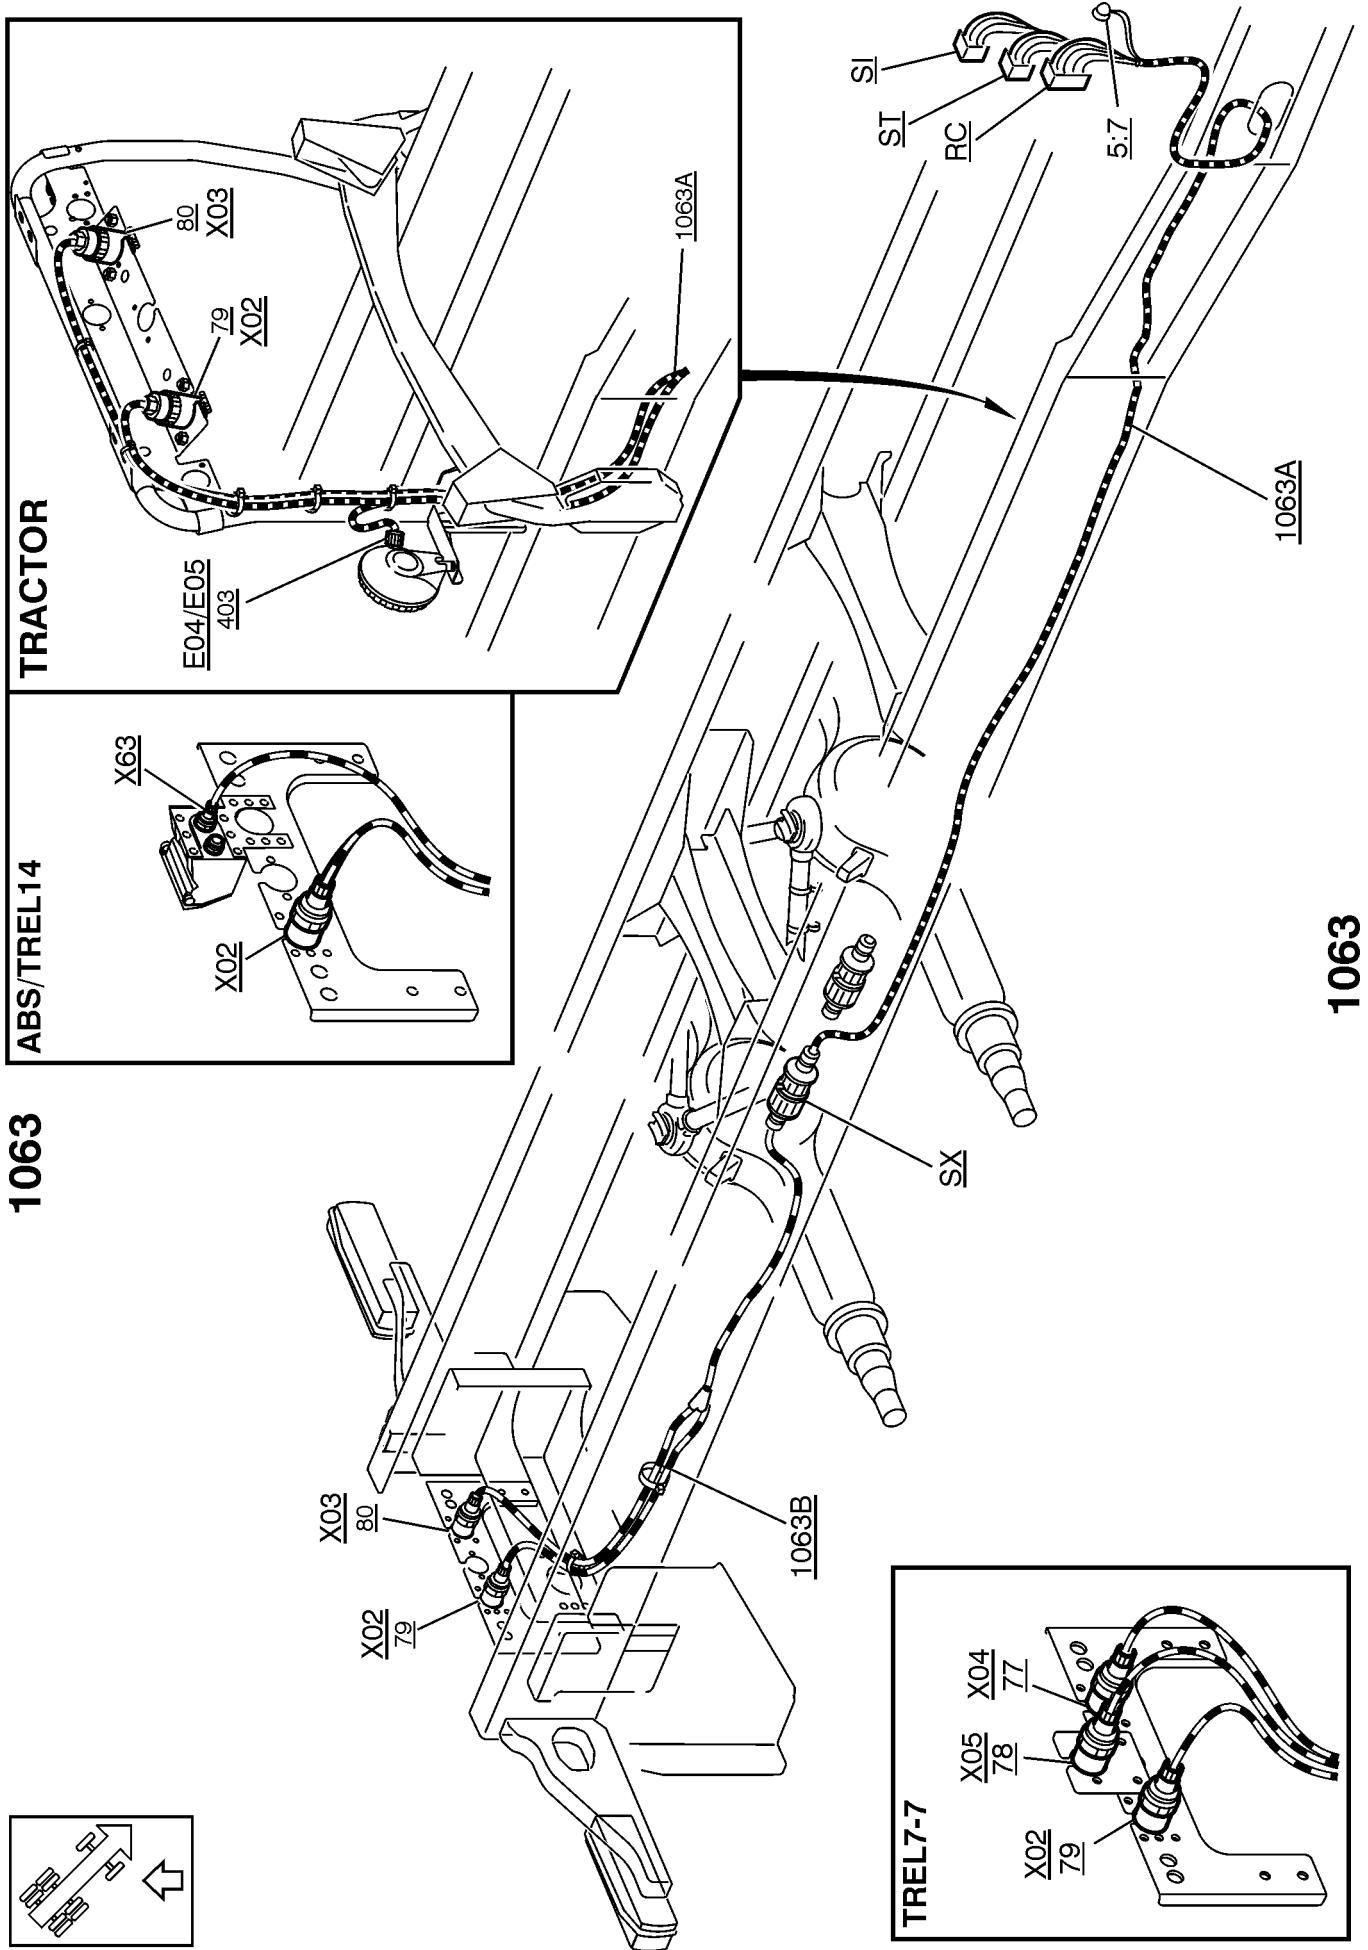

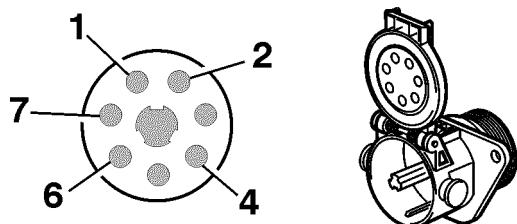X02



T3019932

Pin no:	Circuit function	Colour	Diagram
1	Power supply kl. 30	OR	GG:4 E/ GH:3 D/ GK:3 E/ GR:3 E
2	Power supply kl. 15	GR	GG:3 E/ GH:3 D/ GK:3 E/ GR:2 E
3	Ground	W	GG:3 E/ GH:3 D/ GK:3 E/ GR:2 E
4	Ground	W	GG:3 E/ GH:3 D/ GK:3 E/ GR:2 E
5	ABS trailer status	BN	GG:3 E/ GH:3 D/ GK:3 E/ GR:3 E
6	Trailer CAN bus A	P	GG:3 E/ GH:3 D/ GK:4 E/ GR:3 E
7	Trailer CAN bus B	VO	GG:3 E/ GH:3 D/ GK:4 E/ GR:3 E

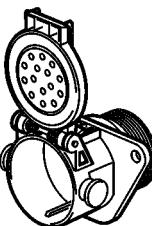
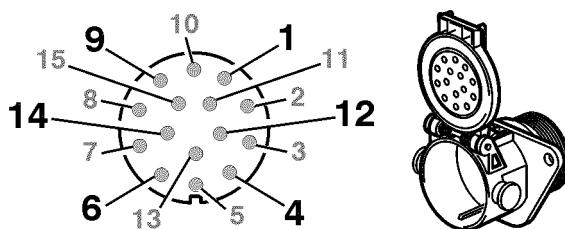
X03

T3019933

Pin no:	Circuit function	Colour	Diagram
1	Direction indicator left, trailer	Y	GG:0 E/ GH:1 D
2	Direction indicator right, trailer	GN	GG:0 E/ GH:1 D
3	Rear fog lights, trailer	BL/GR	GG:1 E/ GH:0 D
4	Ground	W	GG:1 E/ GH:1 D
5	Parking lights left, trailer	GR/SB	GG:0 E/ GH:1 D
6	Parking lights right, trailer	GR/R	GG:0 E/ GH:1 D
7	Brake lights, trailer	R/SB	GG:0 E/ GH:1 D
8	Reverse lights, trailer	BL/SB	GG:0 E/ GH:1 D
9	Body builder preparation	R	GG:1 E/ GH:1 D
10	Body builder preparation	BL	GG:1 E/ GH:1 D
11	Body builder preparation	GR/SB	GG:1 E/ GH:1 D
12	Body builder preparation	GN/GR	GG:1 E/ GH:1 D
13	Ground	W	GG:0 E/ GH:1 D
14	Body builder preparation	BL/W	GG:0 E/ GH:0 D
15	Body builder preparation	BL/R	GG:0 E/ GH:0 D

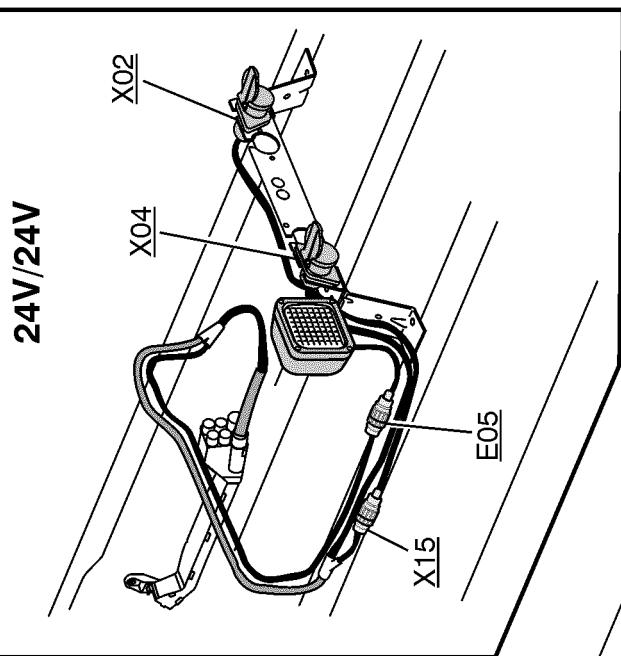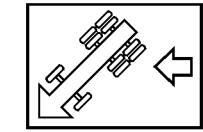


1063, Australia

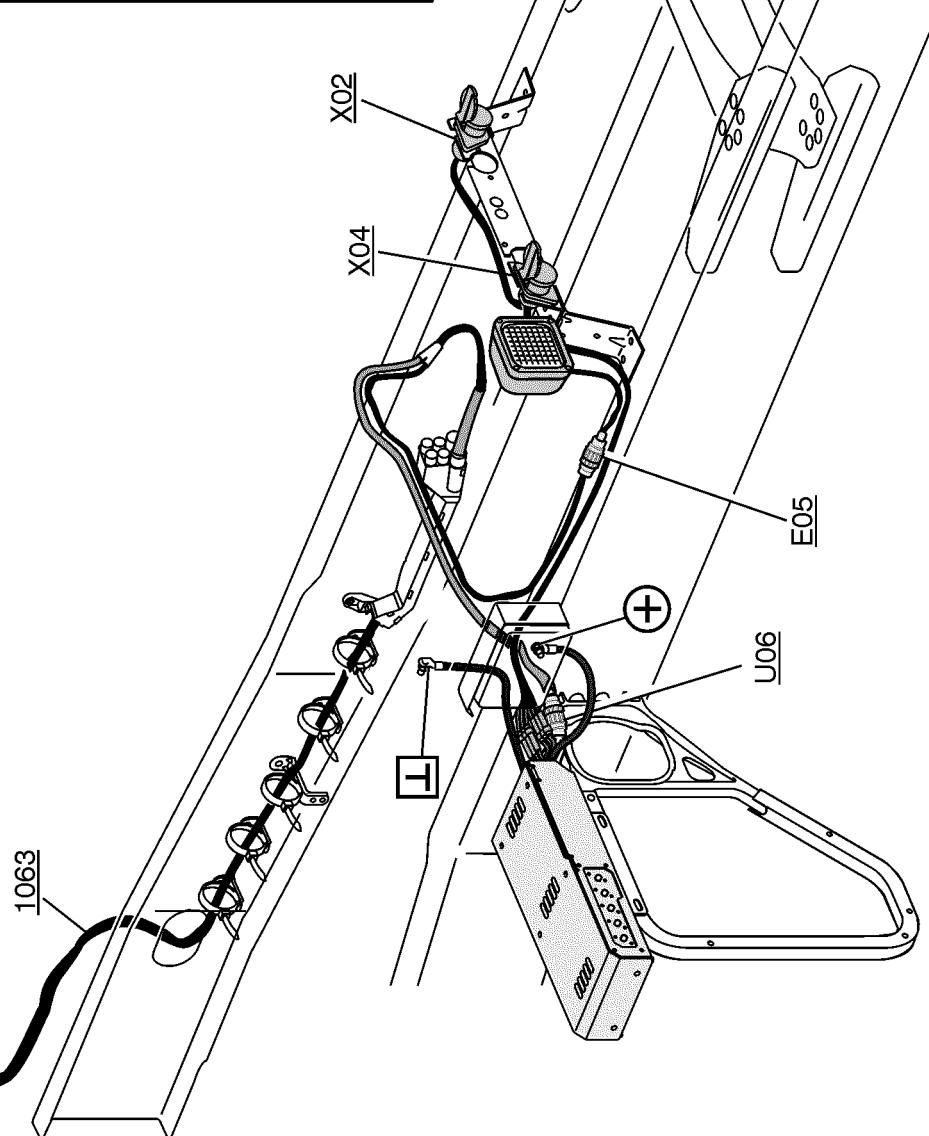
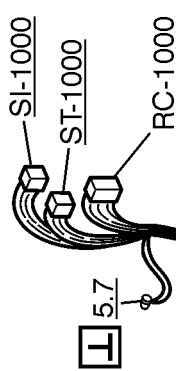


1063, Australia

1063, Australia

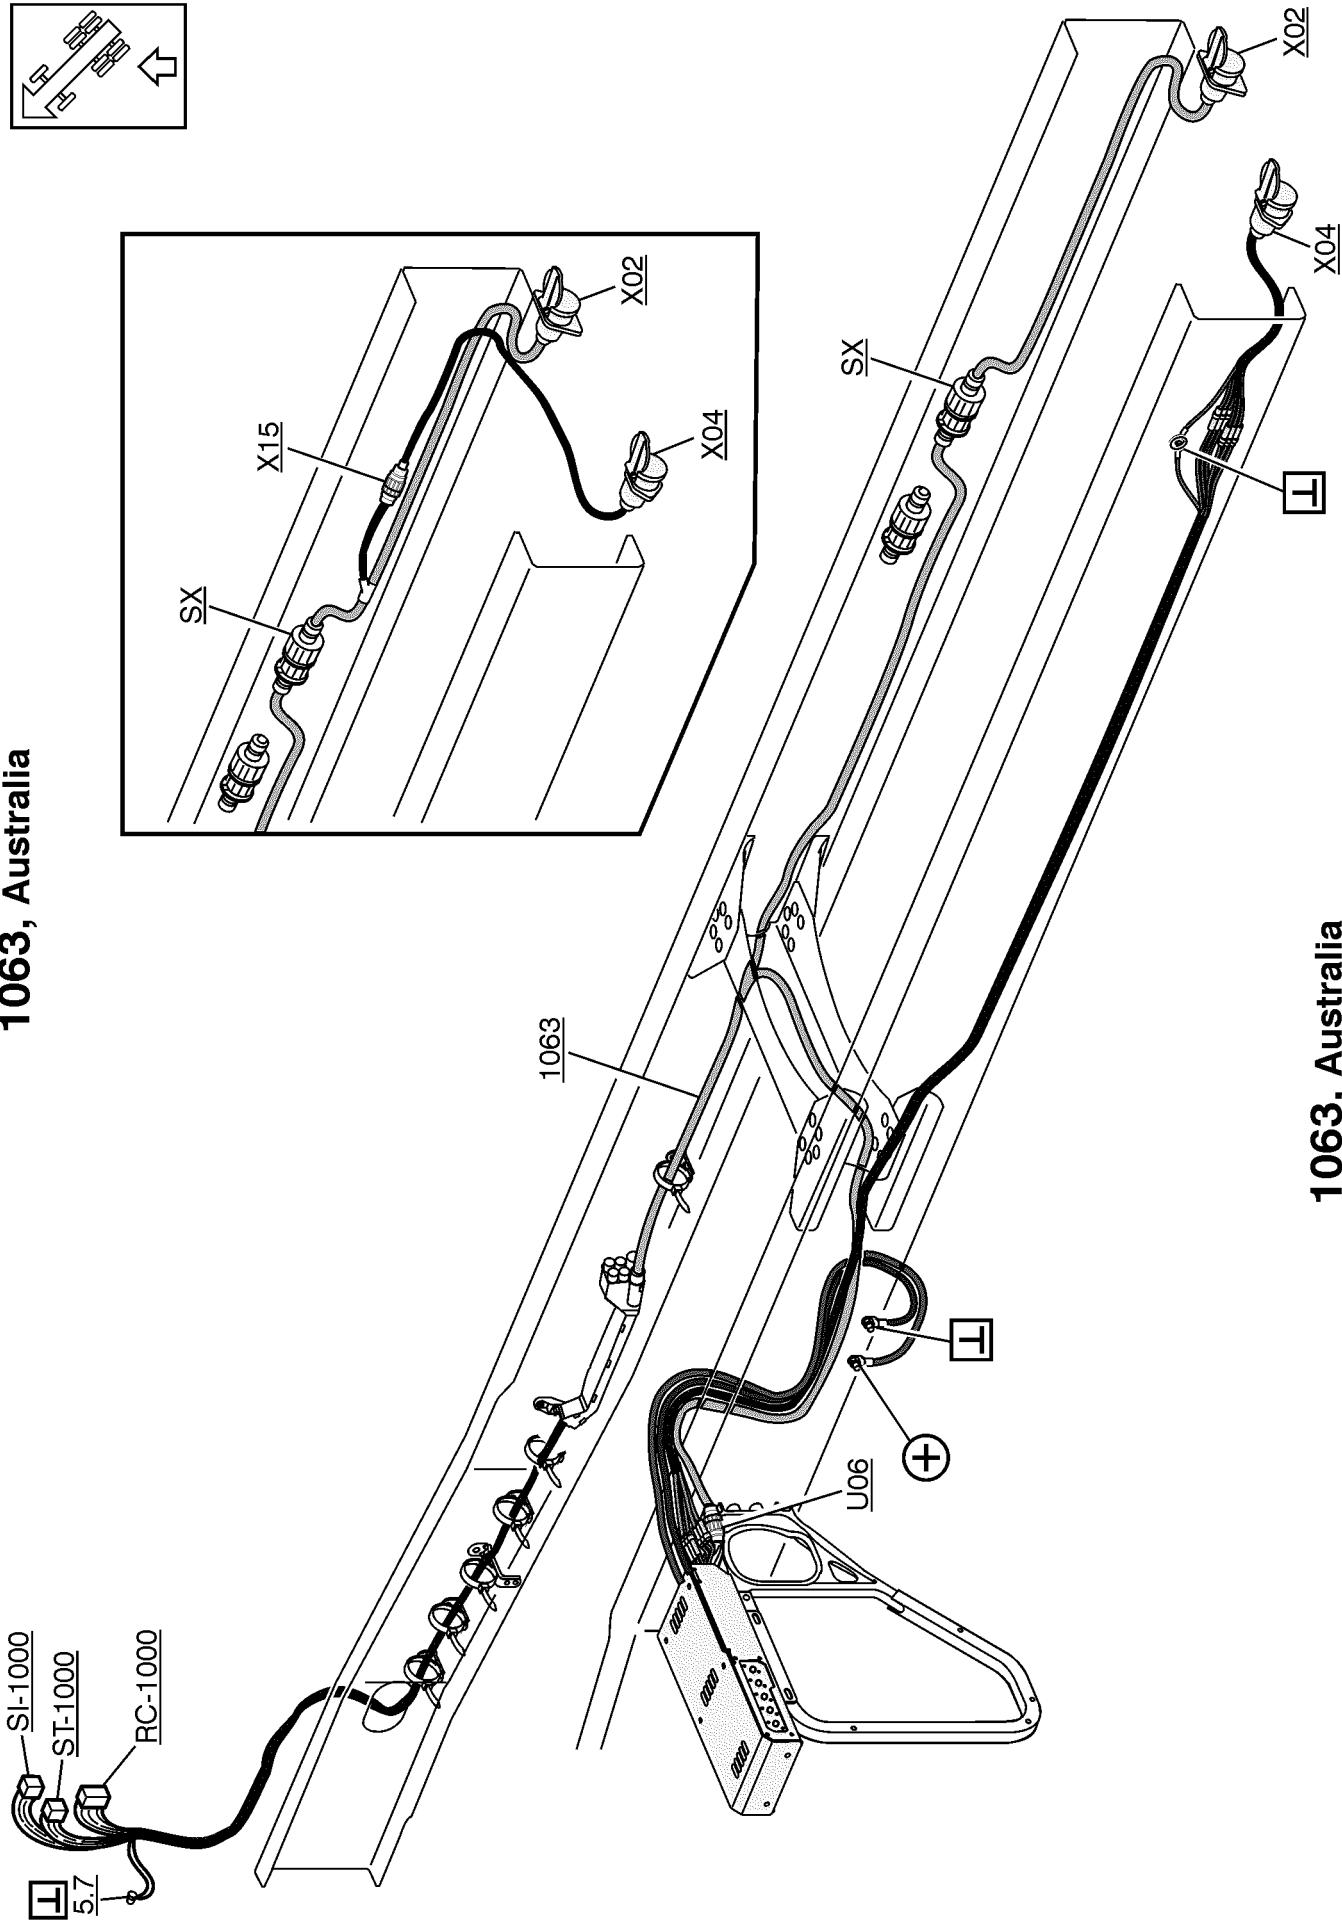



1072, RAD-A4, 1-Channel

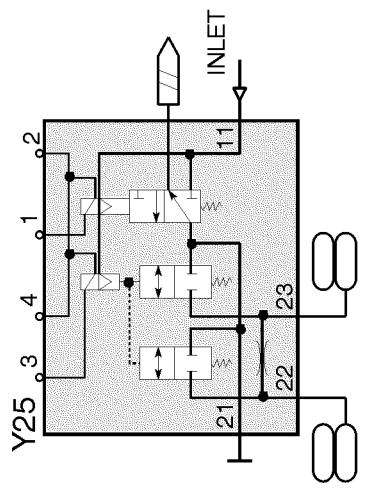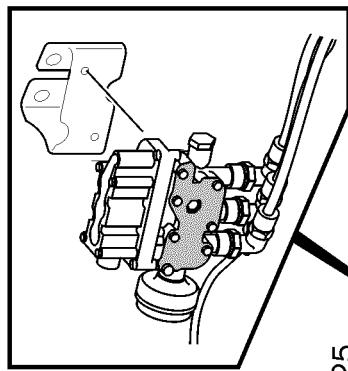


Y25

B58

B30


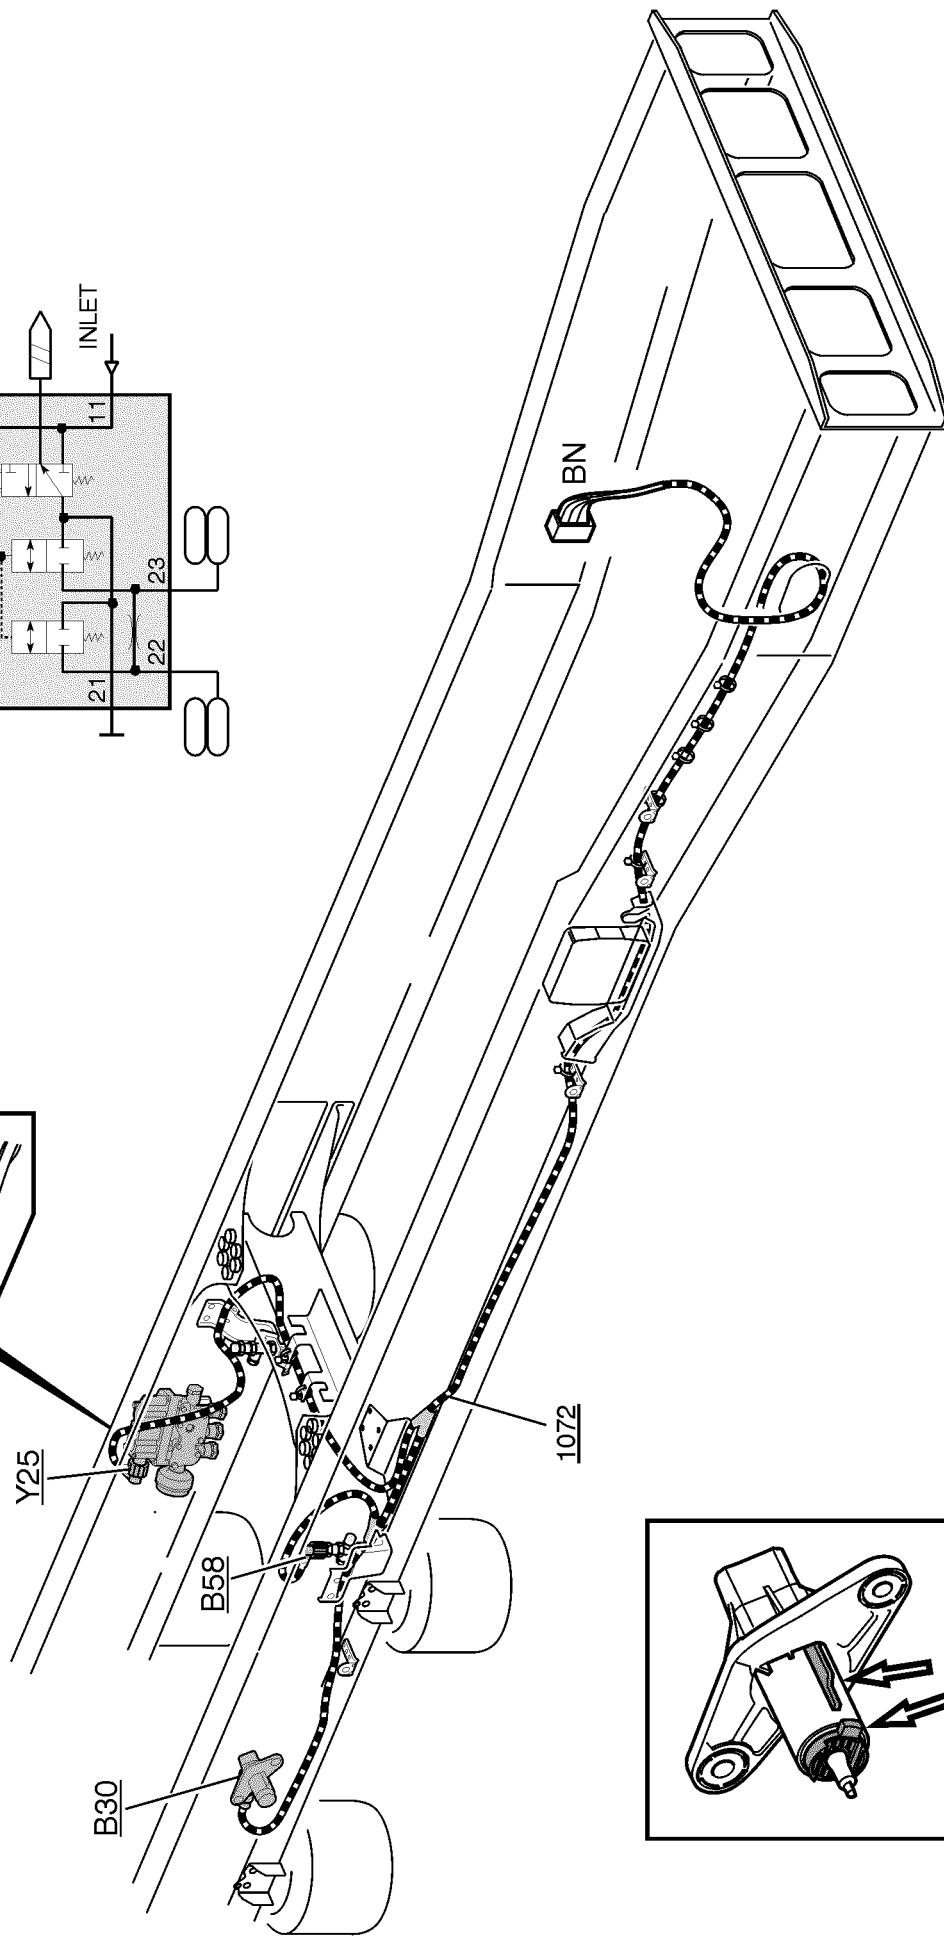
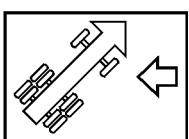


1072, RAD-A4, 1-Channel

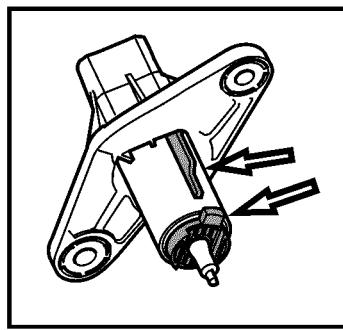

T3020570

1072, RAD-A4, 2-Channel

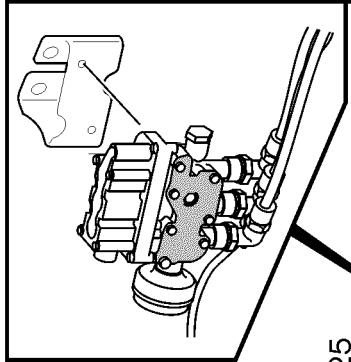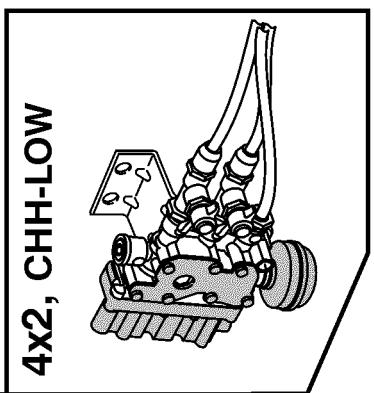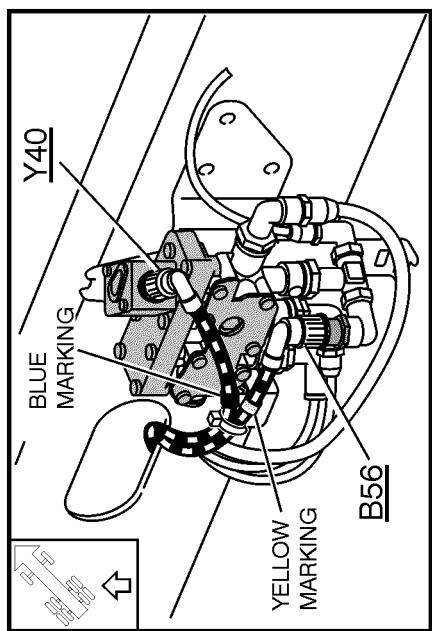

B57


B29

B58



B30


B30

B30

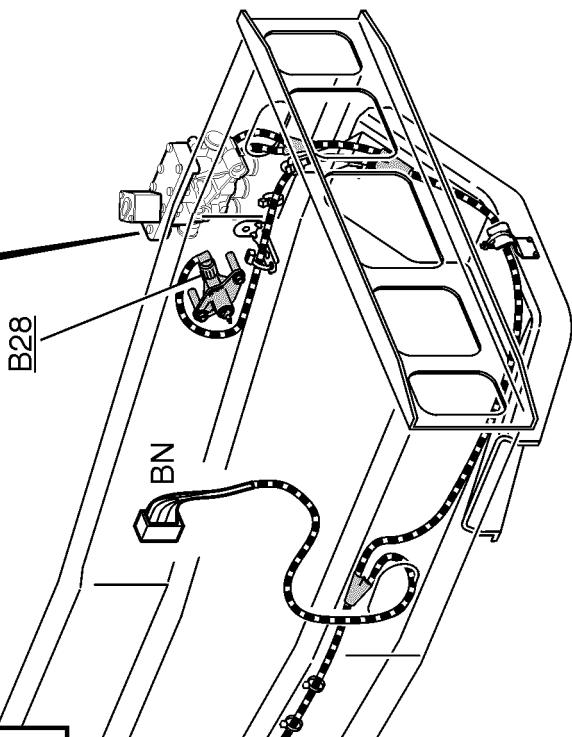


1072, RAD-A4, 2-Channel

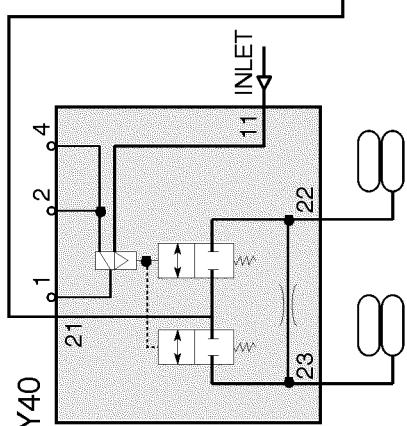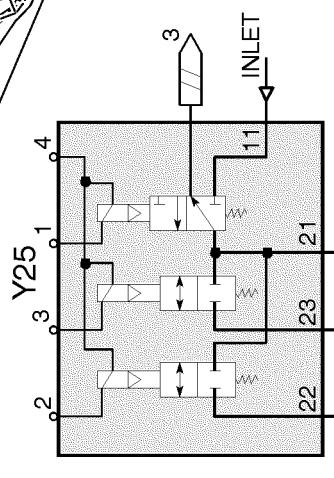

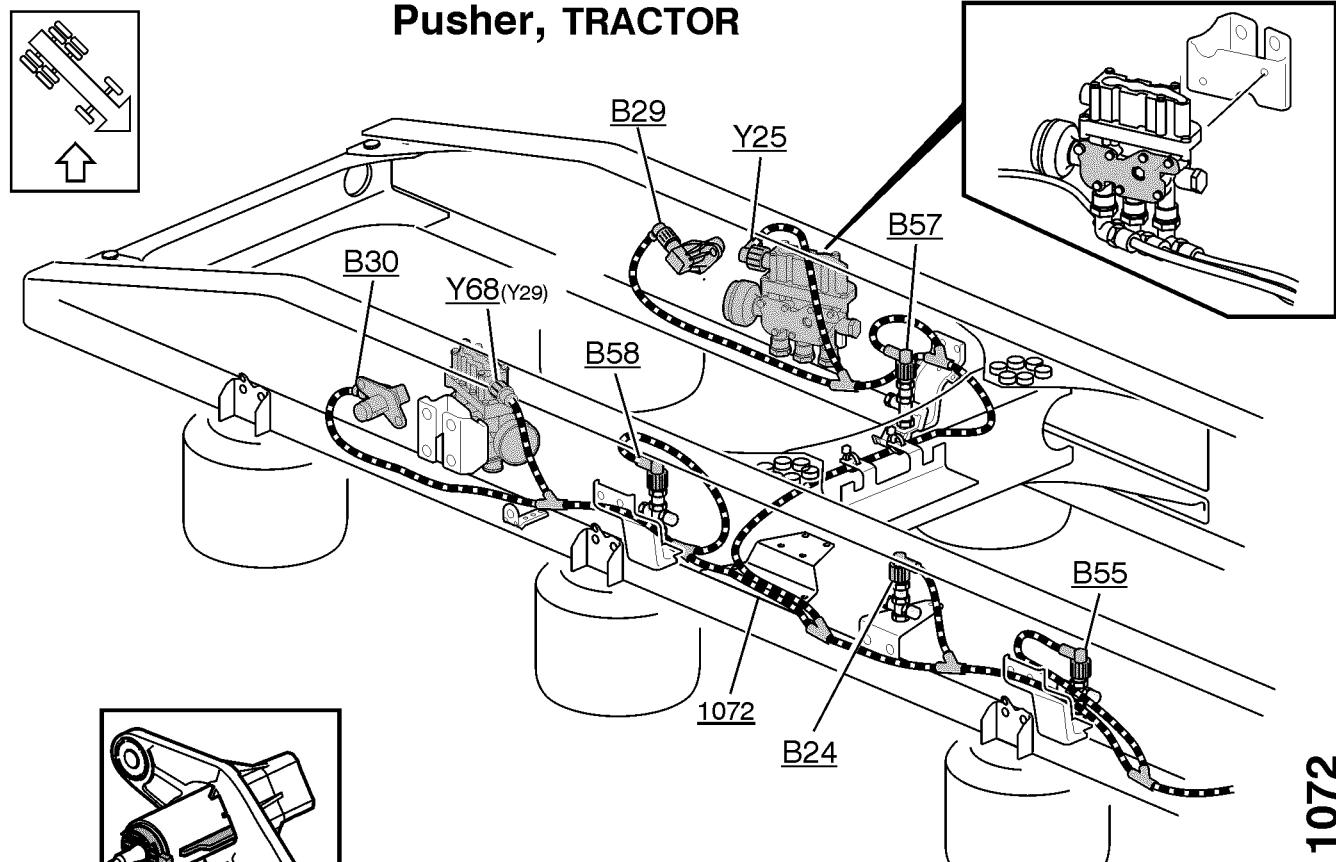
Pusher, TRACTOR

1072

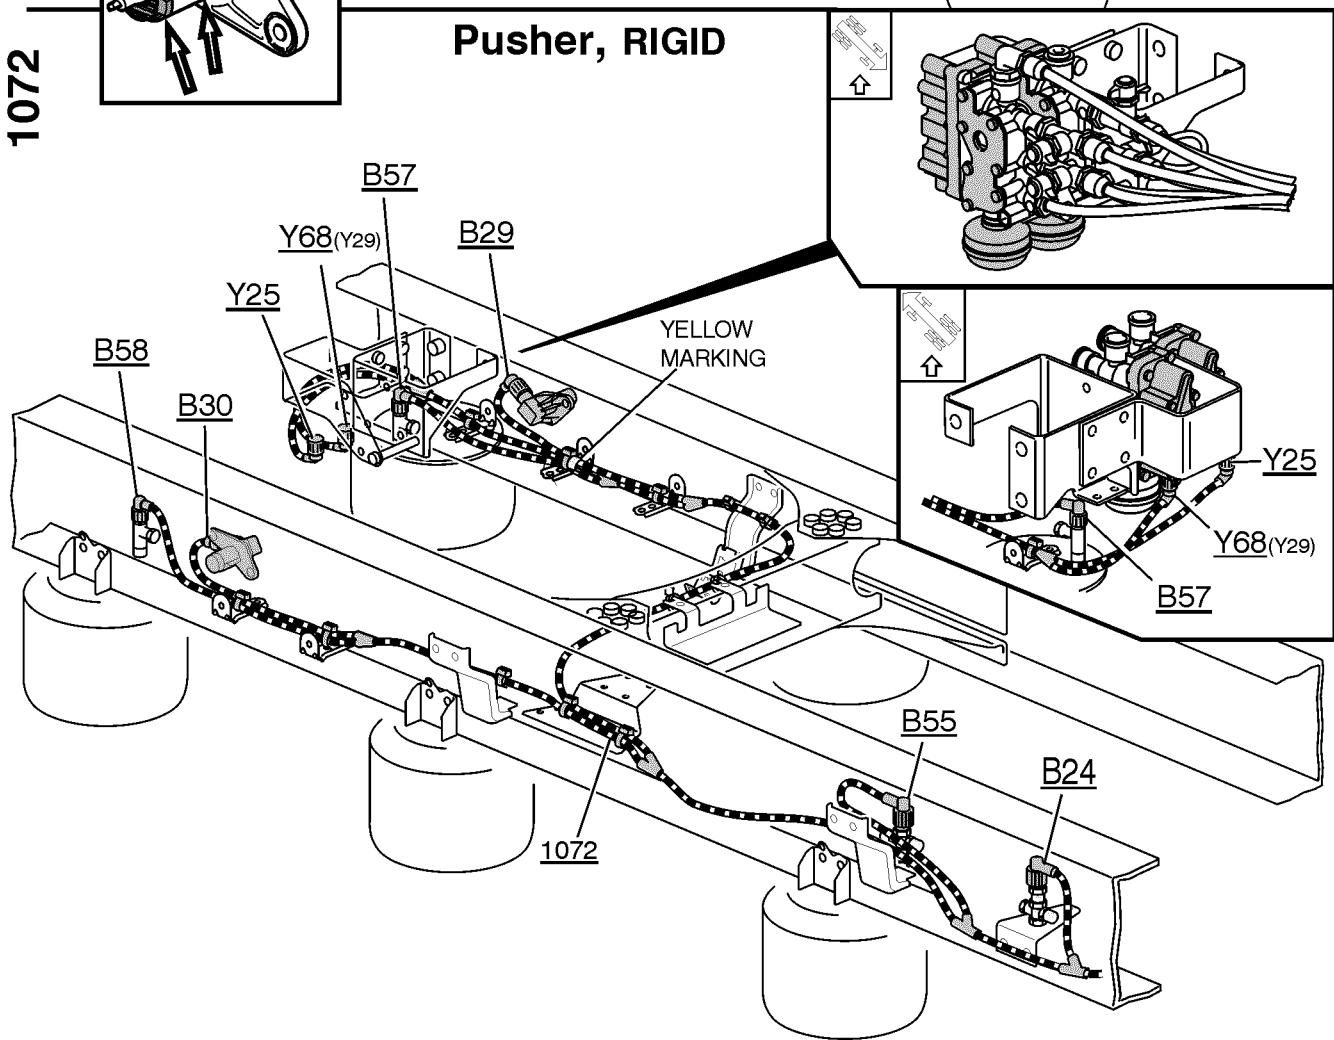Pusher, RIGID


1072


T3022032

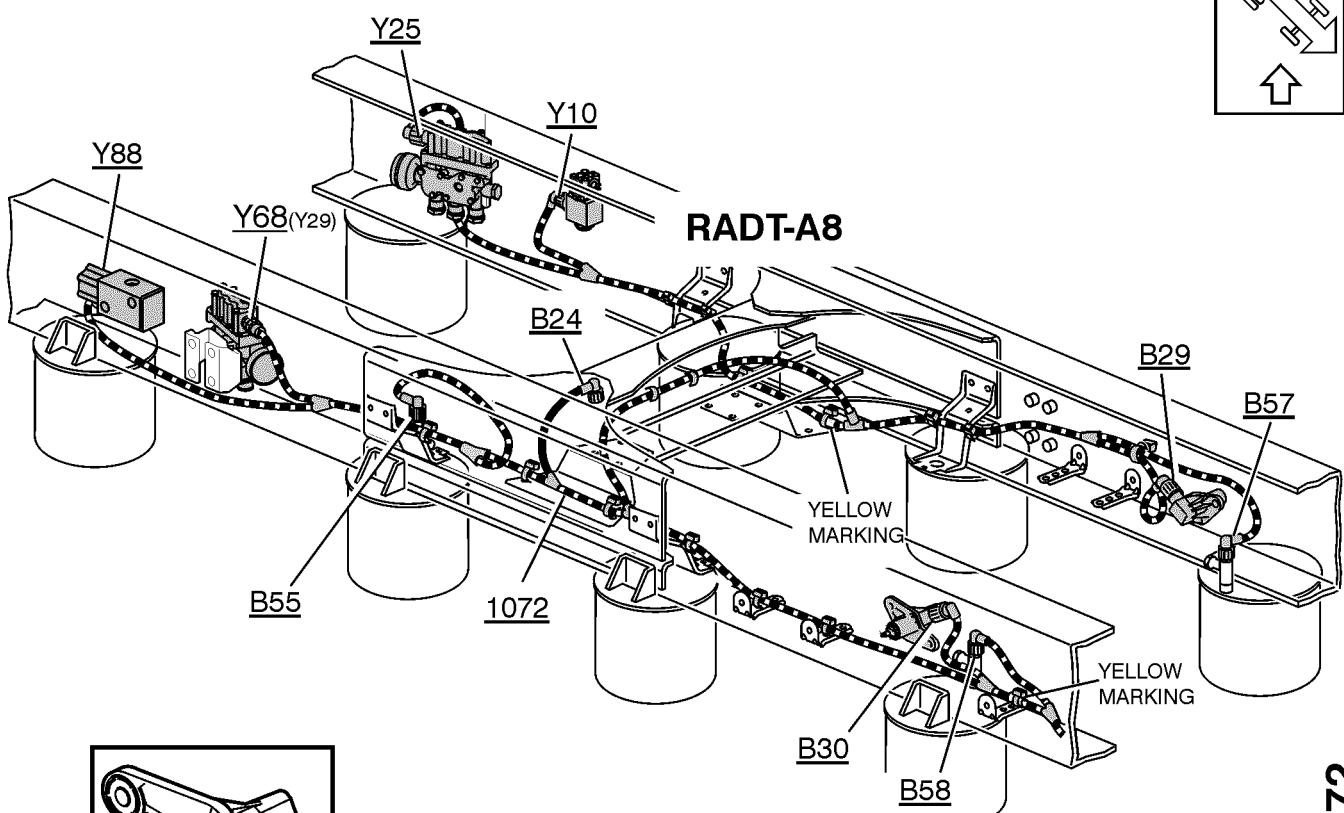


1072


1072

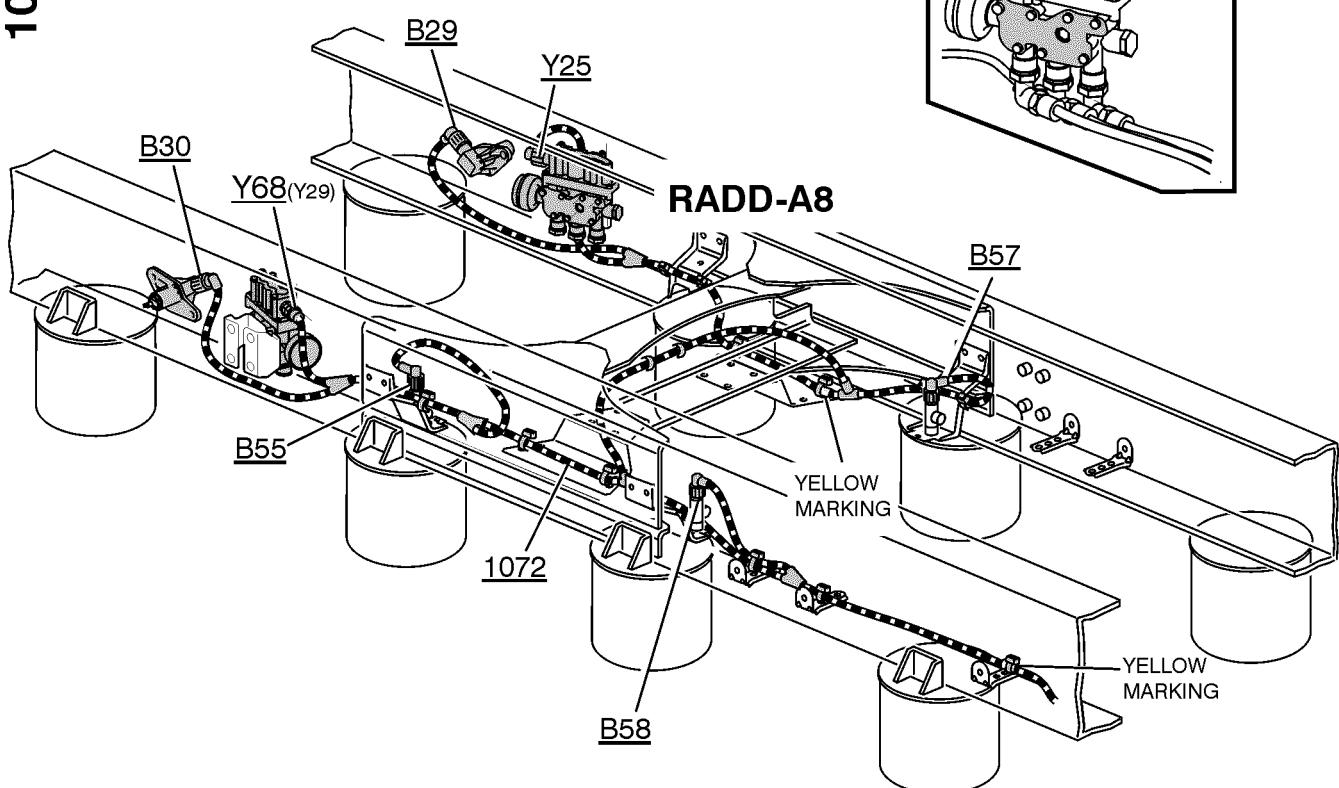

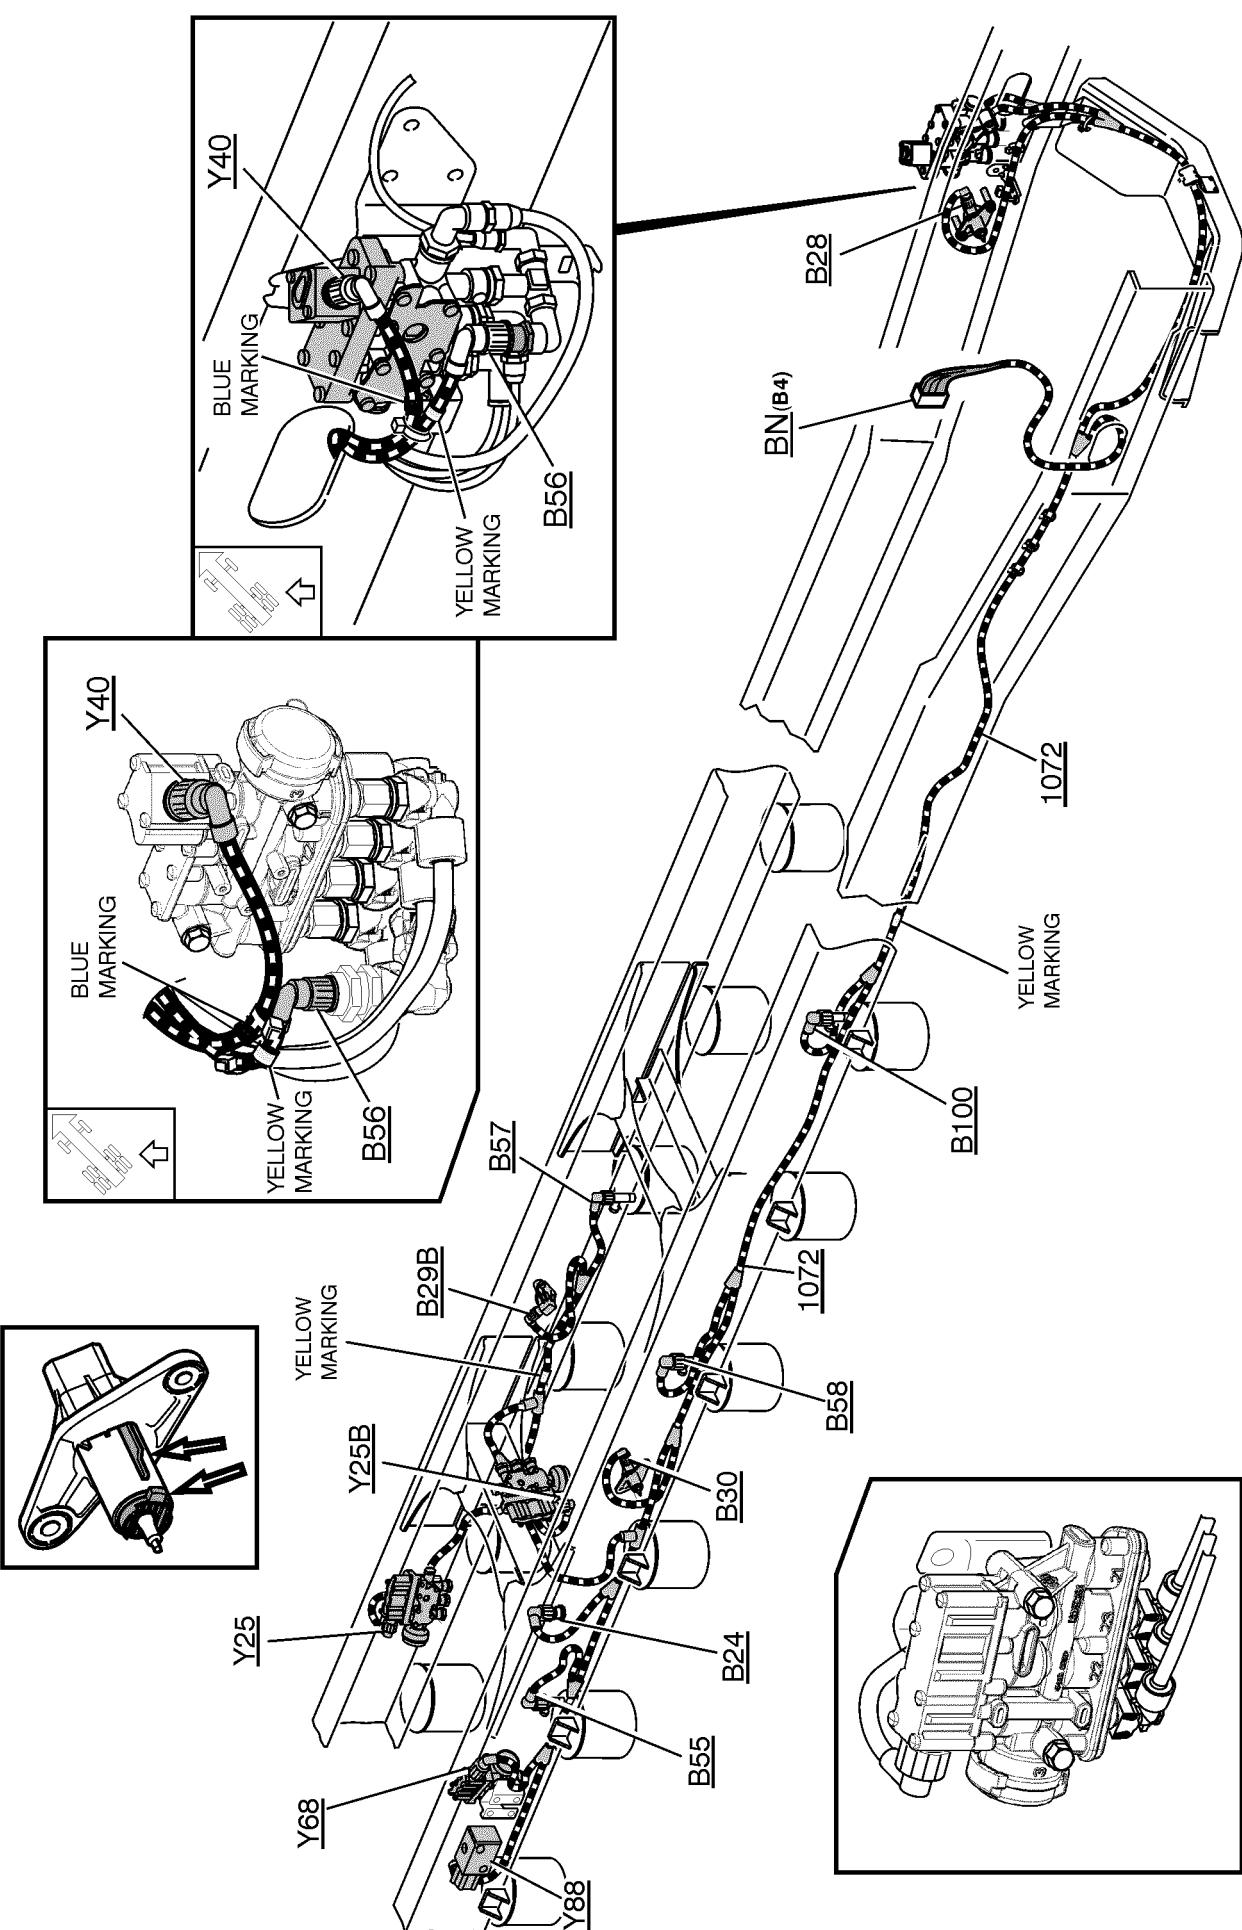1072, TRIDEM**1072, TRIDEM**

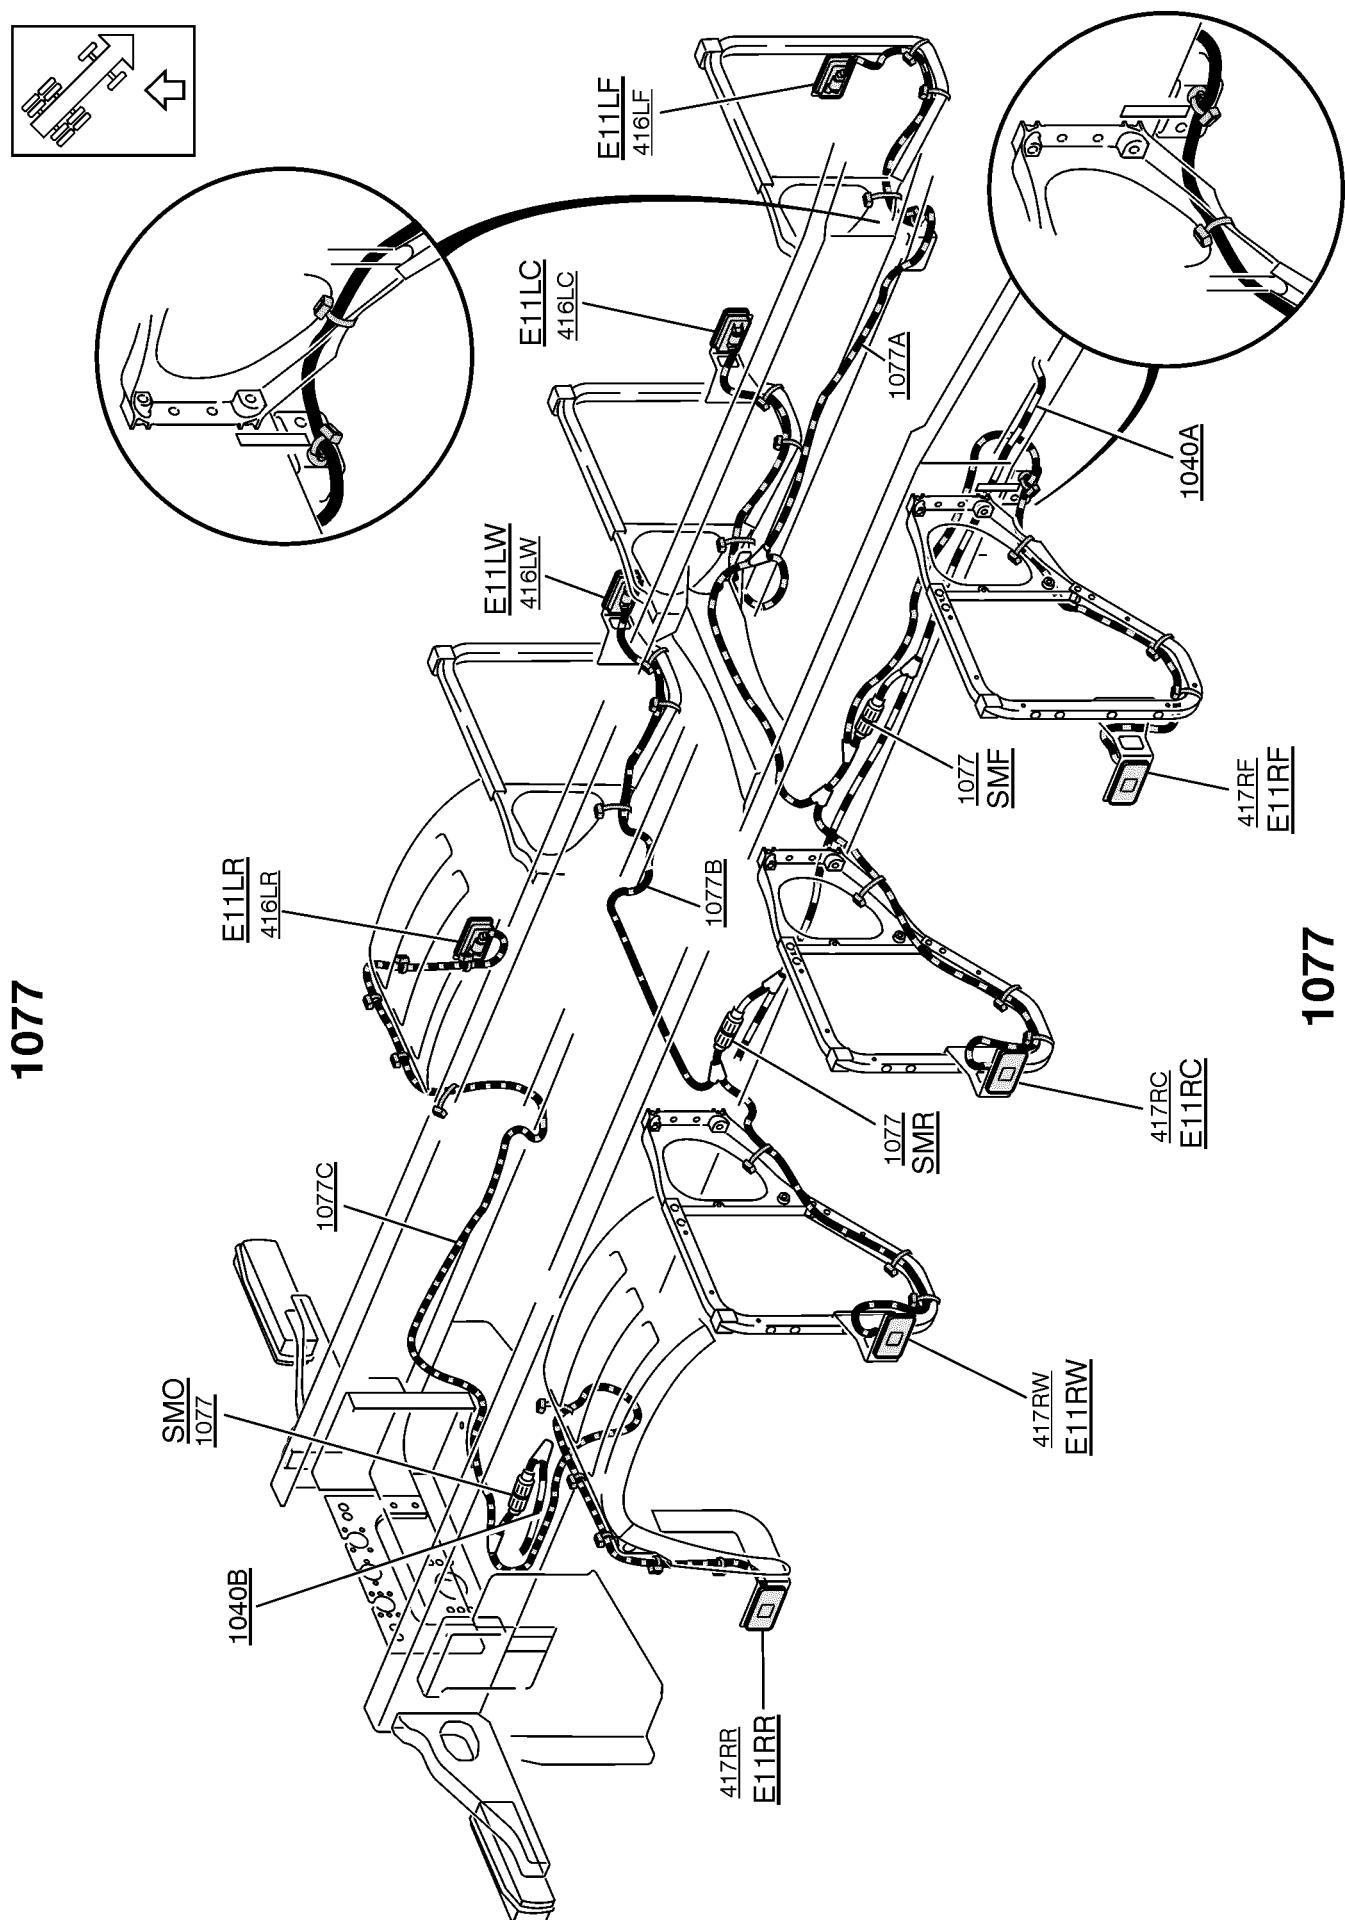


**STWPOS-L DRAWN
STWPOS-R MIRROR IMAGE MOUNTED**

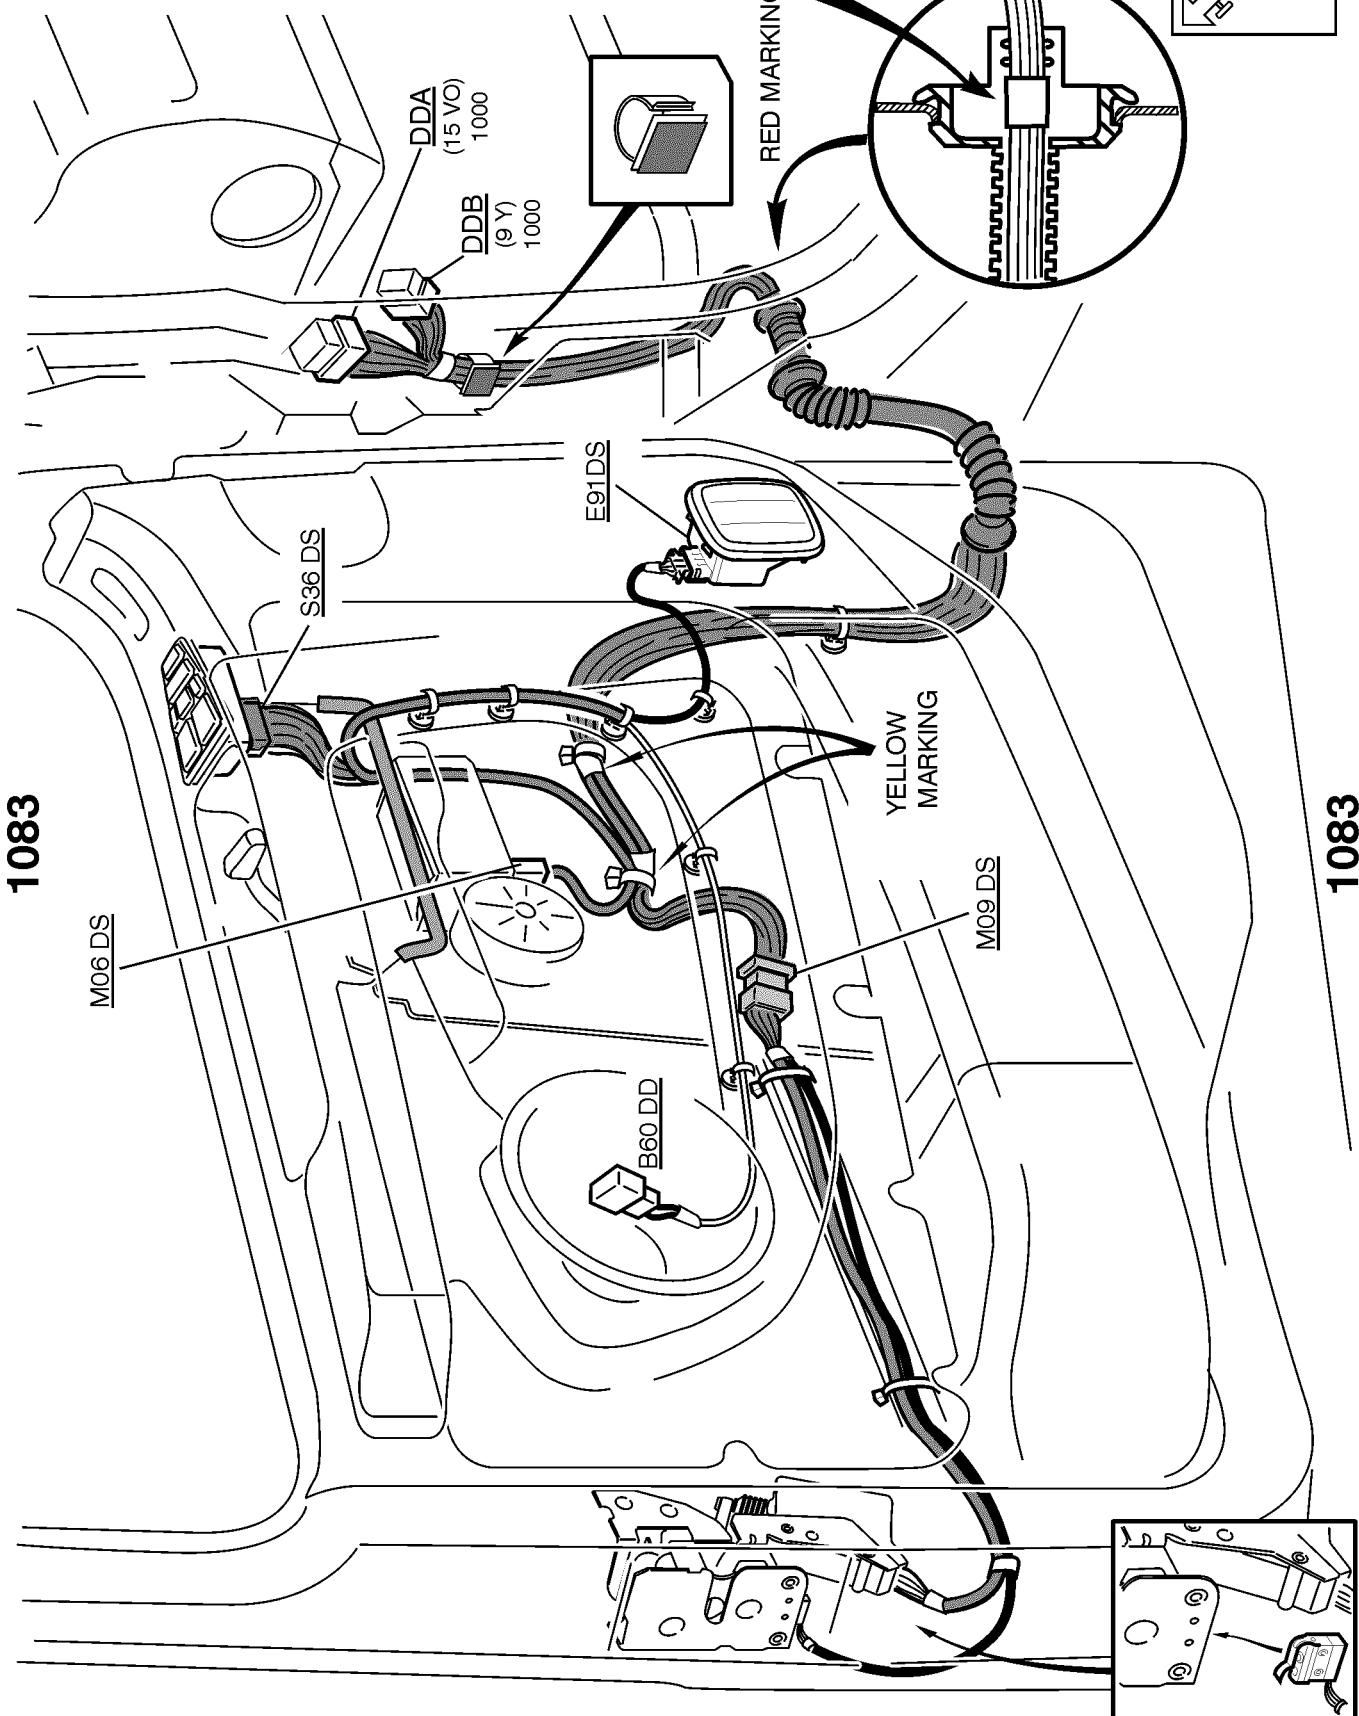



T3021654

STWPOS-L DRAWN
STWPOS-R MIRROR IMAGE MOUNTED


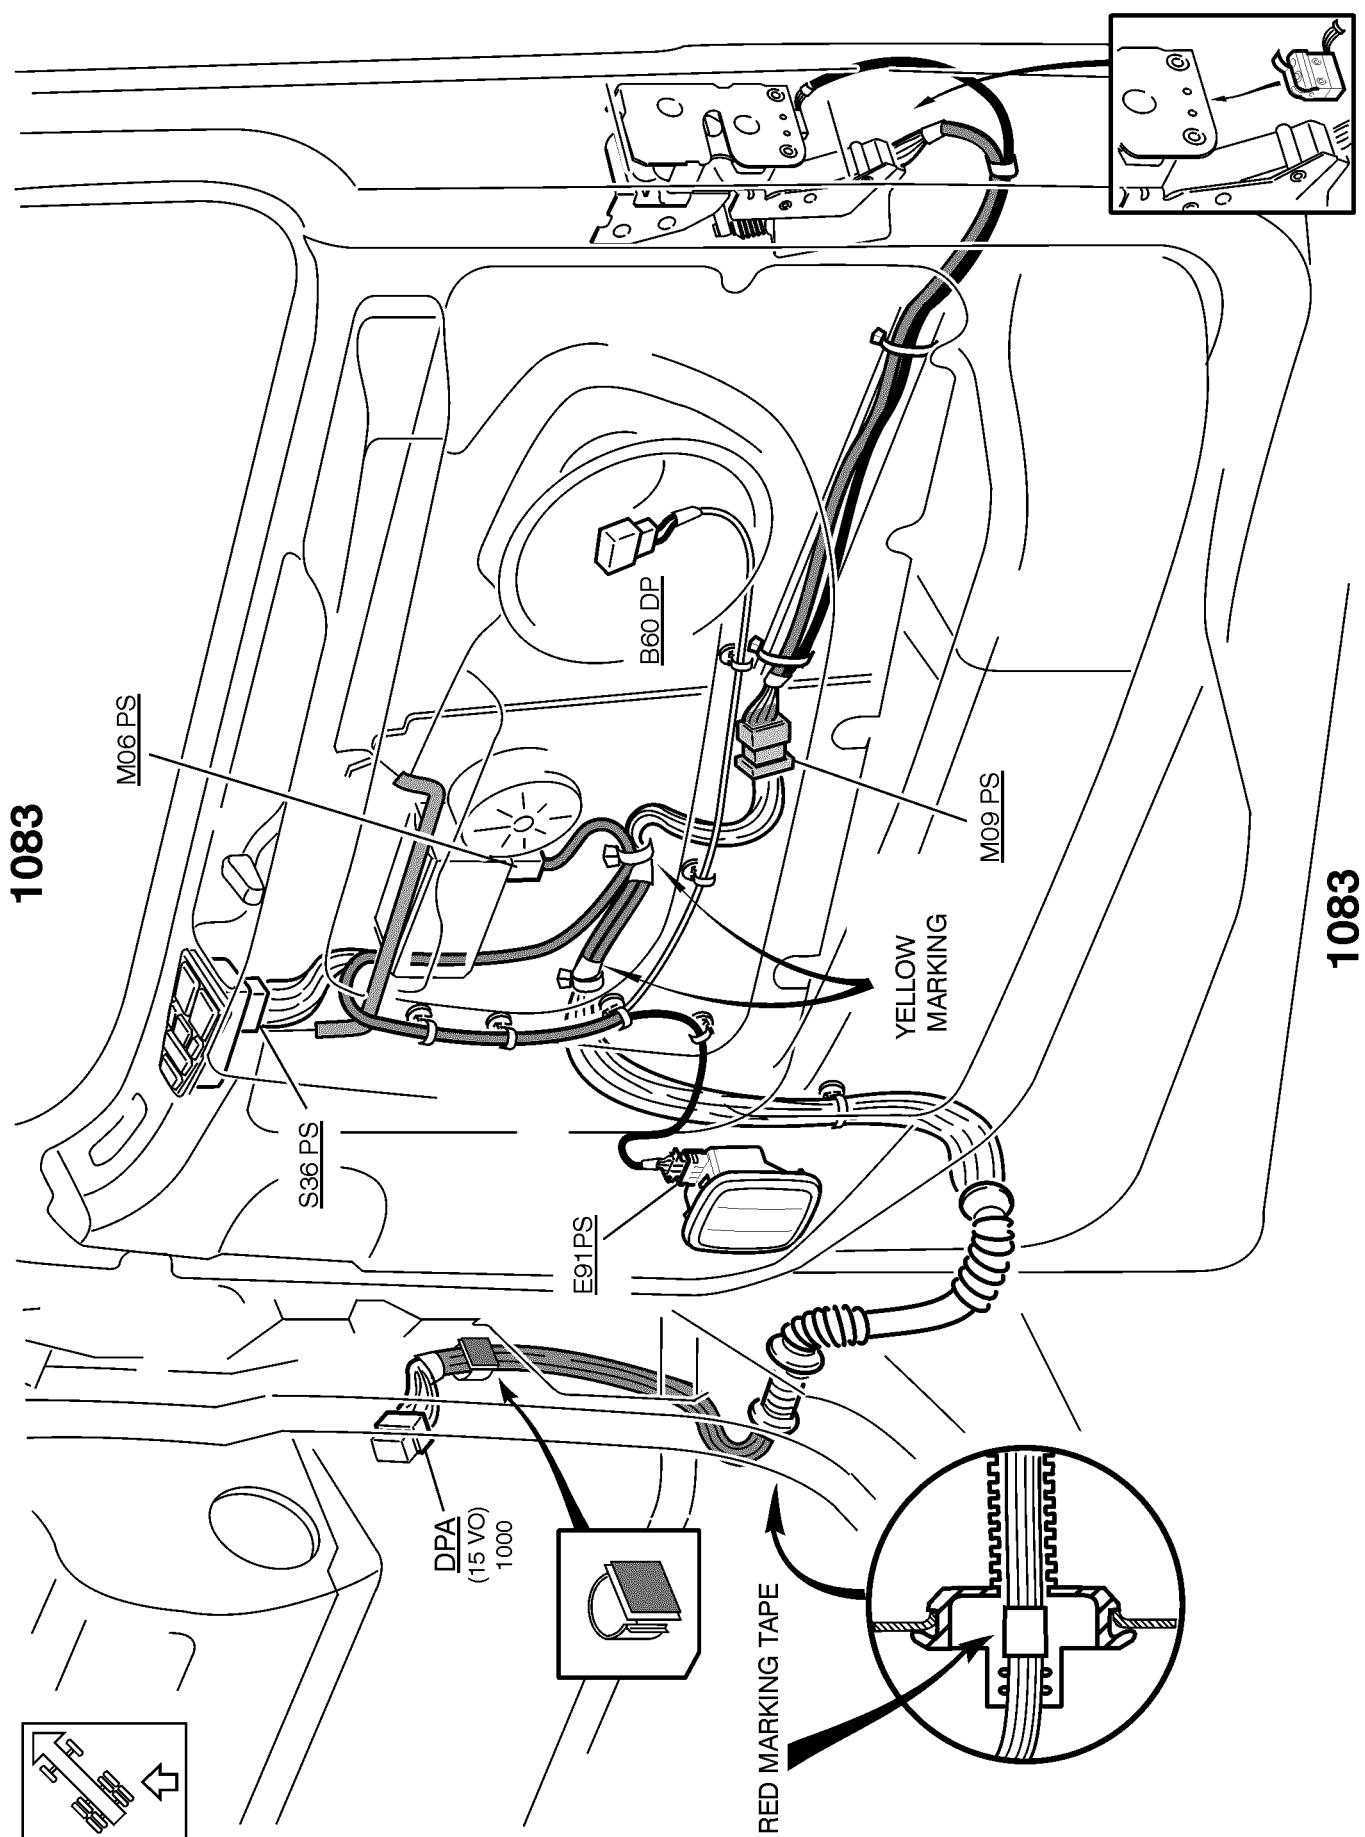



T3021655



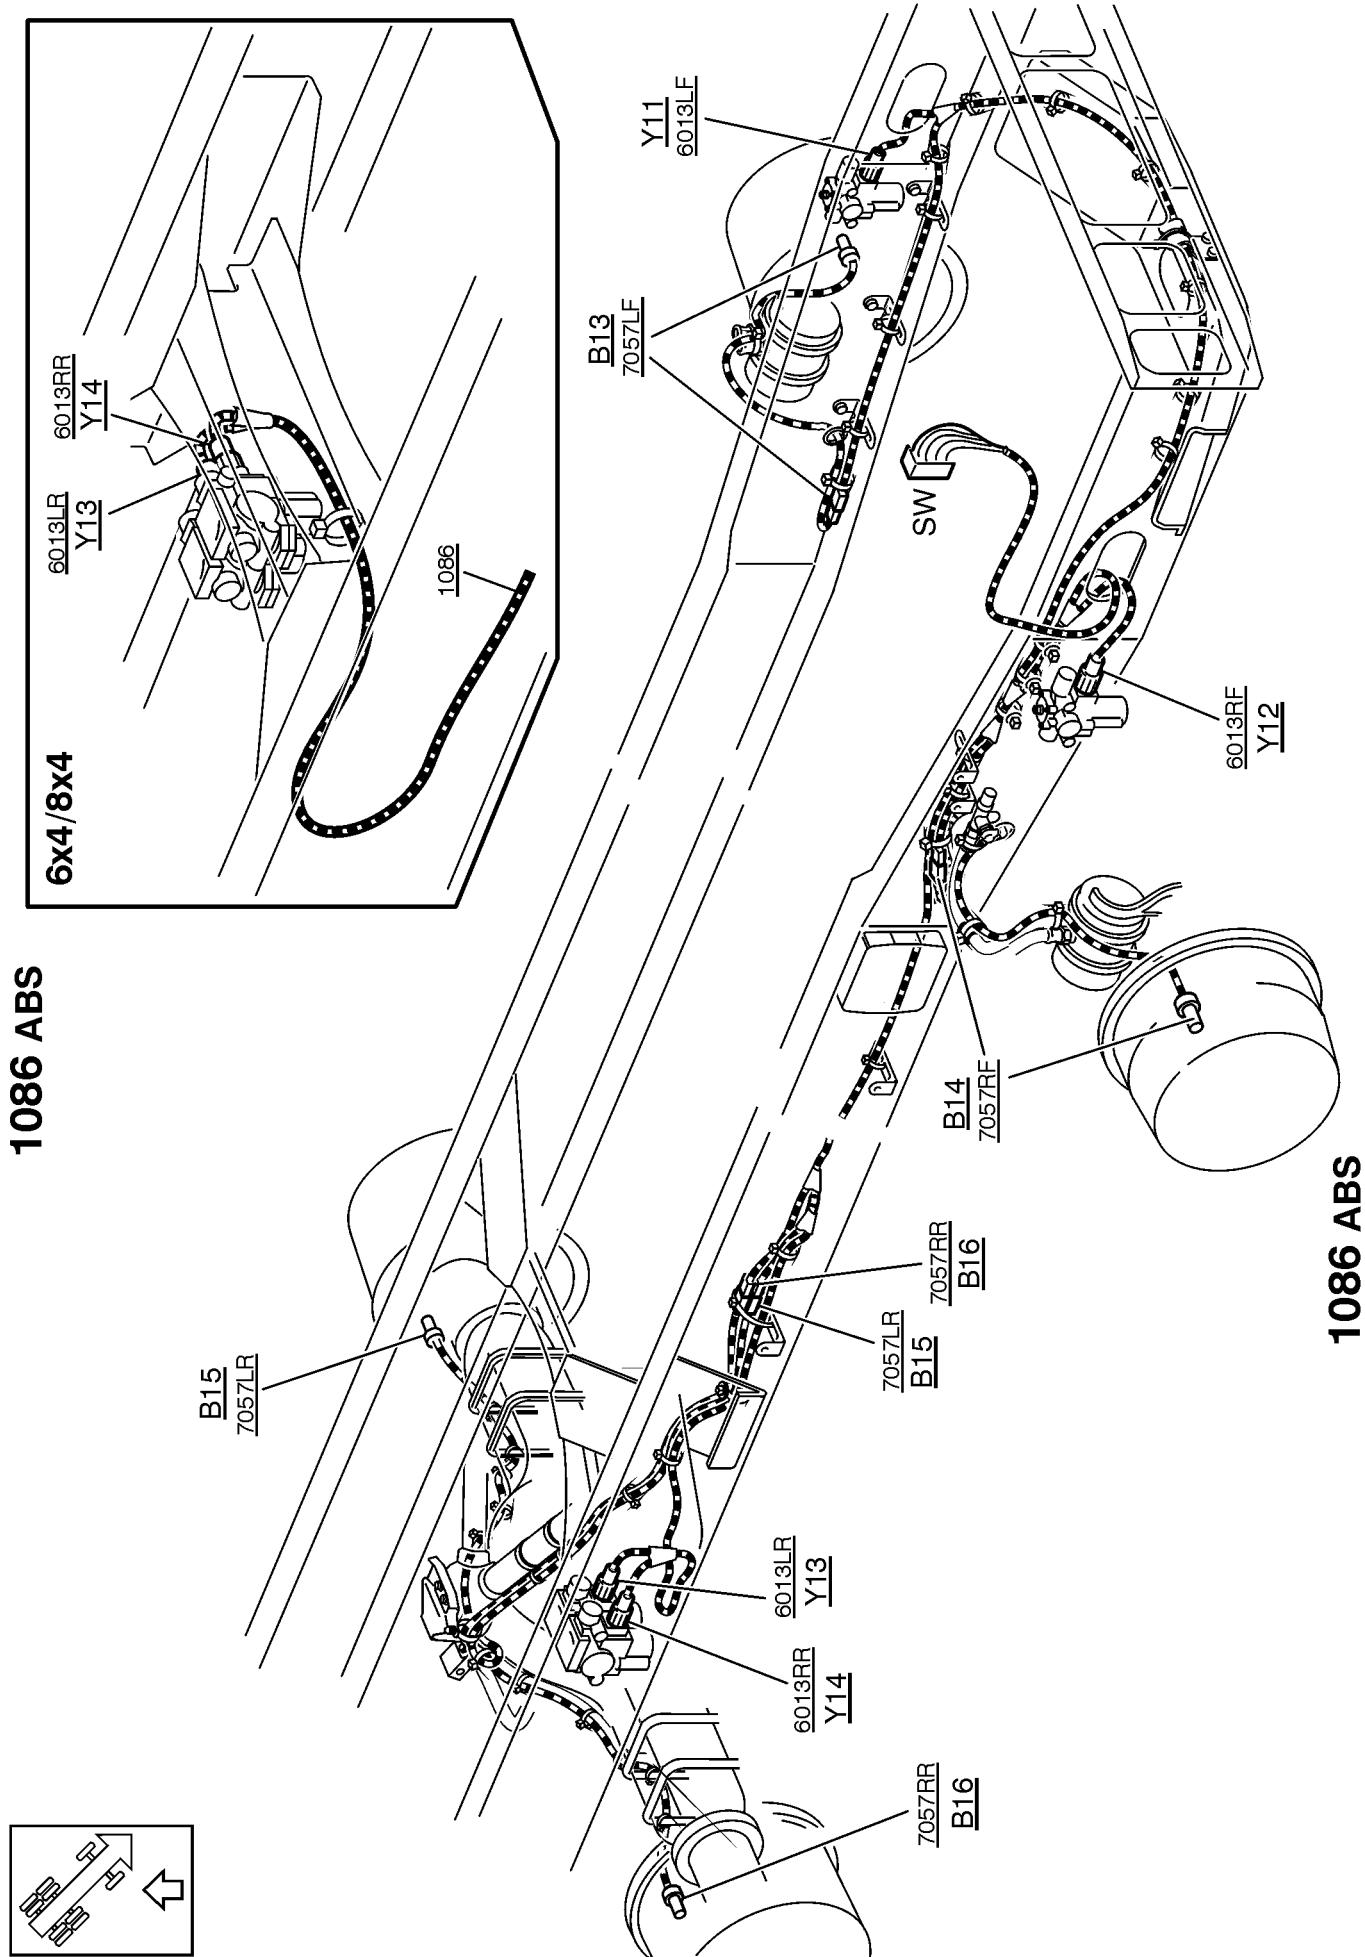


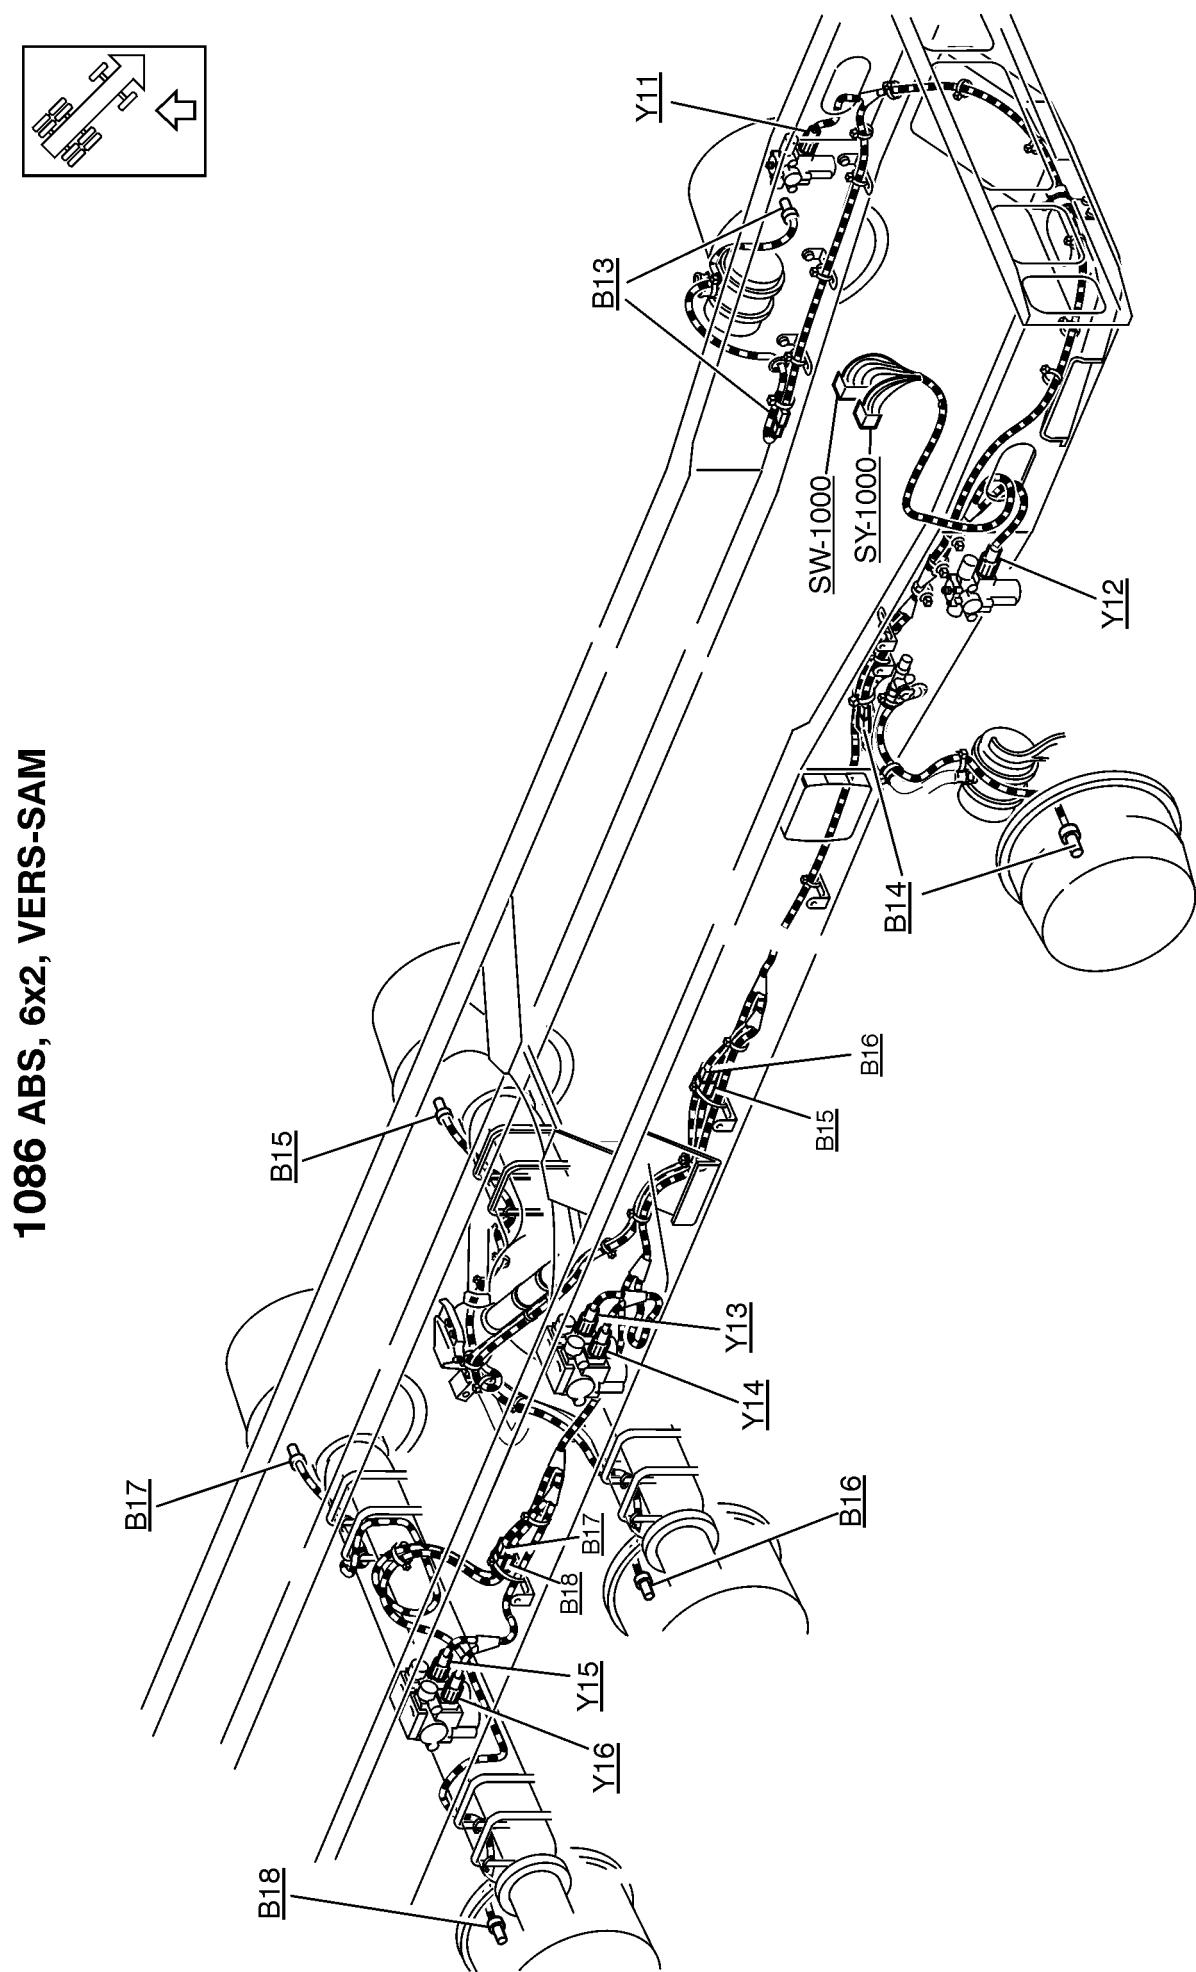



T3020574

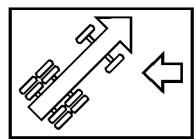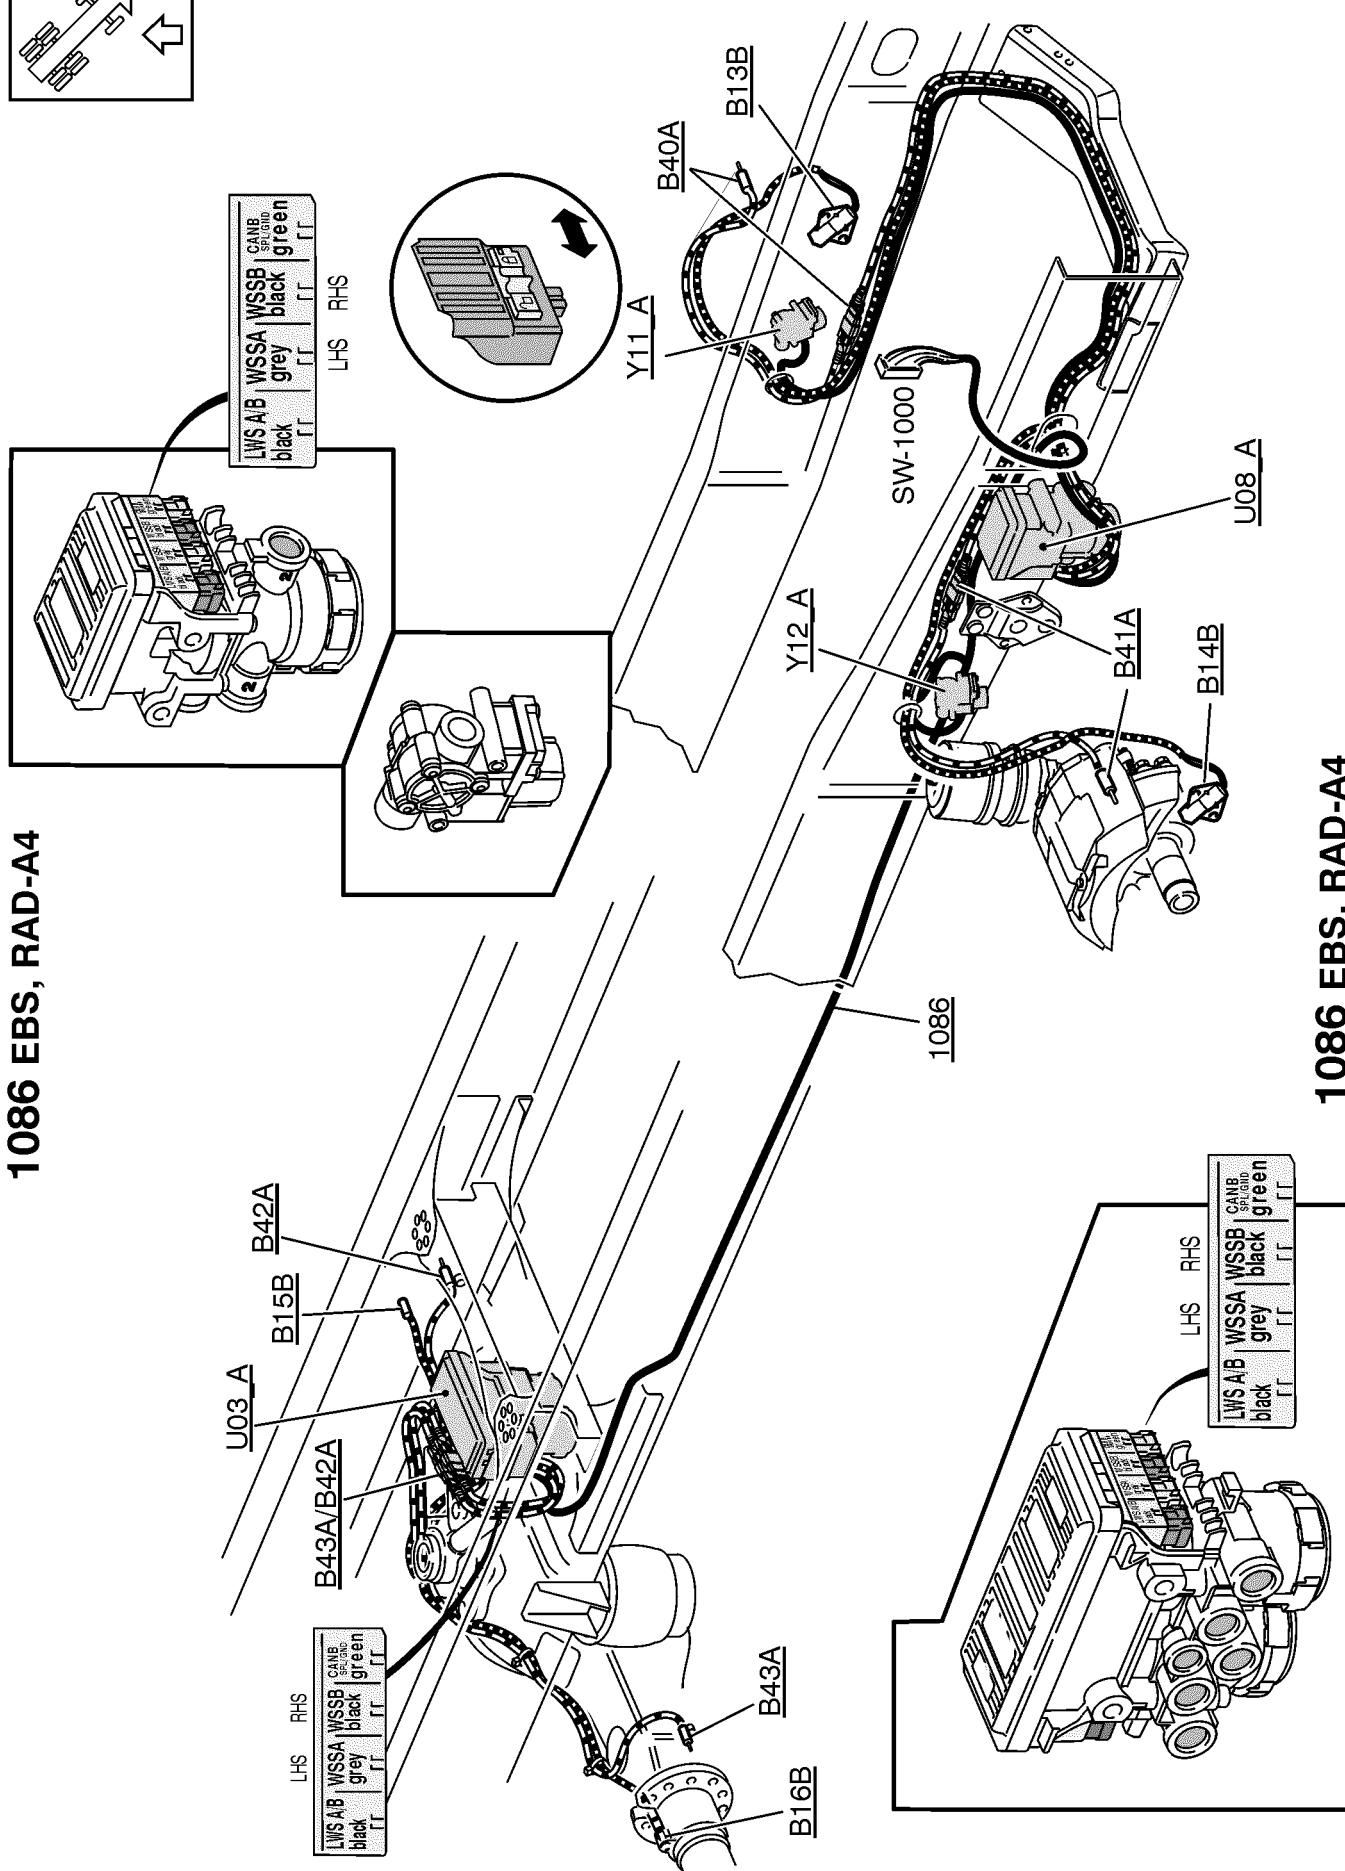**1086 EBS, RAD-A4****1086 EBS, RAD-A4**

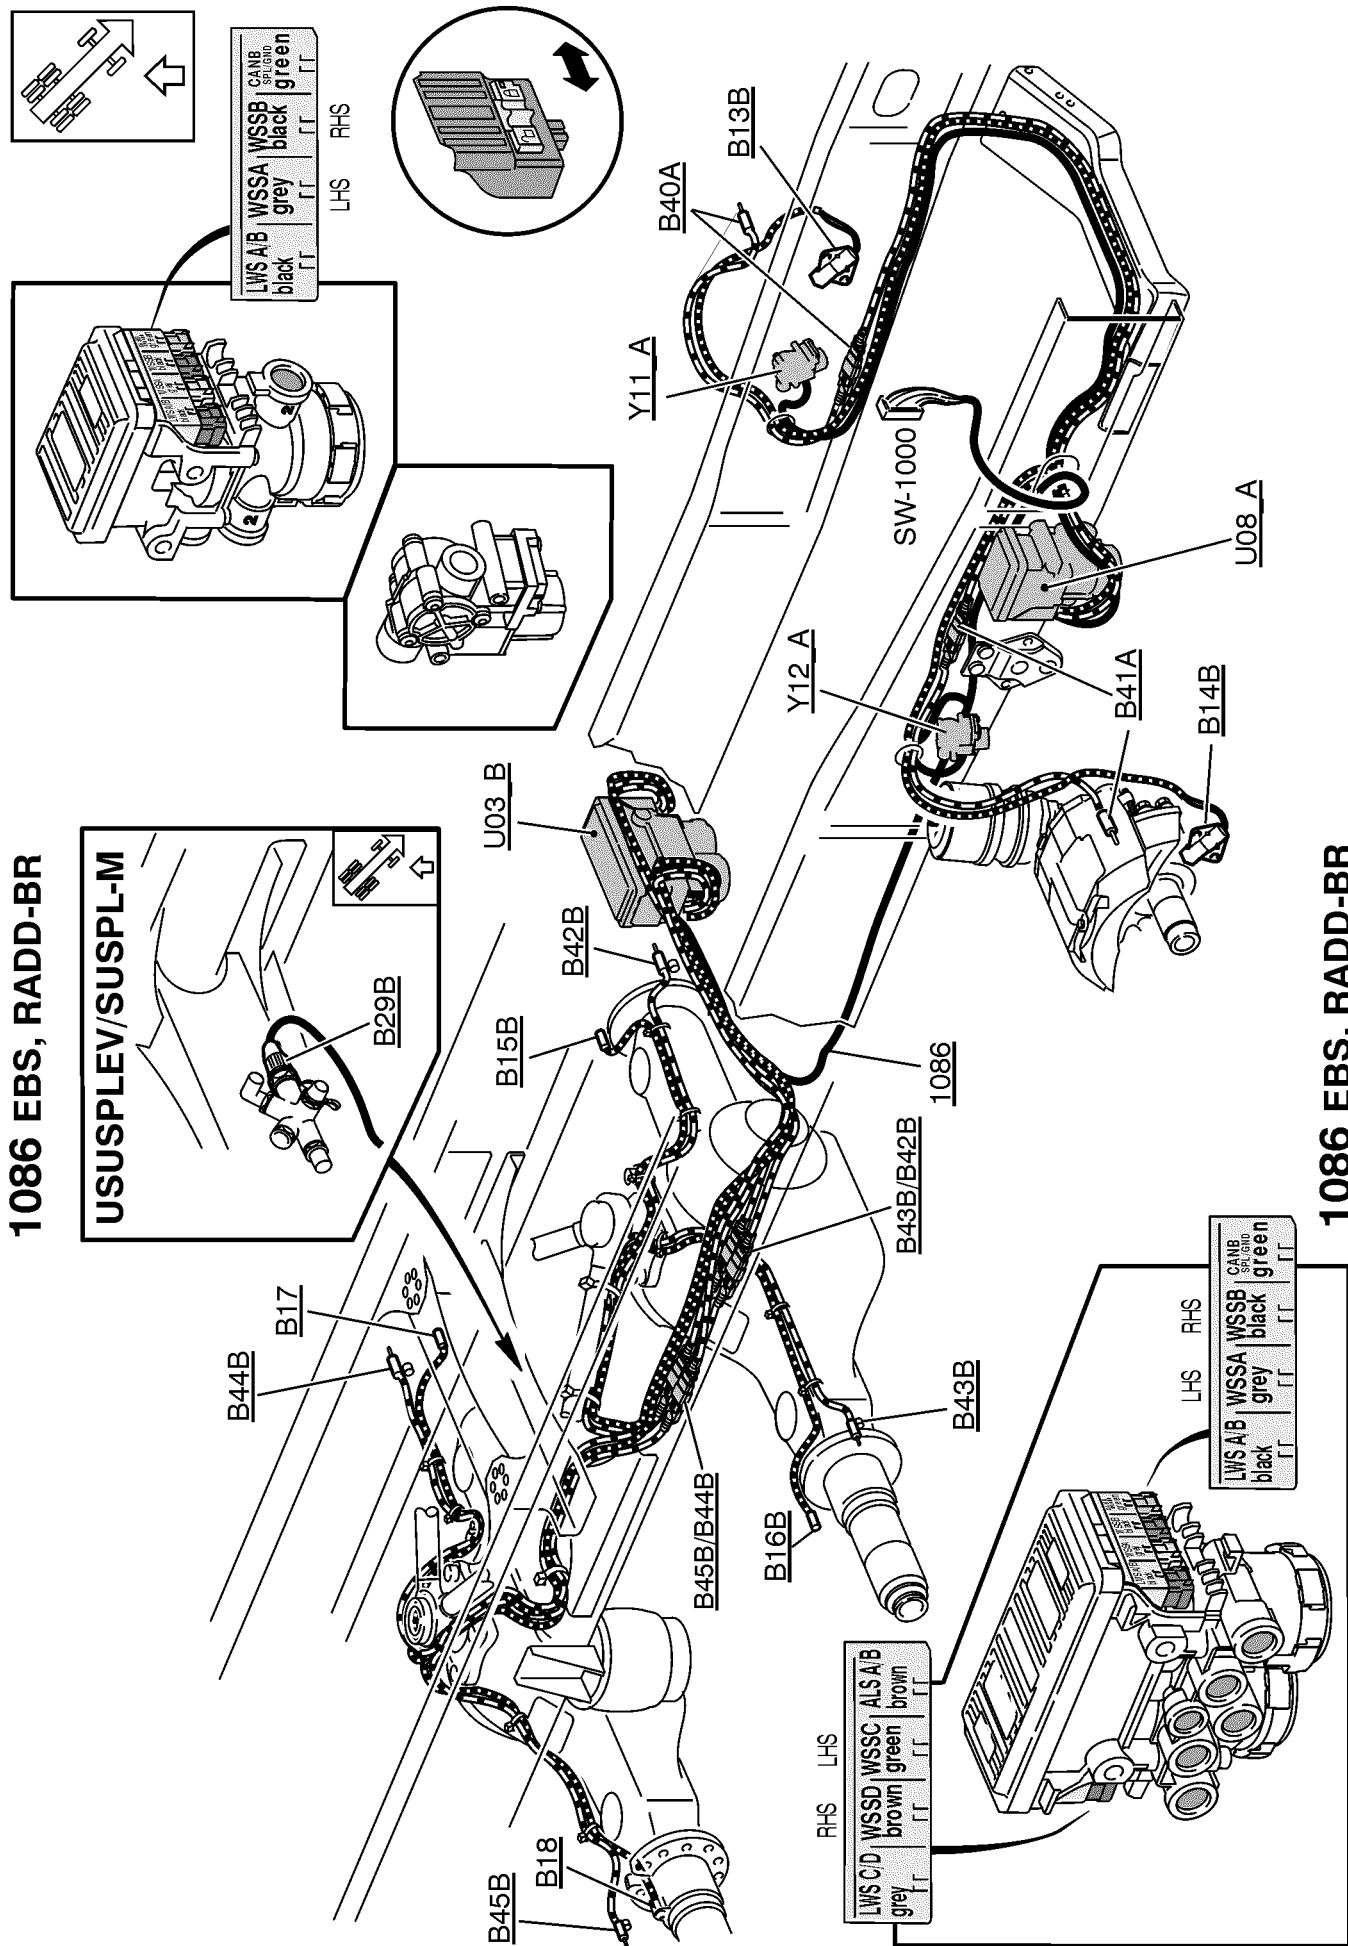


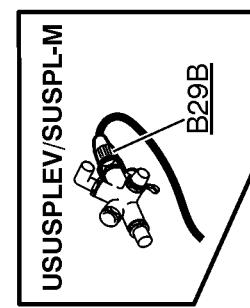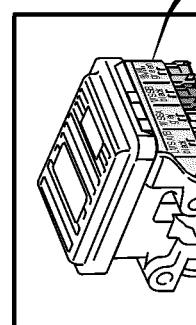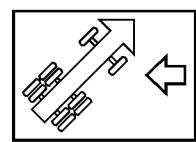



**1086 EBS, RADD-A8
RAL17/21**

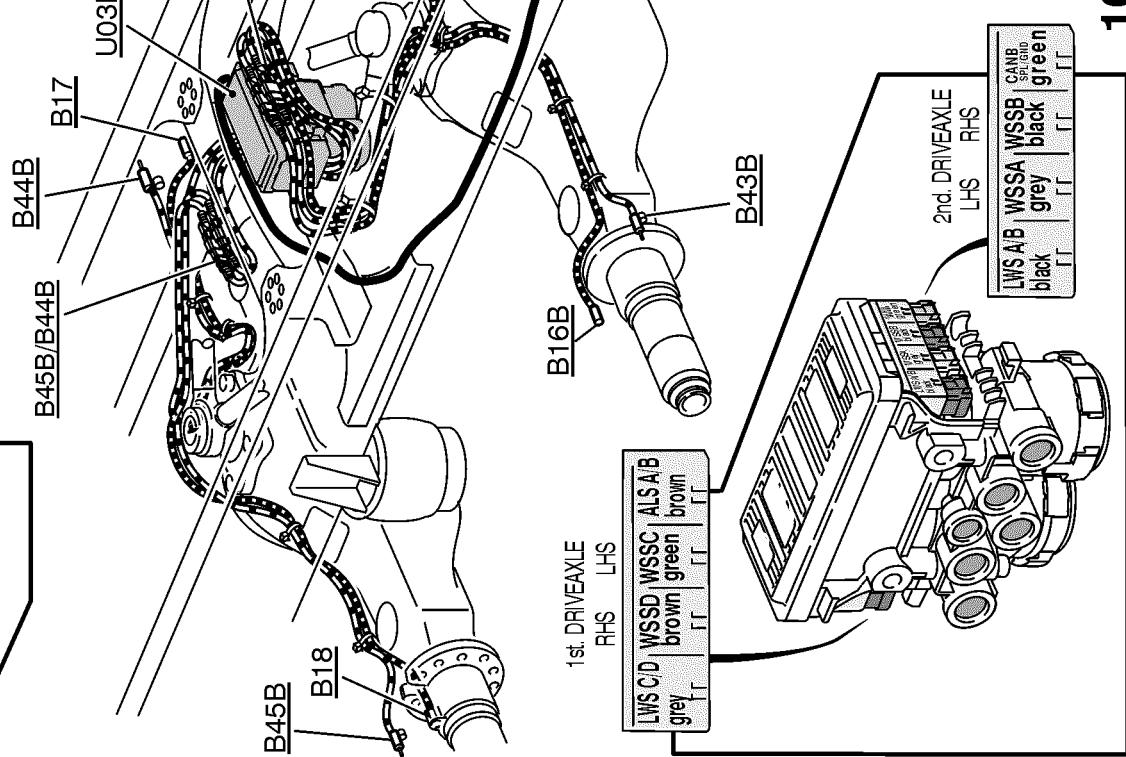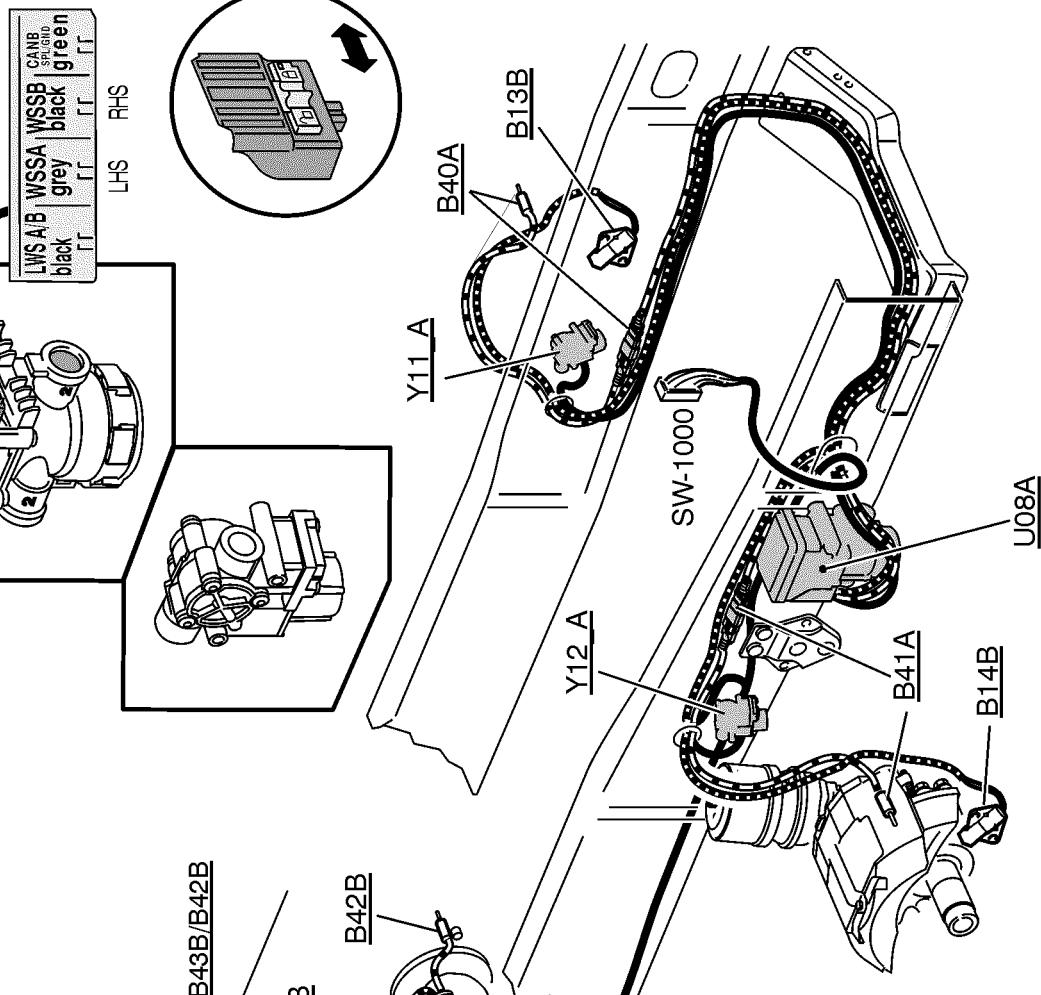


**1086 EBS, RADD-A8
RAL17/21**

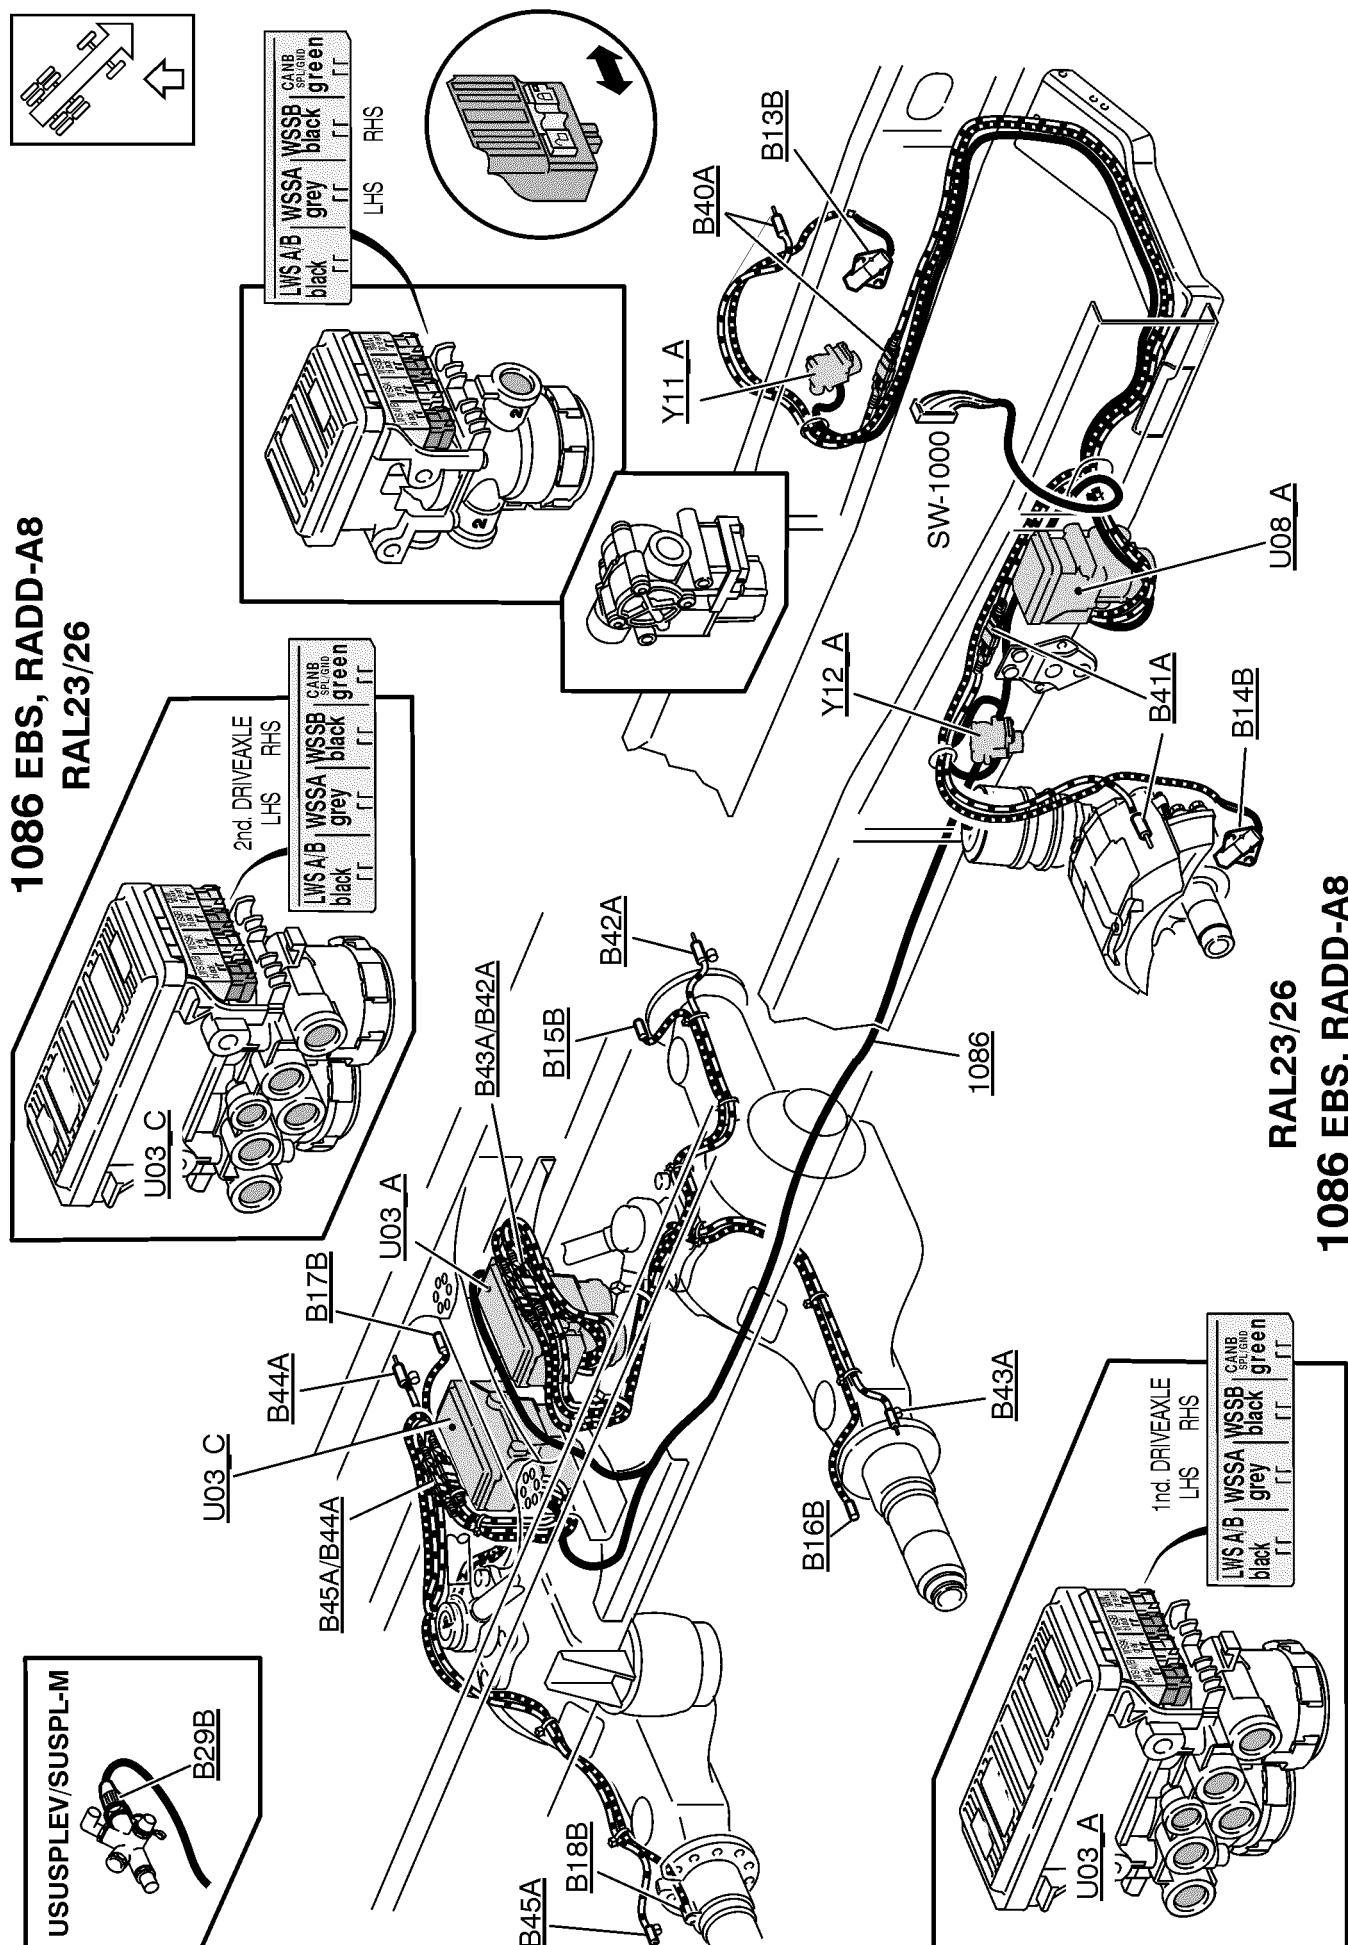


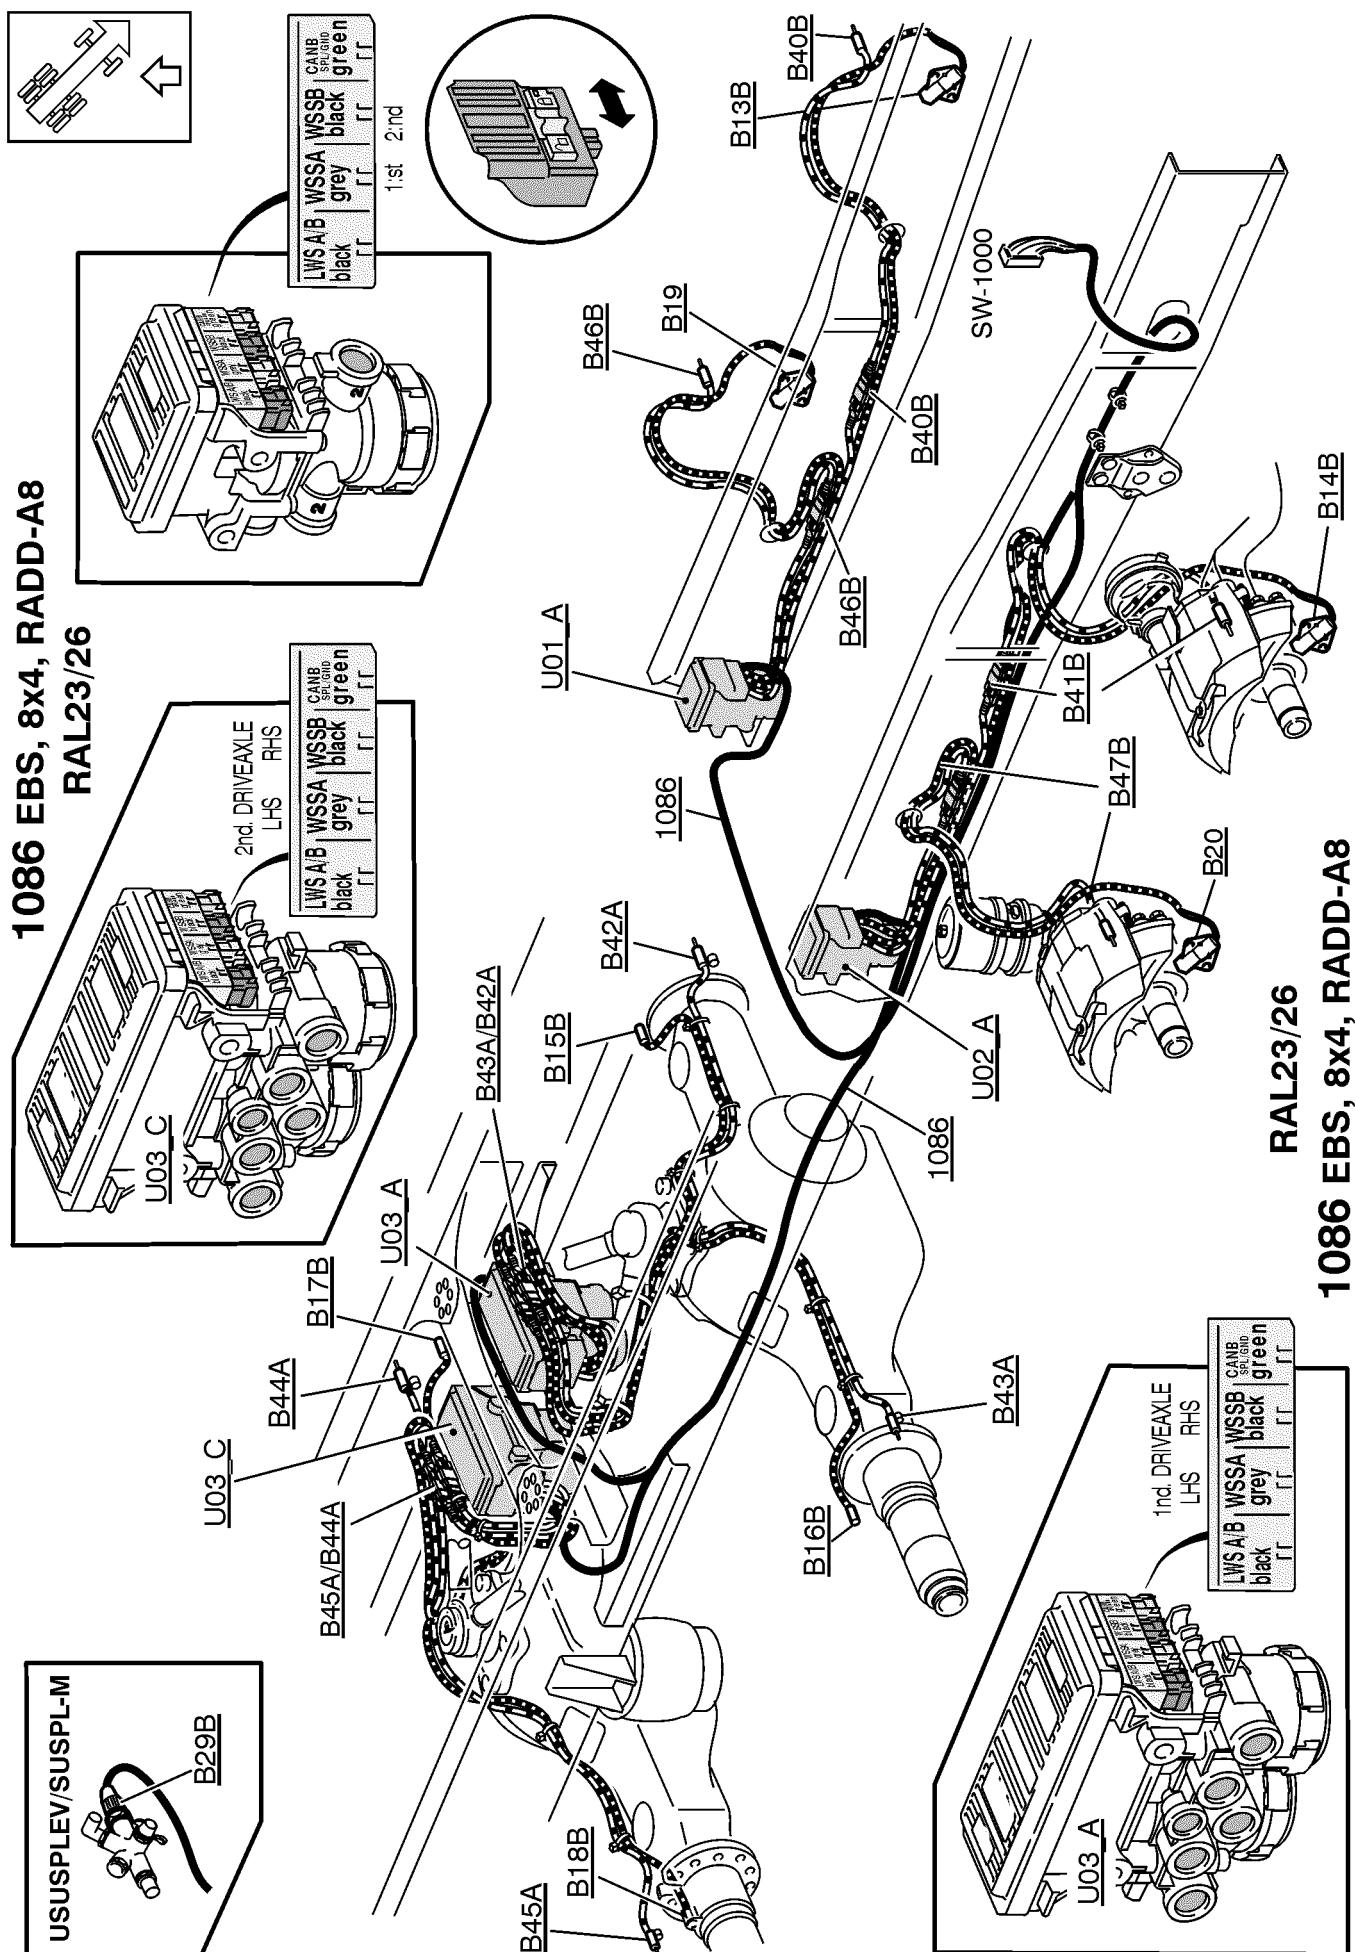

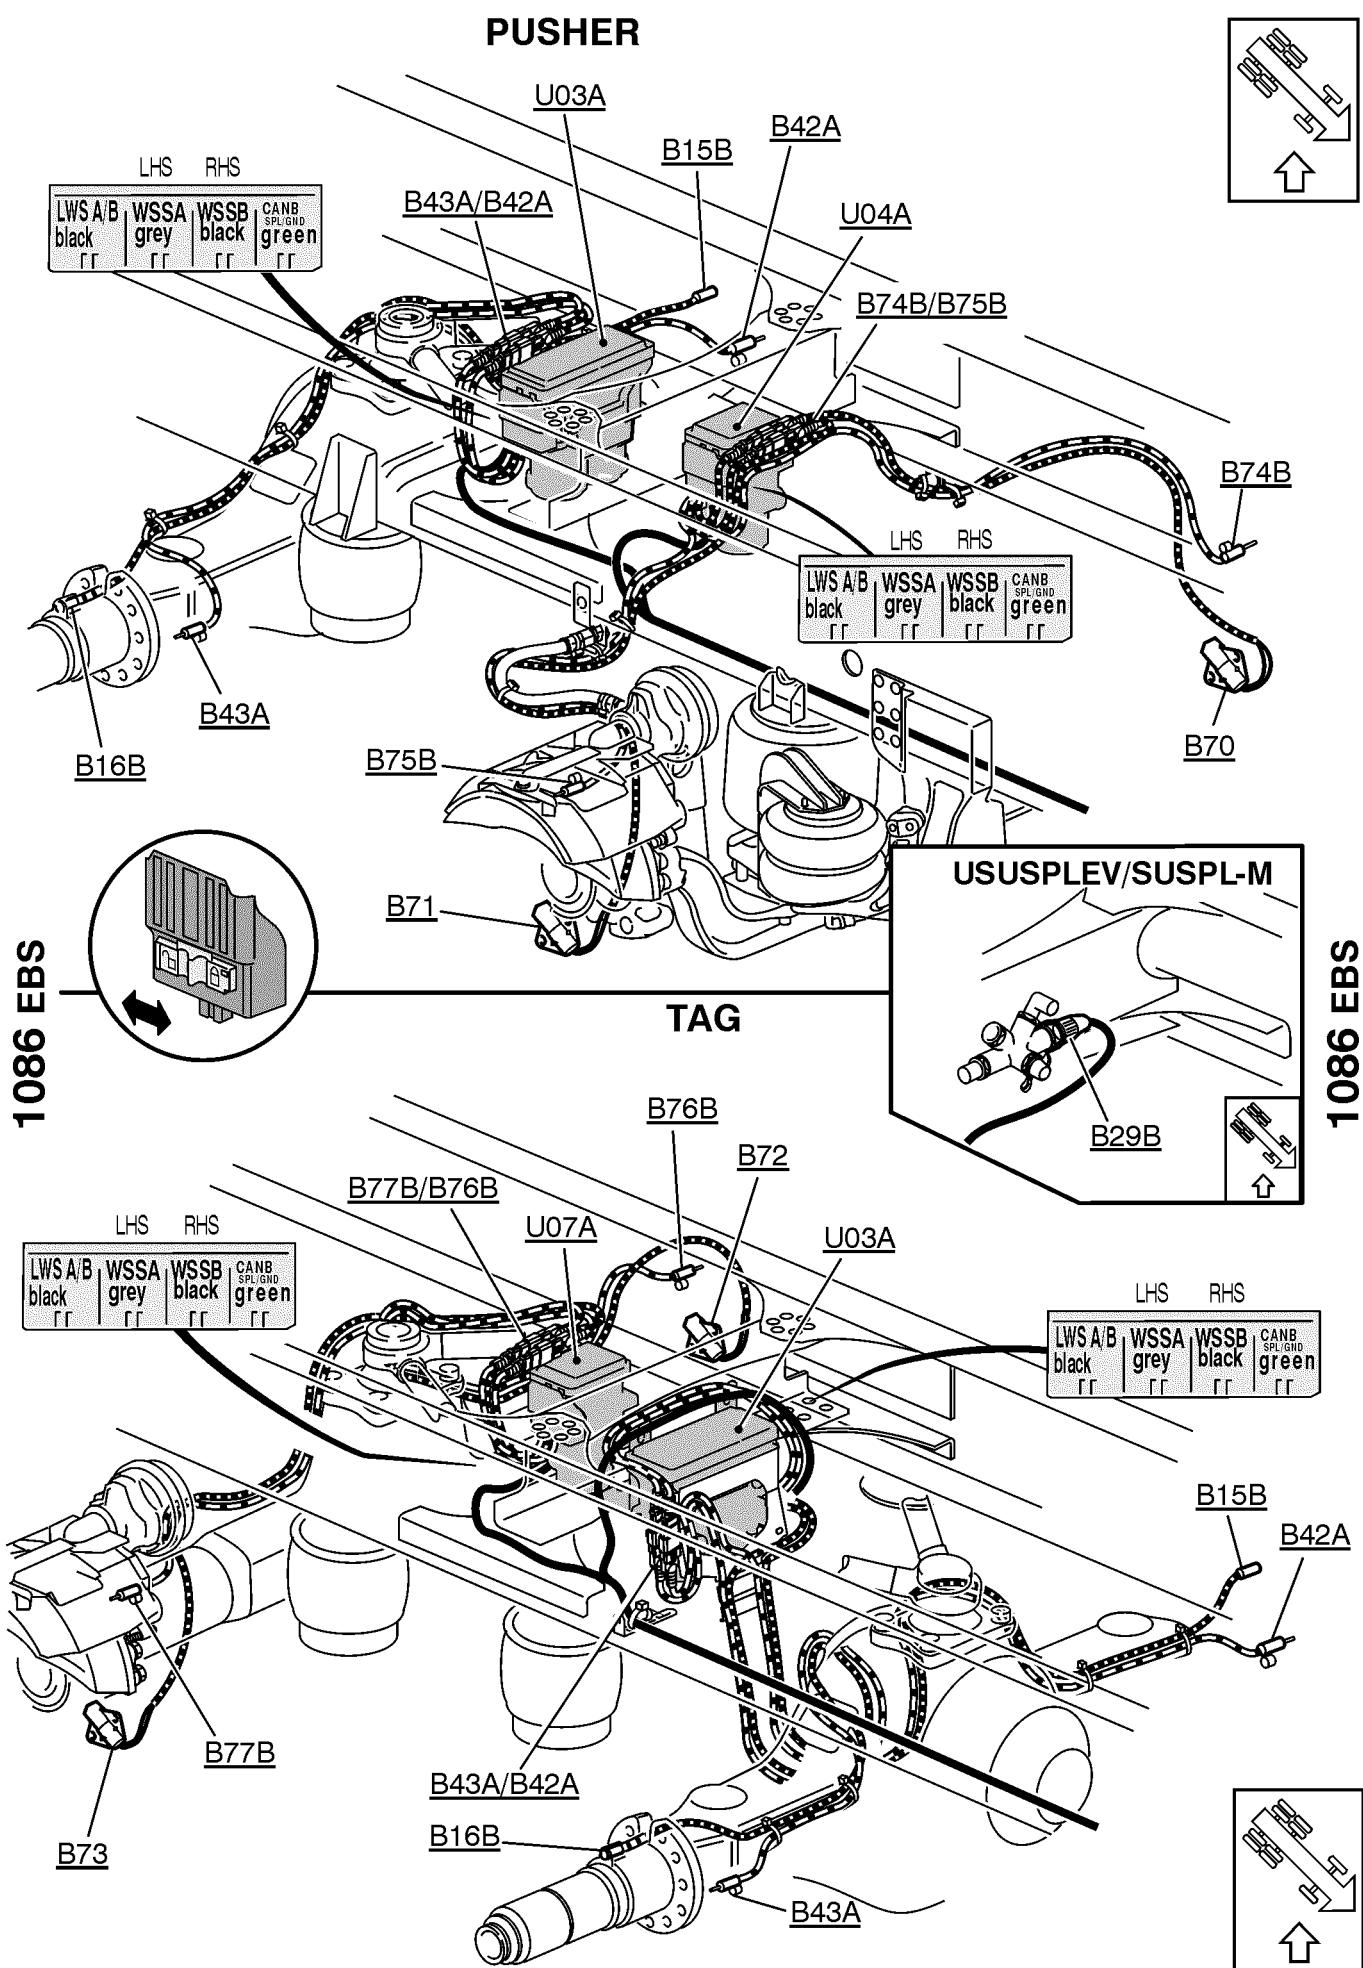


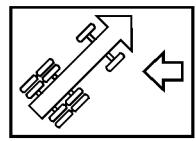


1086, TRIDEM

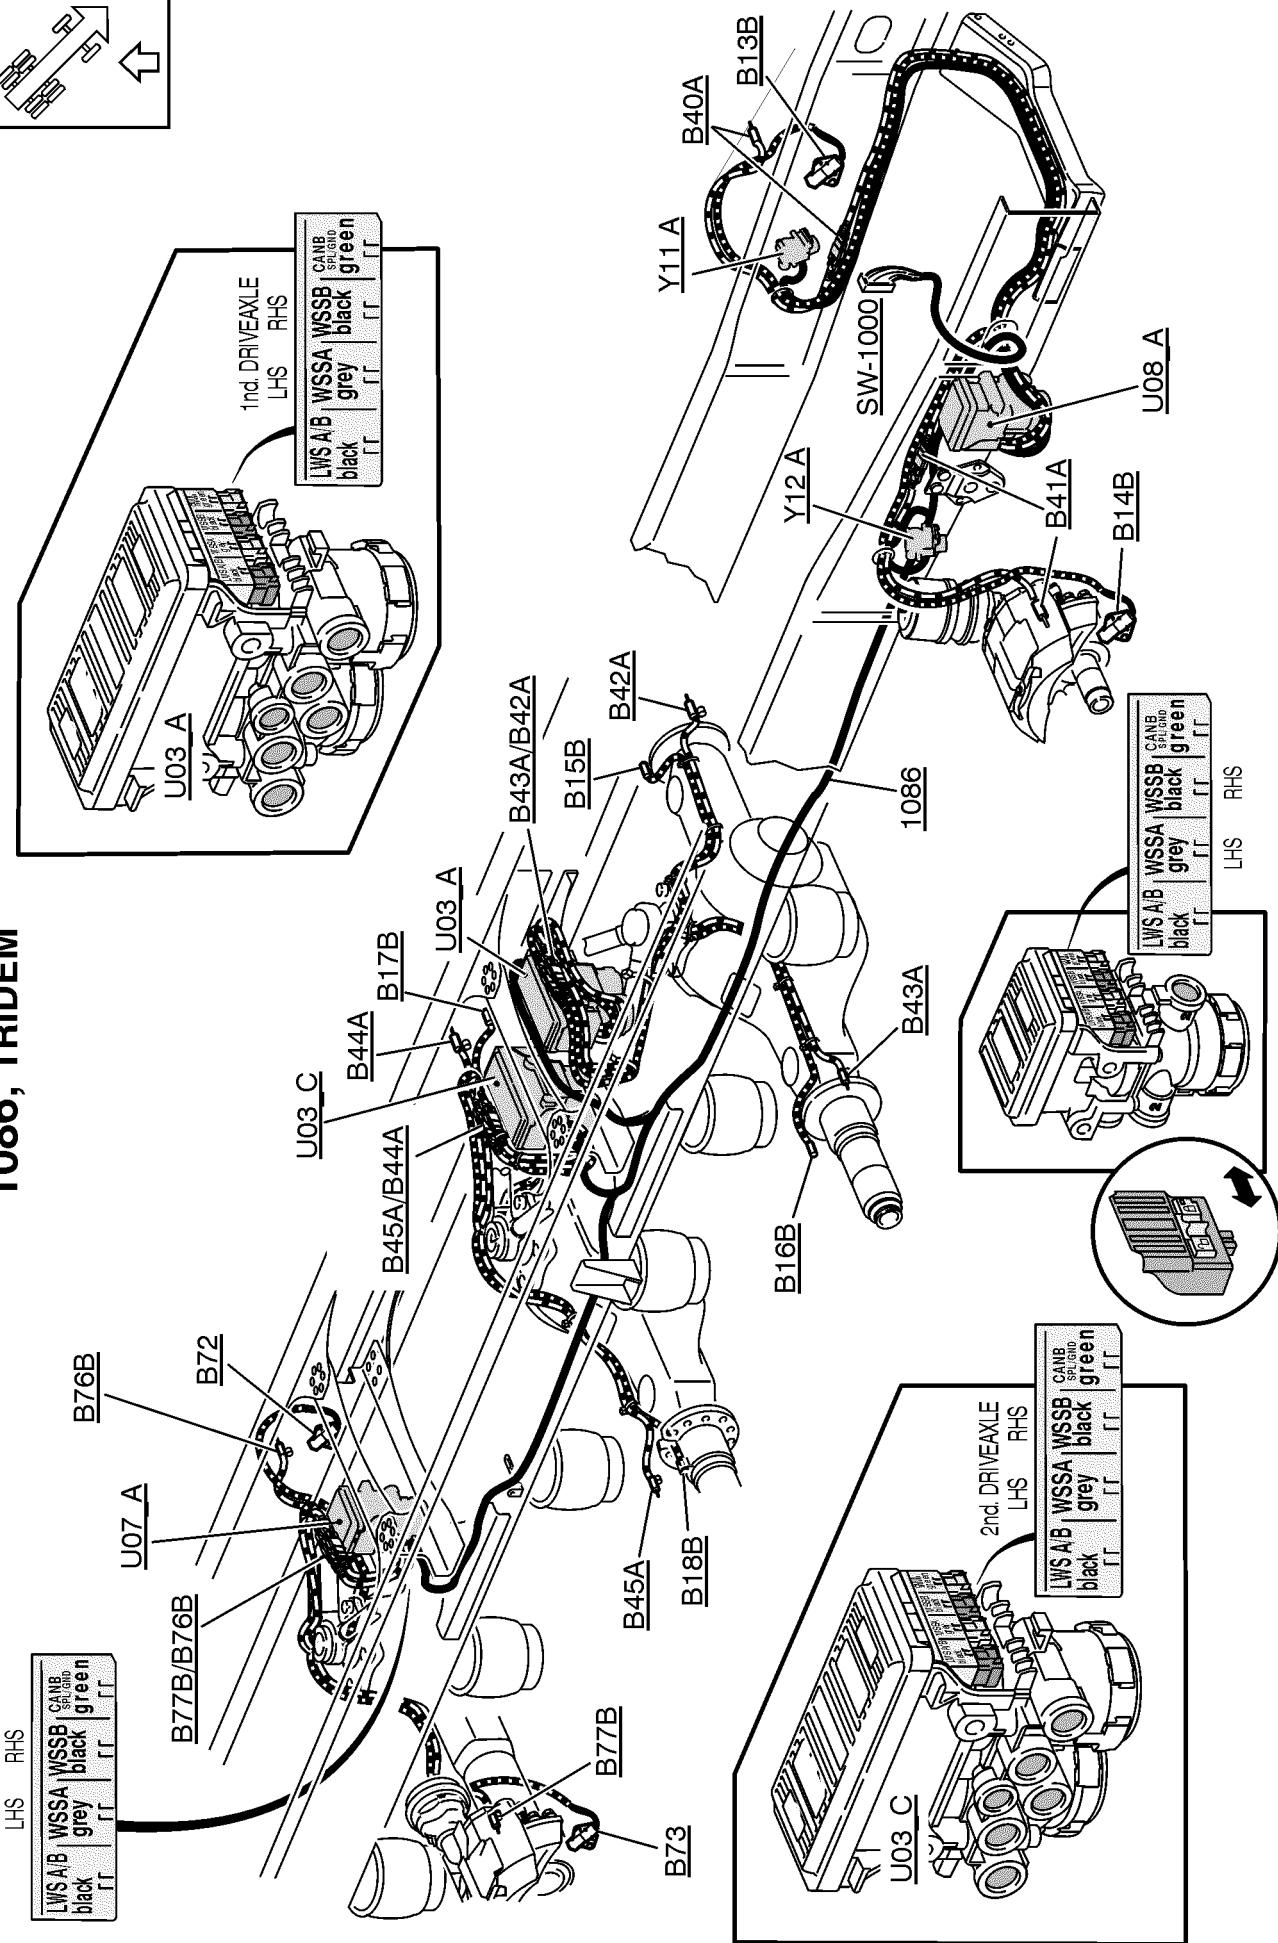



1086, TRIDEM

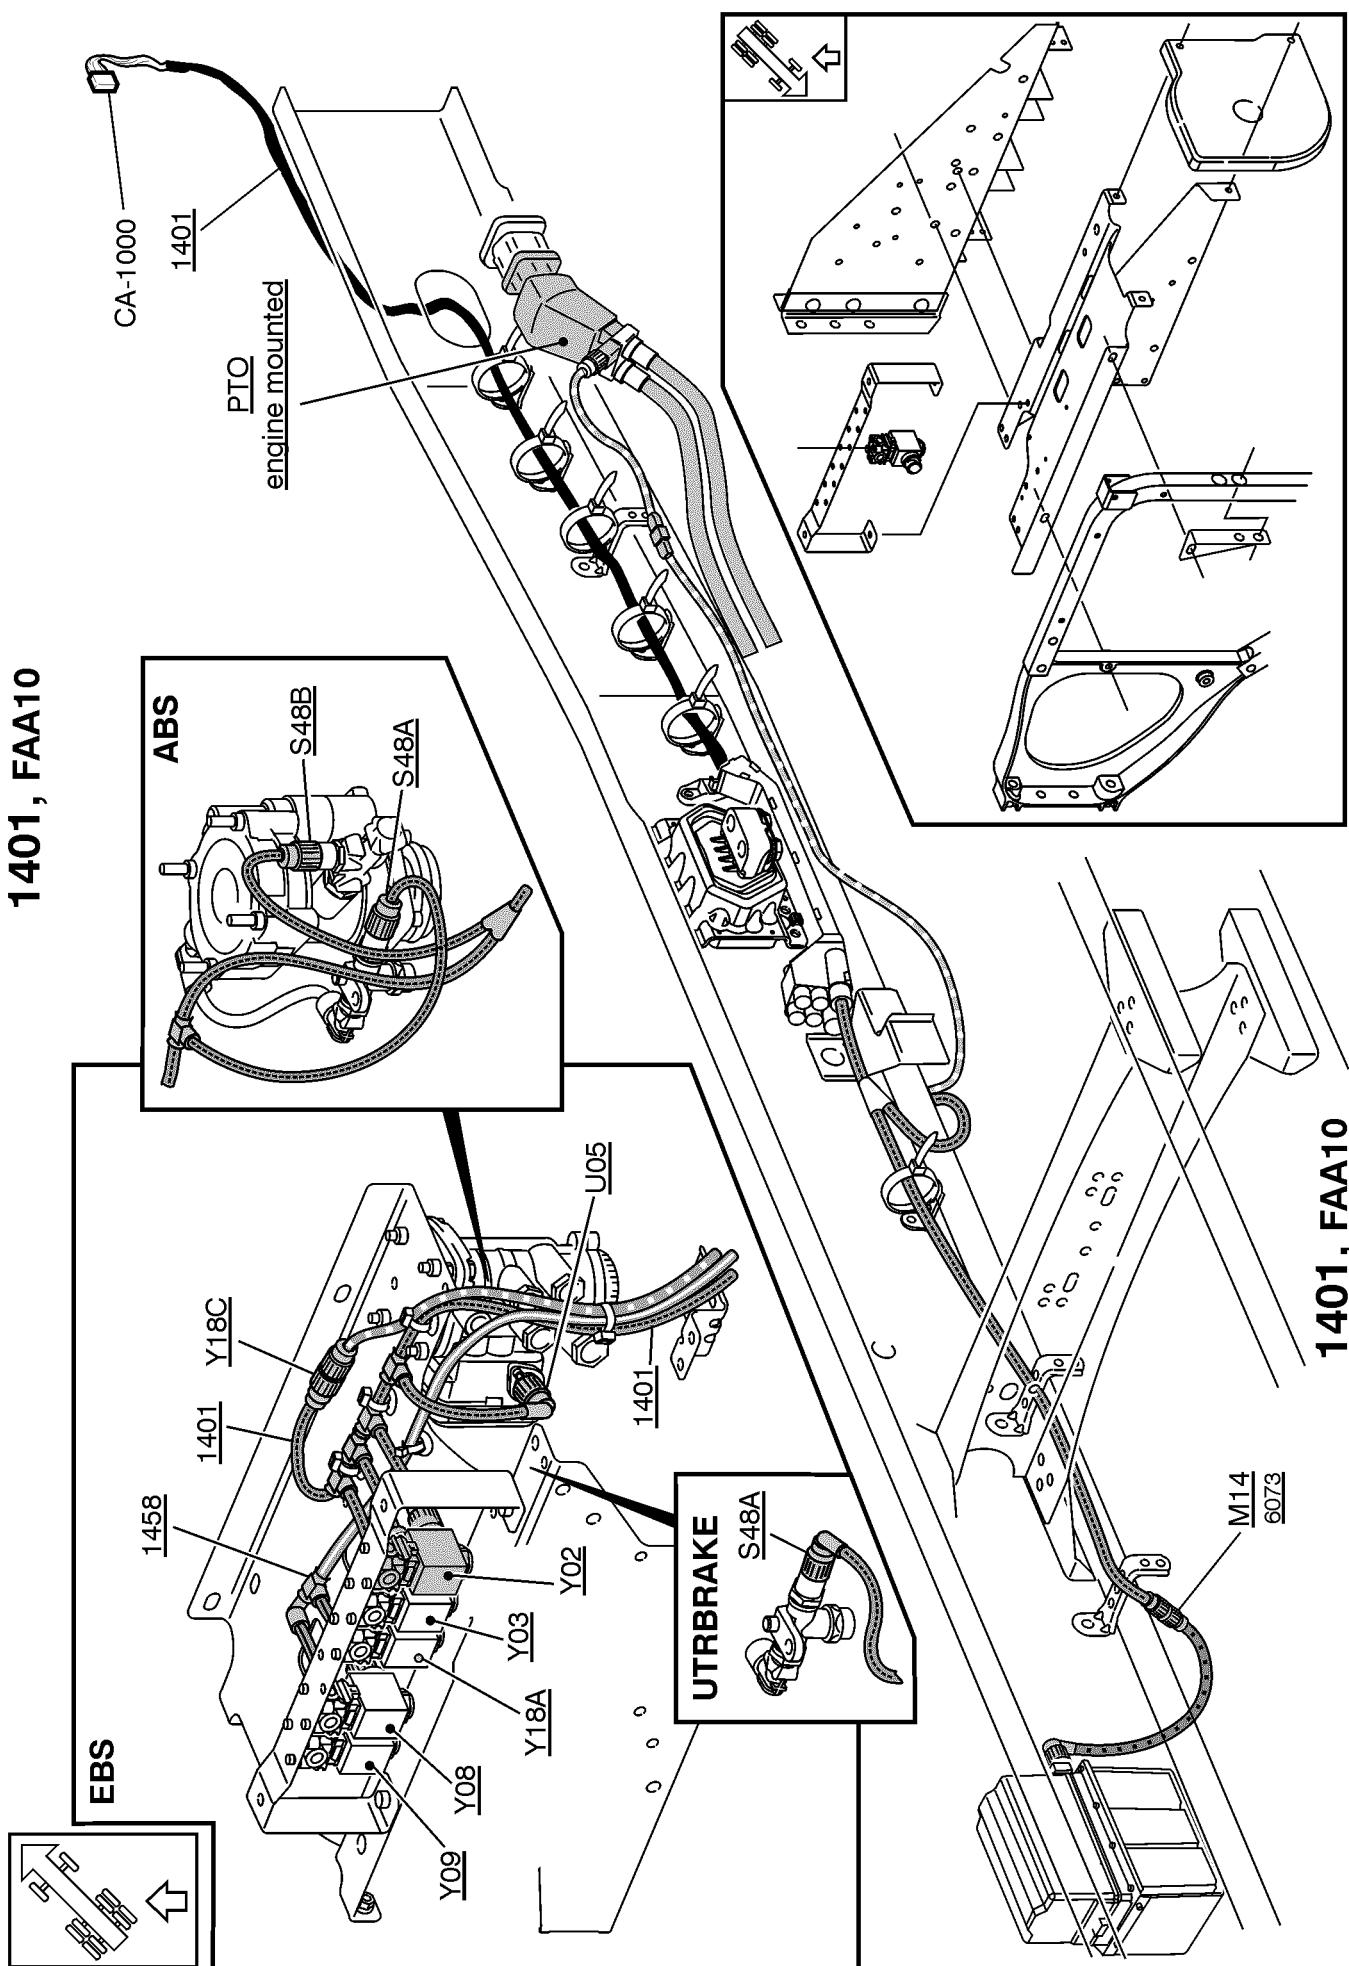1401, FAA10

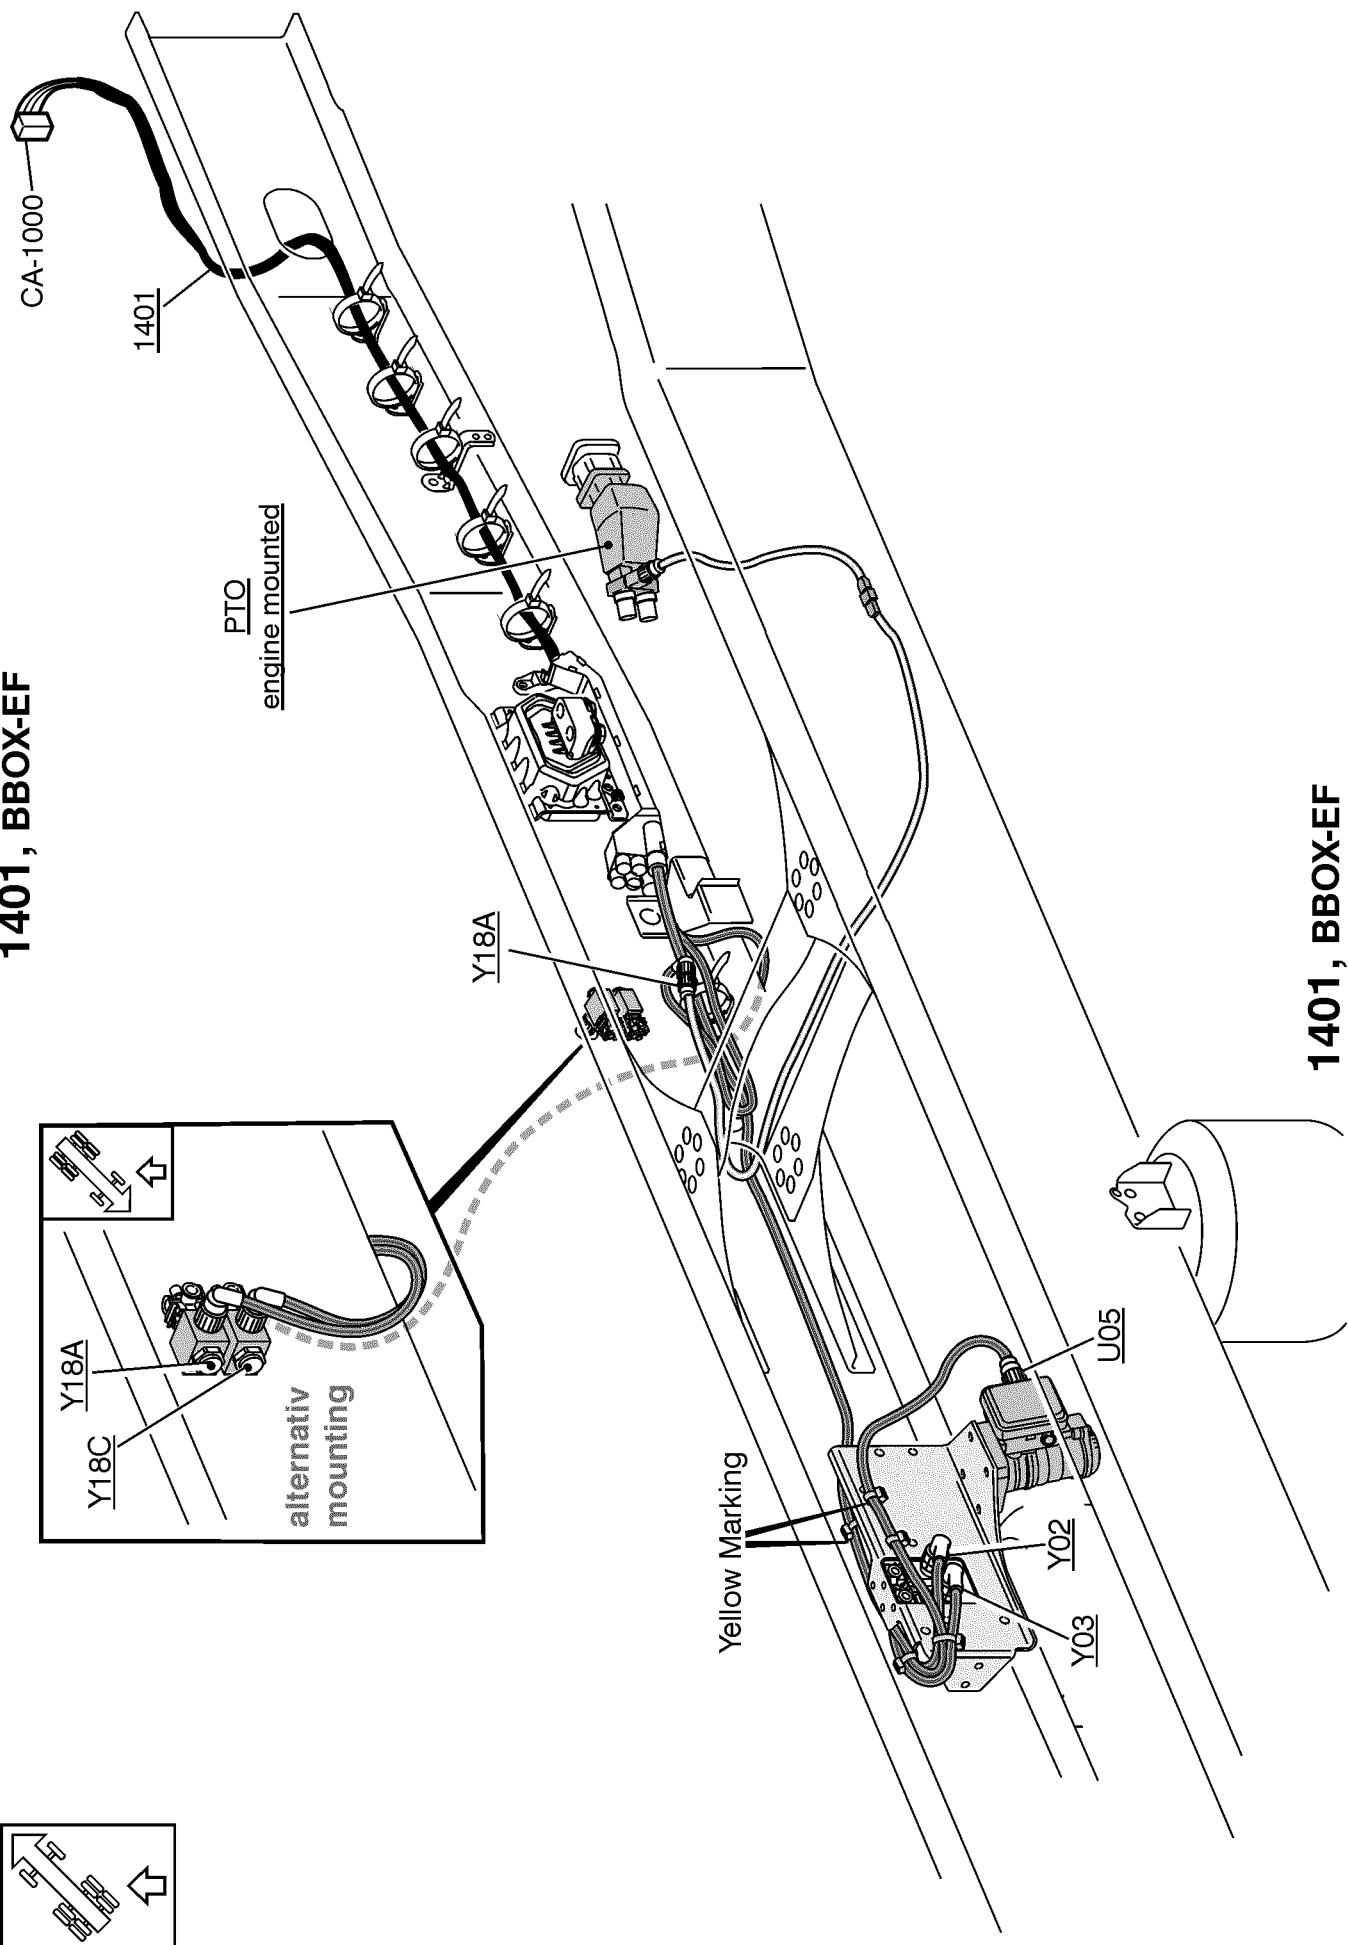
1401, BBOX-EF

T3021585


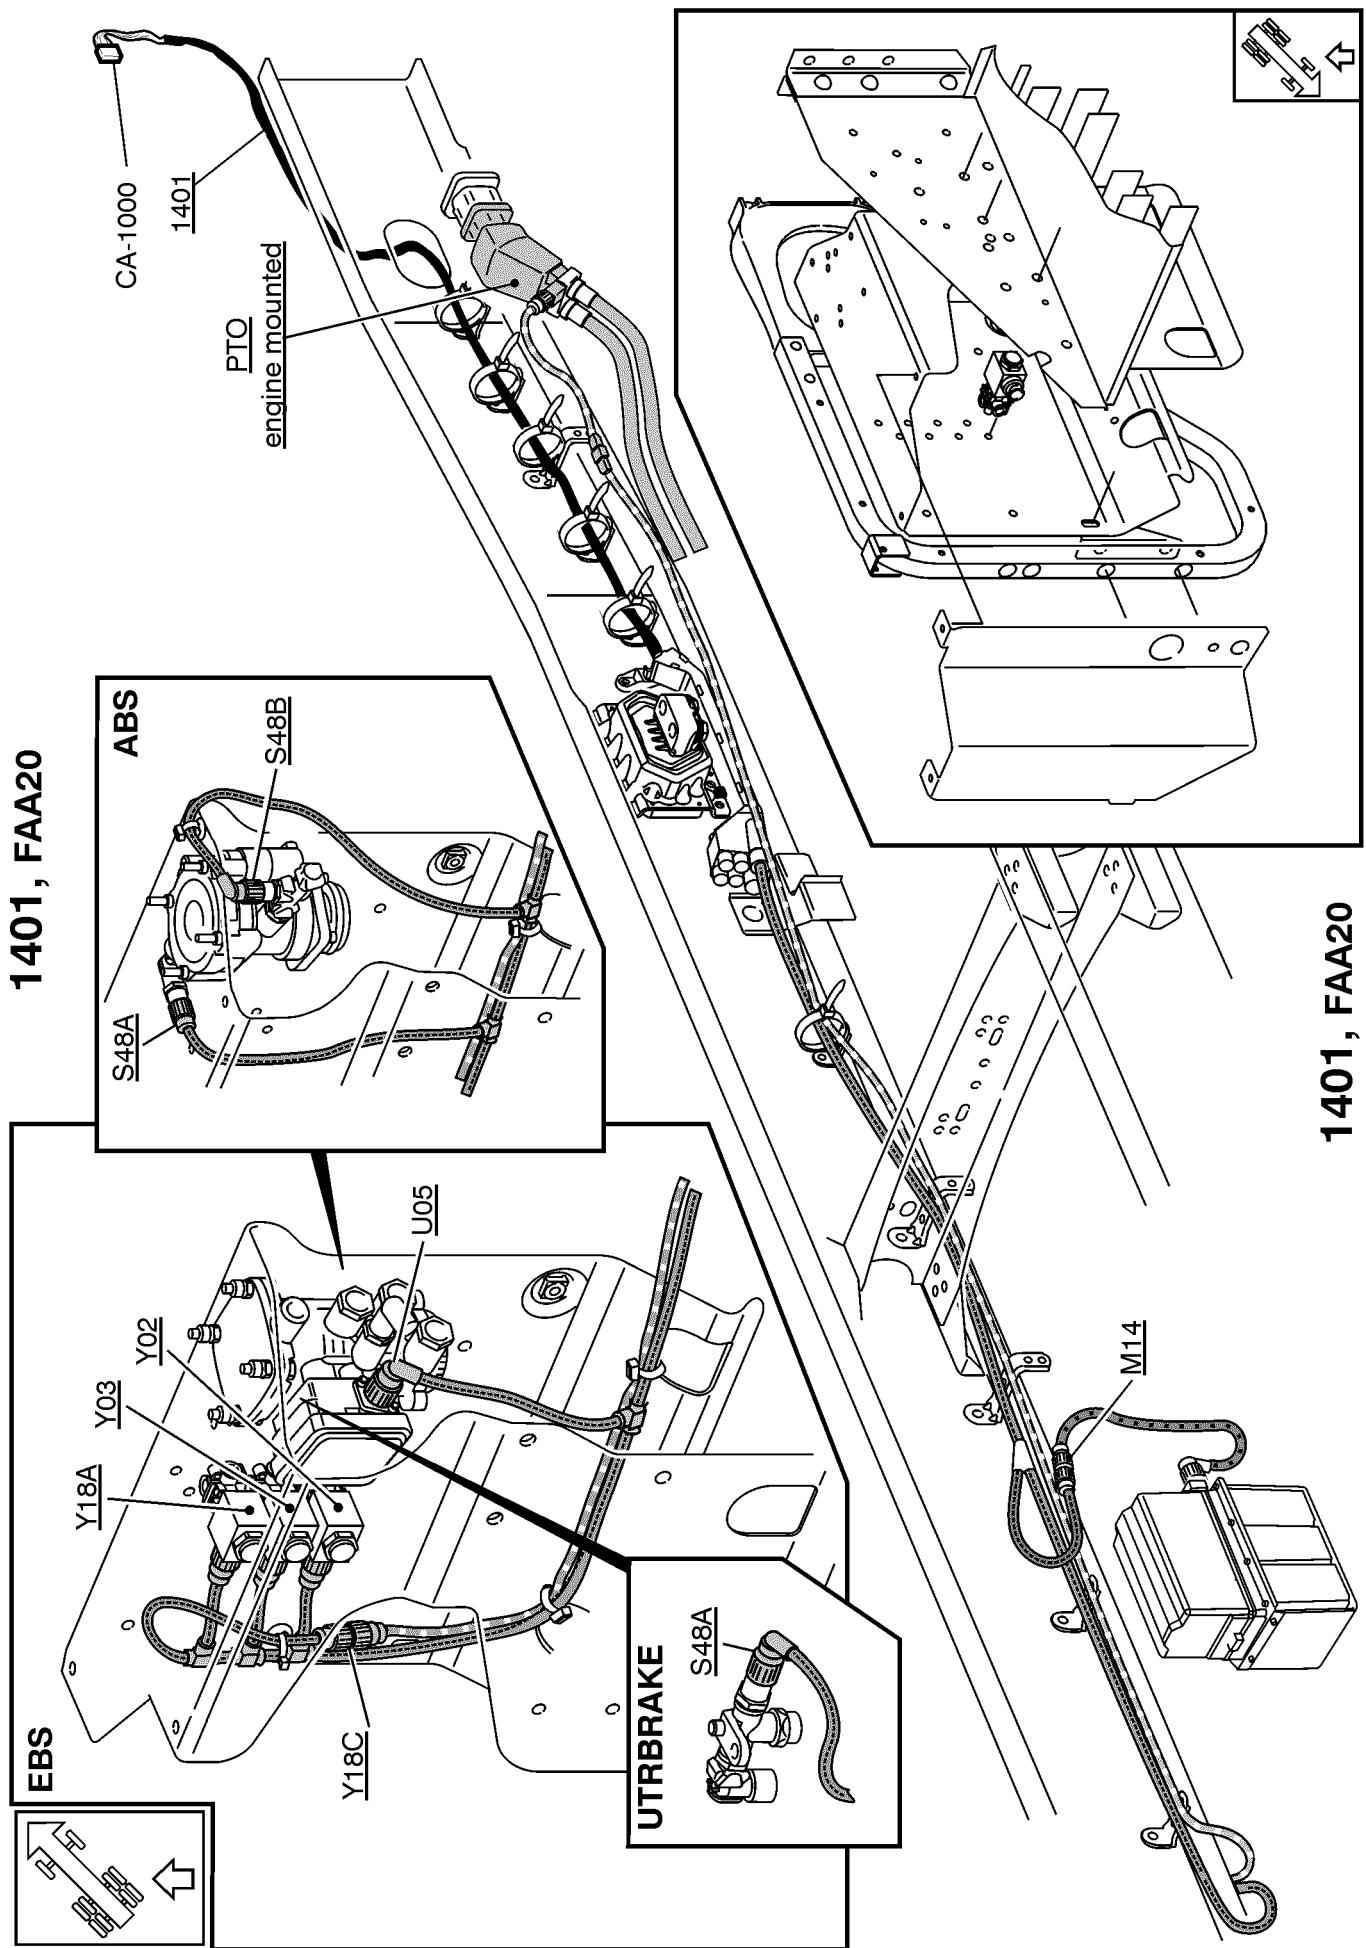



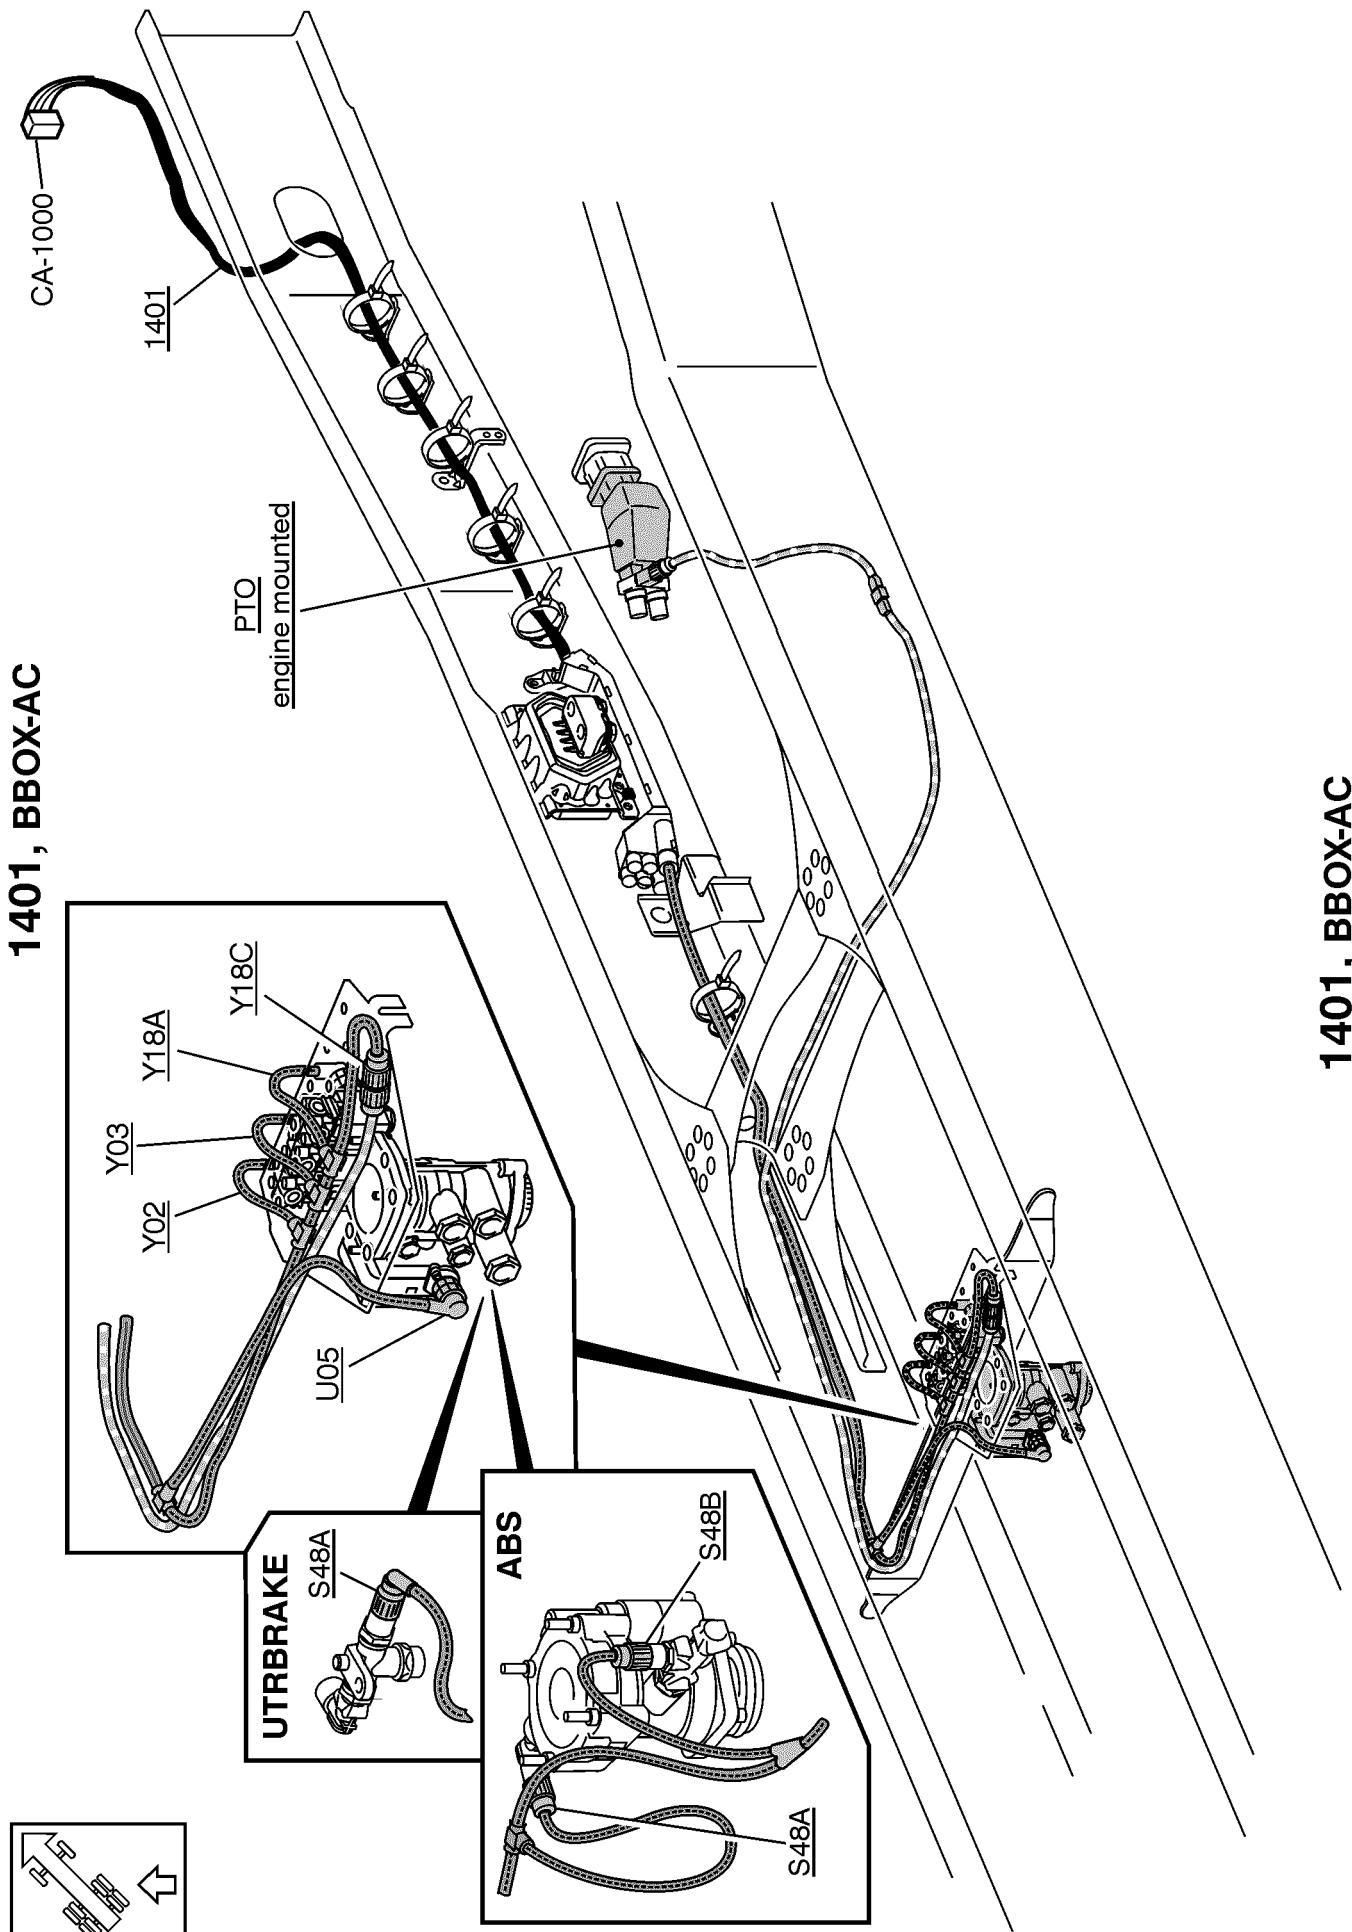
1401, BBOX-AC


T3029529


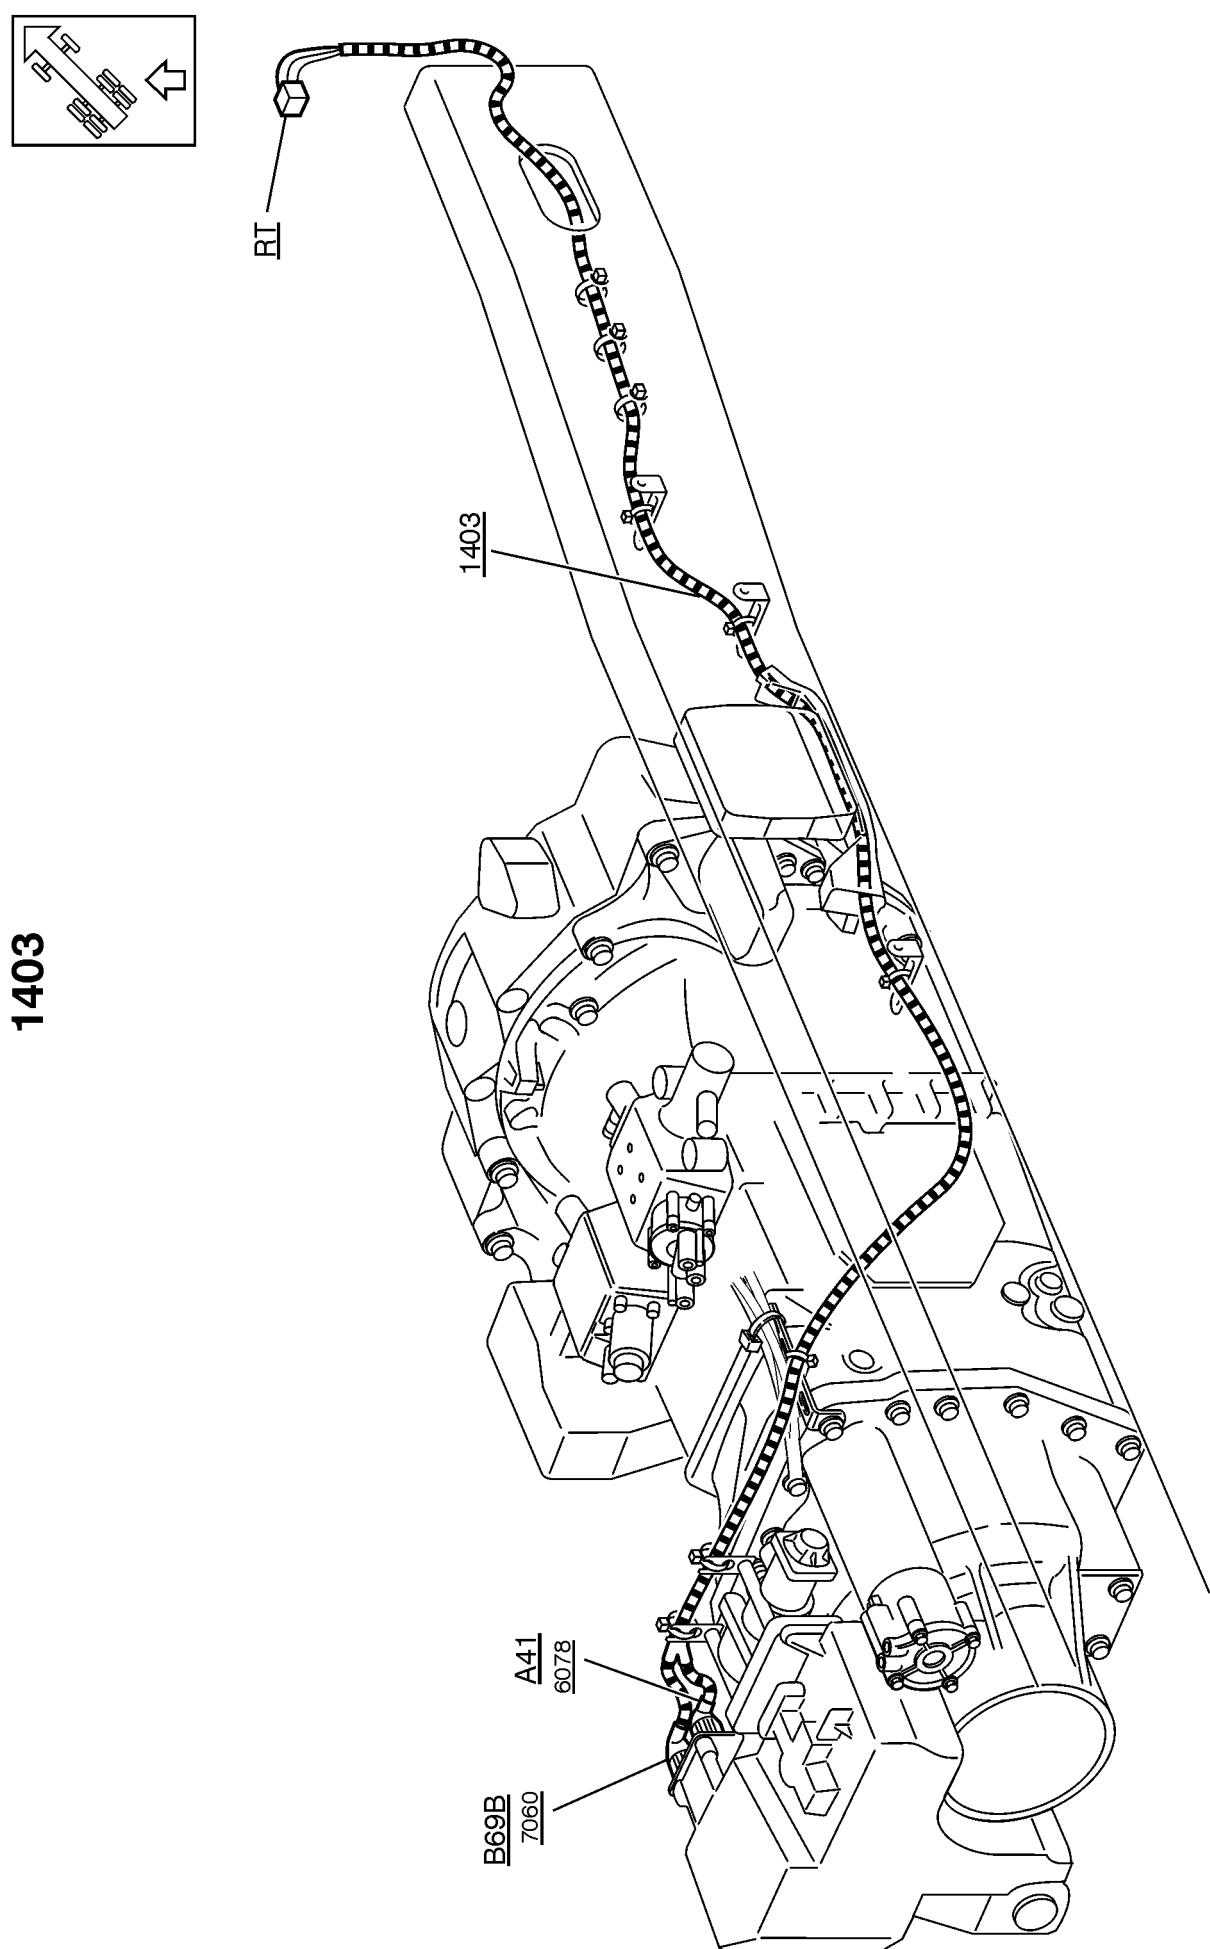



T3015884

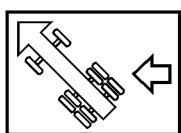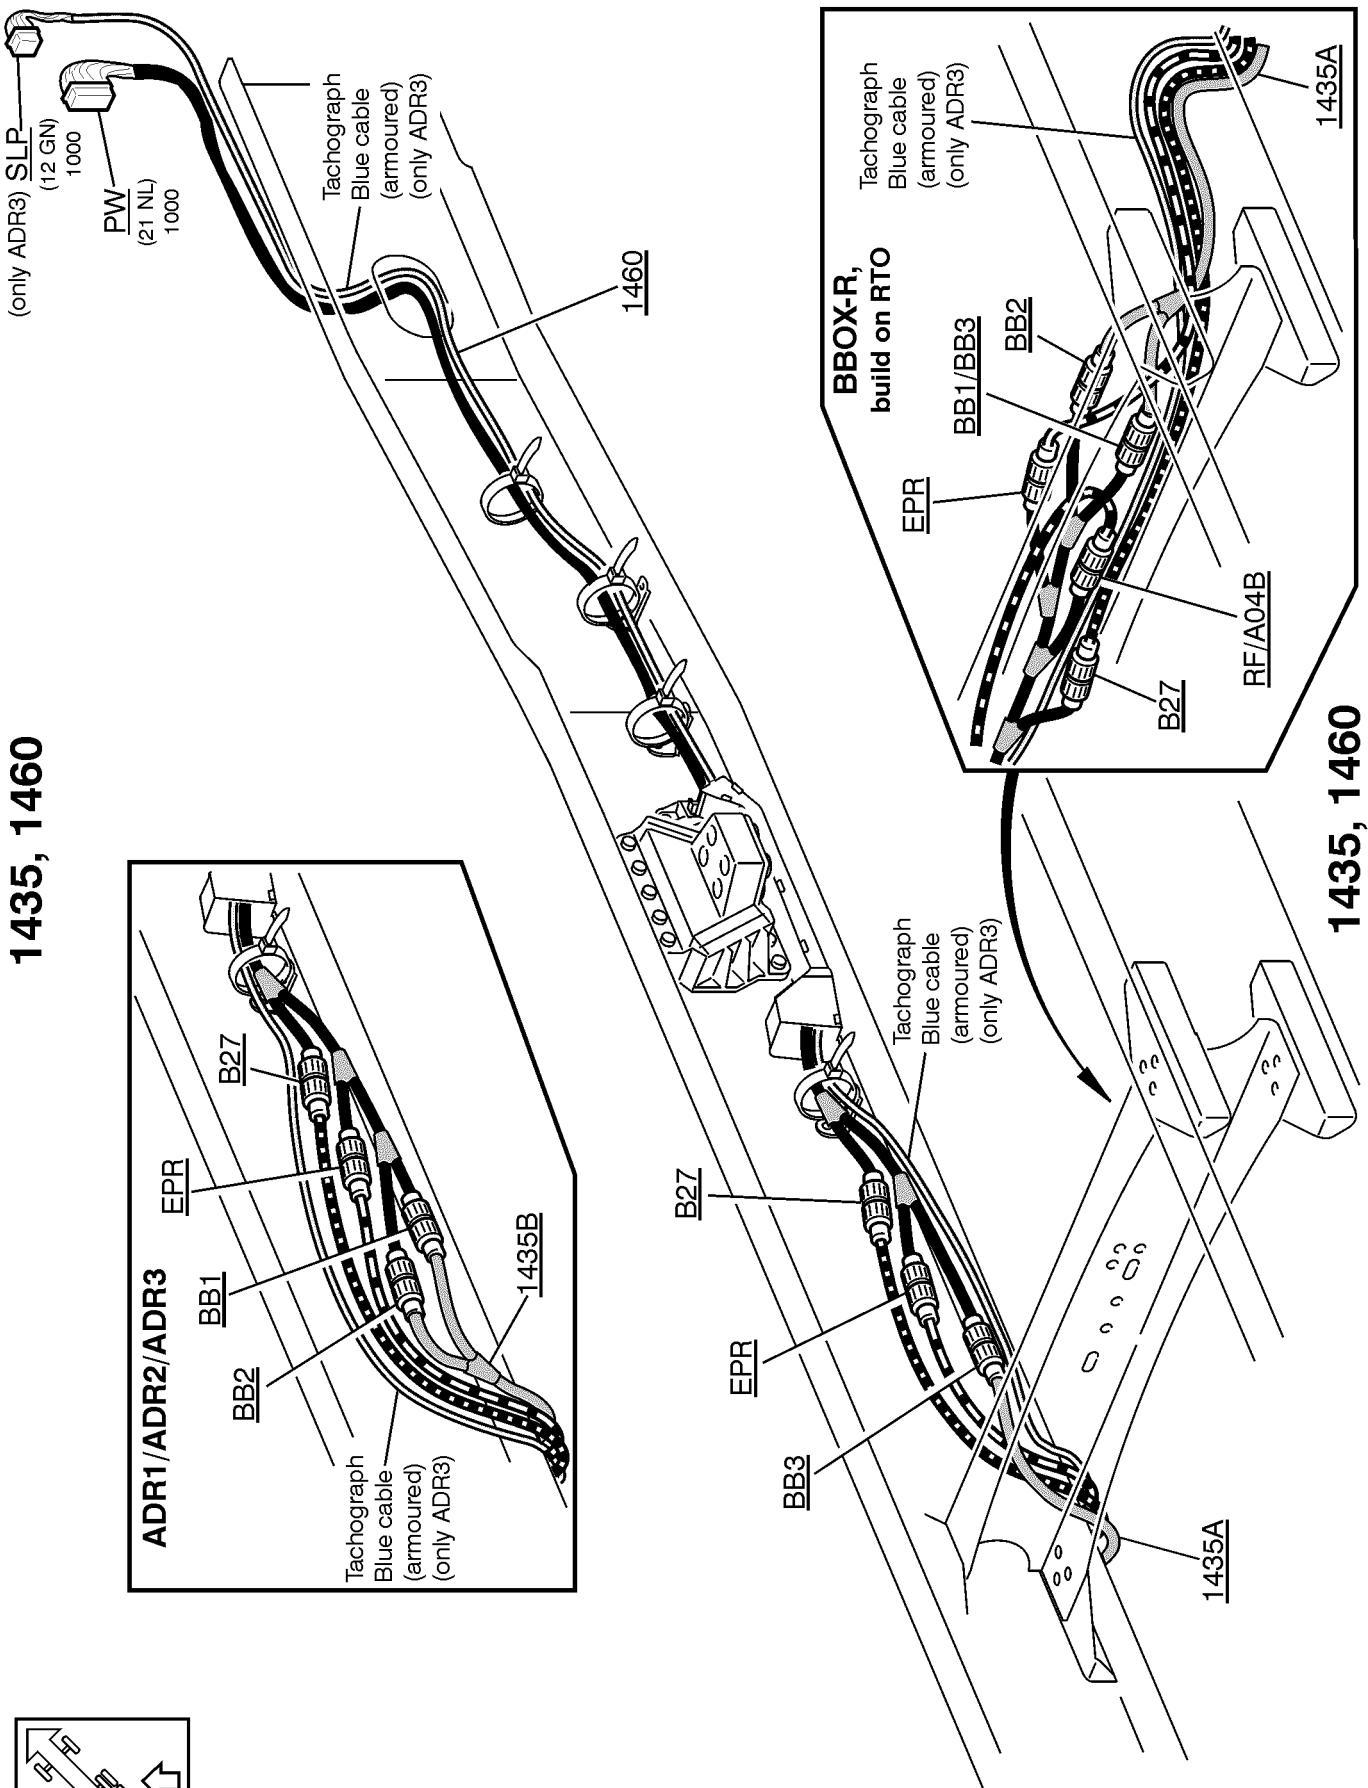

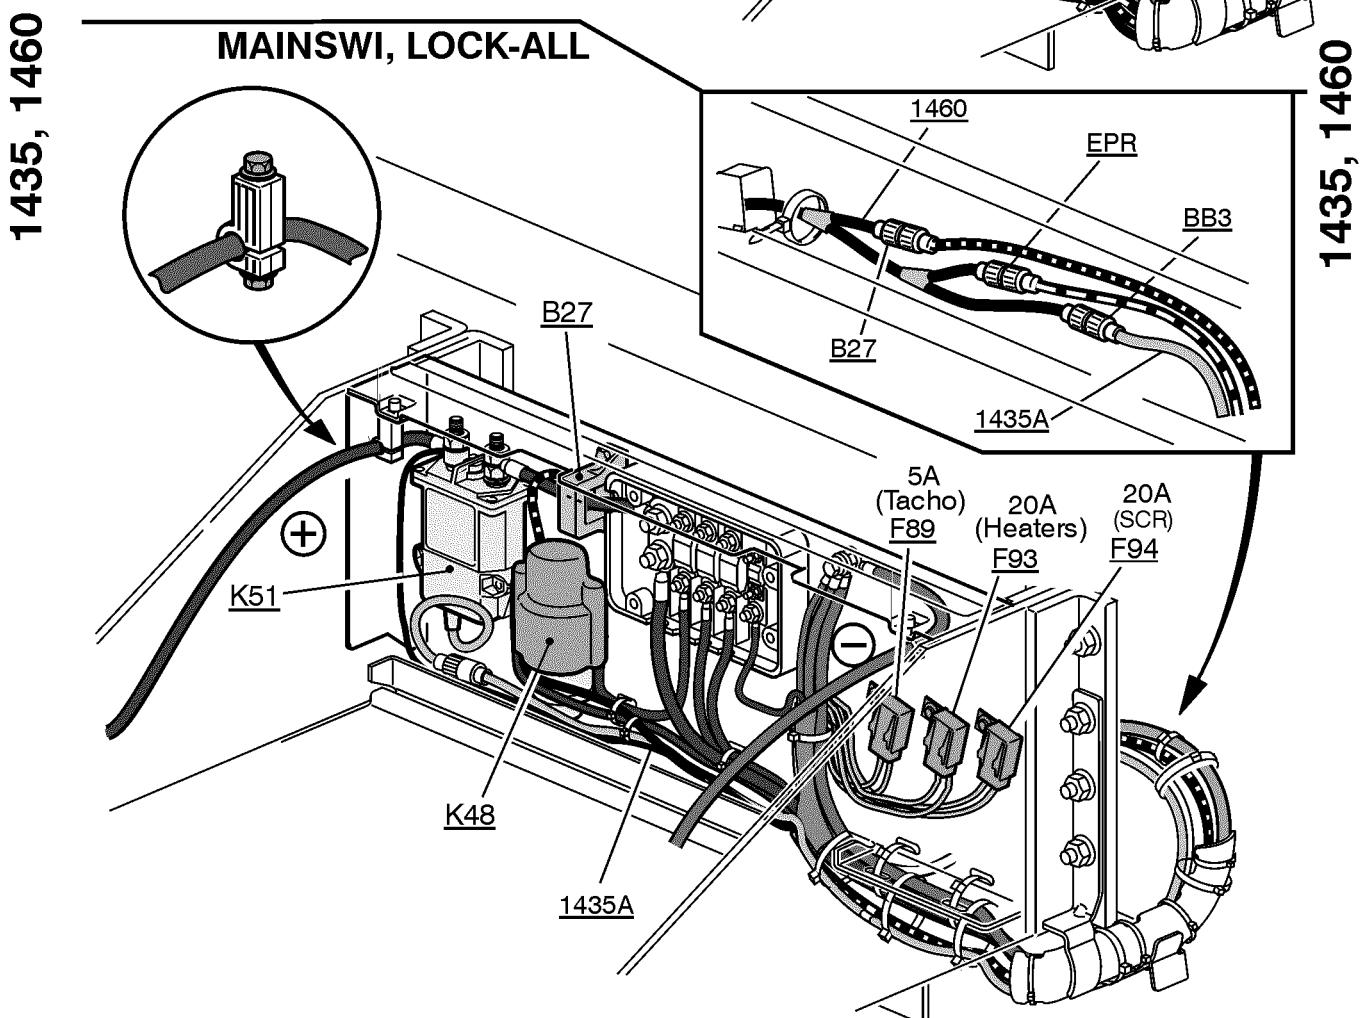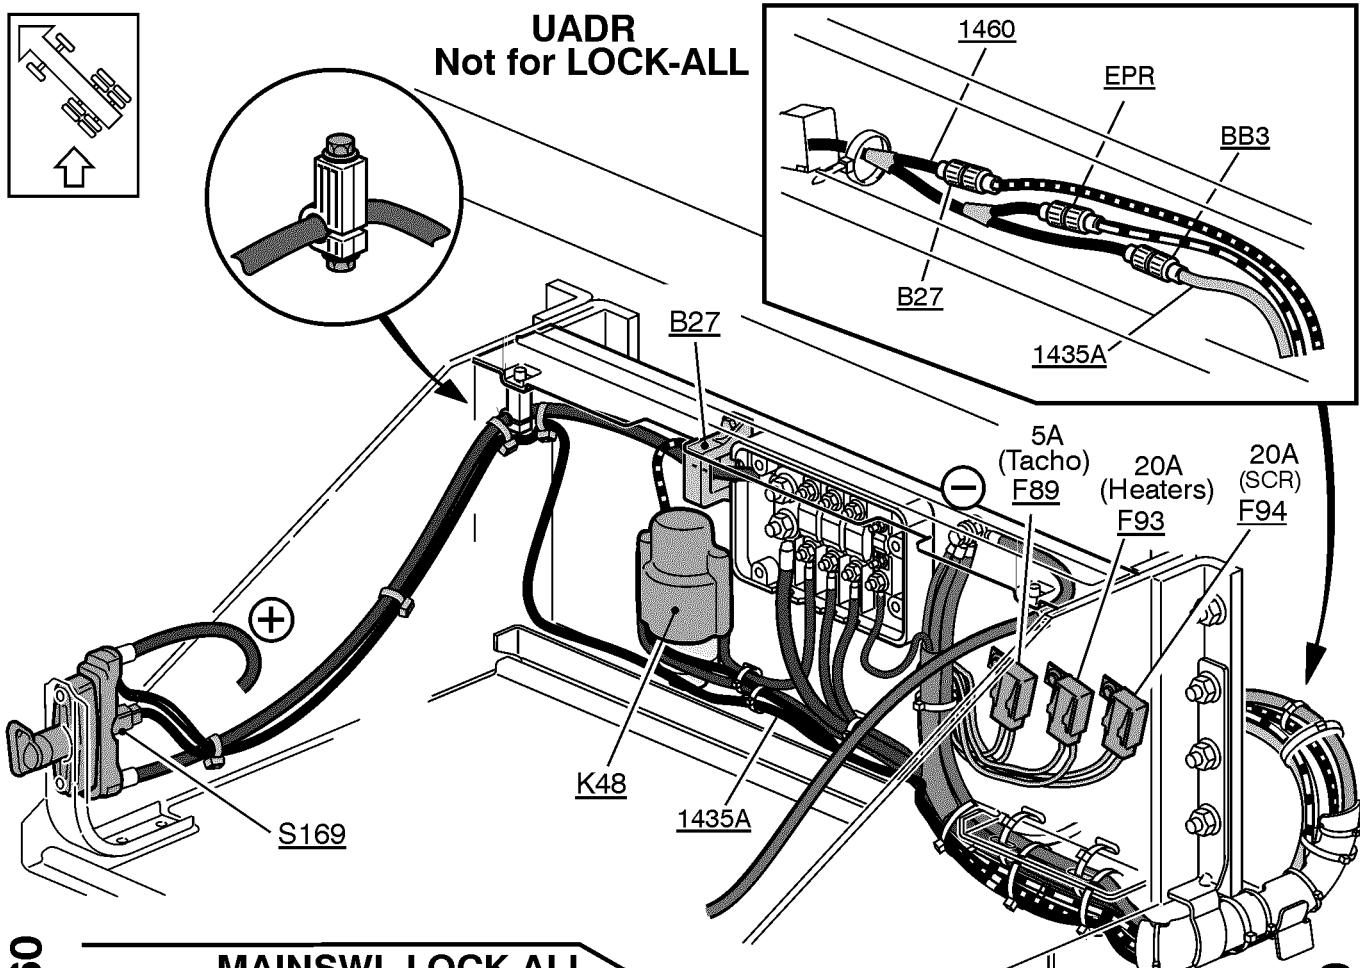


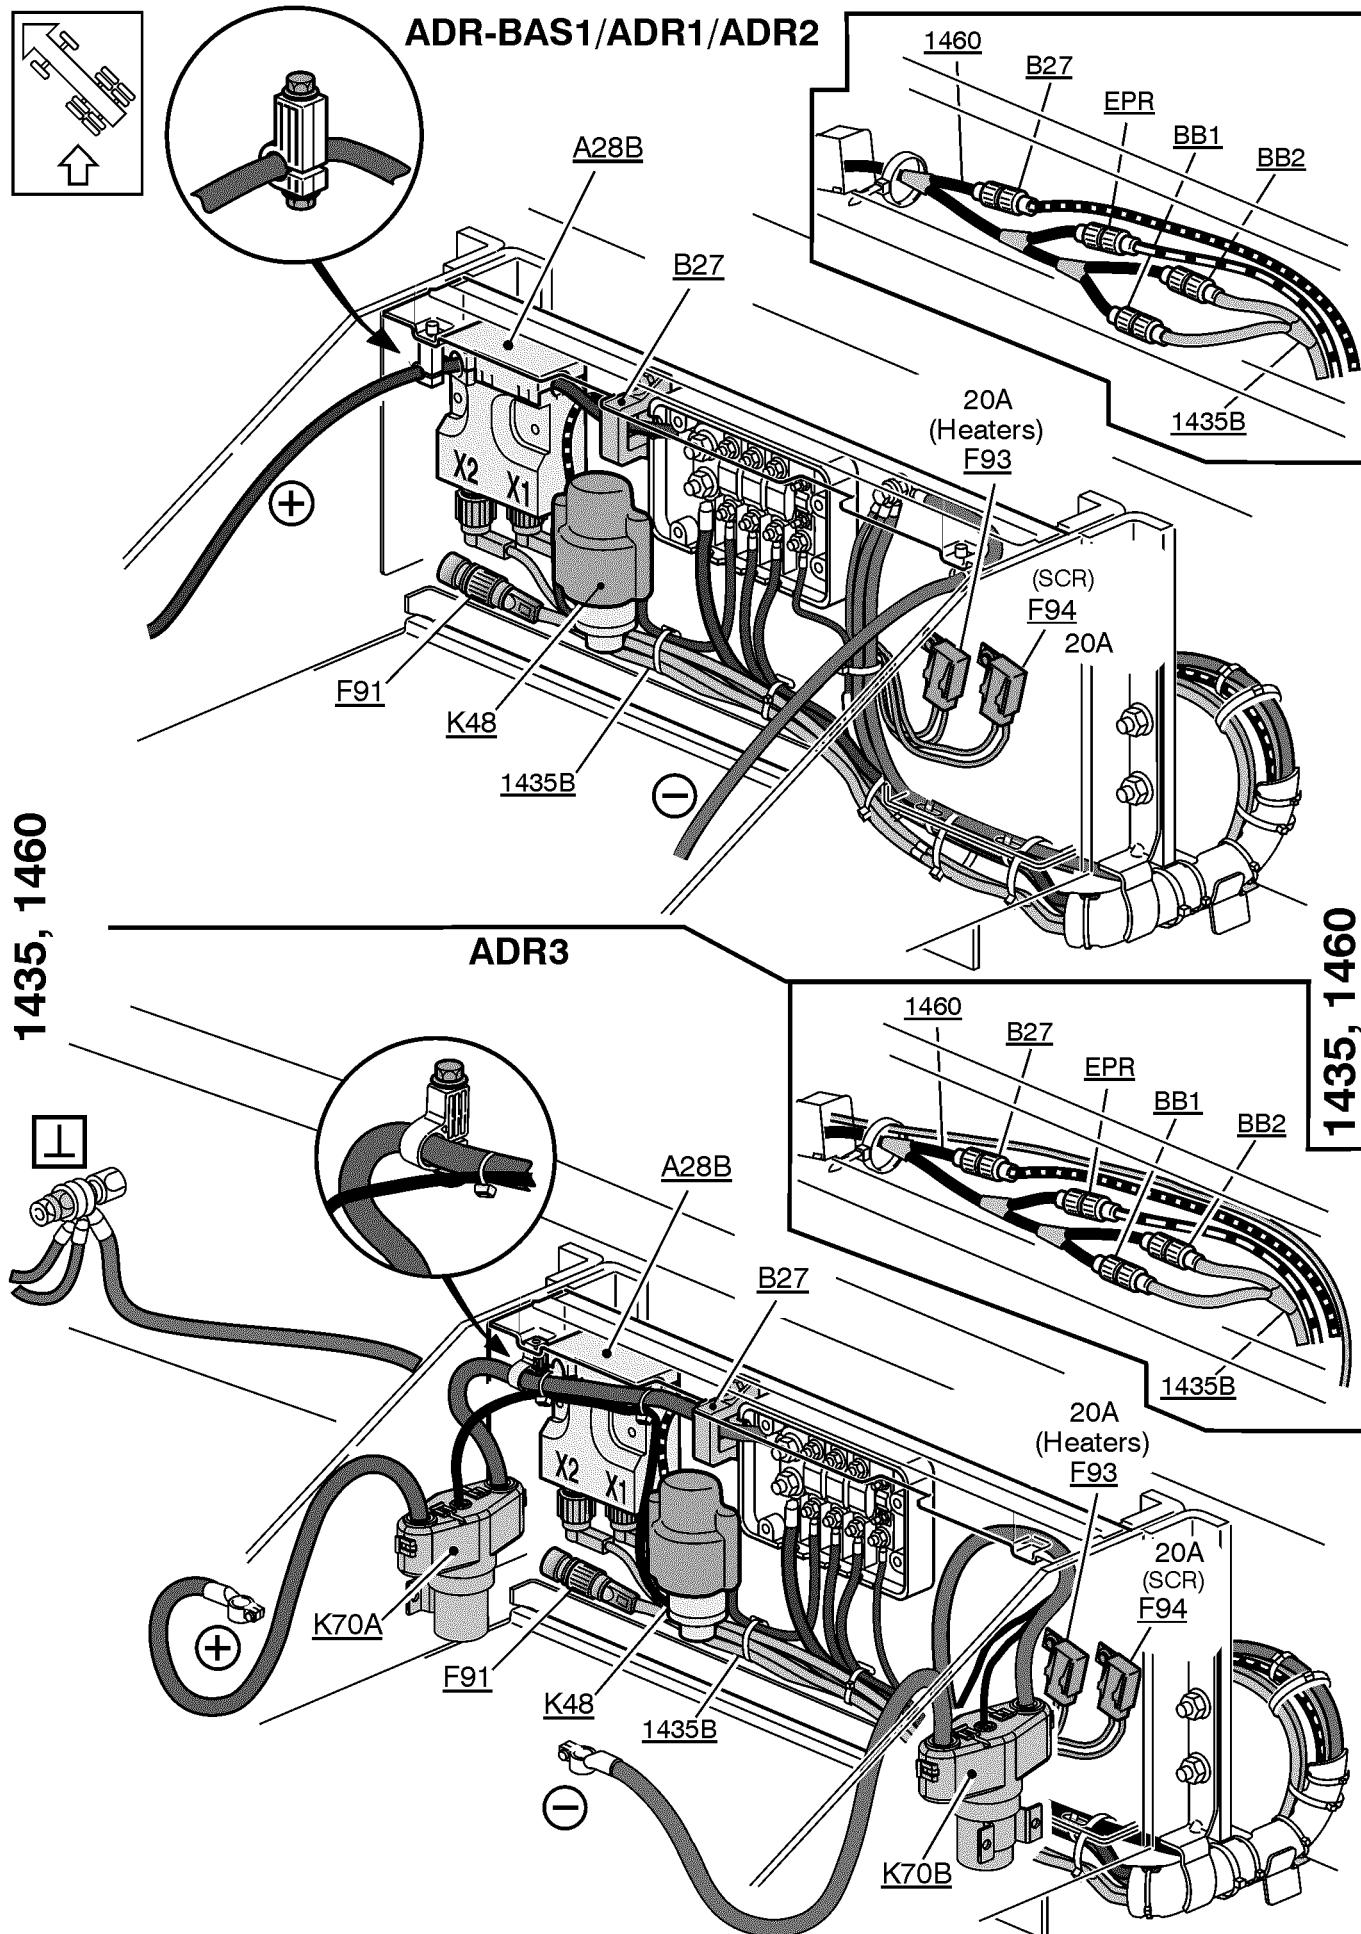

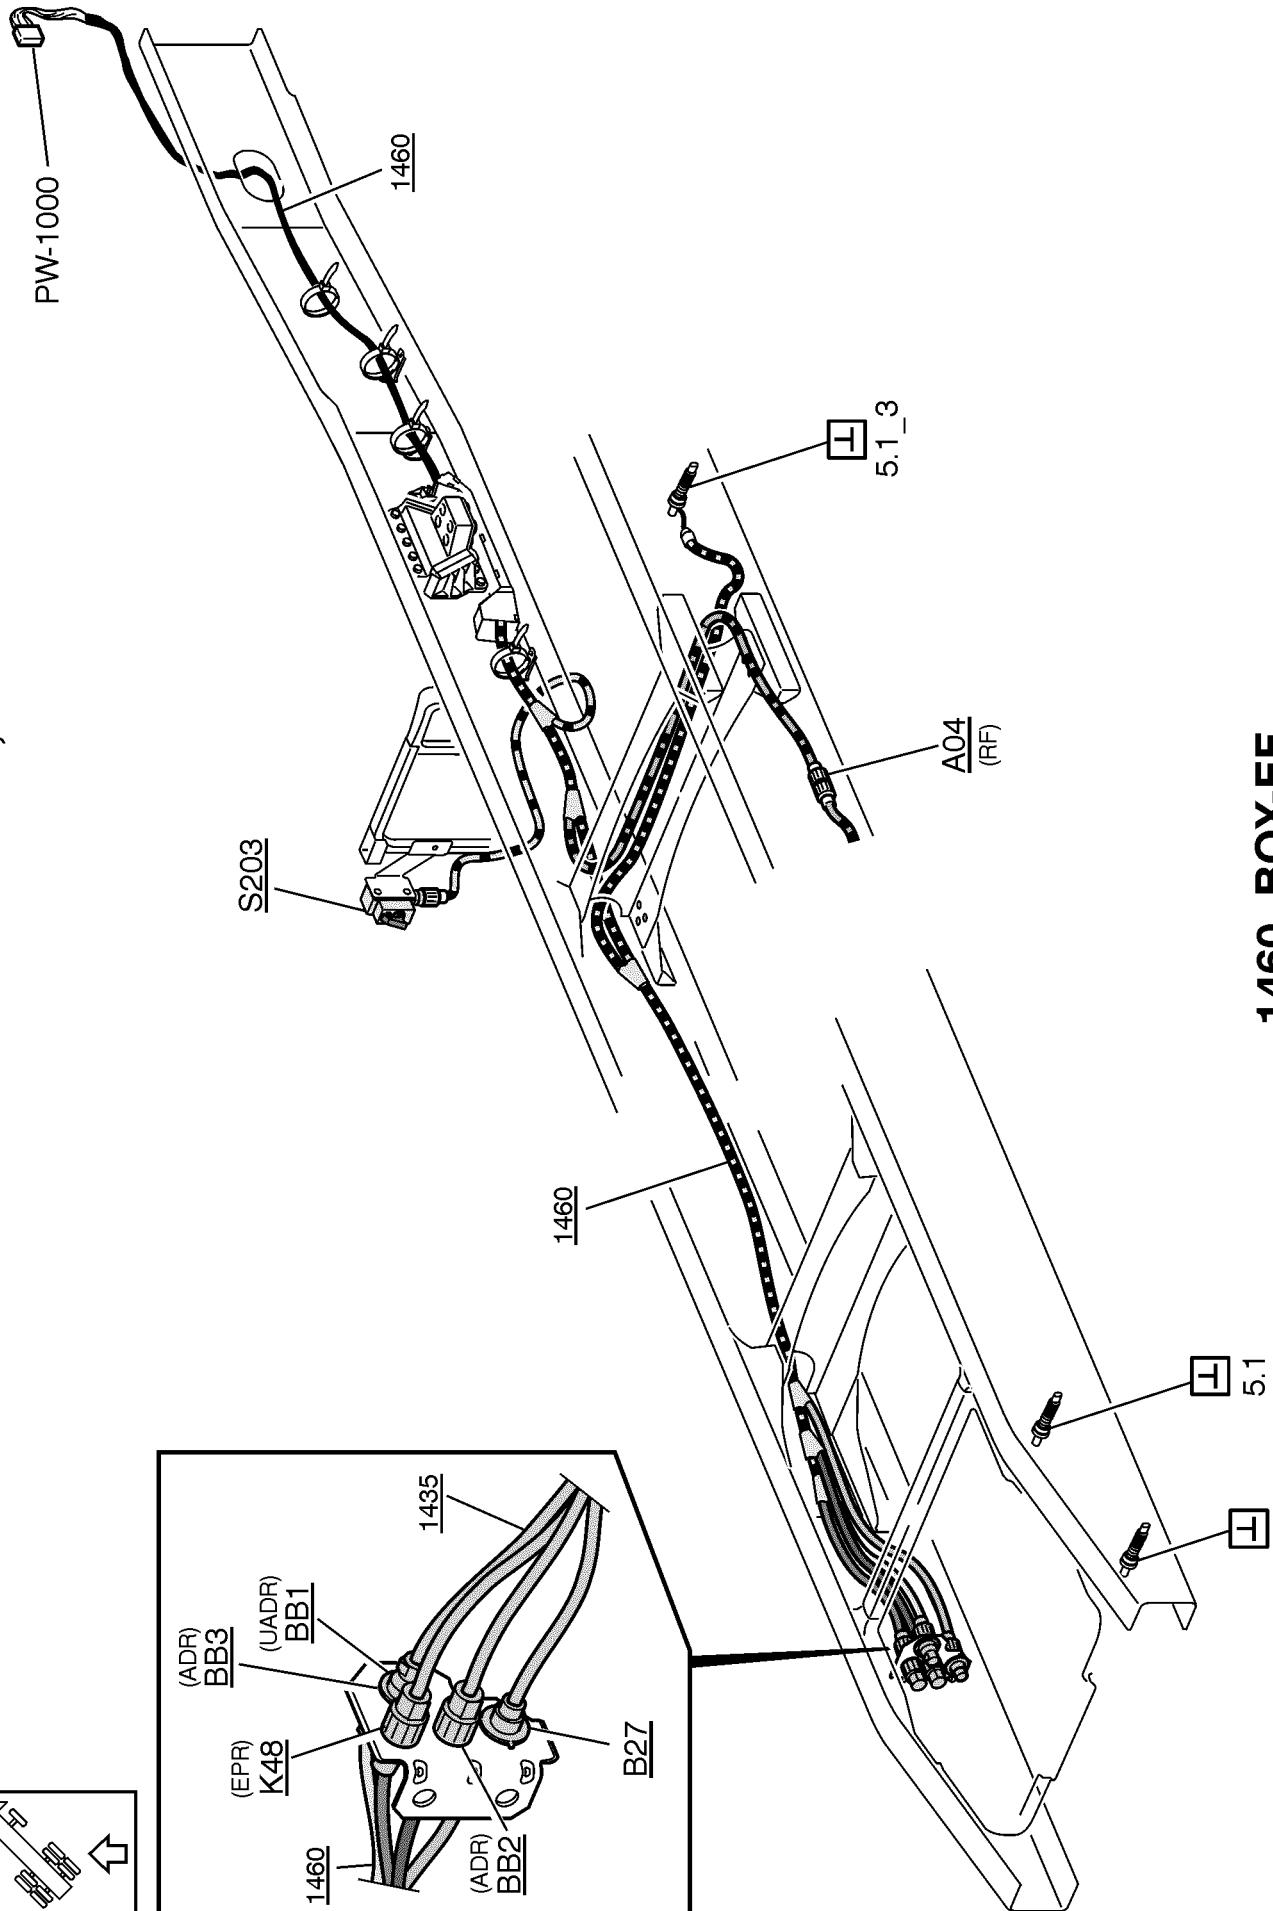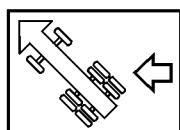1460, BOX-EF

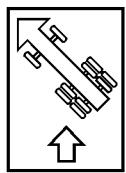


BASE

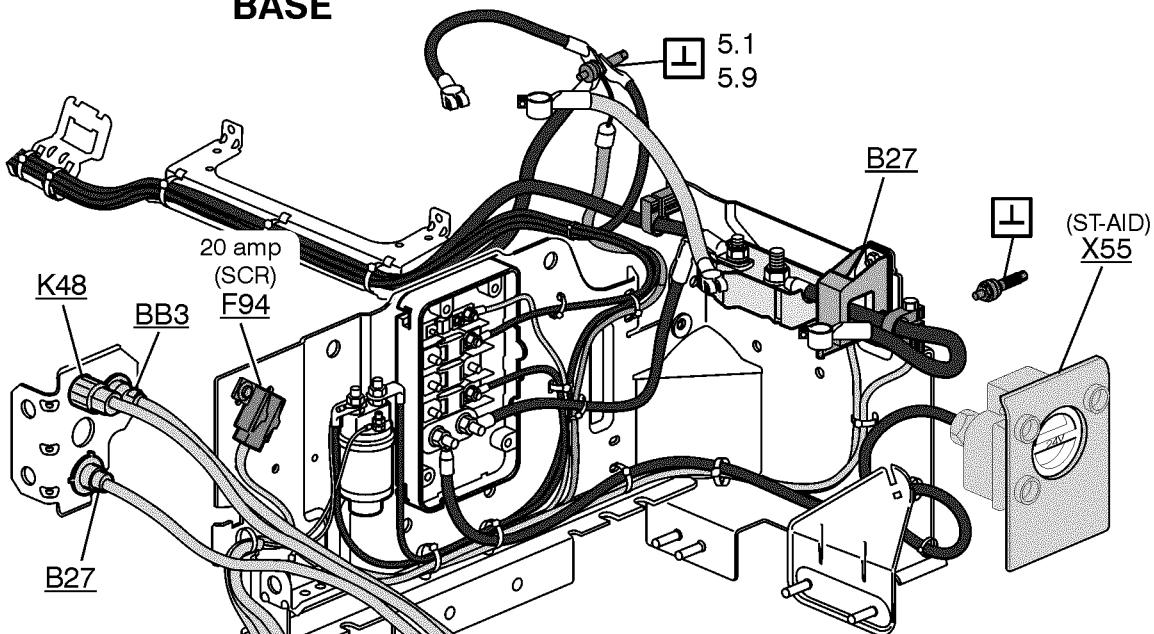


1435, BBOX-EF


LOCK-ALL

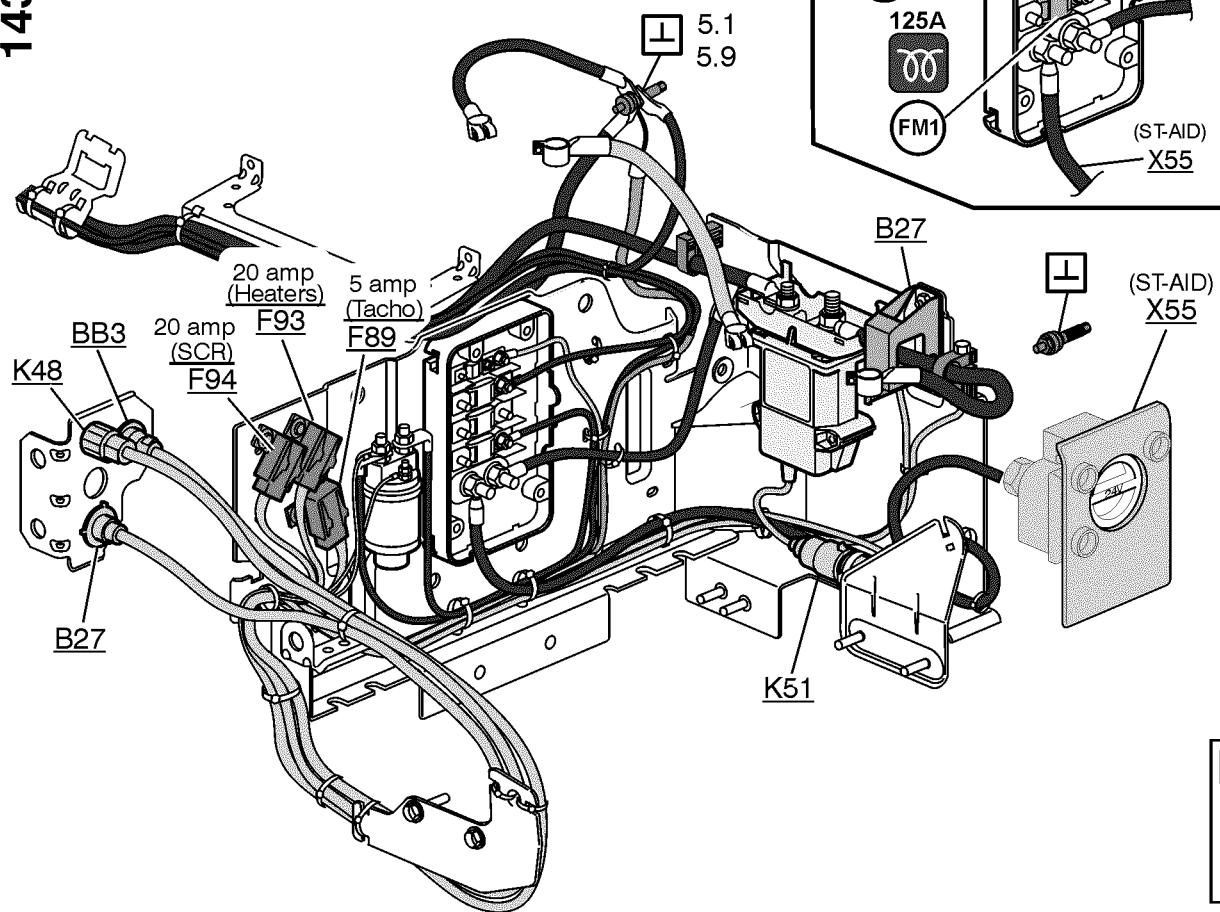


1435, BBOX-EF


1435, BBOX-EF

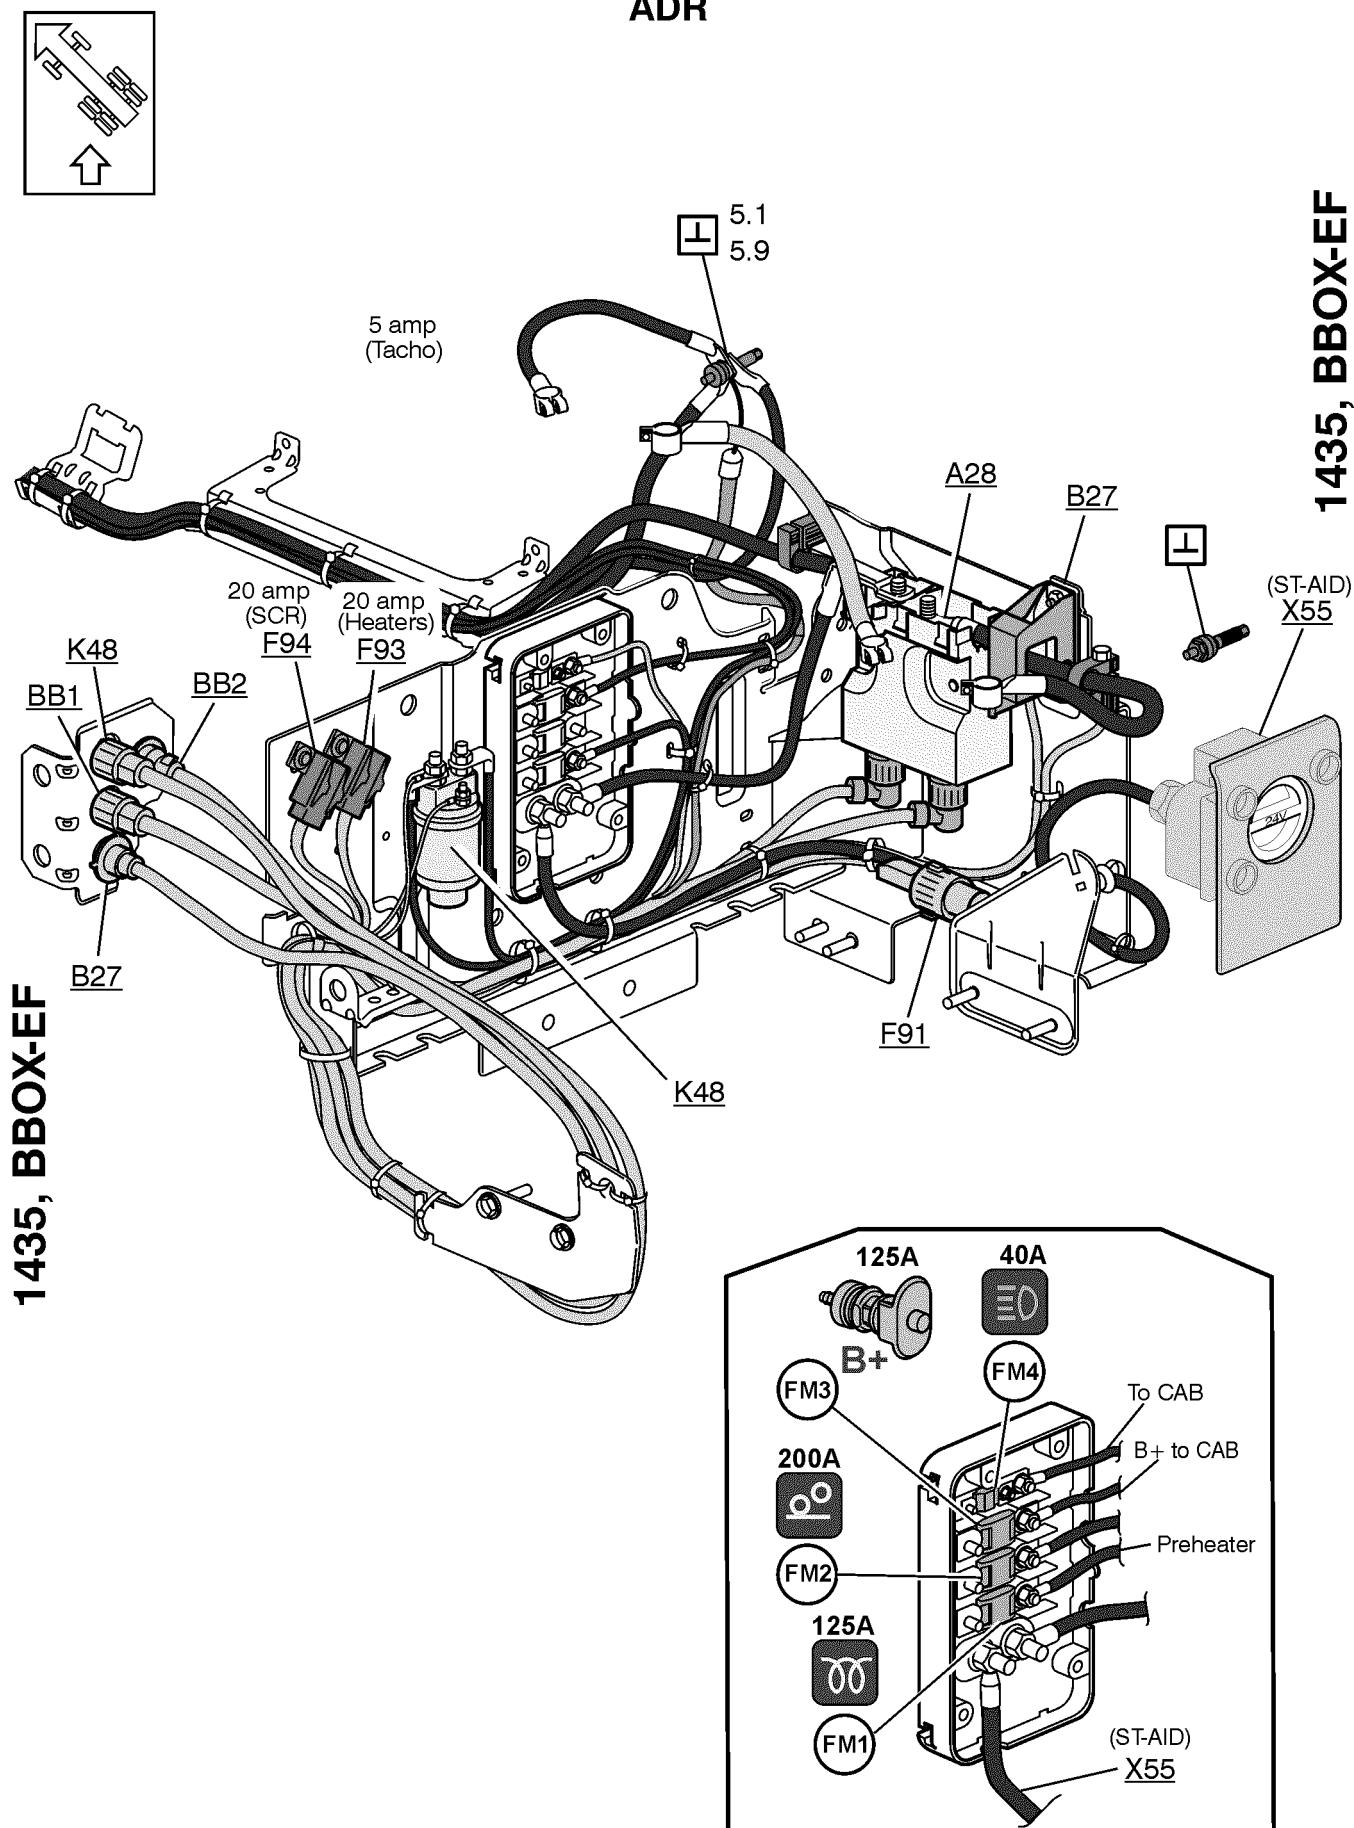

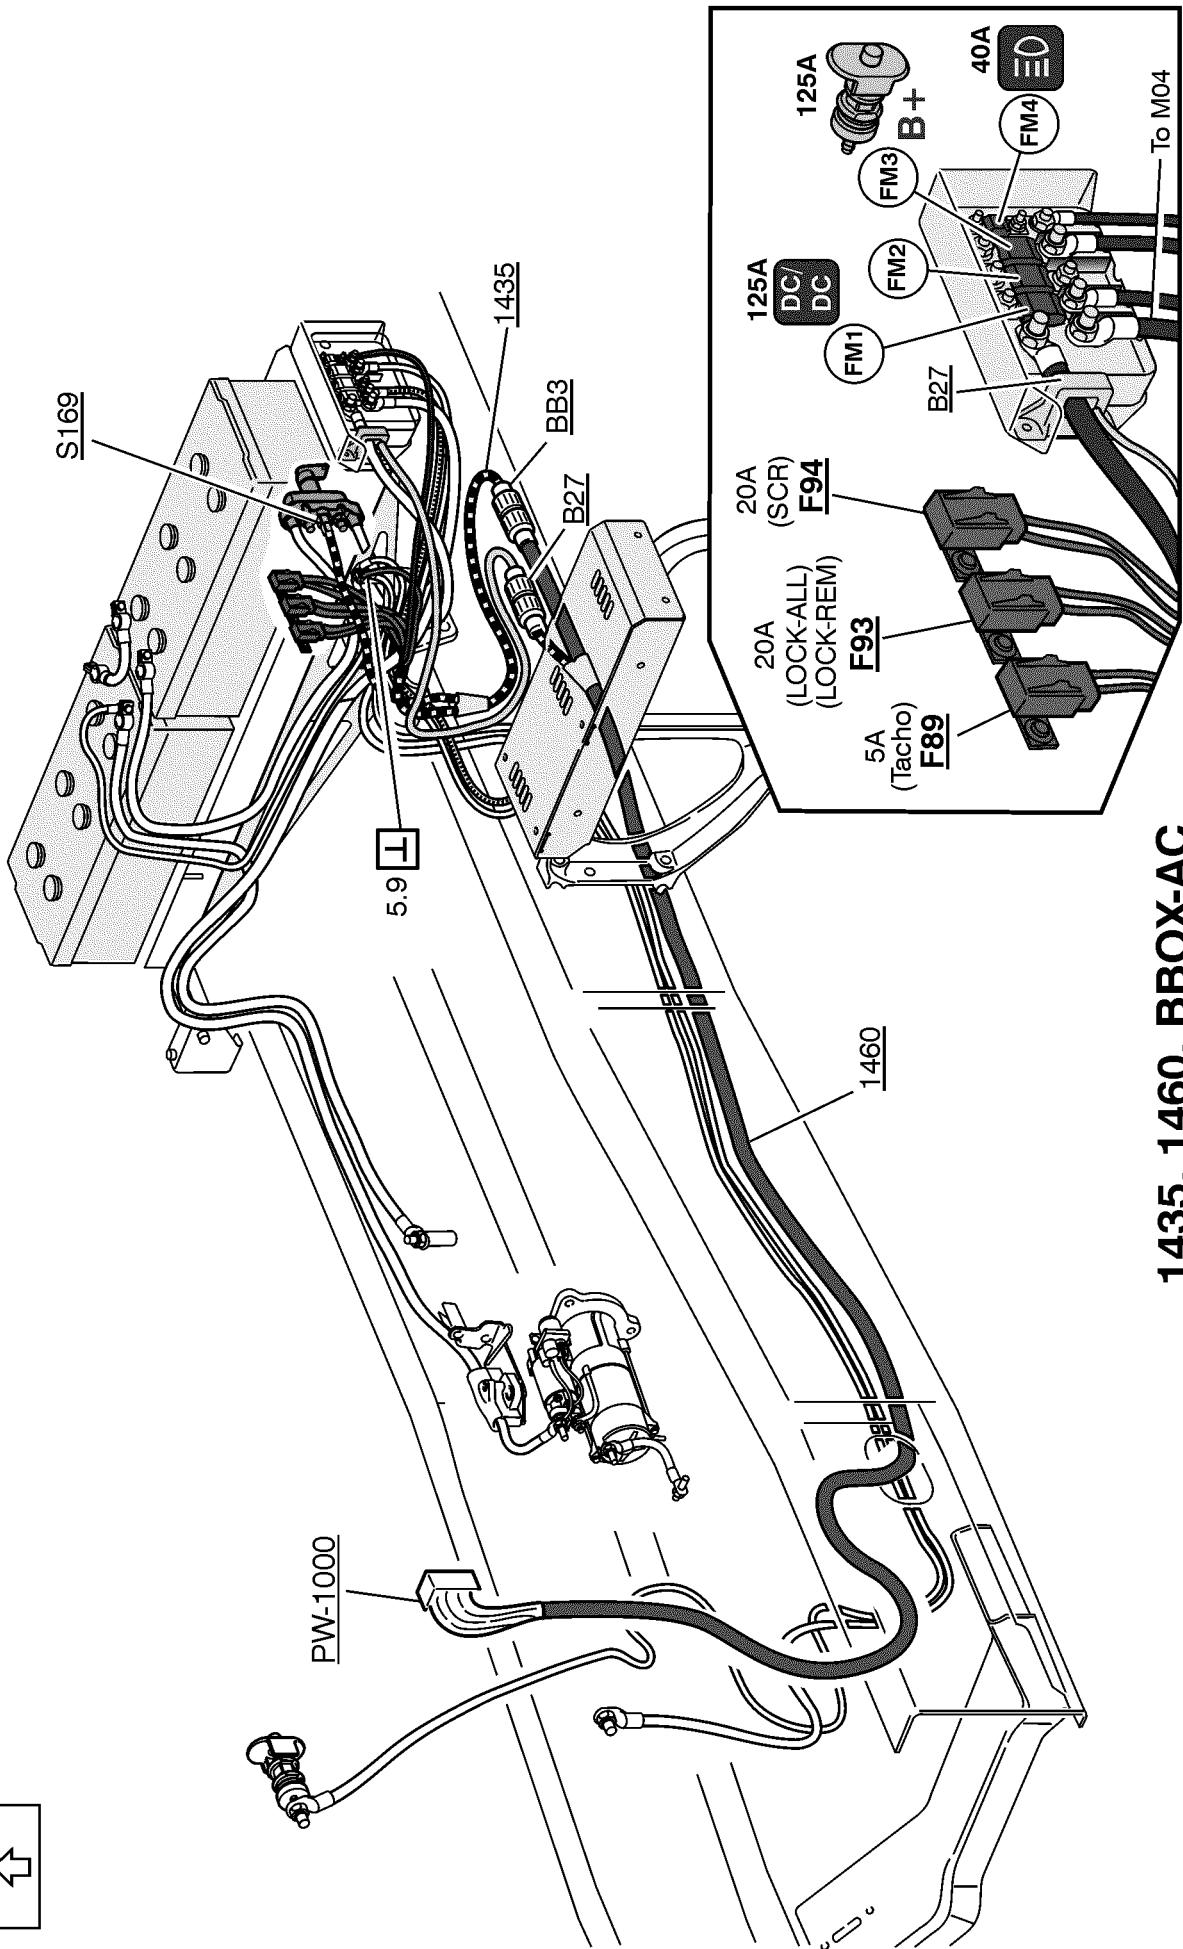1435, 1460, BBOX-AC



T3020633

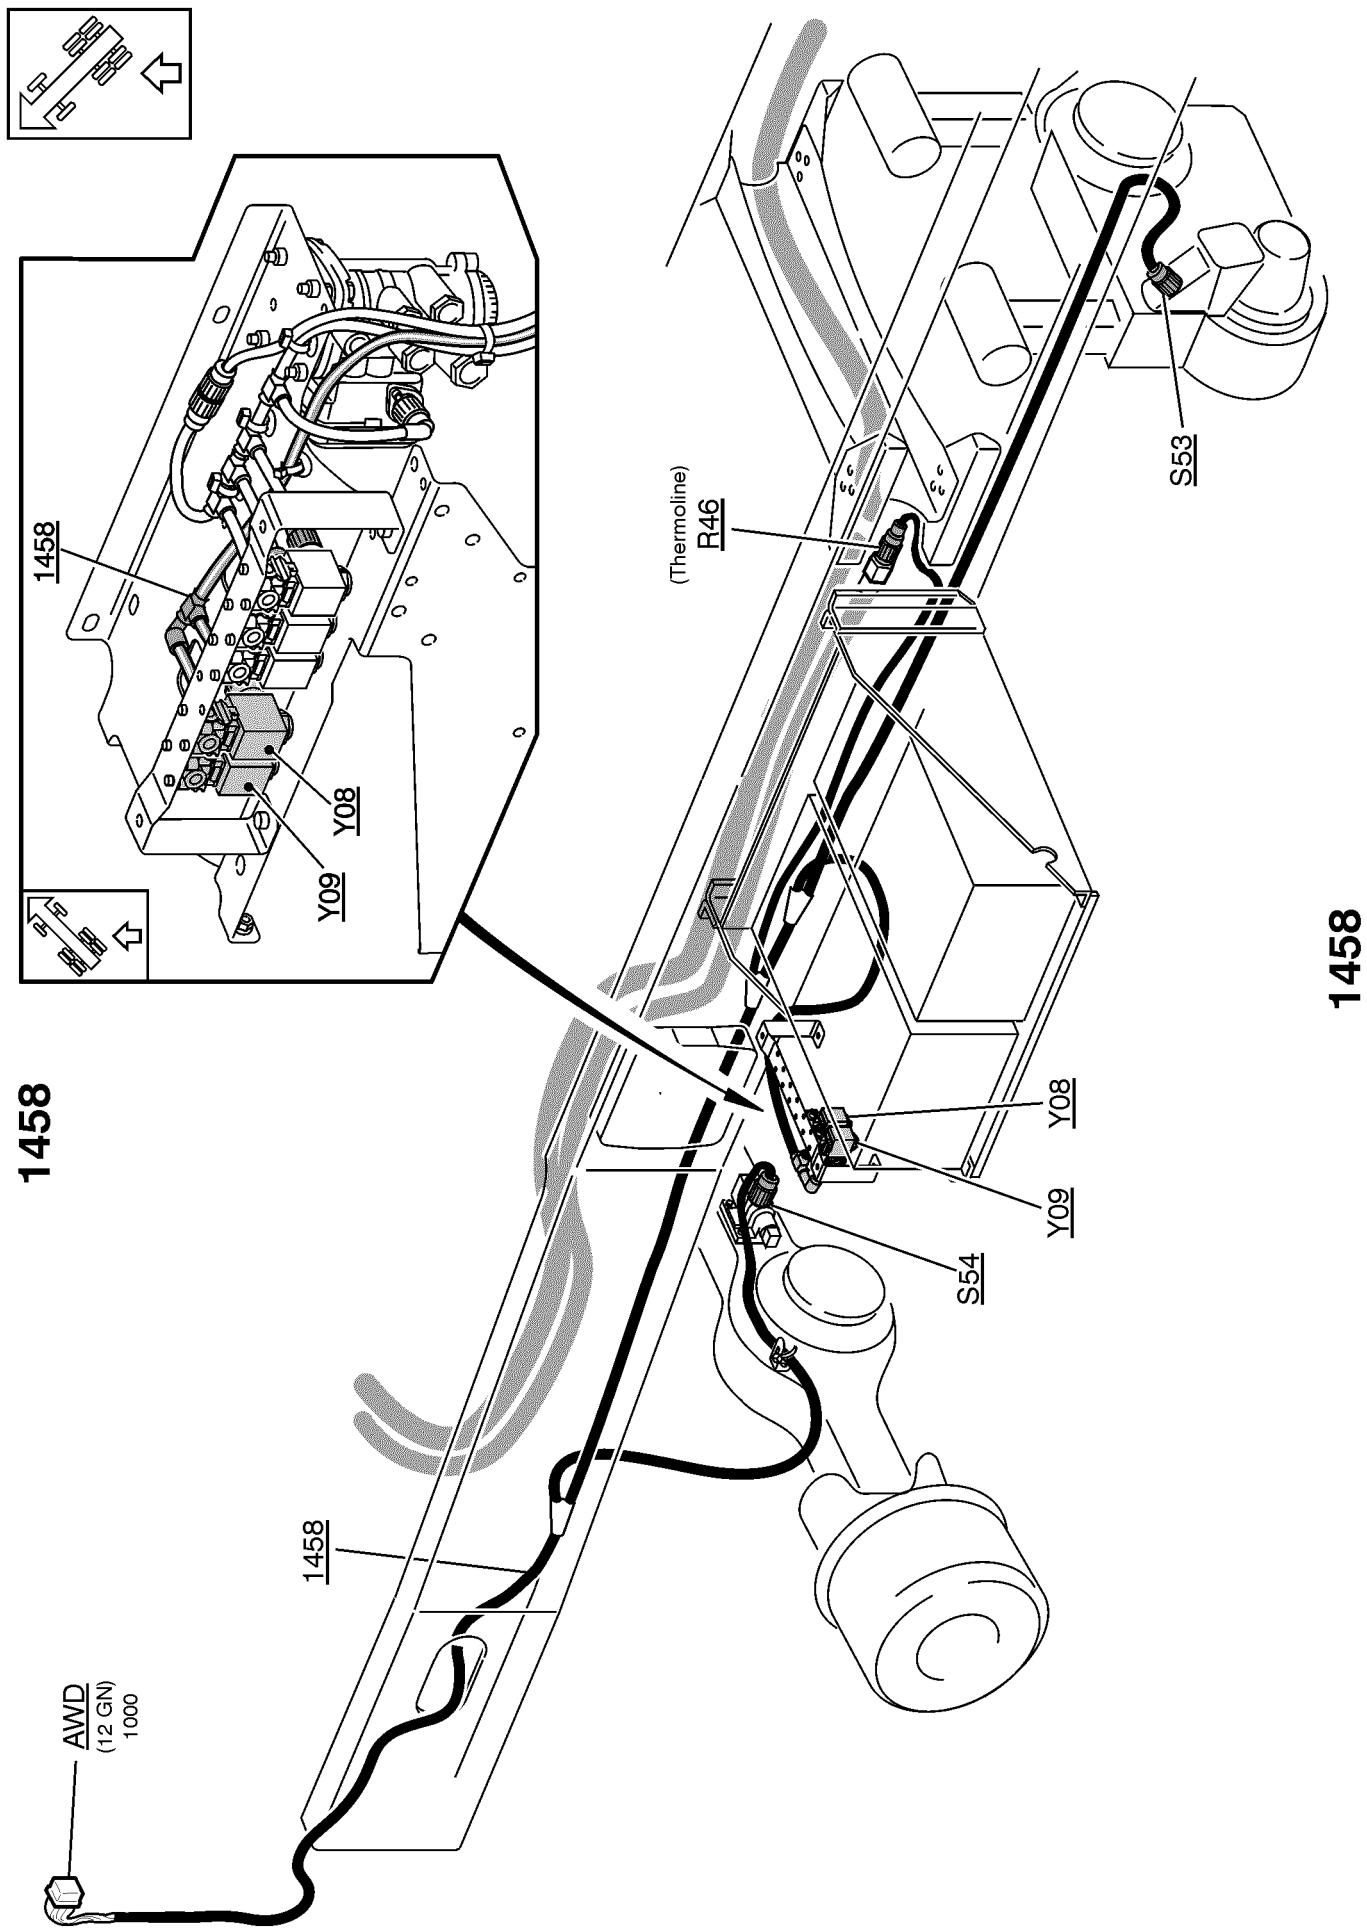

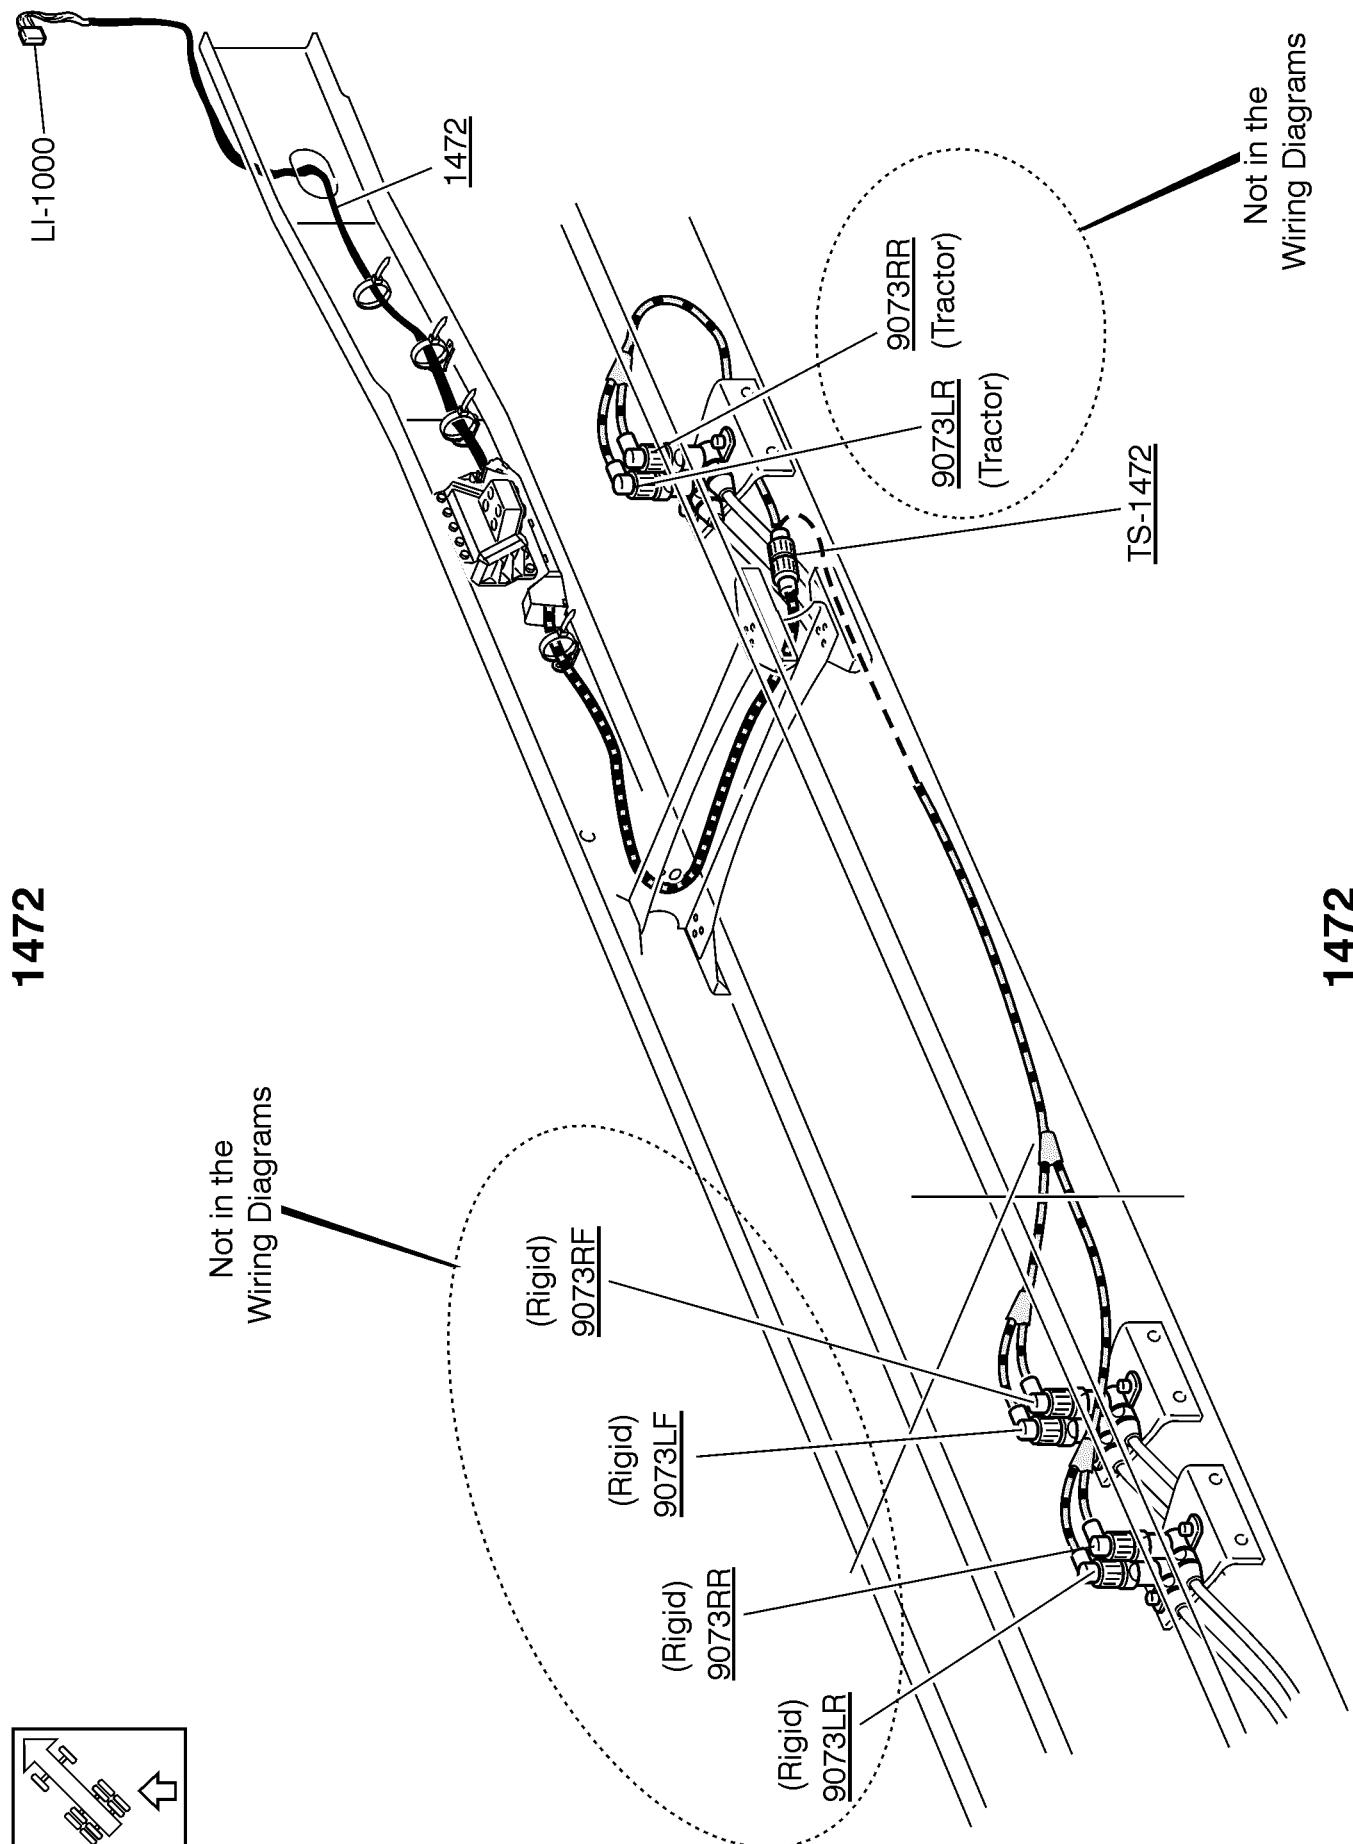


T3016441



1493 LHD, PSS-DUAL

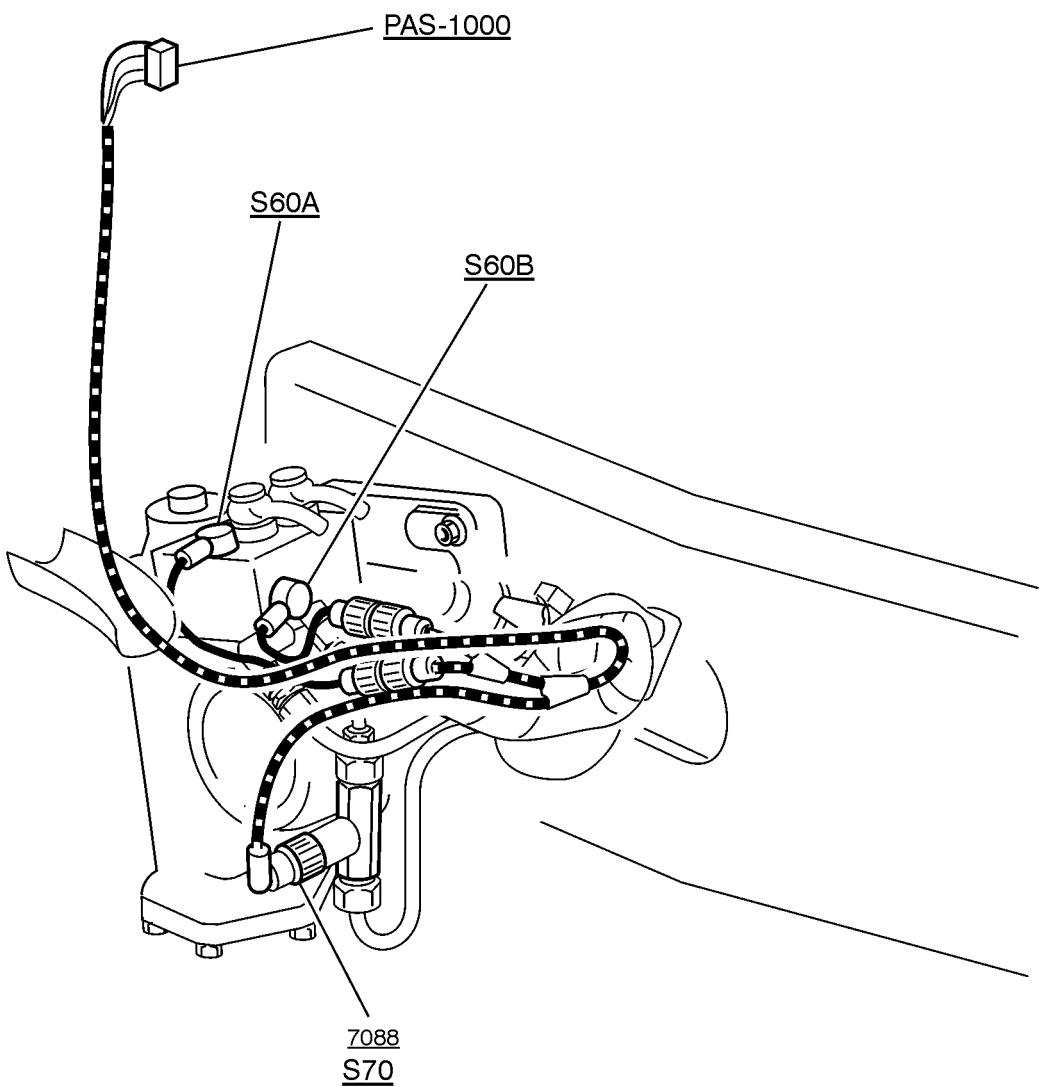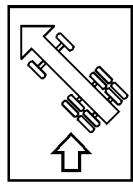

1493 LHD, PSS-DUAL

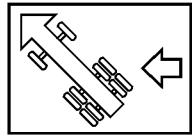


1493 A/B, RSTS-EHY, RAPD-A6

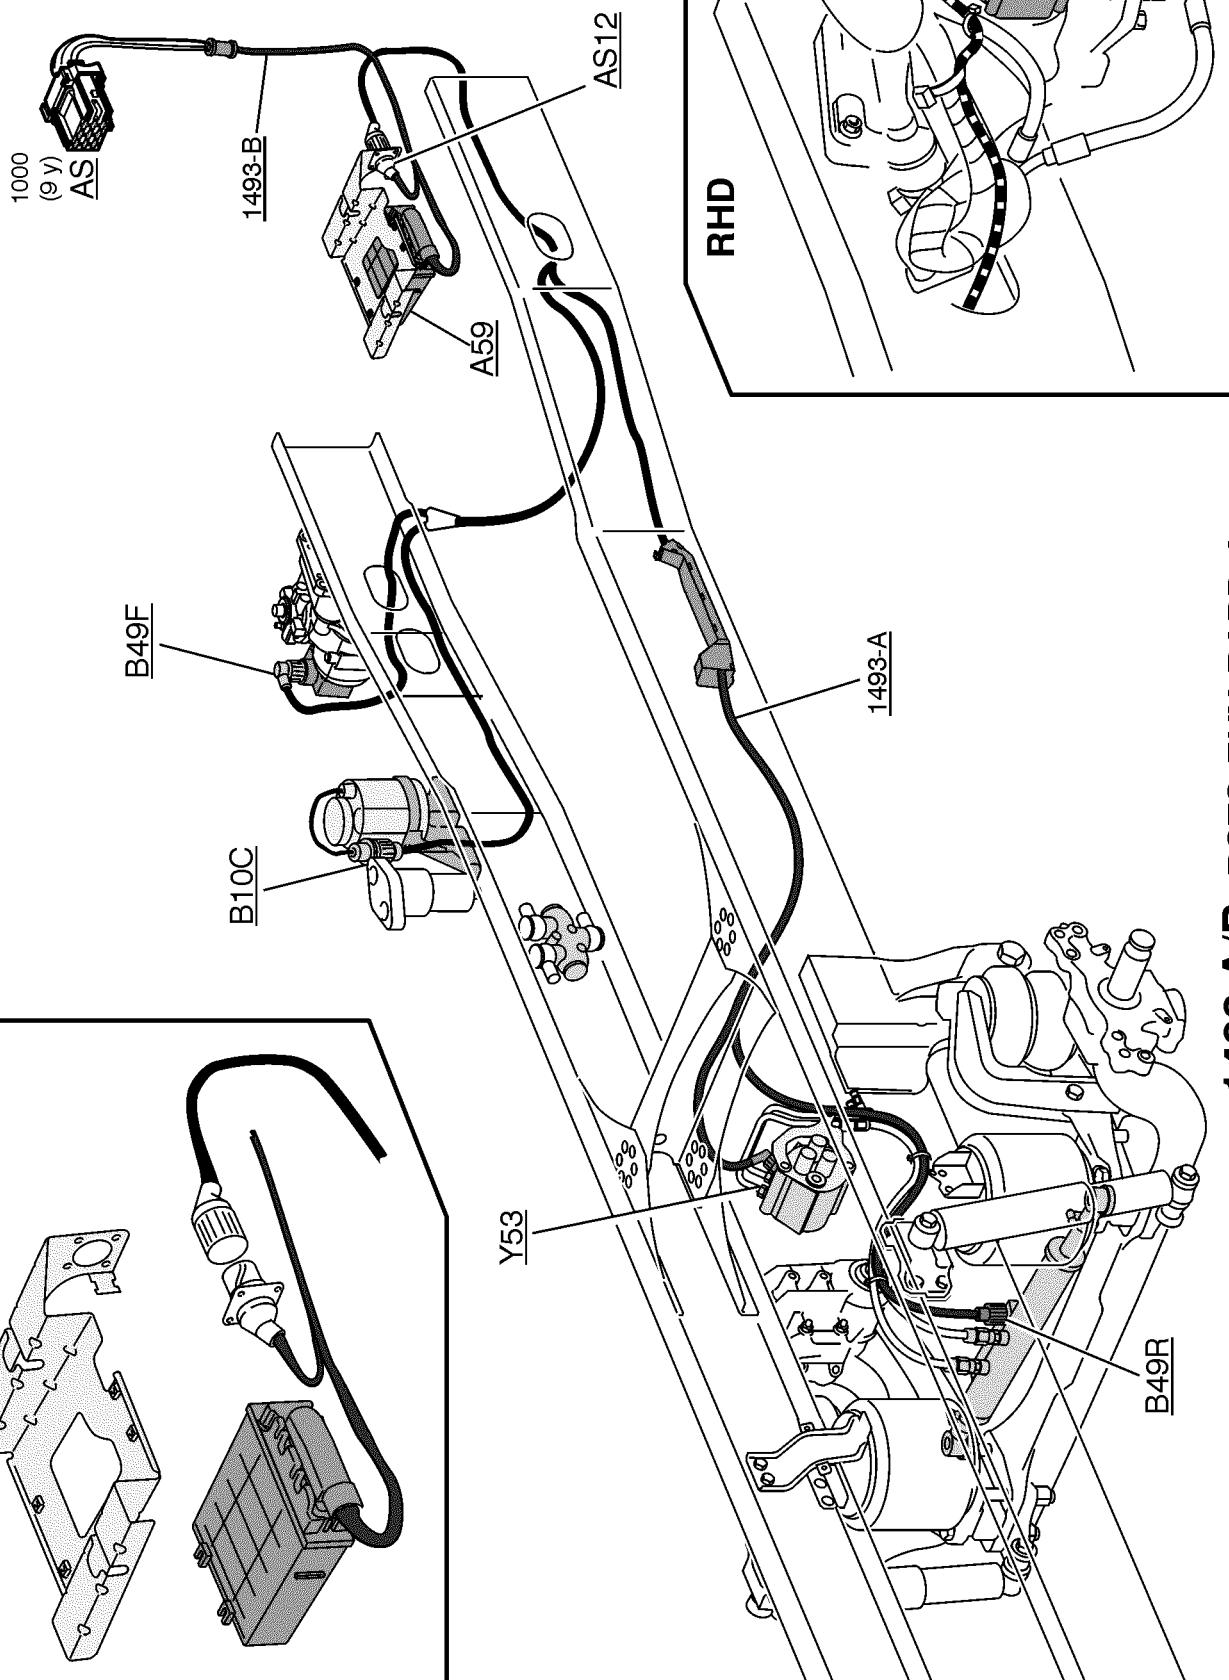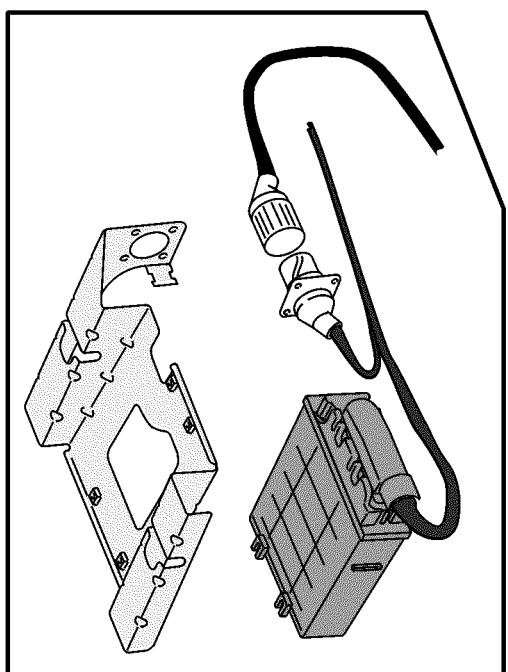


1493 A/B, RSTS-EHY, RAPD-A6



1493 A/B, RSTS-EHY, RADT-A8

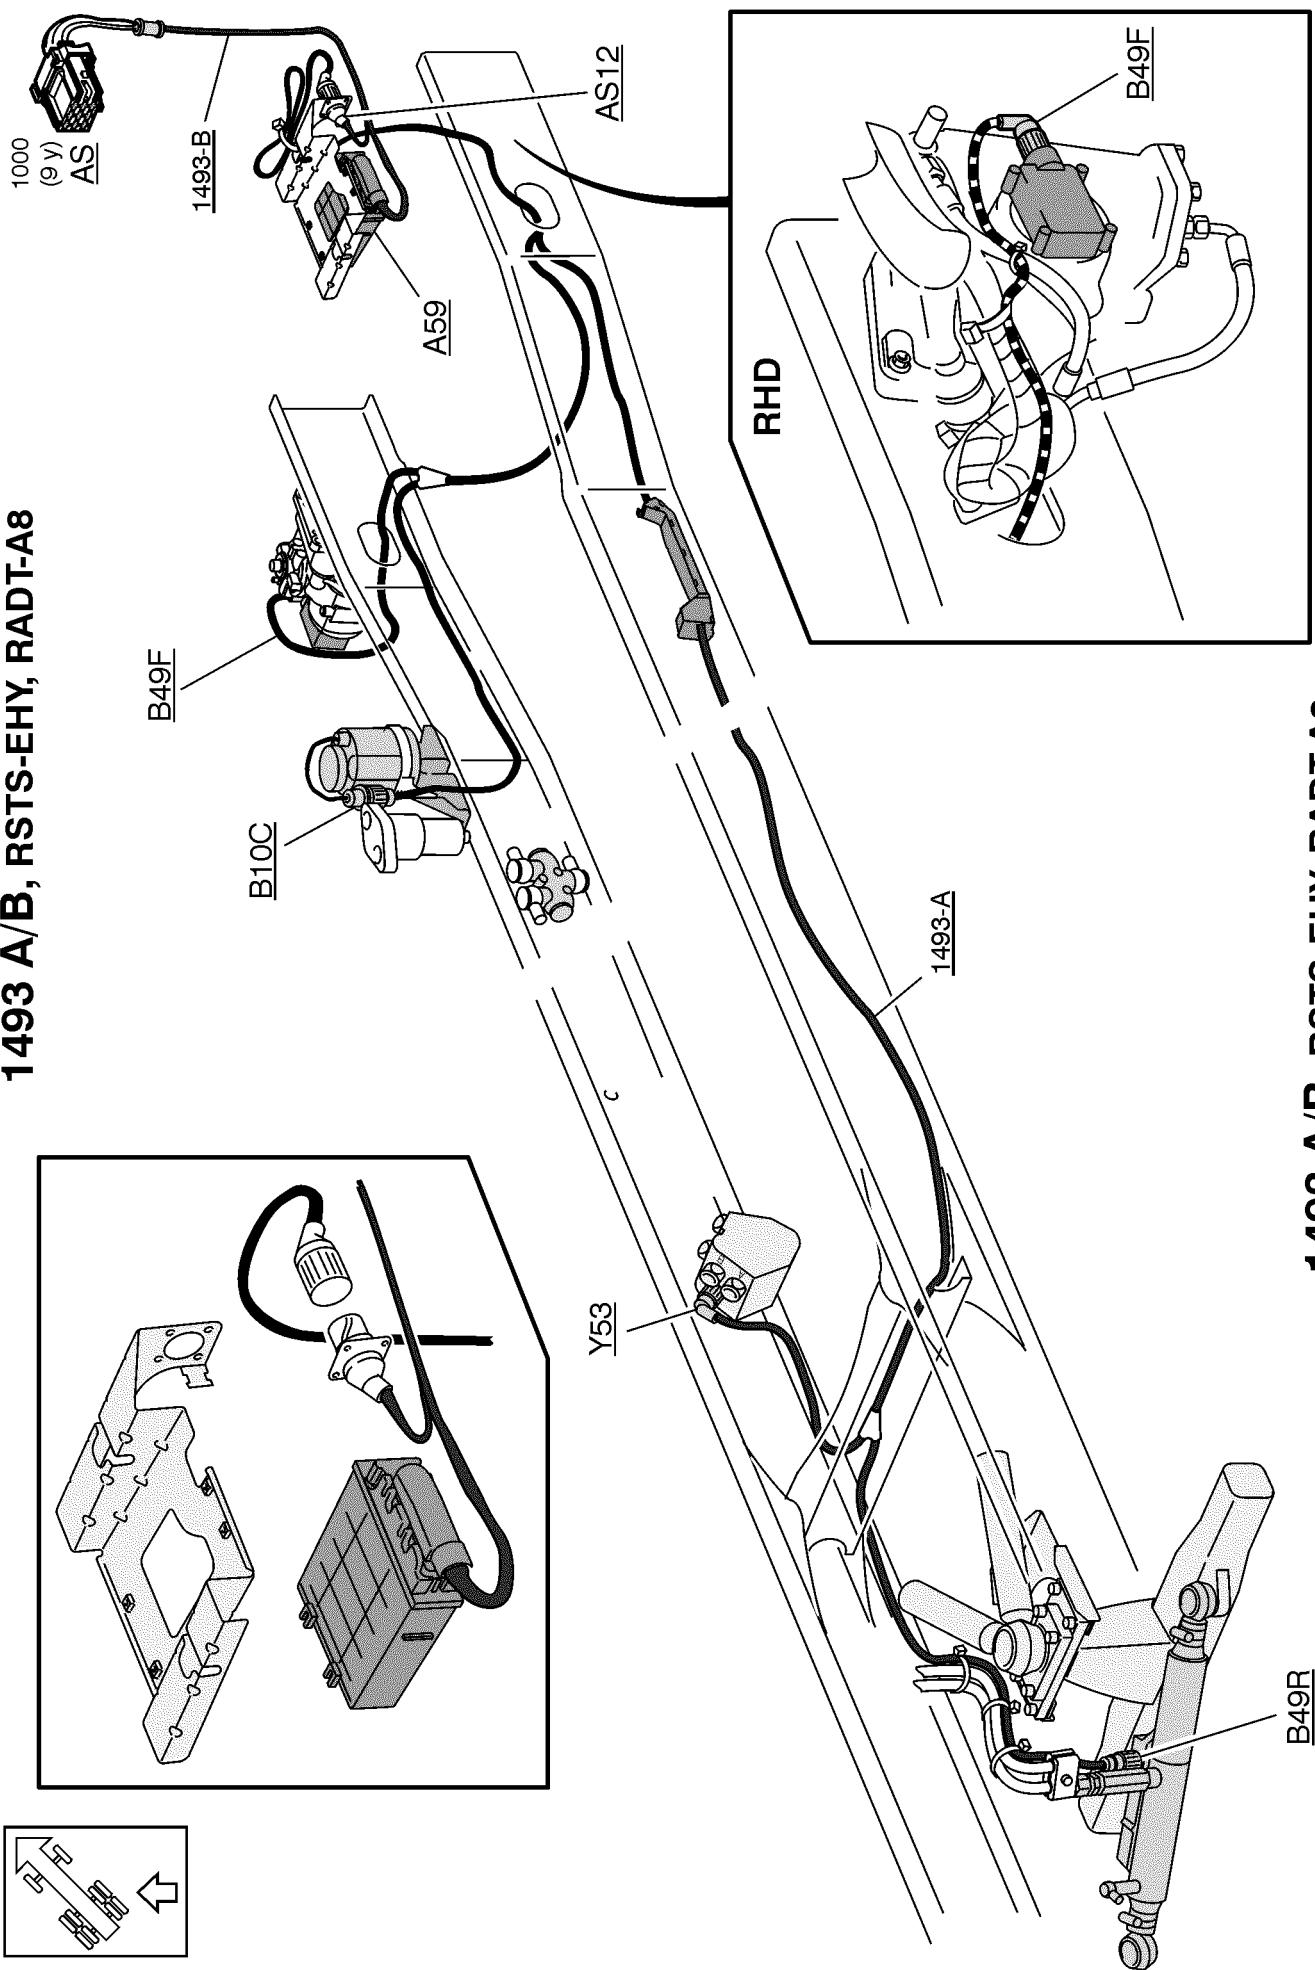


1493 A/B, RSTS-EHY, RADT-A8

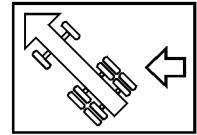

1494, 1499 MECHTRAN

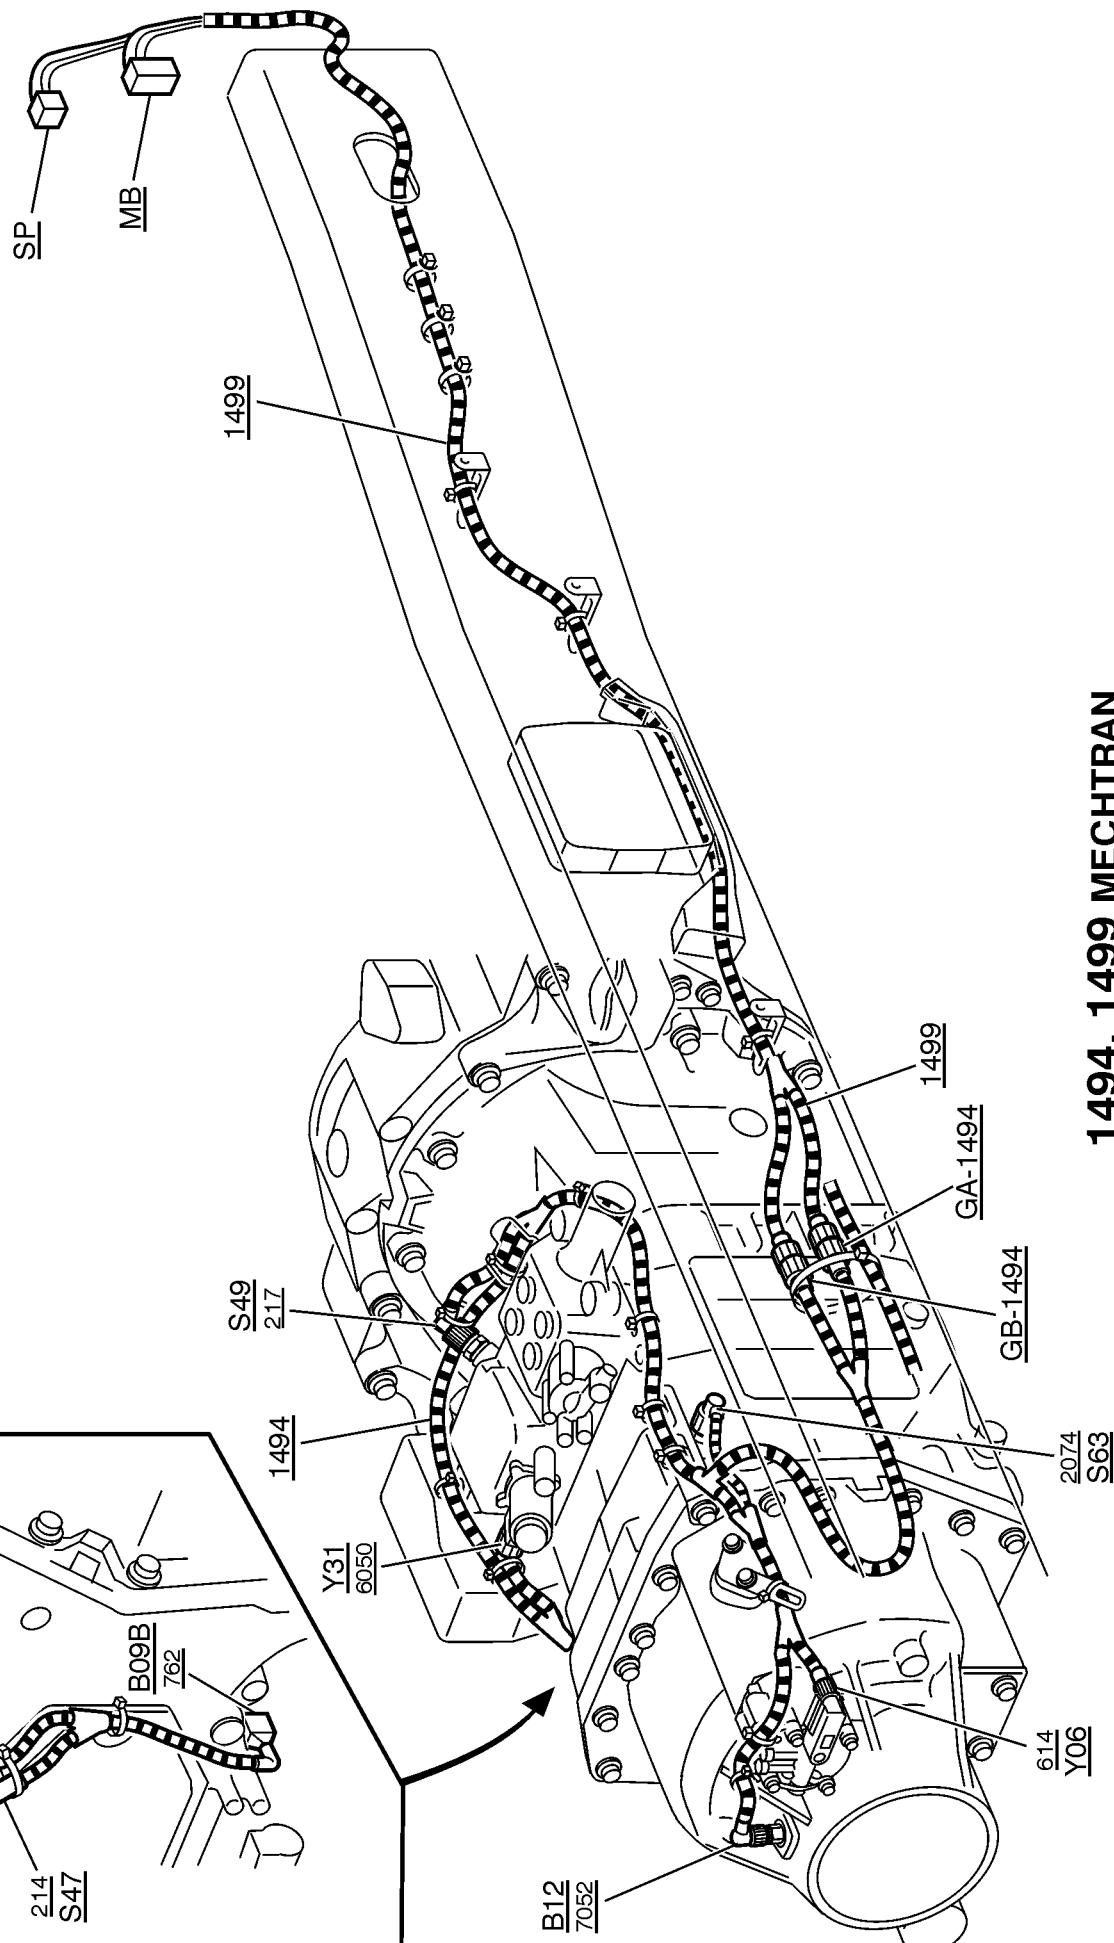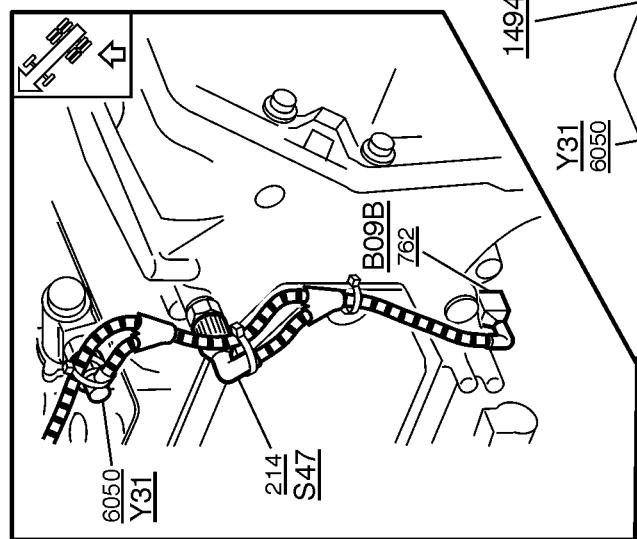


T3016413

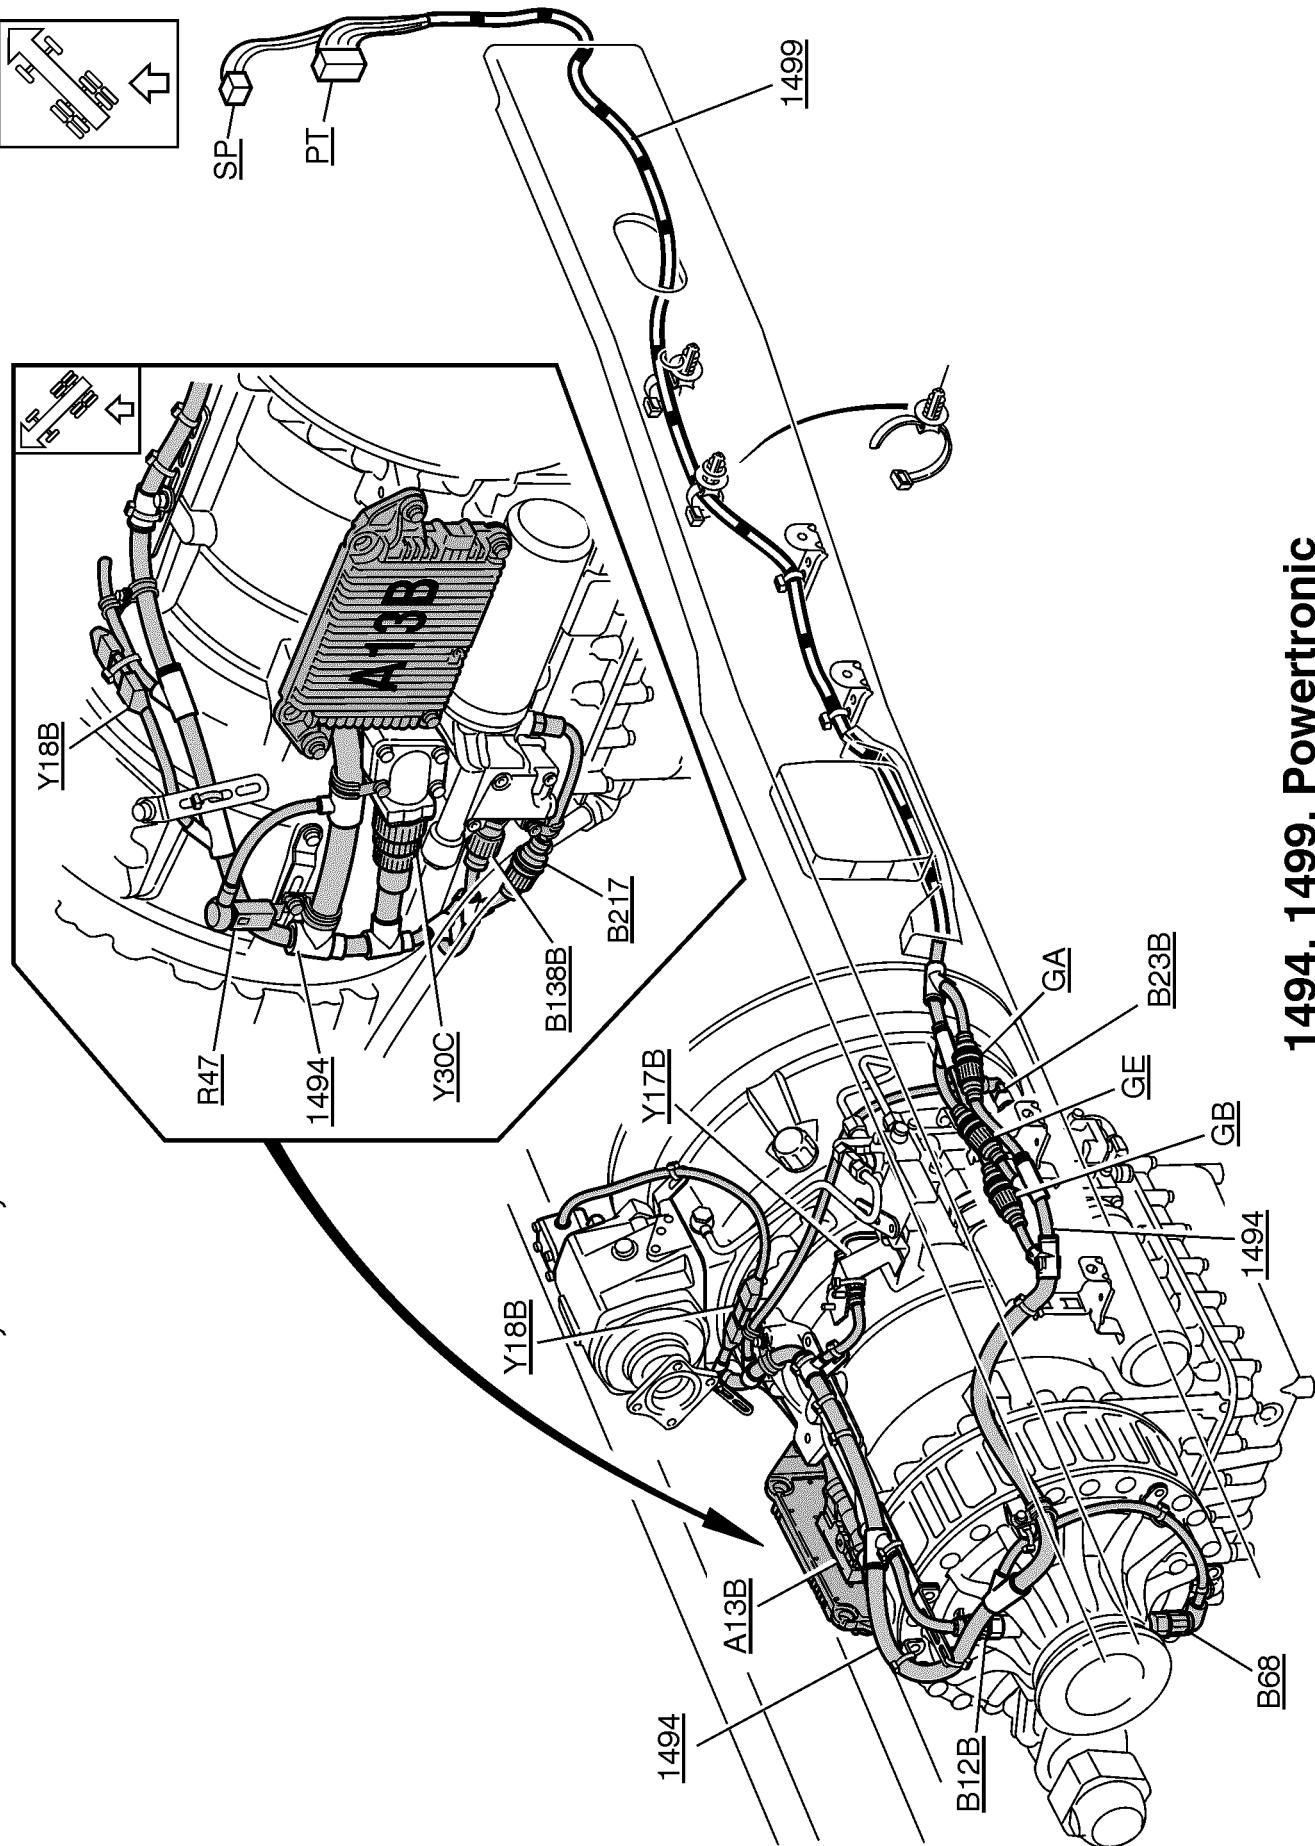
1494, 1499, Powertronic

T3028810


1494, 1499, Powertronic

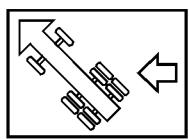


1499 I-SHIFT

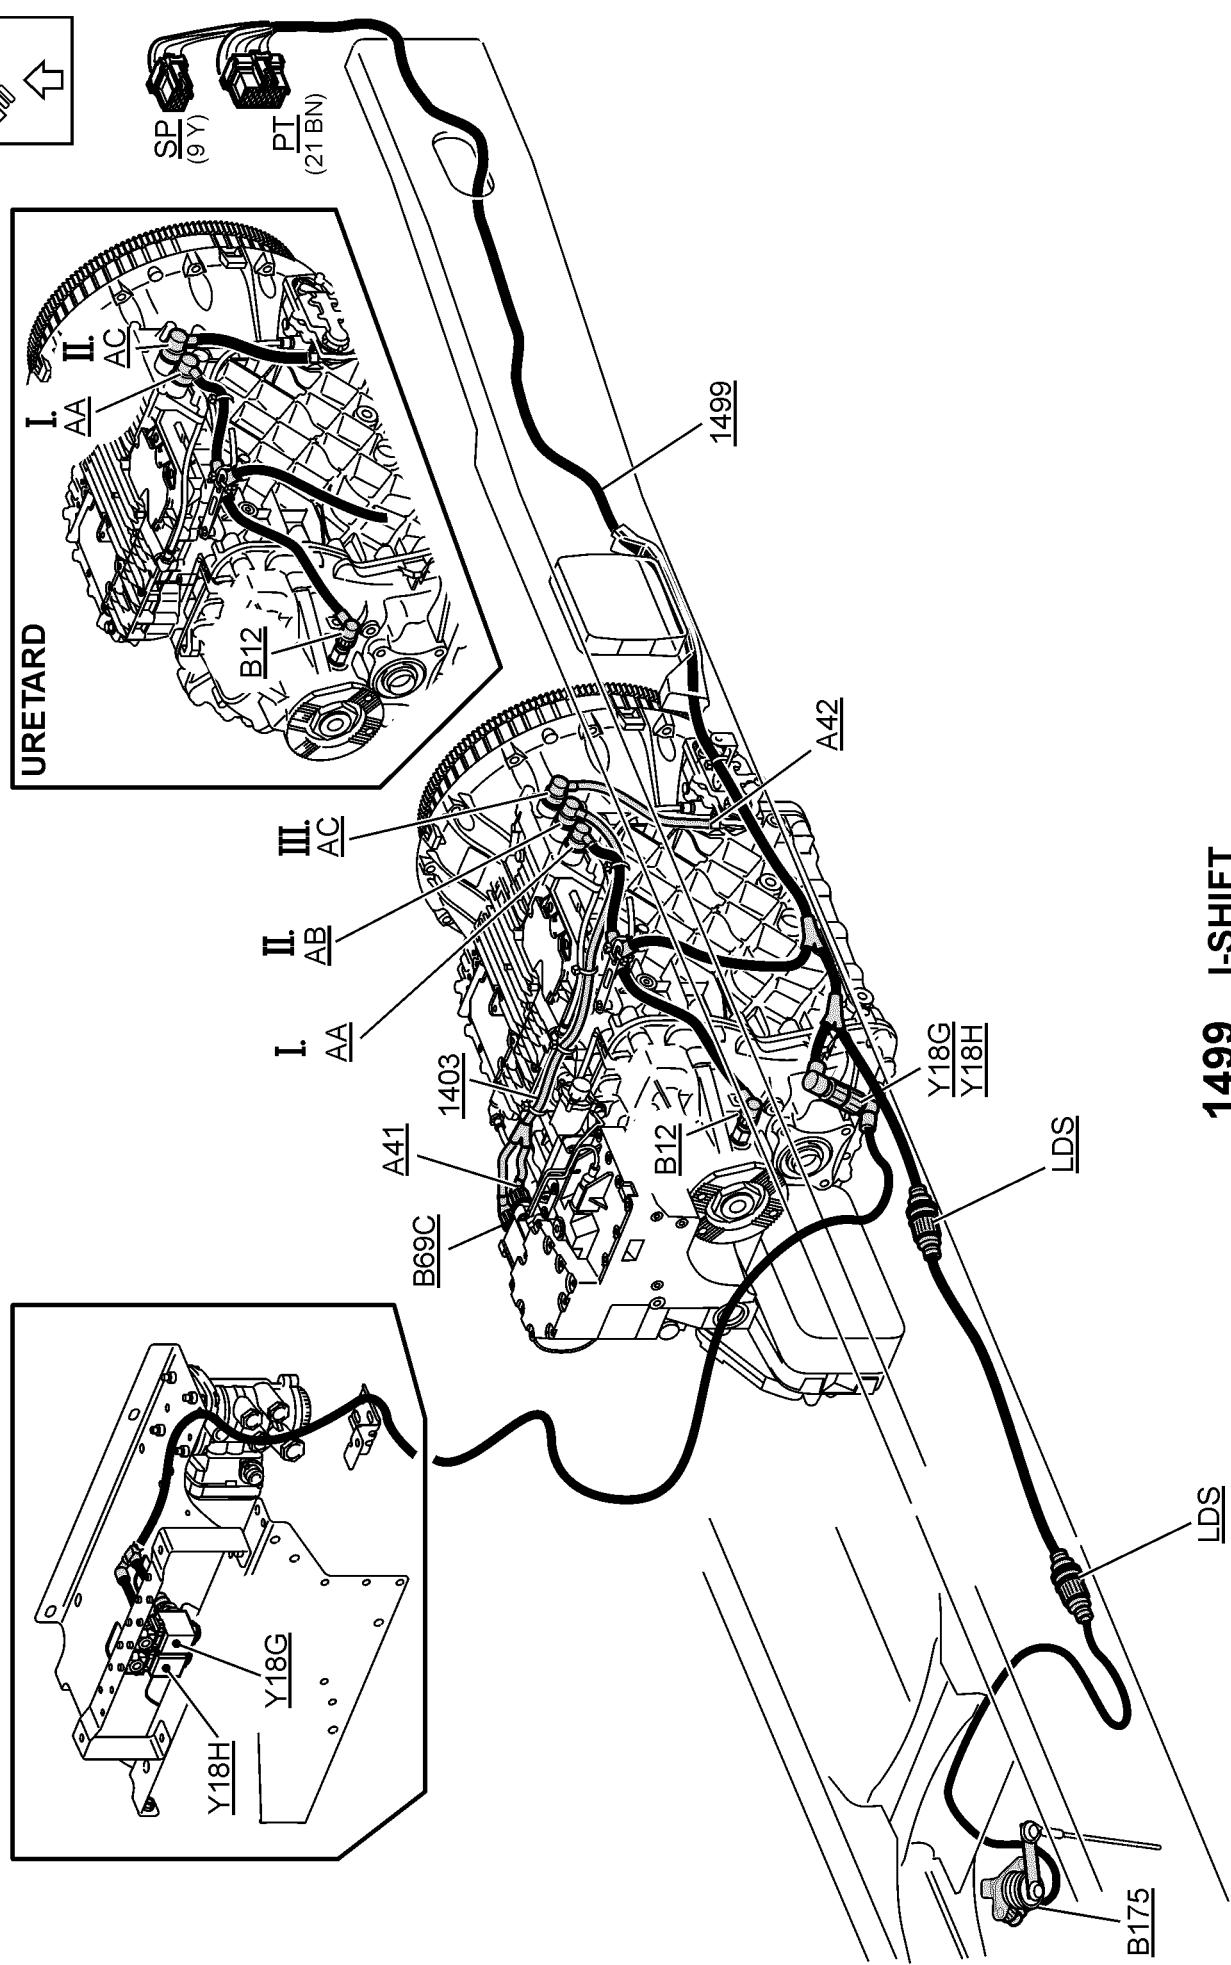


T3058383

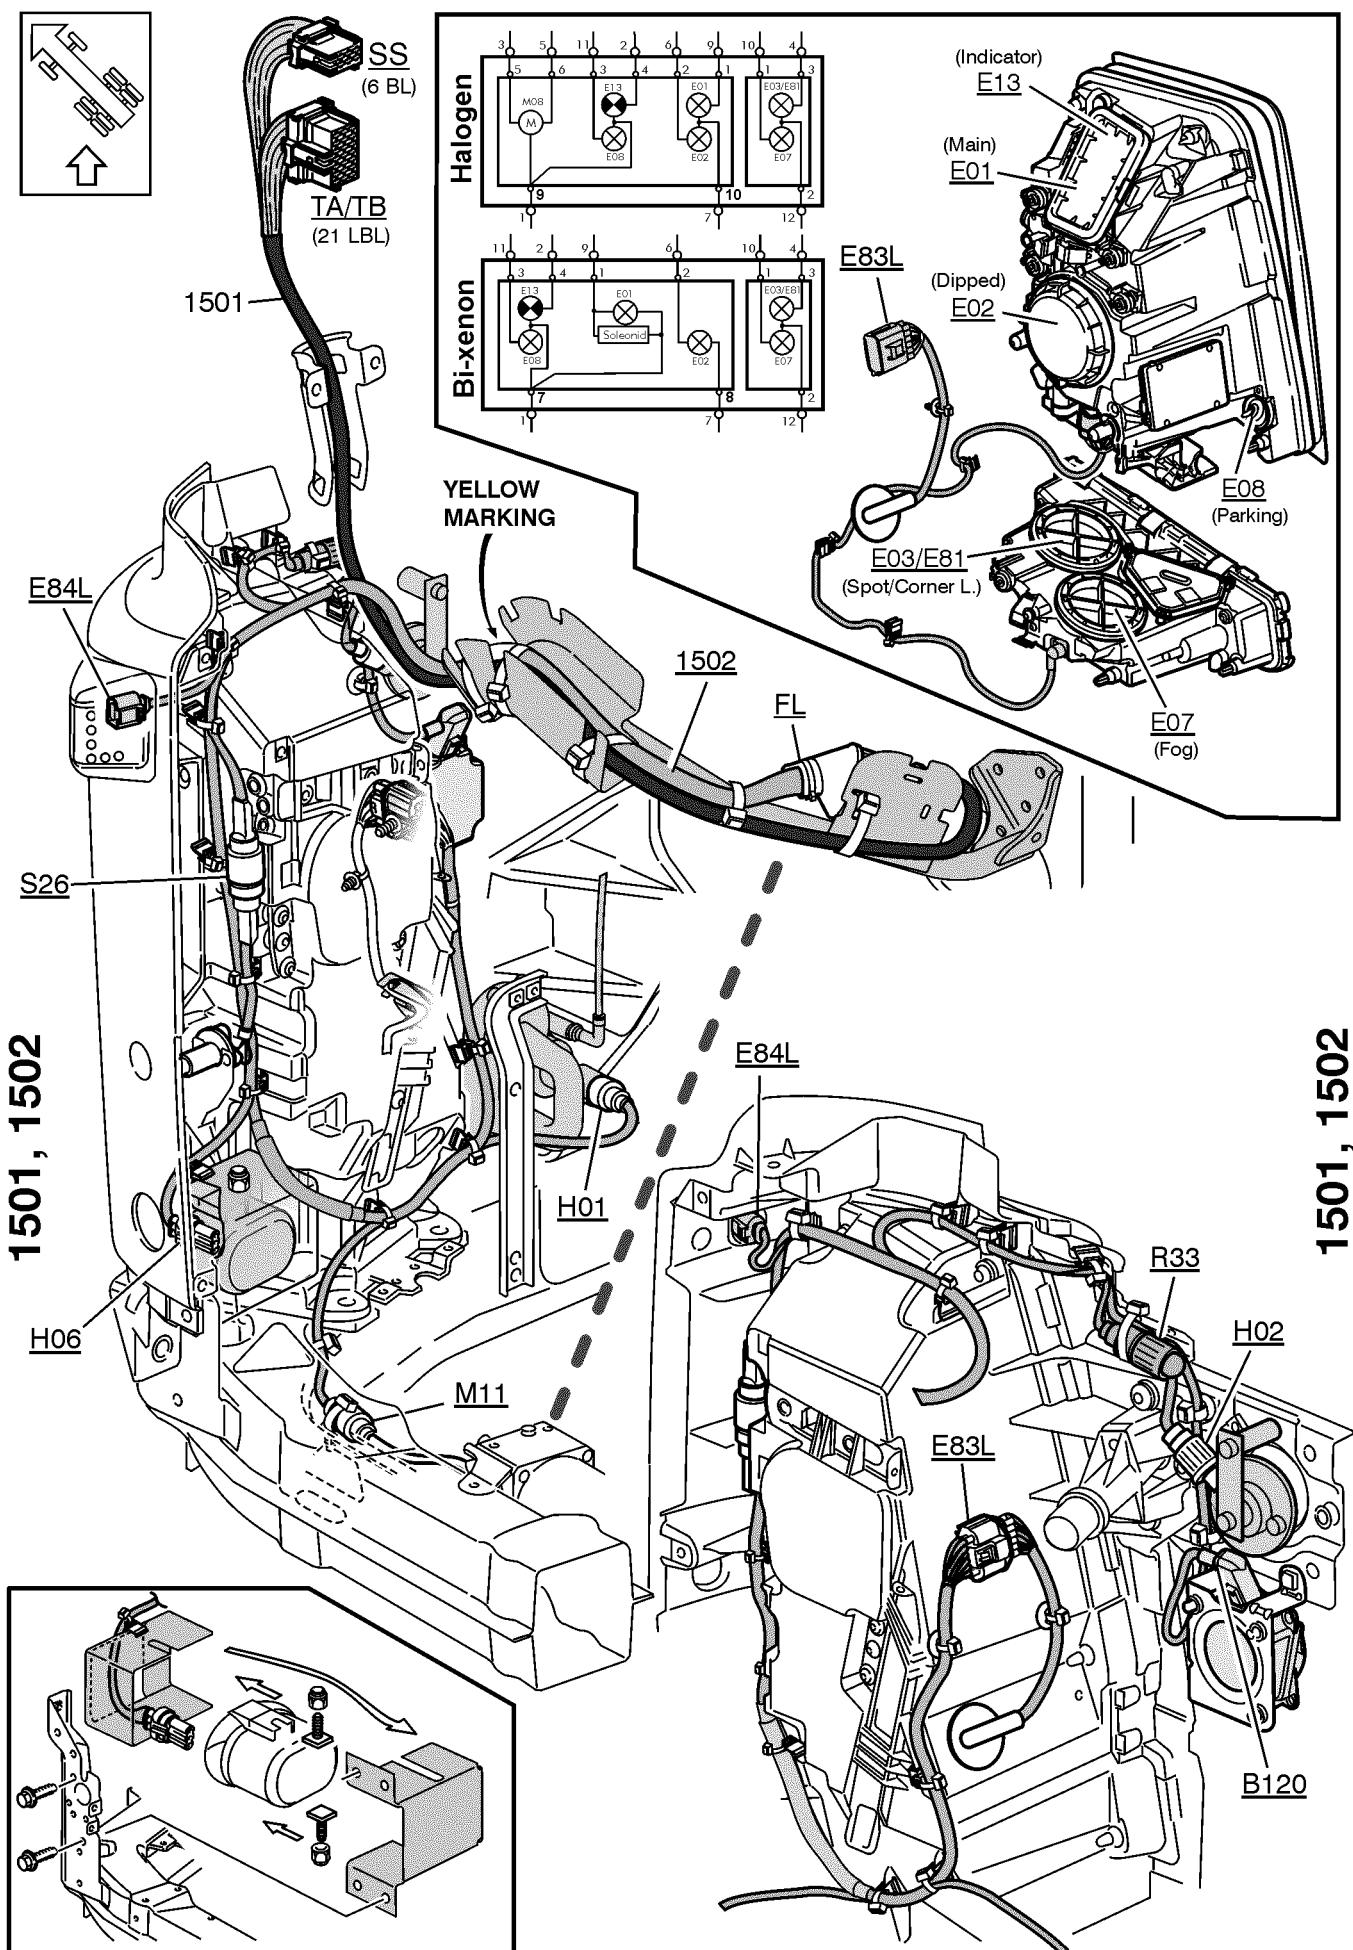


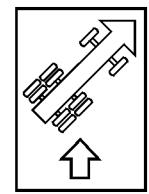



1501, 1502, BUMP-HDC

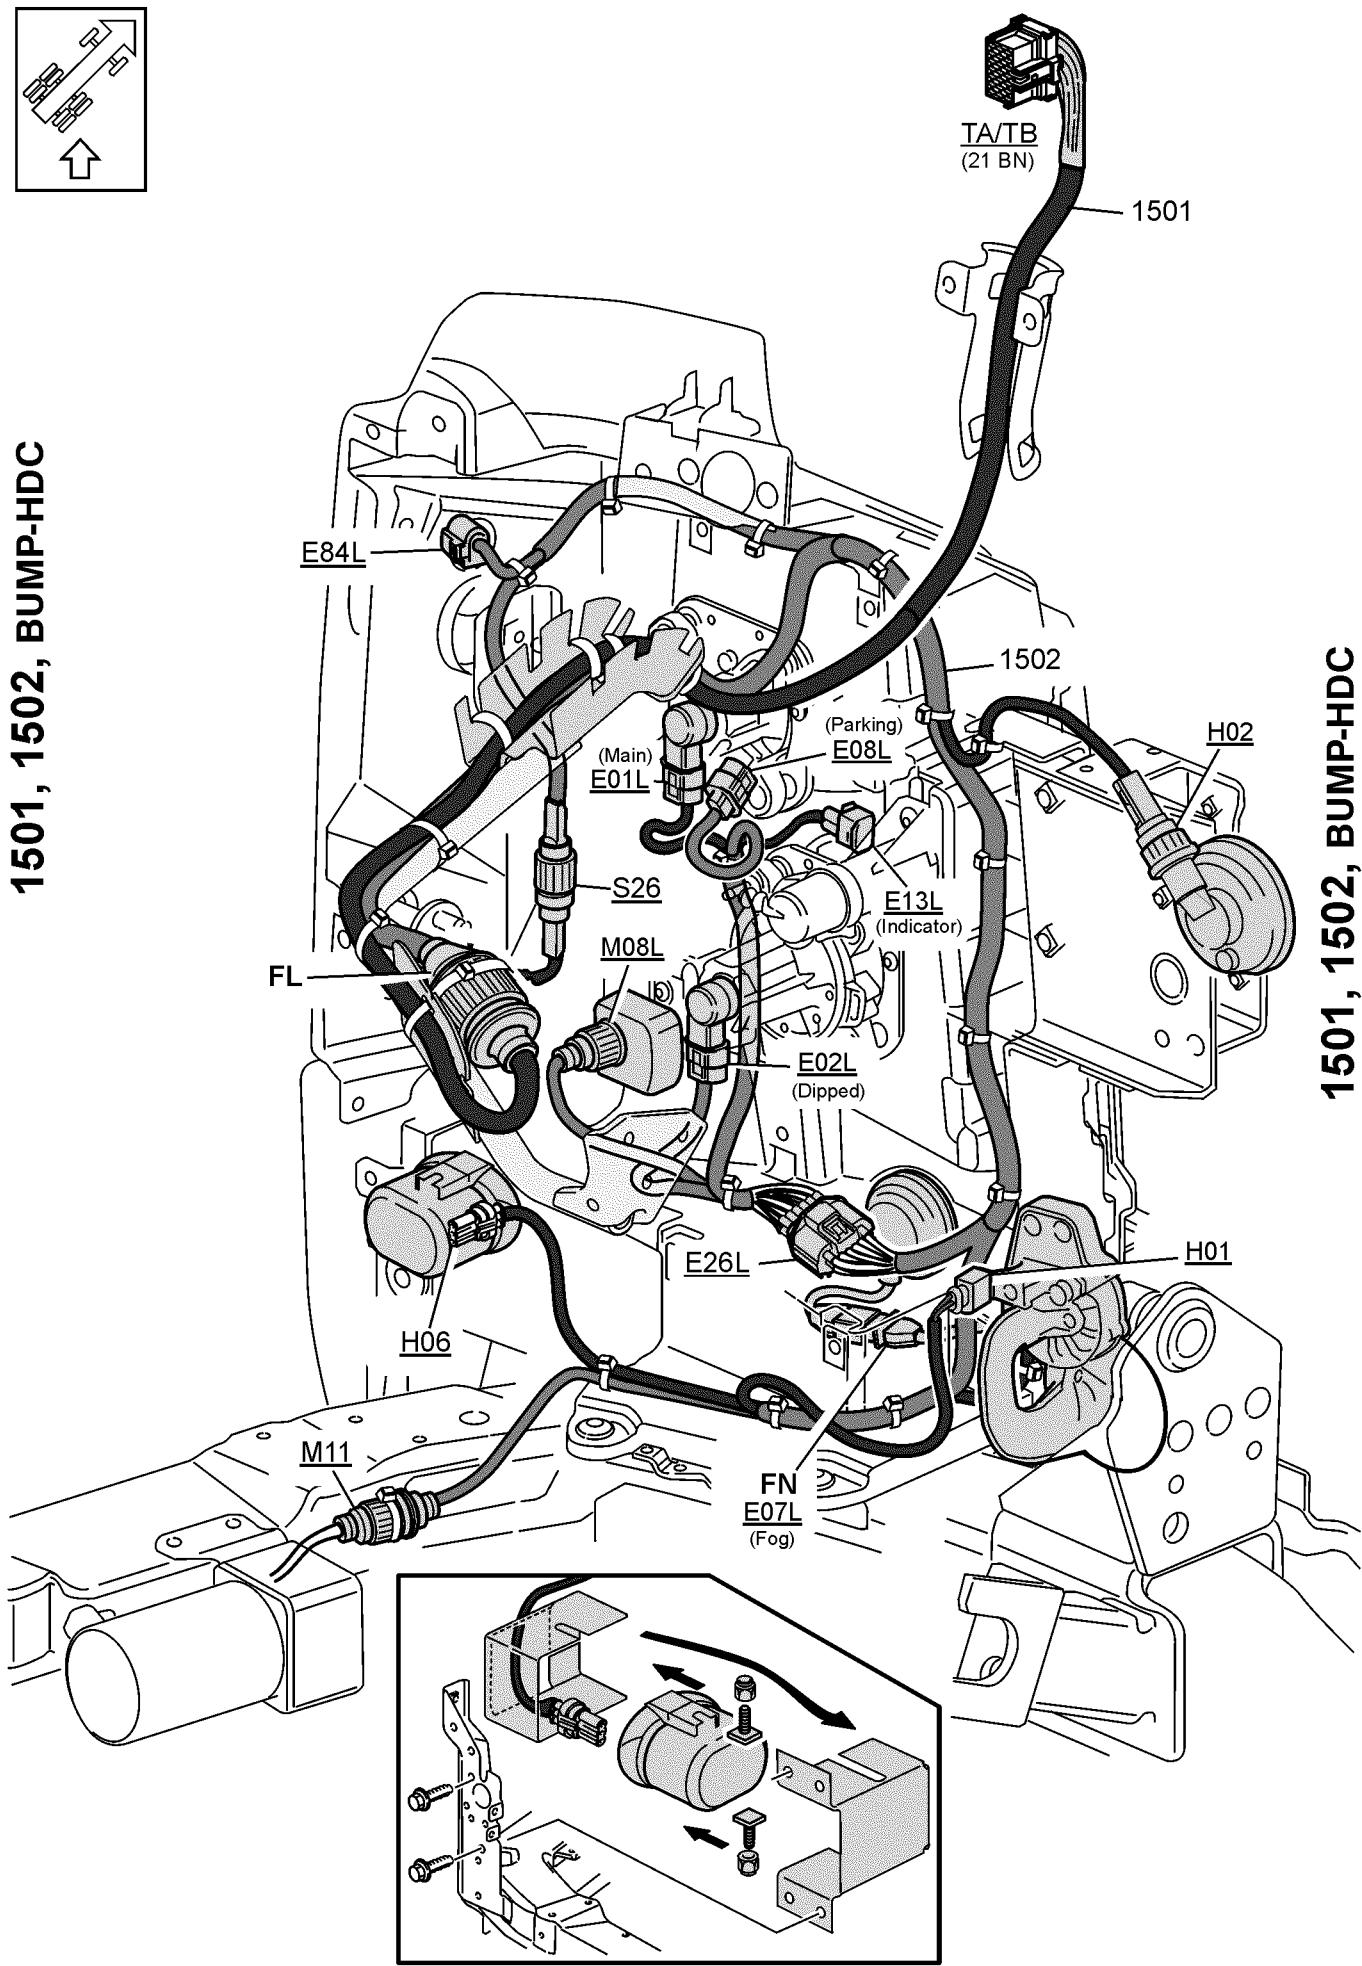


T3057744

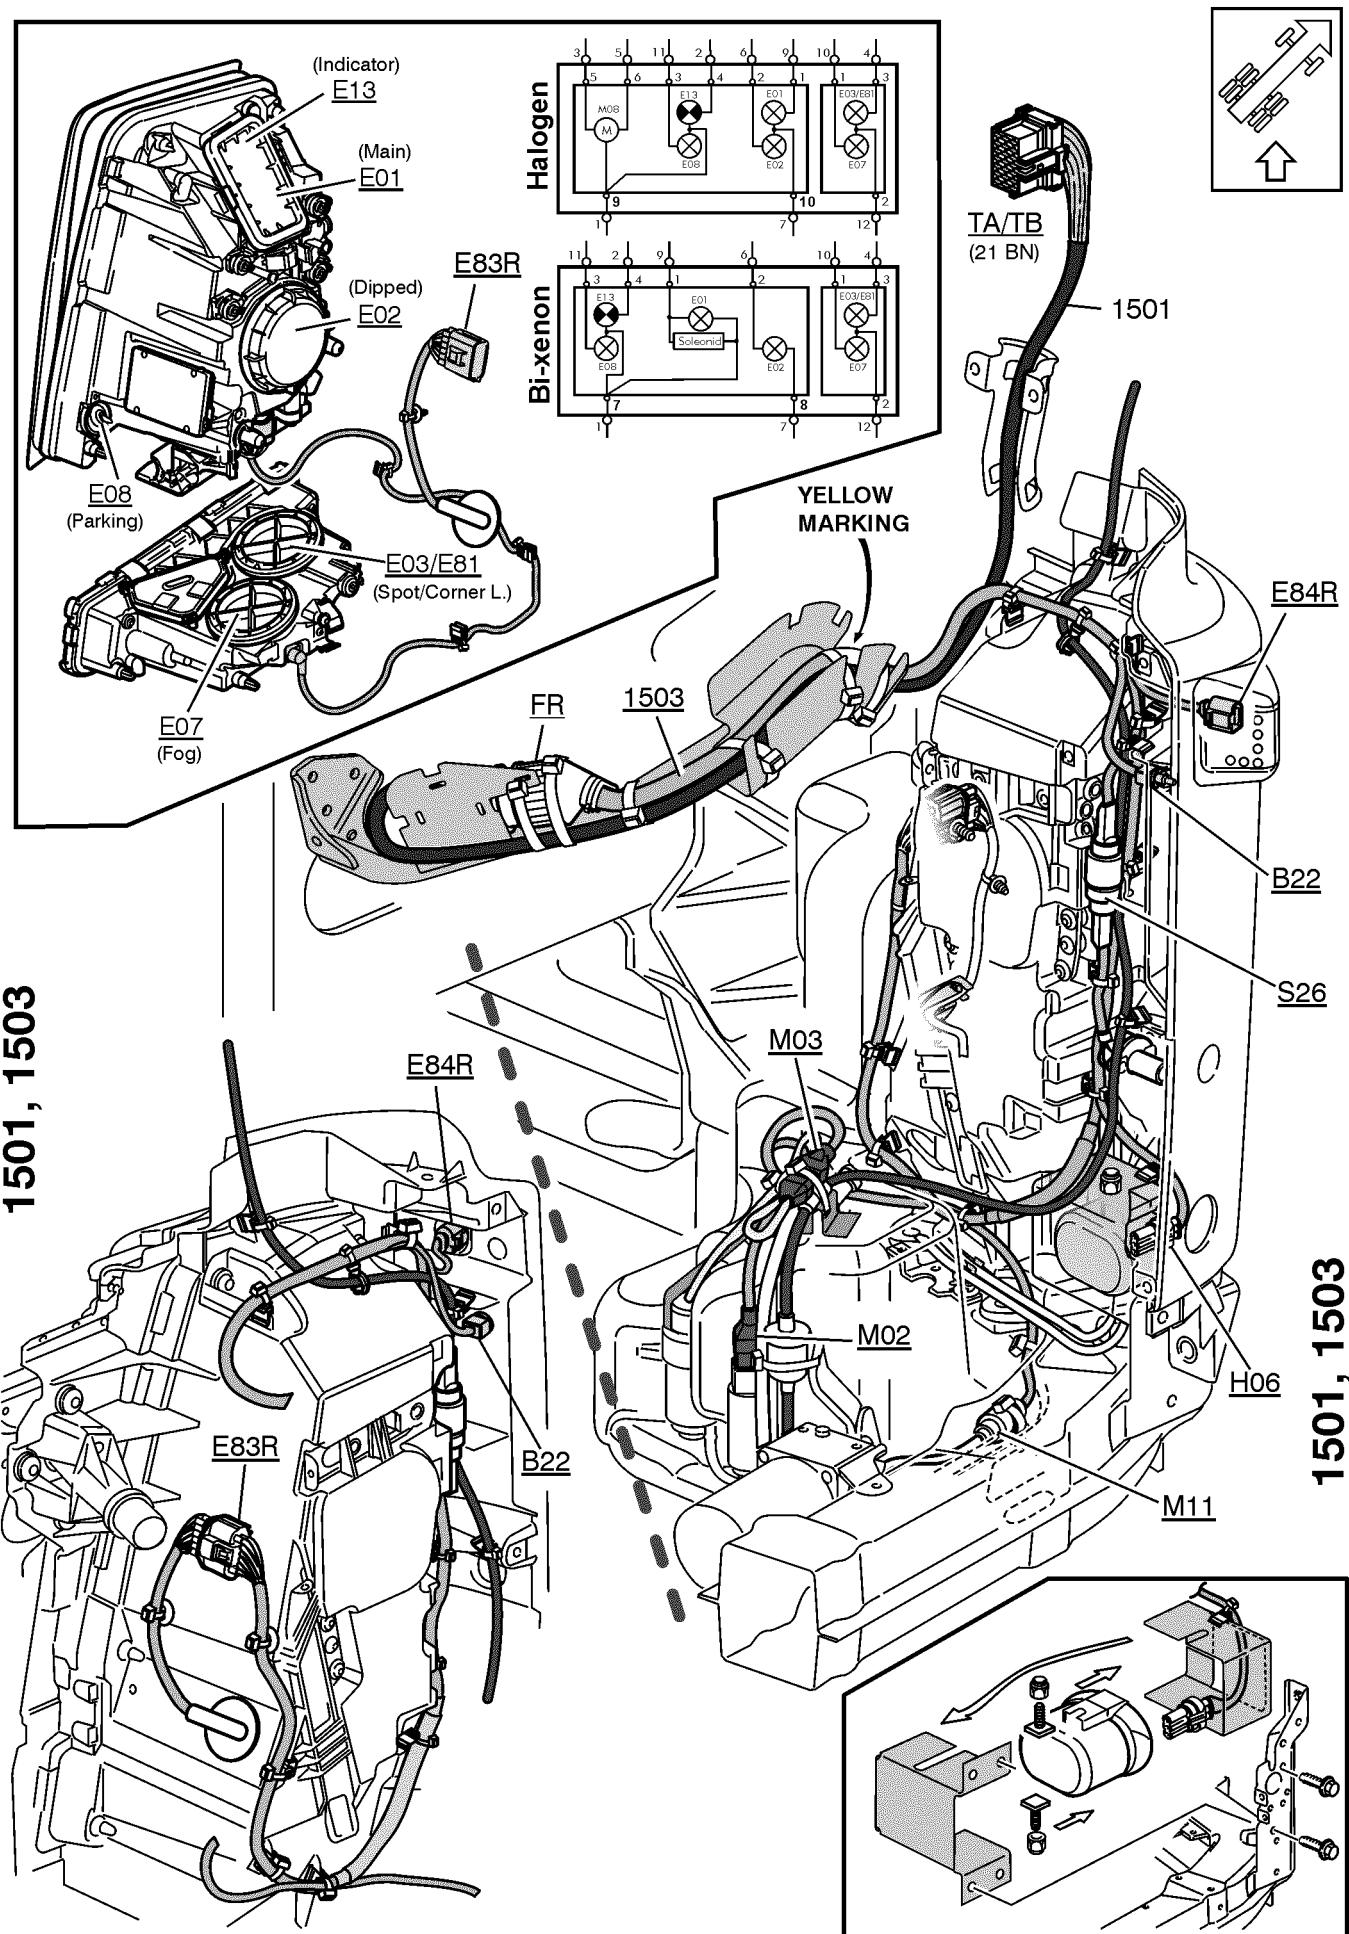

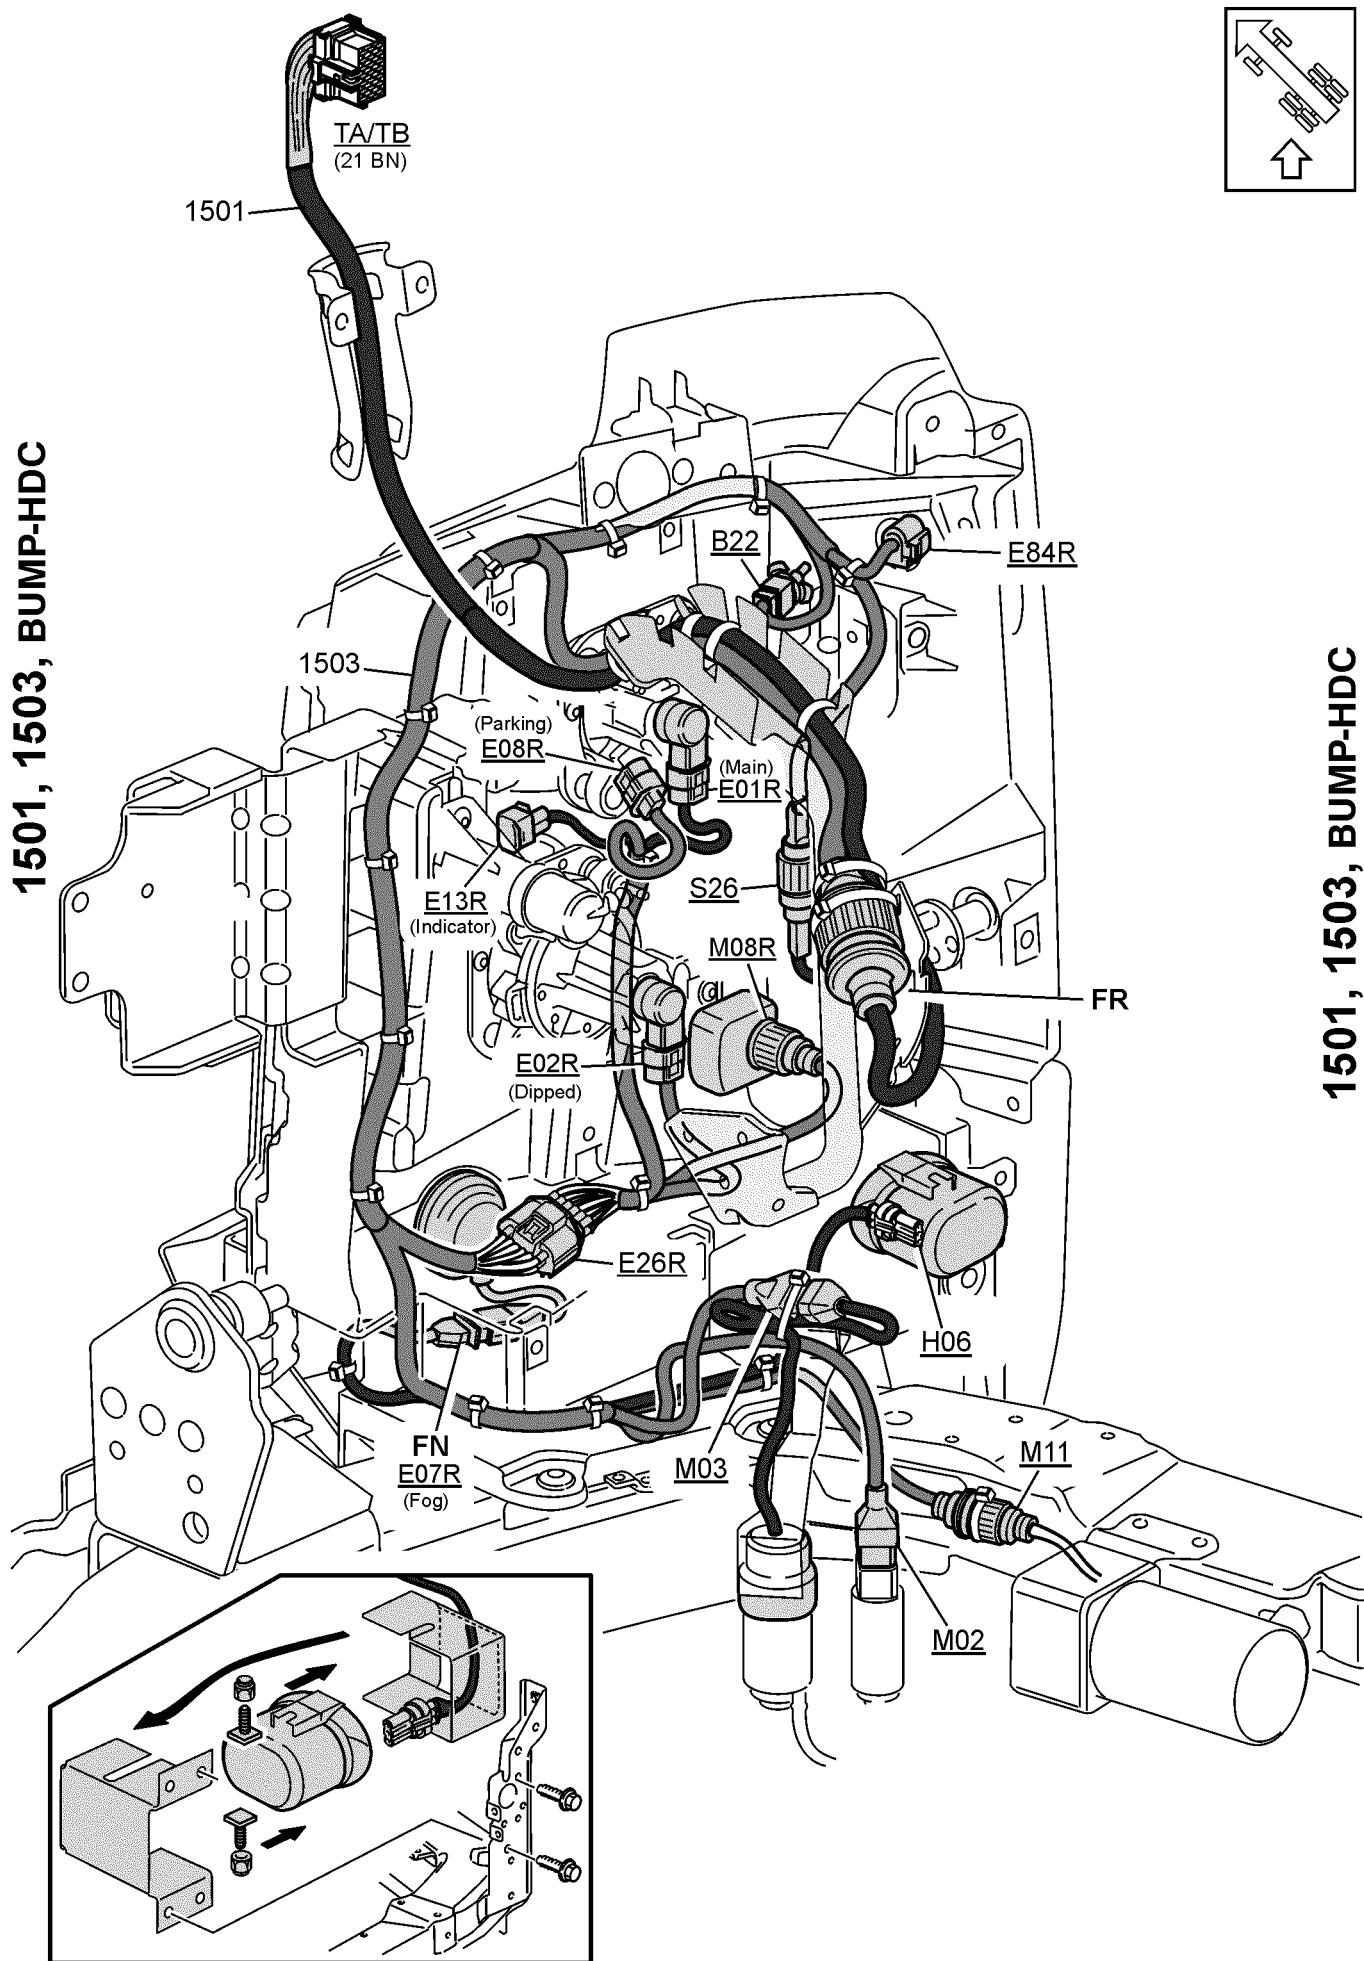


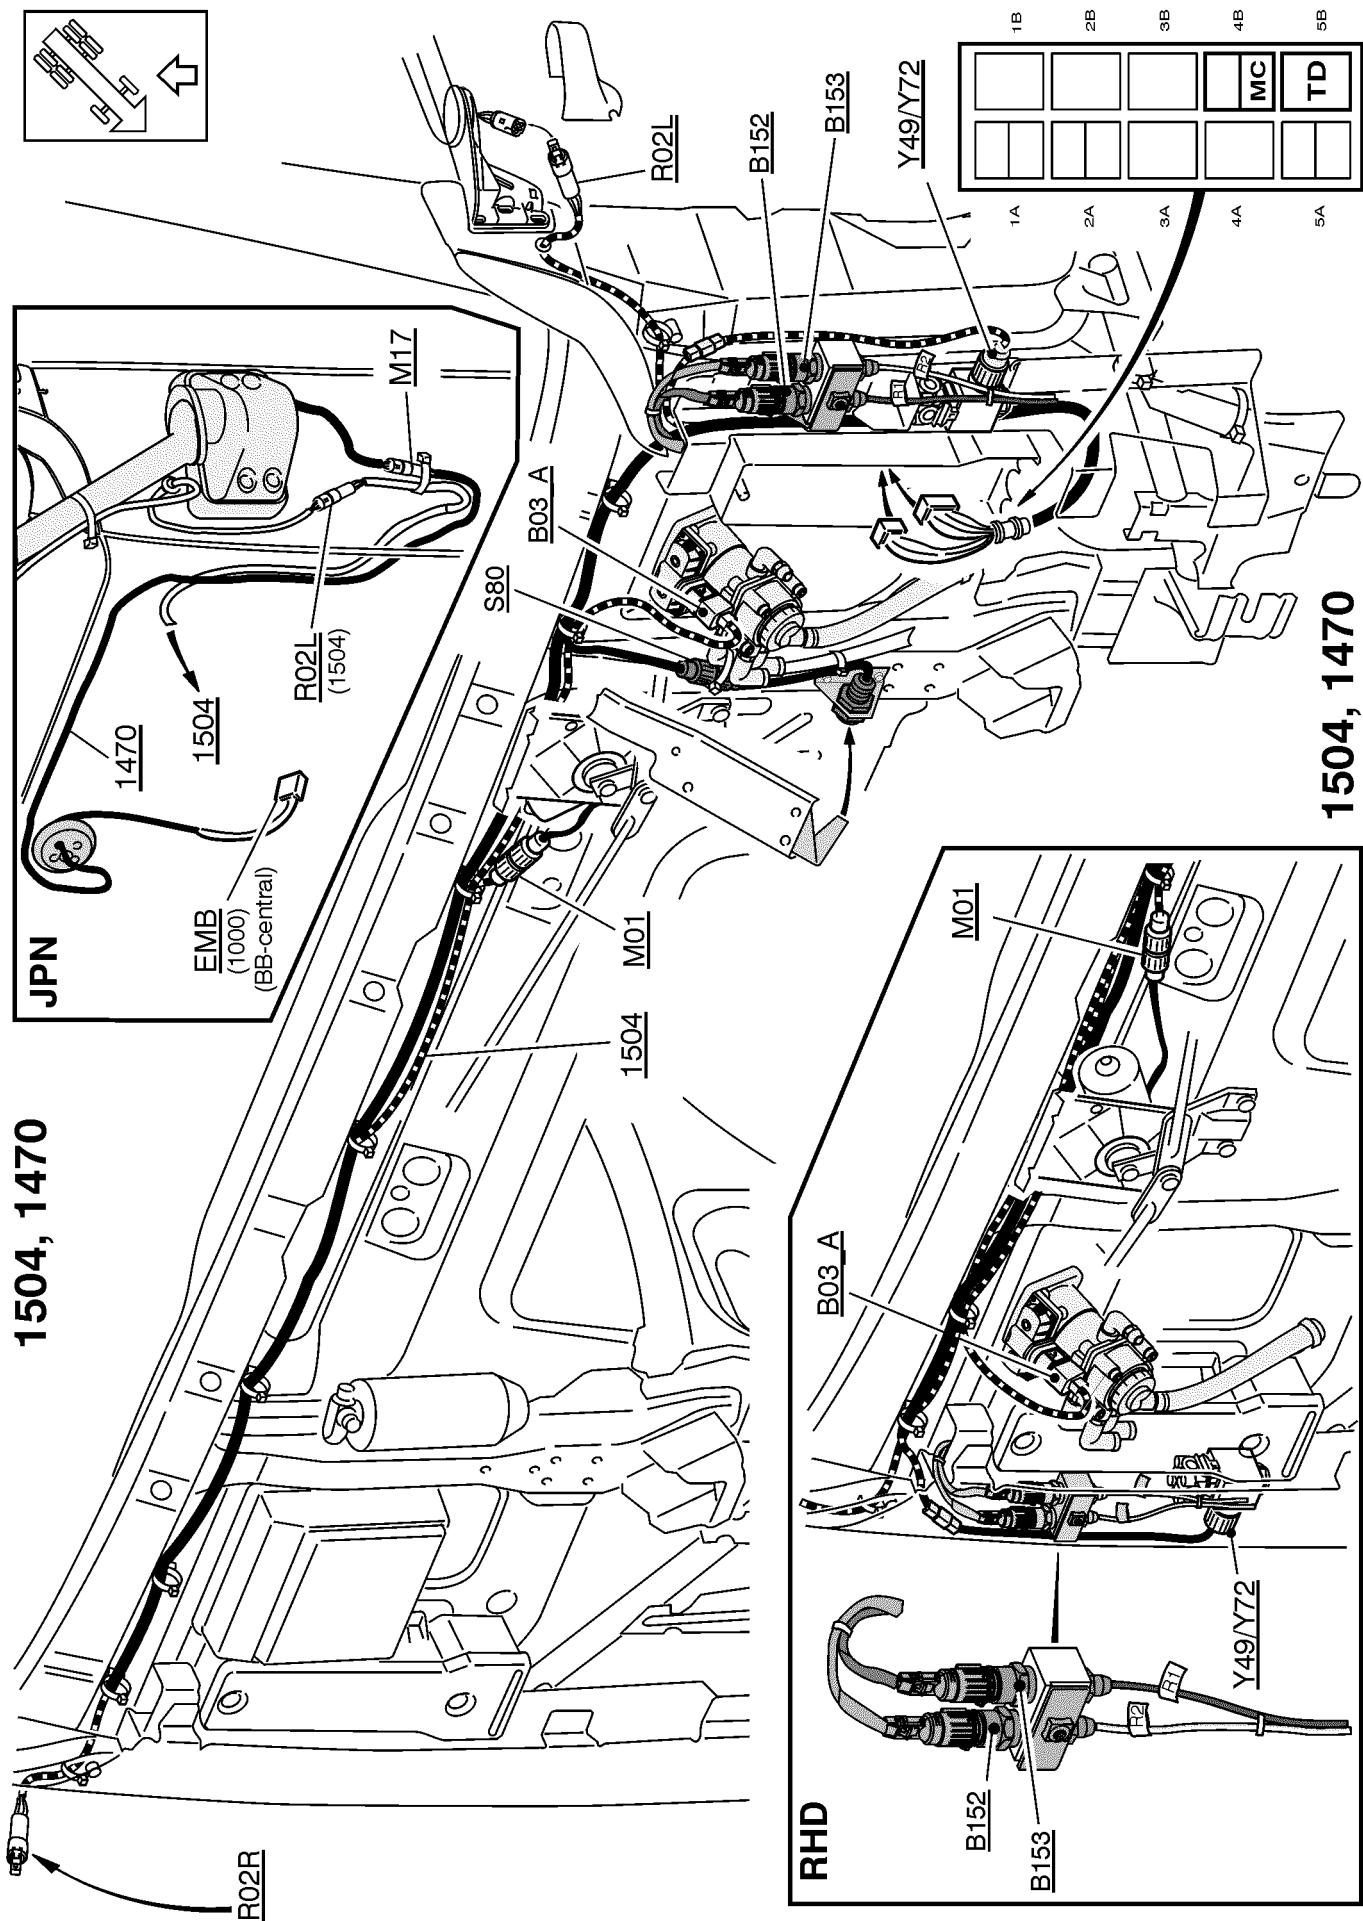

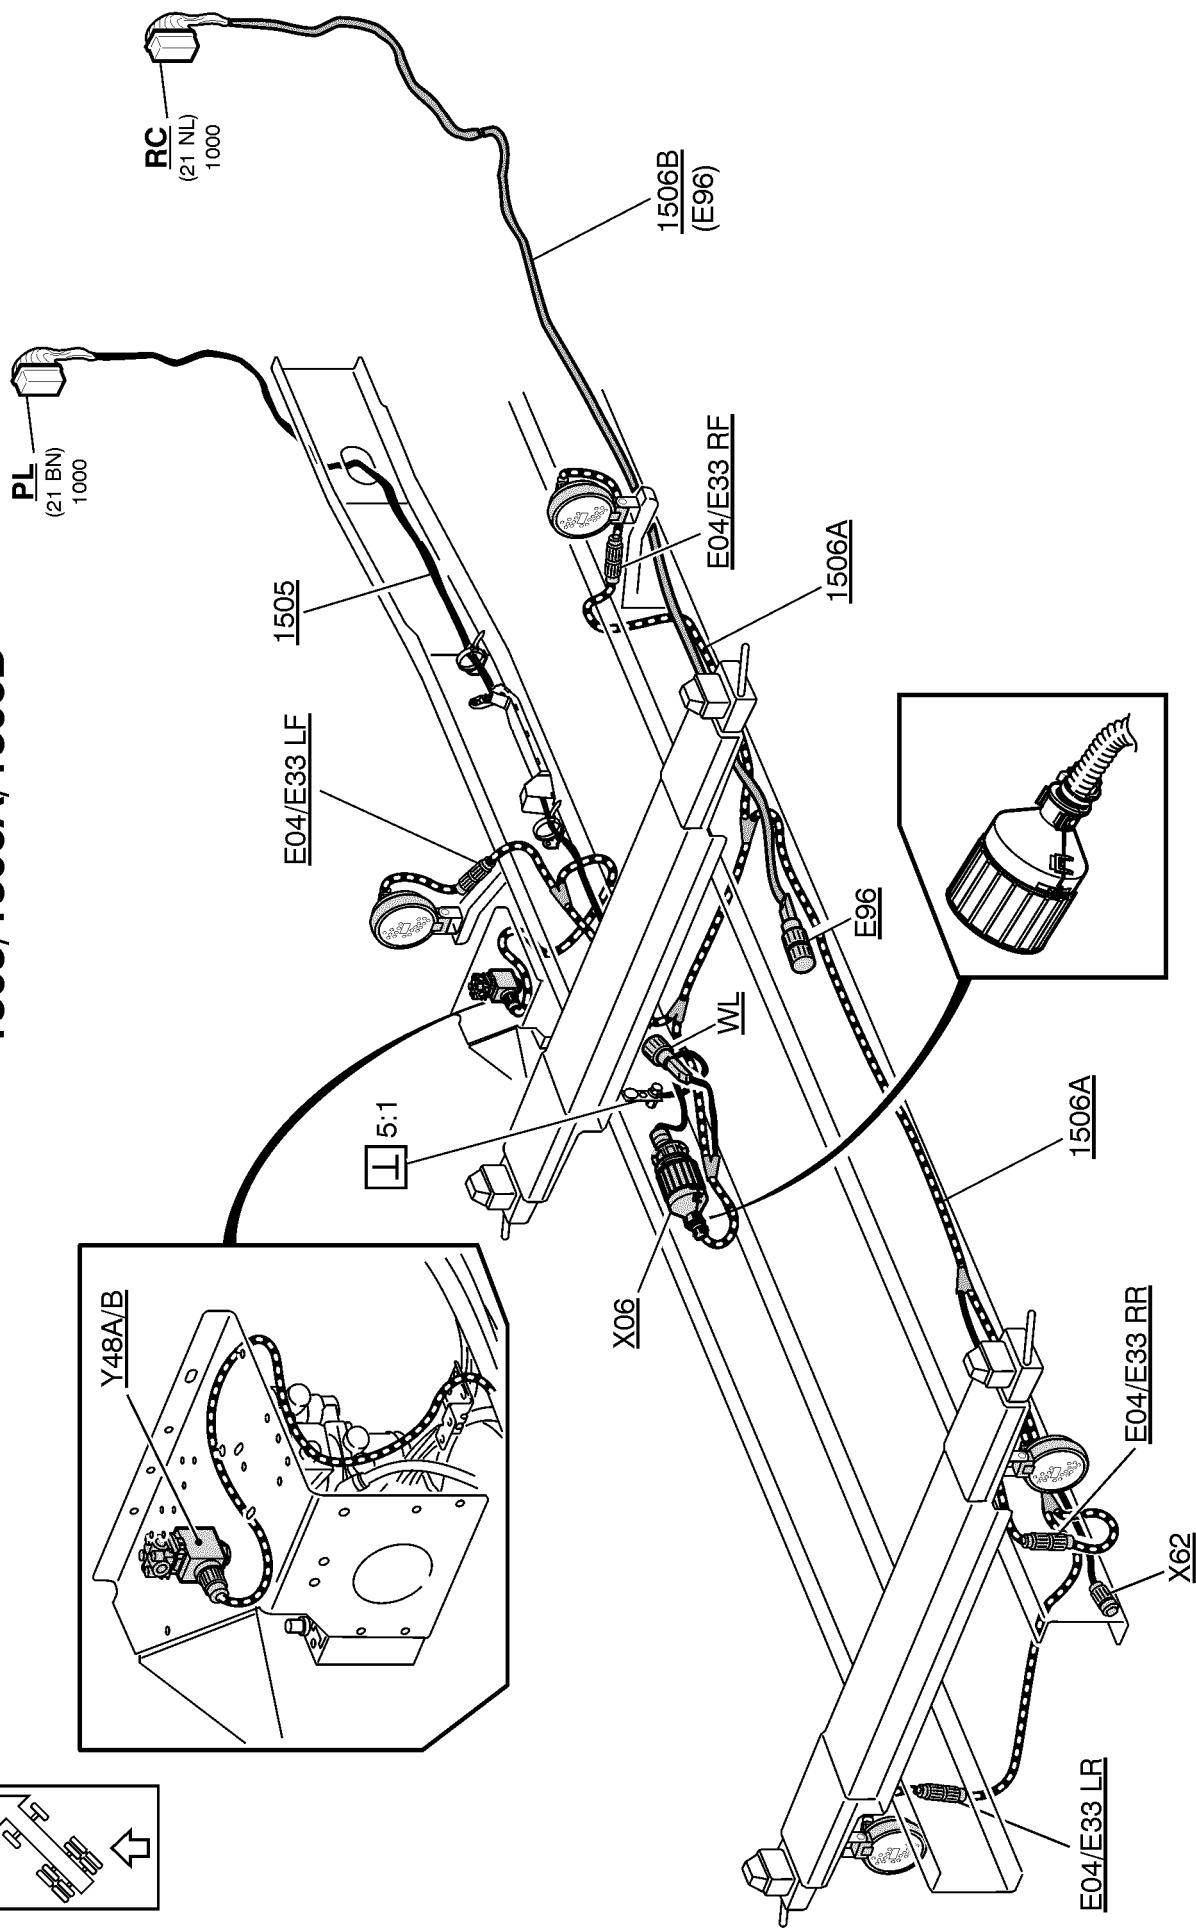
1505/1506A/1506B

T3057081


1505/1506A/1506B

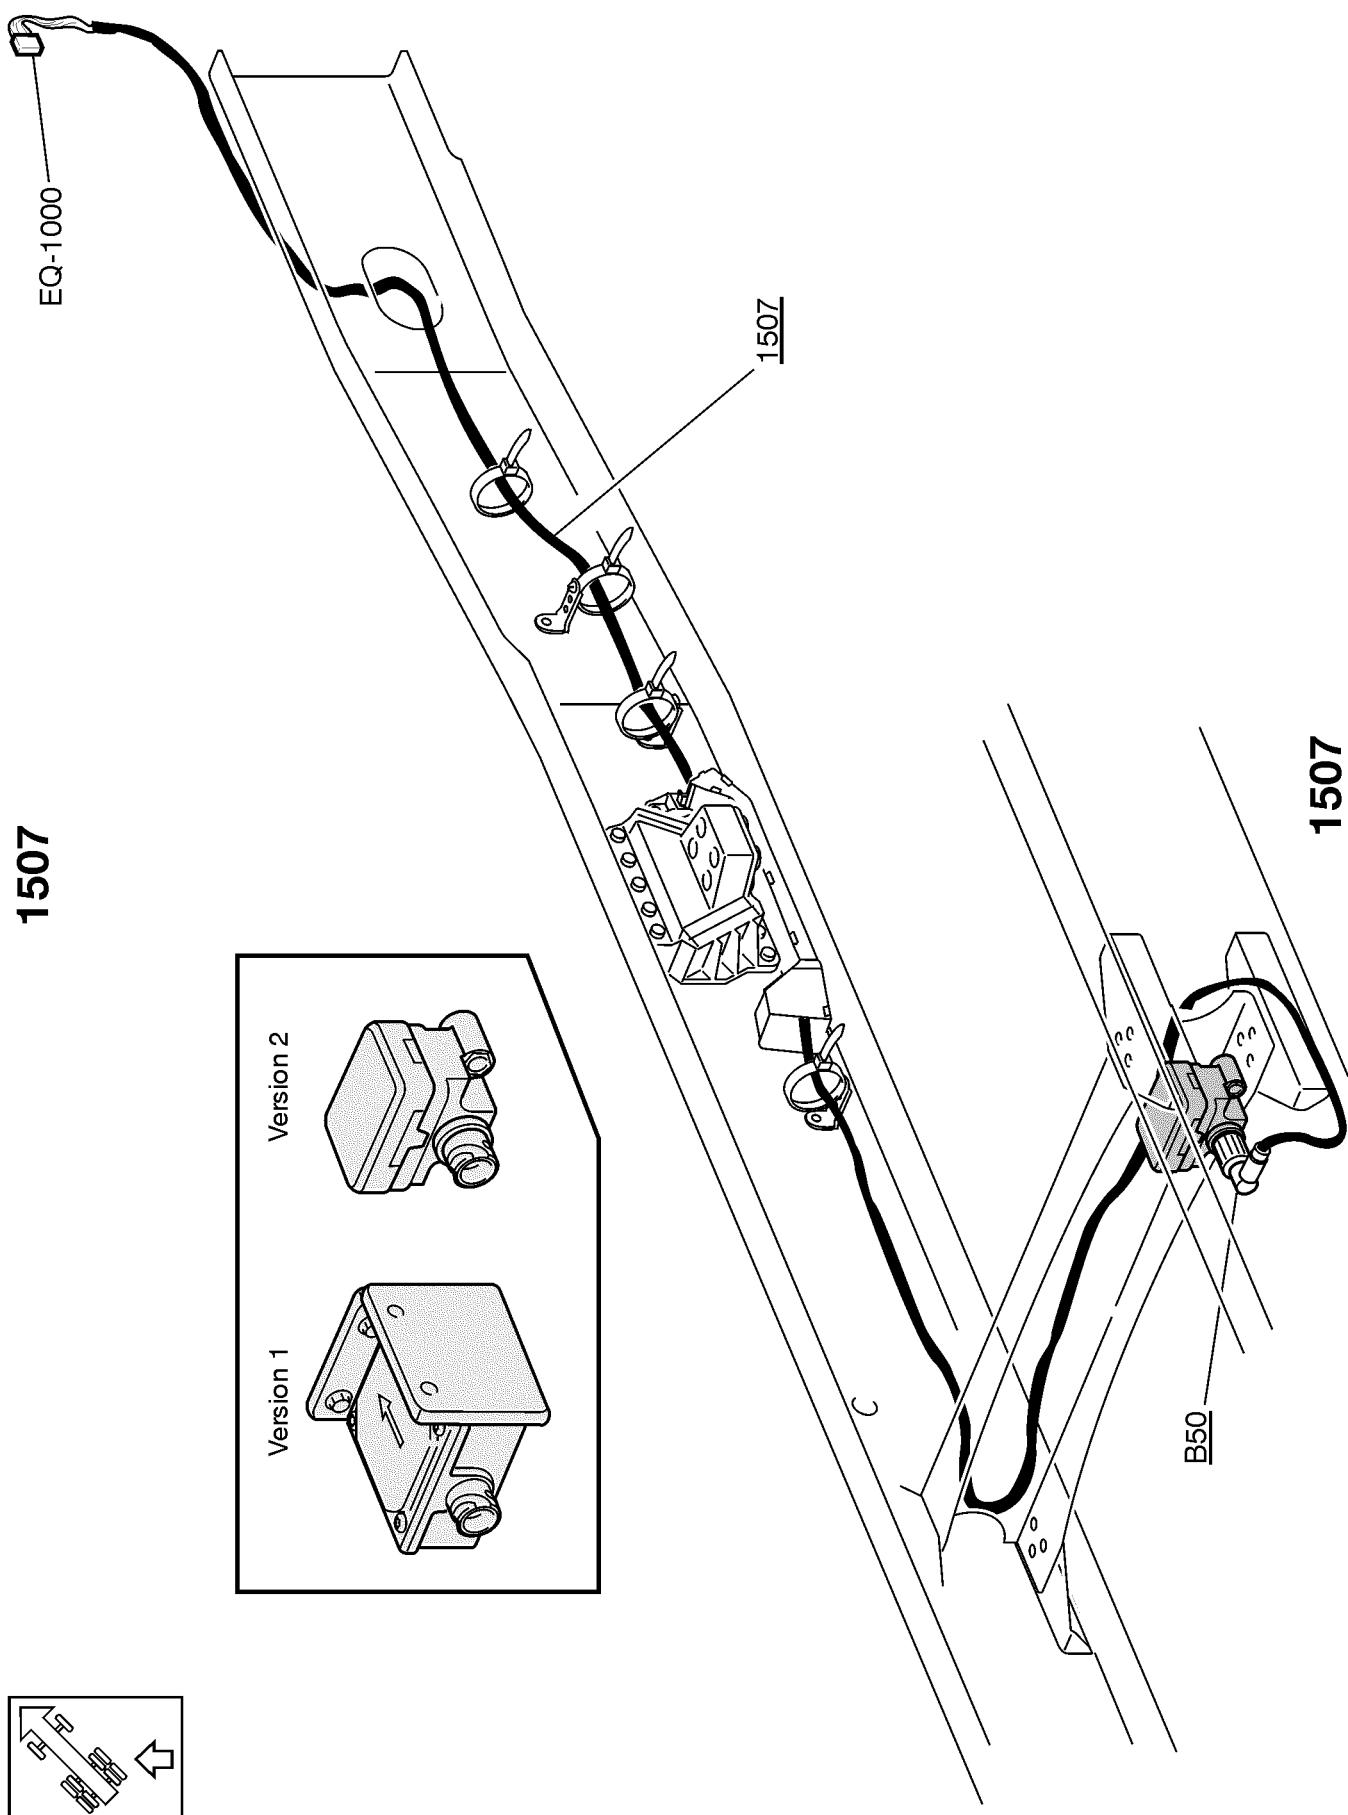

T3029531

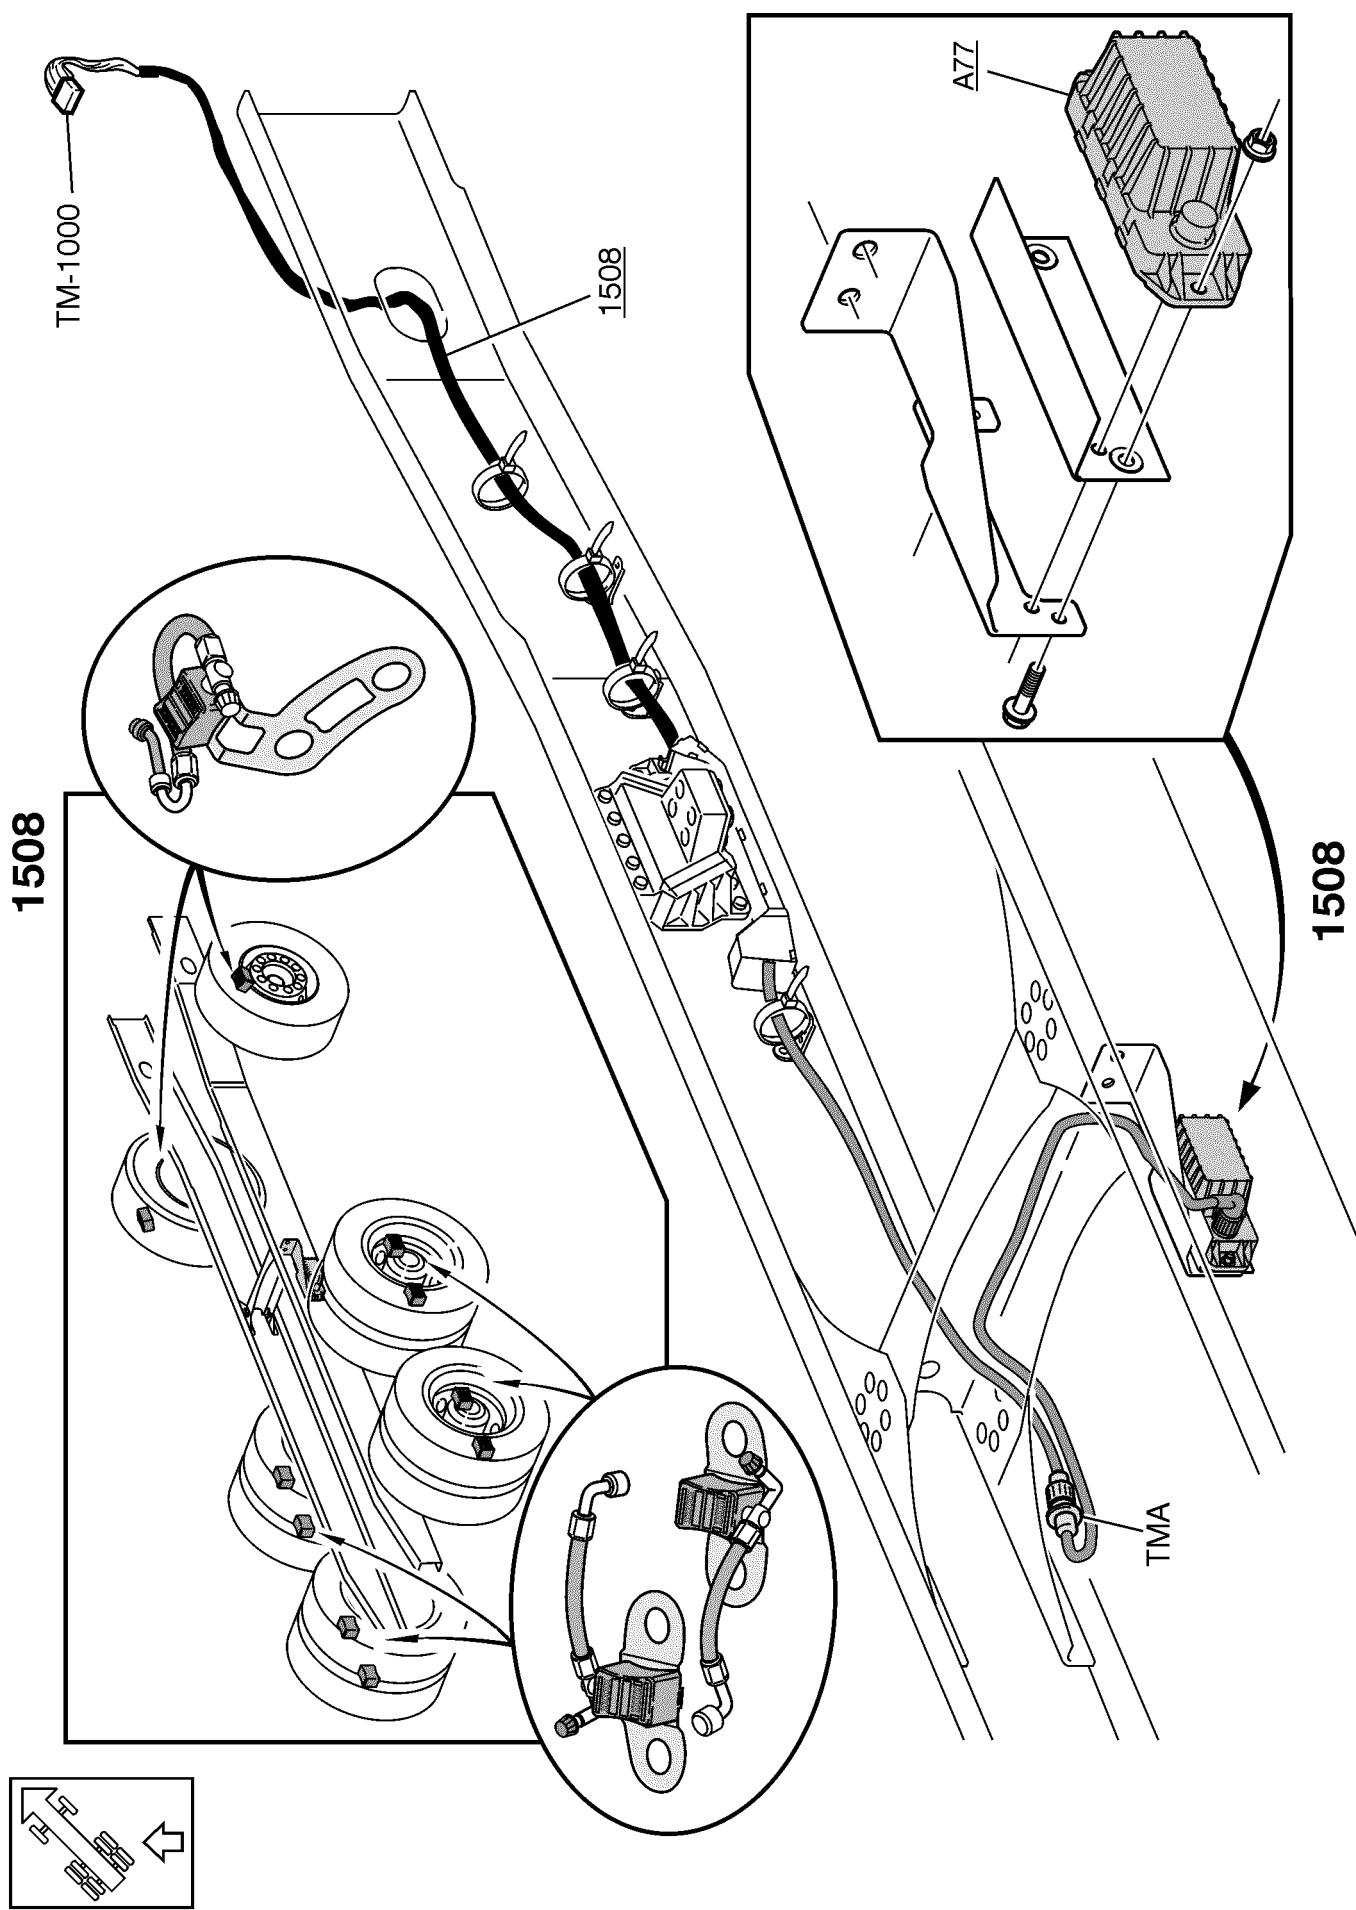


T3019297

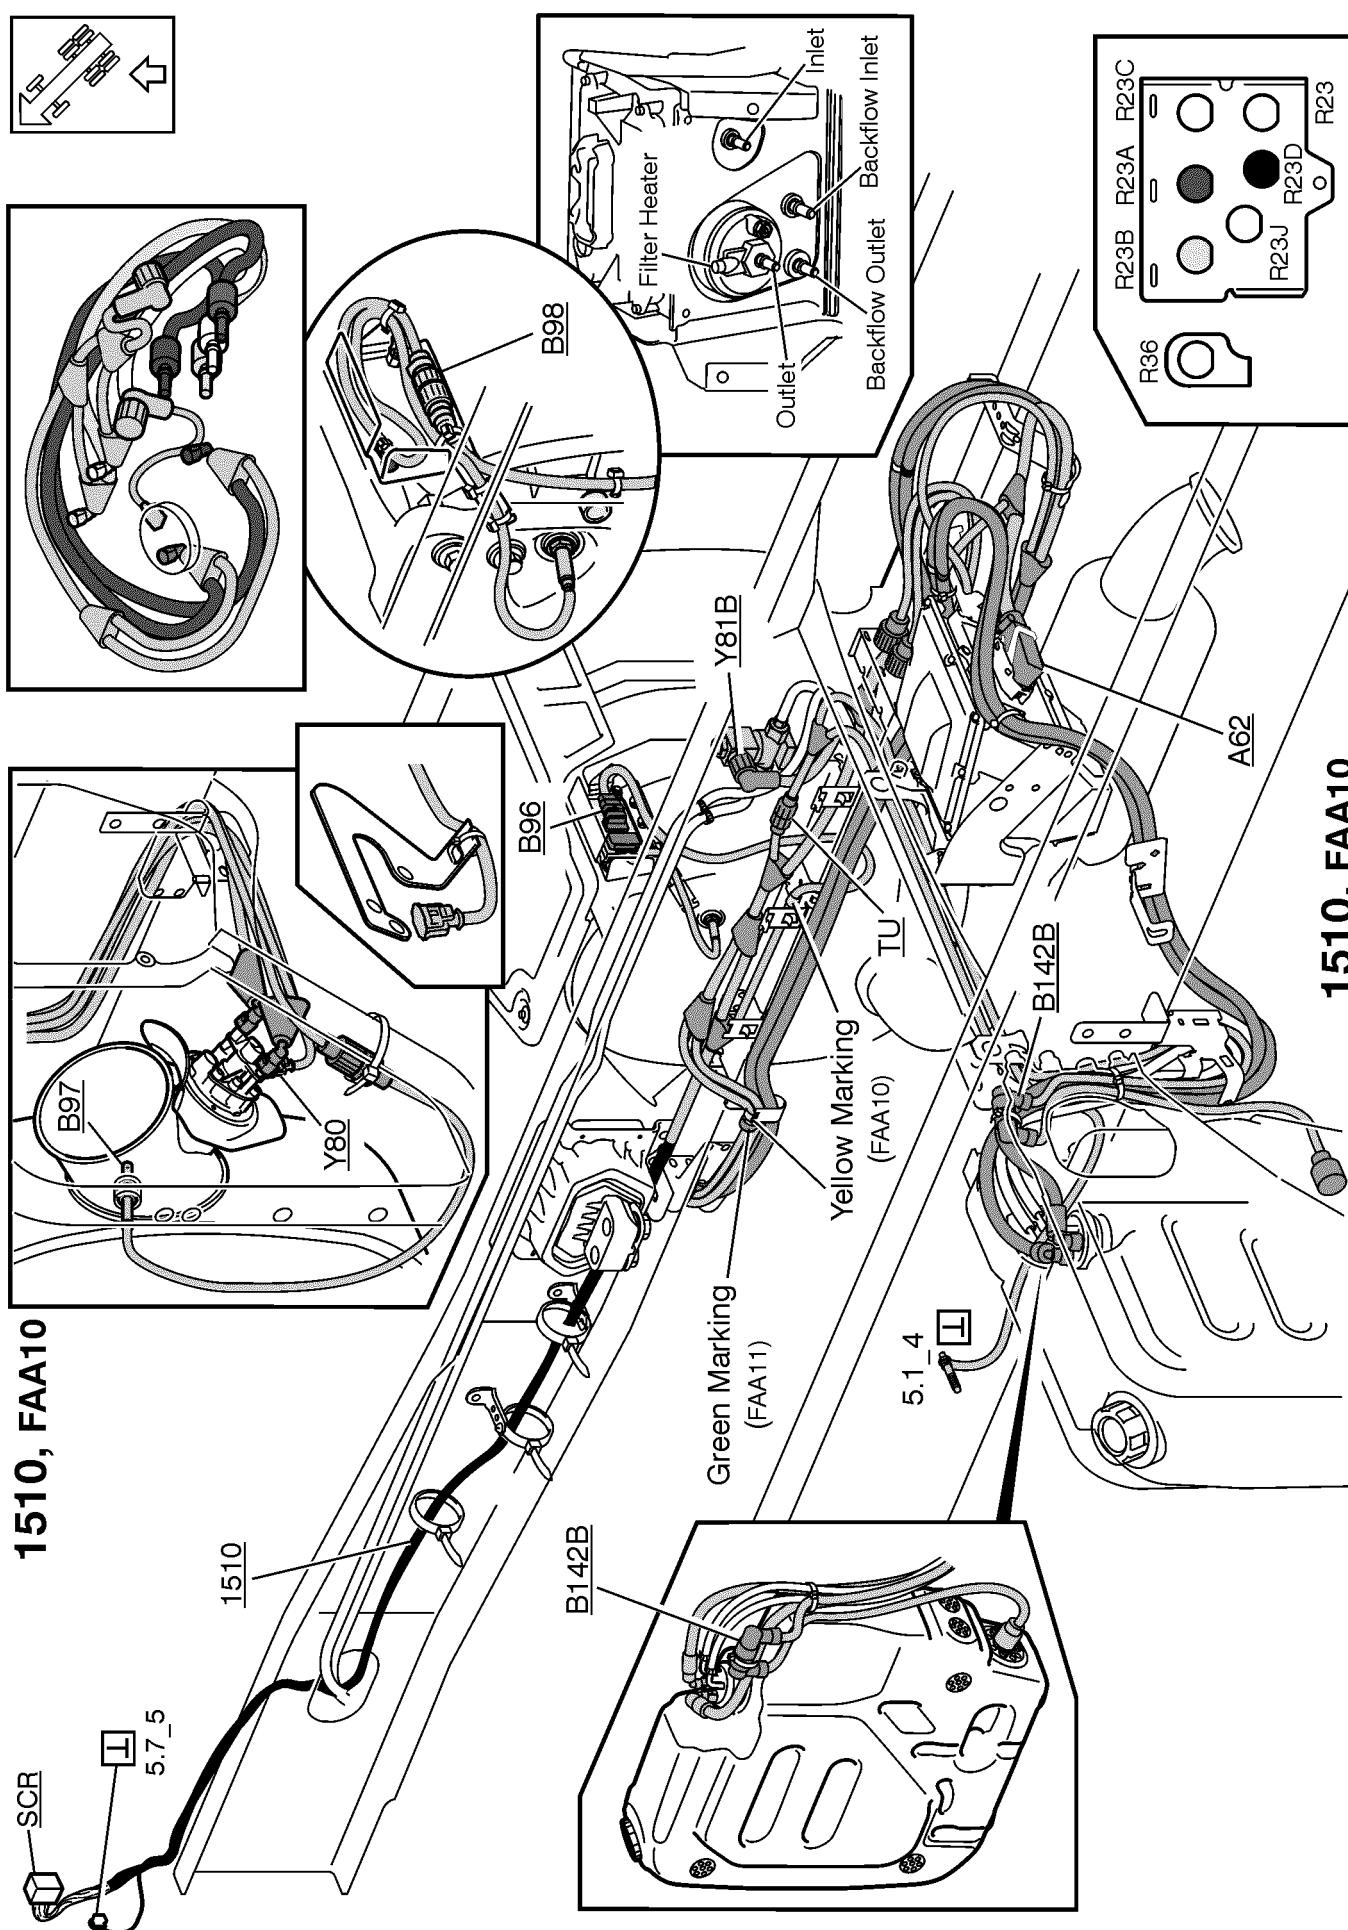



T3019694

1510, FAA10

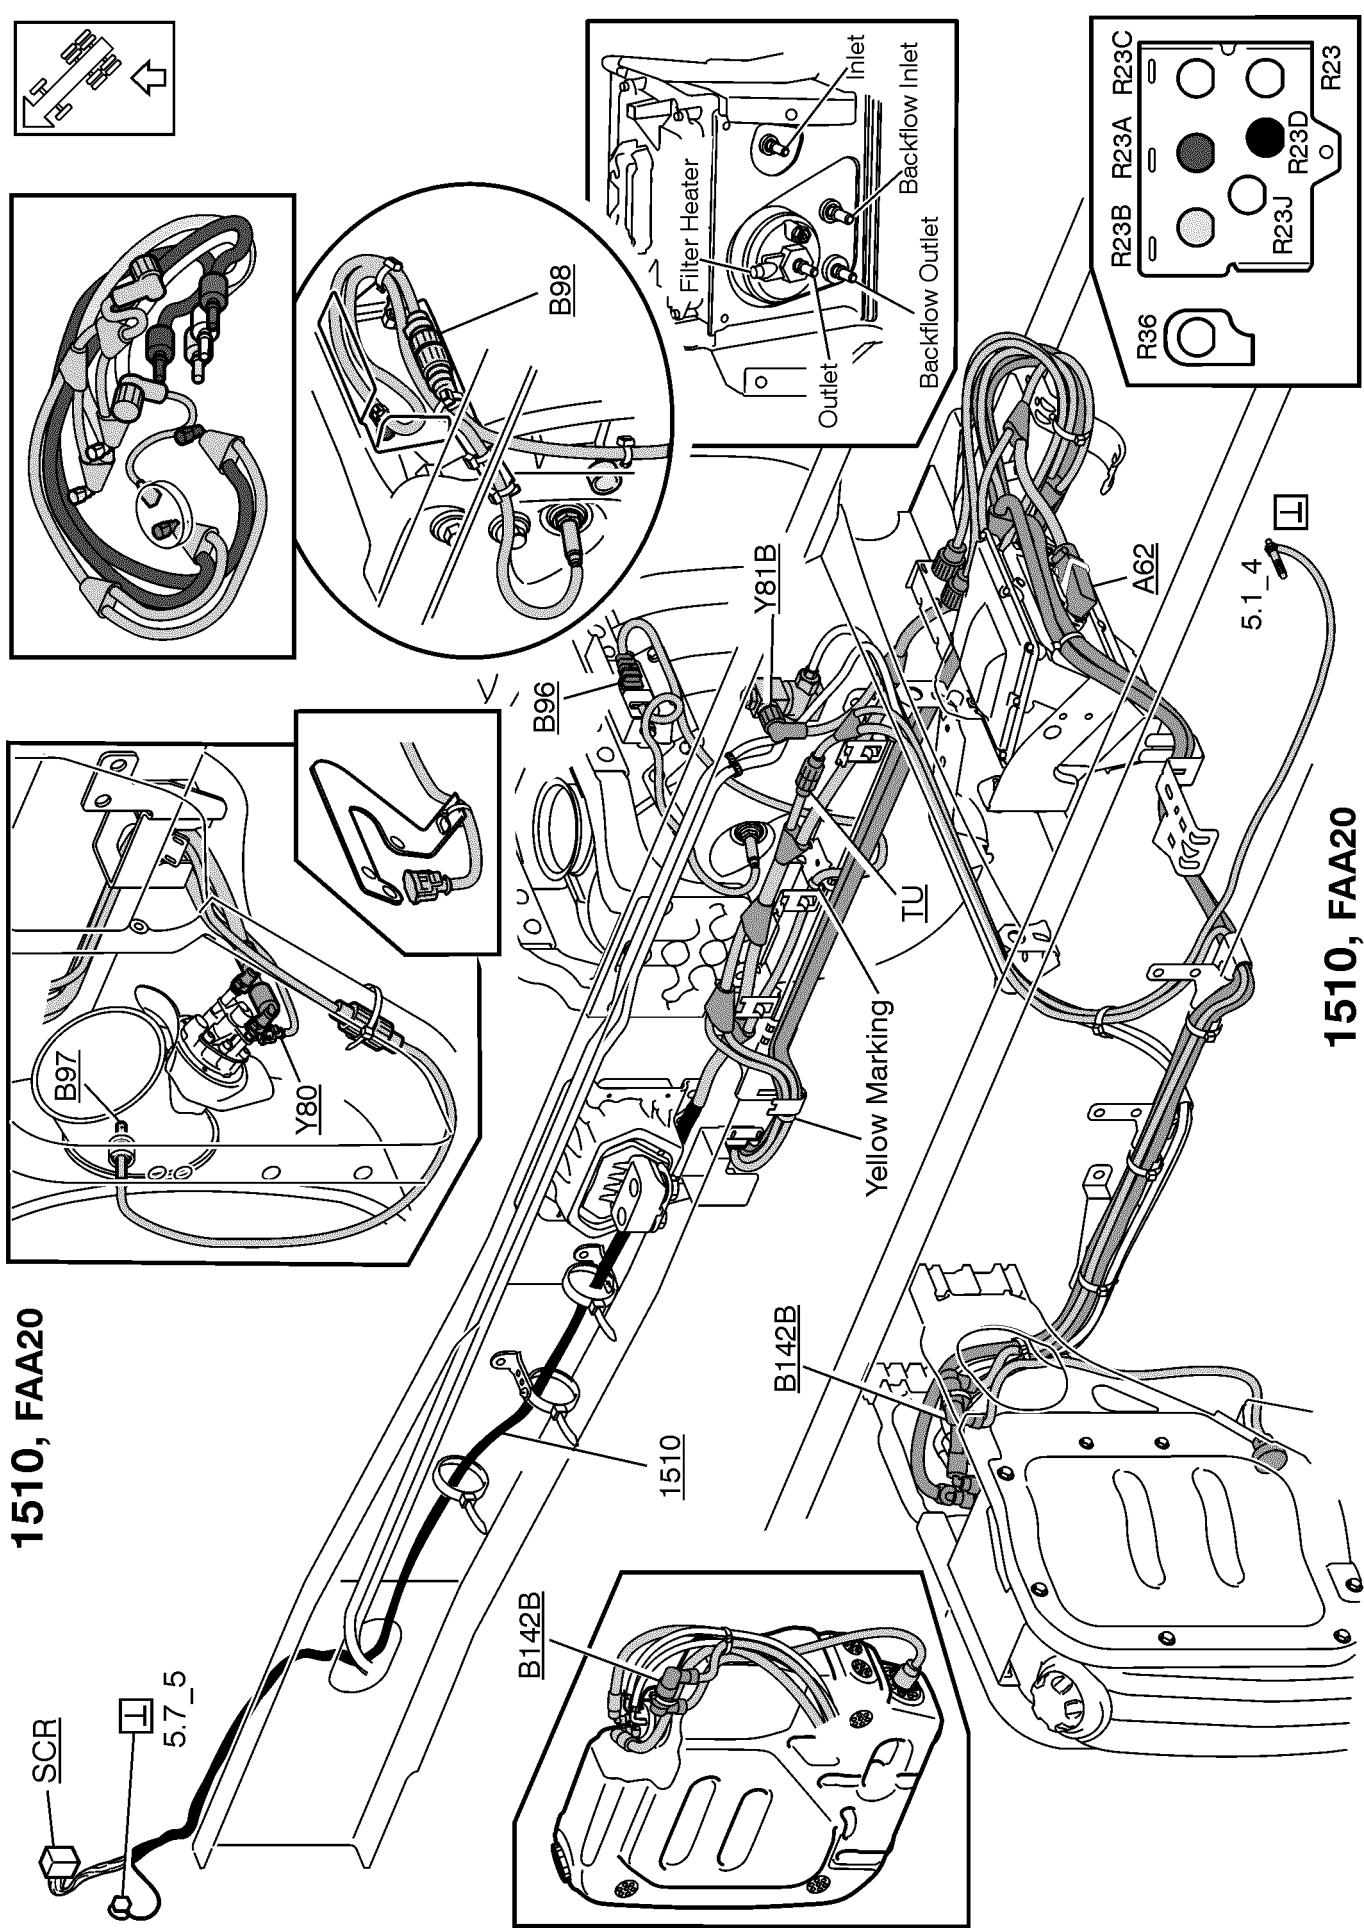

T3019695

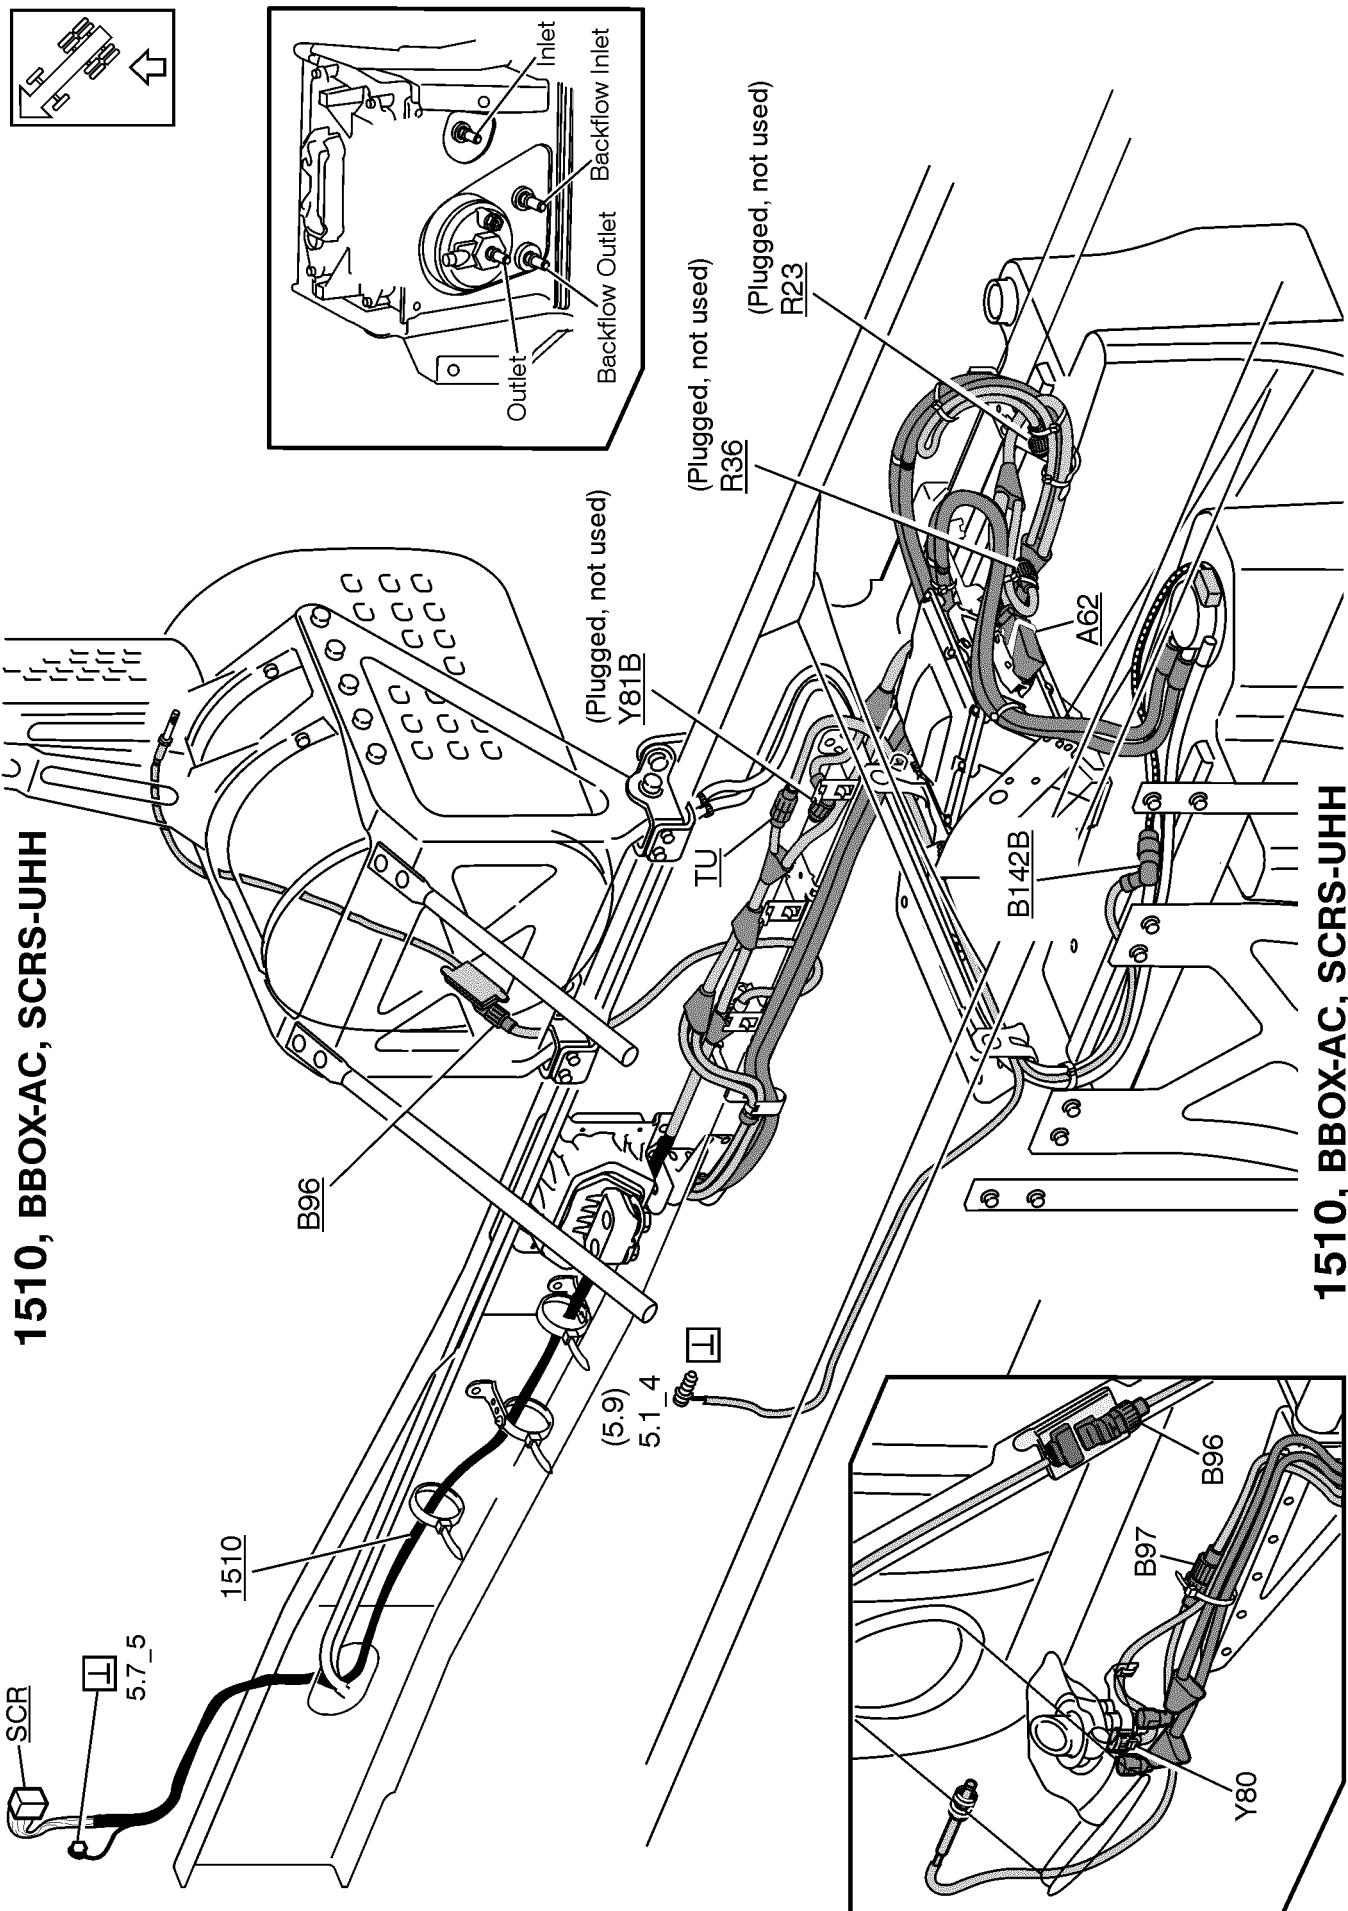

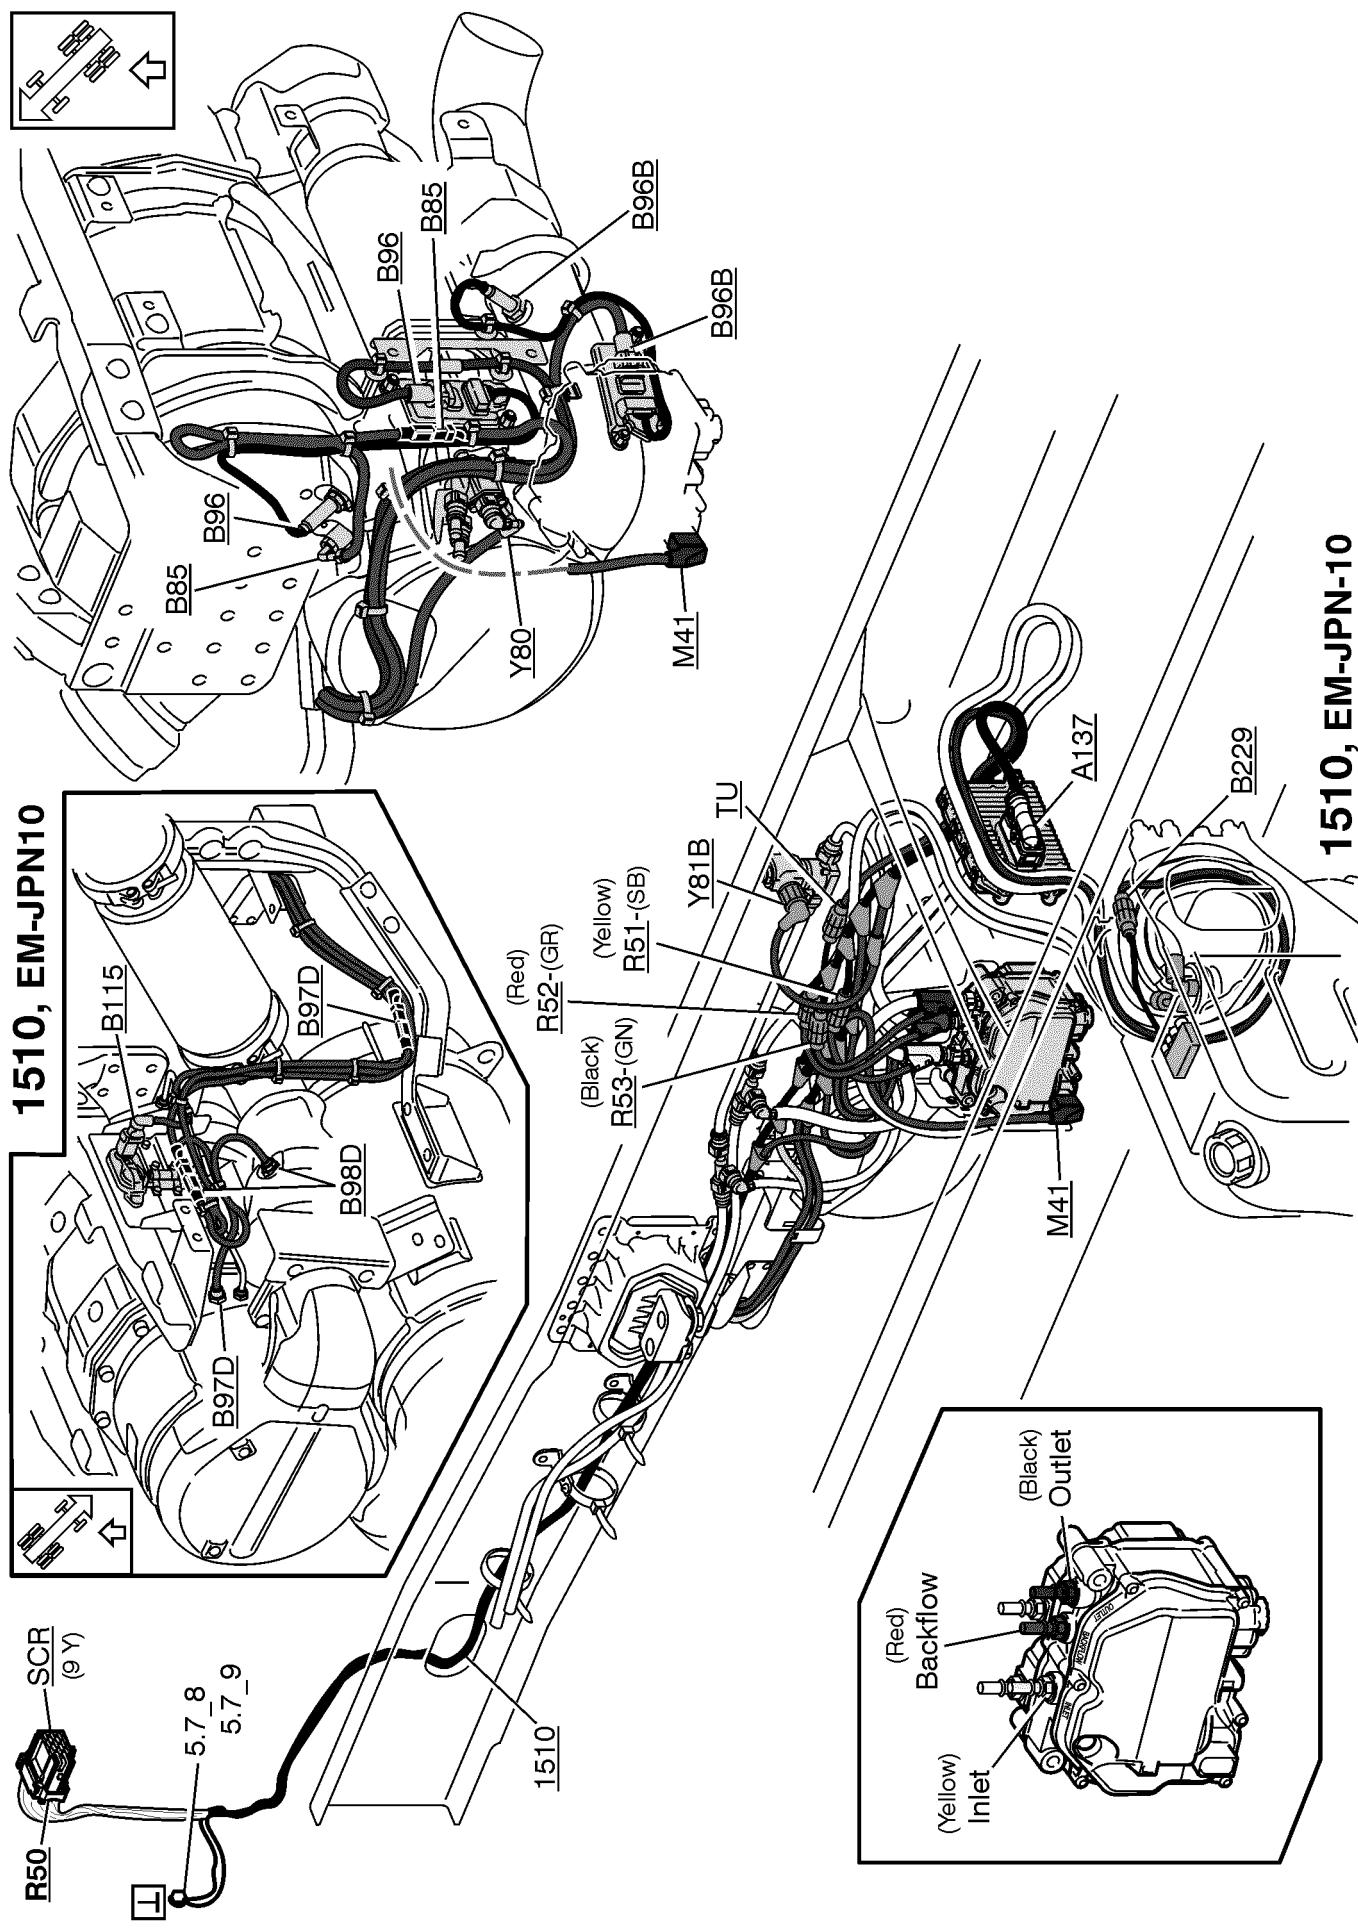


T3056934

Fuses

F01	TPM (Tyre pressure Monitoring)	(OA:2 A)	F30	El. window winder, rhs	(AC:3 B)
F02	Luggage compartment lamp	(IH4:3 A)	F31	Main fuse for fuses 95–97	(AB:3 A)
F03	Loadlight, 5:th wheel lamp	(KE:0 A)	F32	Climate unit	(HG:0 A)
F04	Adj. seat, cab tilt, load- / 5th wheel lamp, interior light	(AC:3 D)	F33	El. cab tilt	(KA:0 A)
F05	Instrumentation, (kl.30)	(BI:3 A)	F34	High power amplifier	(IV:1 A)
F06	Air dryer	(BA:1 B)	F35	El. adjustable seat	(IA:2 A)
F07	Vehicle ECU, immobiliser	(BA:1 B)	F36	Reverse lamp circuit trailer	(GB:4 D)
F08	Instrumentation, TPM (Tyre Pressure Monitoring), Tachograph	(BI:0 A/ OA:2 A)	F37	Telephone, Dynafleet	(AC:3 C)
F09	Range-, area-inhibitors, Dynafleet	(BA:0 A)	F38	Instep lamps	(AC:3 B)
F10	NOx sensor, Road toll system ..	(CR:1 A/ CV:1 A)	F39	El. adjustable rear view mirrors	(AC:3 B)
F11	Gear selector ECU	(DC:0 A/ DM:0 B)	F40	Engine ECU	(CJ:1 A)
F12	Transmission ECU/retarder	(DC:0 A/ DM:1 B)	F41	Engine solenoid valves	(CJ:3 A)
F13	Windscreen wiper	(GM:2 A)	F42	Cooling fan clutch, engine preheating relay	(CJ:2 A)
F14	Cigarette lighter, centre section storage lamp	(IQ:2 A)	F43	BBM (body builder module), Man. main switch BBOX-EF	(BA:1 A)
F15	Water separator heater and water in fuel drain	(CJ:0 A)	F44	Voltage converter 1, radio, rear view camera	(IR:0 A)
F16	Differential lock, power take off	(DQ:0 A/ DU:1 A)	F45	Voltage converter 2, 12 Volt outlet	(IR:2 A)
F17	LCM control	(GA:0 A)	F46	Beacon warning light	(KM:0 A)
F18	Horn, solenoid valve for air horn	(GQ:1 A)	F47	ACC	(BE:0 A)
F19	Climate unit, FMS gateway	(HG:0 A)	F48	ABS/EBS	(EE:0 A/ EF:0 A/ EO:0 A)
F20	Parking heater control	(HI:3 A)	F49	Air suspension/A-ride/J-ride	(FB:1 A/ FB RHD:0 A/ FI:0 A/ FK:1 A/ FL:0 A)
F21	Fan, climate unit	(HY:0 A/ HY RHD:0 A)	F50	Telephone	(IX:0 A)
F22	Interior lamps	(IH:1 A/ IH3:3 A)	F51	Hydraulic steered axle	(FO:1 A)
F23	Air suspension	(FB:1 A)	F52	Functions in key position "R", engine preheating	(AC:1 A)
F24	Air dryer, parking heater ADR, el. heated mirrors	(FQ:0 A)	F53	Light sign	(KI:1 A)
F25	Supply ABS/EBS trailer	(CP:4 A/ GG:4 A/ ZA RHD:4 A)	F54	Dynafleet, FMS gateway	(BU:0 A/ BX:0 A)
F26	Body builder fuse box	(ME:3 B/ MF:3 B)	F55	SRS airbag, safety belt tensioner	(IS:0 A)
F27	El. window winder lhs, el. heated mirrors	(AC:3 B)	F56	Free	(ME:1 A)
F28	Supply ABS/EBS truck	(EE:0 A/ EF:0 A/ EO:2 A)	F57	Gear selector ECU/retarder	(DC:1 A/ DM:1 B)
F29	Coffee machine	(ME:1 A)	F58	Alternator control, ADR battery main switch	(AB:2 A/ AE:4 B)
			F59	Rear view camera	(IZ:0 A)
			F60	Hydraulic steered axle	(FO:1 A)
			F61	Foldable rear view mirror arm, Japan, burglar alarm, Volvo link	(IF:0 A)

F62	Fuel heater, thermoline	(FX:0 A/ ME:0 A)	F90	12V converter, ABS trailer/info- module (1007C)	(CP:3 C)
F63	Alcolock system	(IK:0 A)	F91	Tachograph, ADR	(AE:0 D/ AF:2 C) (1435)
F64	Road toll system	(BZ:0 A)	F93	Main fuse for fuses 95–97	(AB:3 D/ AE:0 D/ AF:0 C) (1435)
F65	Central lubrication system	(FU:0 A)	F94	AdBlue system	(AB:3 D) (1435)
F66	Roof hatch	(IQ:0 A)	F95	Central door lock	(AB:3 B)
F67	Reading lamps, bedlamps	(IH:0 A/ IH3:3 A)	F96	Burglar alarm	(AB:3 B)
F68	Refrigerator	(IQ:3 A)	F97	Parking heater	(AB:3 B)
F69	12-volt outlet	(IR:1 C/ IR:2 C)	F:A39	Fuse in wiring harness (1000)	(IZ:1 B)
F70	Supply ABS/EBS trailer, (kl.15)	(CP:3 A/ GG:3 A/ ZA RHD:3 A)	FM1	Fuse, main, preheating	(AA:1 B)
F71	Extra equipment	(ME:1 A)	FM2	Fuse, main, bogie lift/extra equipment	(AA:1 B/ AE:1 B/ AF:1 A)
F72	Headlamp level regulation system	(GU:0 A/ GU_2:2 A)	FM3	Fuse, main, cab and chassis	(AA:1 B)
F73	Tail lift indication	(NB:2 A)	FM4	Fuse, main, LCM (Light Control Module) partly	(AA:0 B/ AE:1 B/ AF:1 A))
F74	Headlamp high-pressure washer	(GM:1 A)			
F75	El. heated seat and el. ventilated seat	(IA:0 A)			
F76	ADR, D+ short circuit relay, dashboard fan	(AE:4 B)			
F89	Tachograph	(AB:4 D) (1435)			


Relays

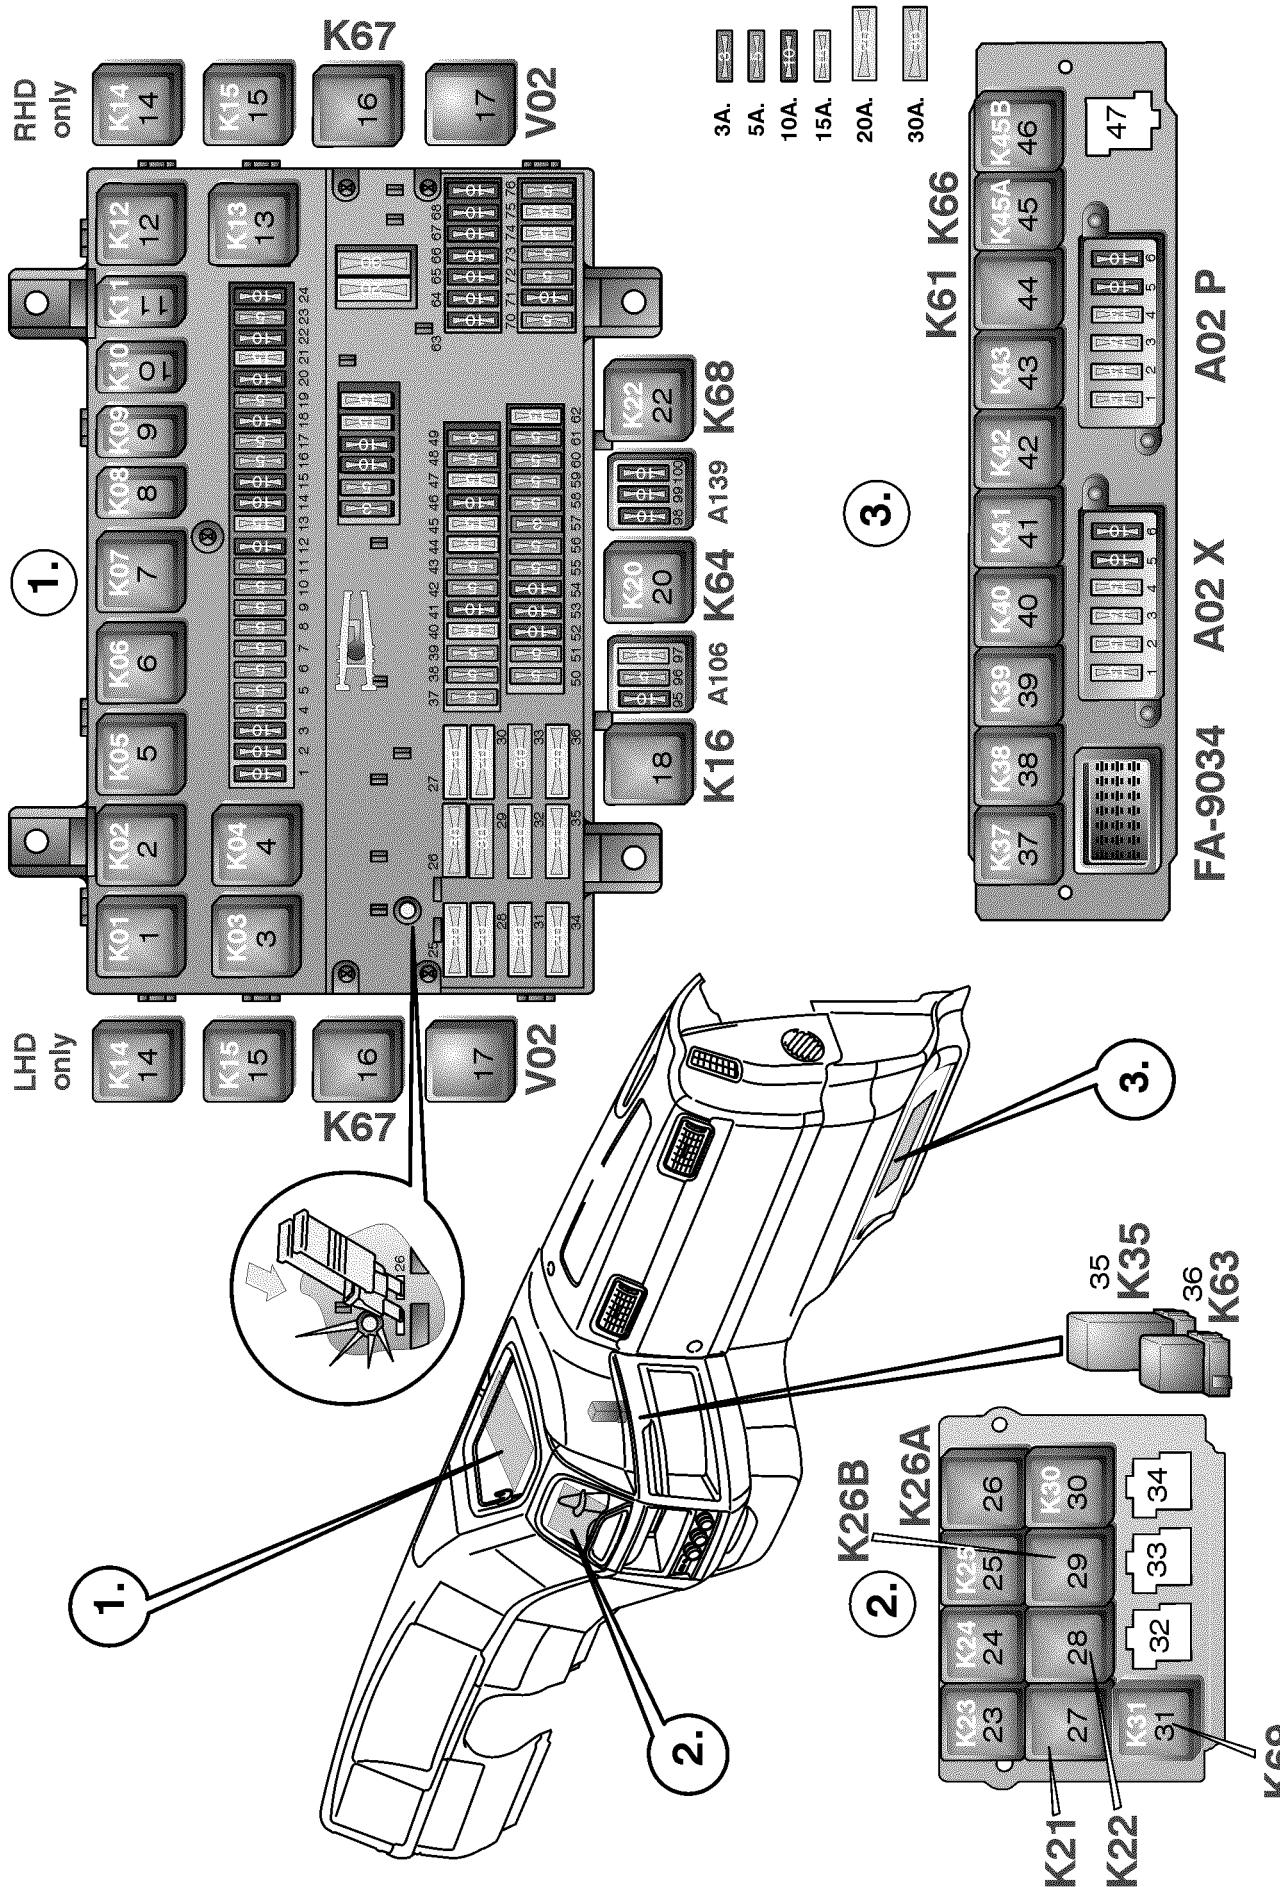


K01	Relay, starting switch, radio position	(AC:3 C)	K30	Relay, beacon warning light	(KM:0 B)
K02	Relay, EMS (Engine Management System)	(BA:1 A)	K35	Relay, headlamp high pressure wash	(GM:0 B)
K03	Relay, starter motor	(AA:2 B/ CJ:4 B)	K37	Relay, parking light	(NA:1 C/ NB:0 C)
K04	Relay, body builder fuse box (kl.15) .	(ME:2 A/ MF:1 A)	K38	Relay, body builder preparation, swapbody lamps	(NA:1 C/ NA_2:1 C/ NB:1 C)
K05	Relay, I-shift/Powertronic/Retarder ...	(DC:0 A/ DM:0 A)	K39	Relay, body builder preparation, plough light, spotlights	(NA:1 C/ NB:1 C)
K06	Relay, fan climate unit	(HY:0 B/ HY RHD:0 B)	K40	Relay, body builder preparation	(NA:3 C/ NA_2:2 C/ NB:3 C)
K07	Relay, intermittent wiper	(GM:1 C)	K41	Relay, body builder preparation, swapbody	(NA:2 C/ NB:2 C)
K08	Relay, gearbox area inhibitor	(BA:1 A)	K42	Relay, body builder preparation, spotlights	(NI:1 B)
K09	Relay, interior lamps	(IH:2 A/ IH3:3 A)	K43	Relay, body builder preparation, external start	(NC:3 C)
K10	Relay, fifth wheel-, working-light	(KE:0 C)	K45A	Relay, body builder preparation, dual speed	(NU:2 B)
K11	Relay, air suspension	(FB:1 B)	K45B	Relay, body builder preparation, dual speed	(NU:2 C)
K12	Relay, reverse light, trailer	(GB:4 D)	K48	Power relay, engine preheating	(CJ:3 B)
K13	Relay, alternator controlled	(AA:4 B)	K49	Power relay, bogie lift motor	(FI:3 B/ FK:3 D)
K14	Time delay relay, bogie lift, A-ride	(FI:1 B/ FK:1 C)	K51	Power relay, battery main switch	(AB:0 C)
K15	Time delay relay, bogie lift, A-ride, with axle load limiter	(FK:2 C)	K61	Relay, auxiliary reverse light, truck ...	(NA:0 C/ NA_2:3 B/ NB:0 C)
K16	Relay, bogie lift, A-ride, with axle load limiter	(FK:1 C)	K63	Relay, ACC Adaptive cruise control ..	(BE:0 B)
K20	Relay, D+ short-circuit, (ADR-trucks only)	(AE:4 D)	K64	Relay, man. main switch BBOX-EF ..	(AB:1 C)
K21	Relay, el. adjustable seat	(IA:2 B)	K65	Power relay, starter motor pre-relay .	(AA:1 D/ CO:2 B)
K22	Relay, climate fan, 1:st speed (by parking heater)	(HY:1 B/ HY RHD:0 B)	K66	Relay, tail lift indication	(NB:2 C)
K23	Relay, cab tilt	(KA:0 C)	K67	Relay, rainsensor, high speed wiper .	(GM:3 C)
K24	Relay, central lubrication	(FU:0 B)	K68	Relay, 24V, outlet	(IR2:1 A)
K25	Relay, light sign	(KI:1 C)	K69	Relay, fuel heater, thermoline	(FX:0 C)
K26A	Relay, foldable rear view mirror arm, Japan	(IF:0 C)	K70A	Relay, ADR/SLP	(AF:0 B)
K26B	Relay, foldable rear view mirror arm, Japan	(IF:1 C)	K70B	Relay, ADR/SLP	(AF:0 D)

Wiring harness illustration index


1000	Wiring harness, instruments	"", page 136
1006	Wiring harness, roof	"", page 145
1007	Wiring harness, floor	"", page 149
1018	Wiring harness, air conditioning	"", page 155
1030	Wiring harness, engine	"", page 156
1037	Wiring harness, bogie lift	"", page 165
1040	Wiring harness, frame	"", page 167
1047	Wiring harness, roof beacon light	"", page 169
1056	Wiring harness, air dryer	"", page 171
1062	Wiring harness, parking heater, frame	"", page 172
1063	Wiring harness, trailer connections	"", page 173
1072	Wiring harness, air suspension chassis	"", page 178
1077	Wiring harness, side marking lamps	"", page 183
1083	Wiring harness, door	"", page 184
1086	Wiring harness, ABS chassis	"", page 186
1401	Wiring harness, solenoid valves	"", page 195
1403	Wiring harness, retarder	"", page 199
1435	Wiring harness, main switch	"", page 200
1436	Wiring harness, roof sign lighting	"", page 169
1458	Wiring harness, front wheel drive	"", page 207
1460	Wiring harness, cab-battery box	"", page 200
1470	Wiring harness, el.operated mirror arch	"", page 219
1472	Wiring harness, load indicator	"", page 208
1476	Wiring harness, cab-engine	"", page 156
1493	Wiring harness, power steering	"", page 209
1494	Wiring harness, gearbox	"", page 212
1499	Wiring harness, cab-gearbox	"", page 212
1501	Wiring harness, upper front	"", page 215
1502	Wiring harness, lower front left	"", page 215
1503	Wiring harness, lower front right	"", page 217
1504	Wiring harness, firewall	"", page 219
1505	Wiring harness, body builder connections	"", page 220
1506	Wiring harness, demountable (swap-body)	"", page 220
1507	Wiring harness, ESP chassis	"", page 221
1508	Wiring harness, TPM	"", page 222
1510	Wiring harness, SCR	"", page 223

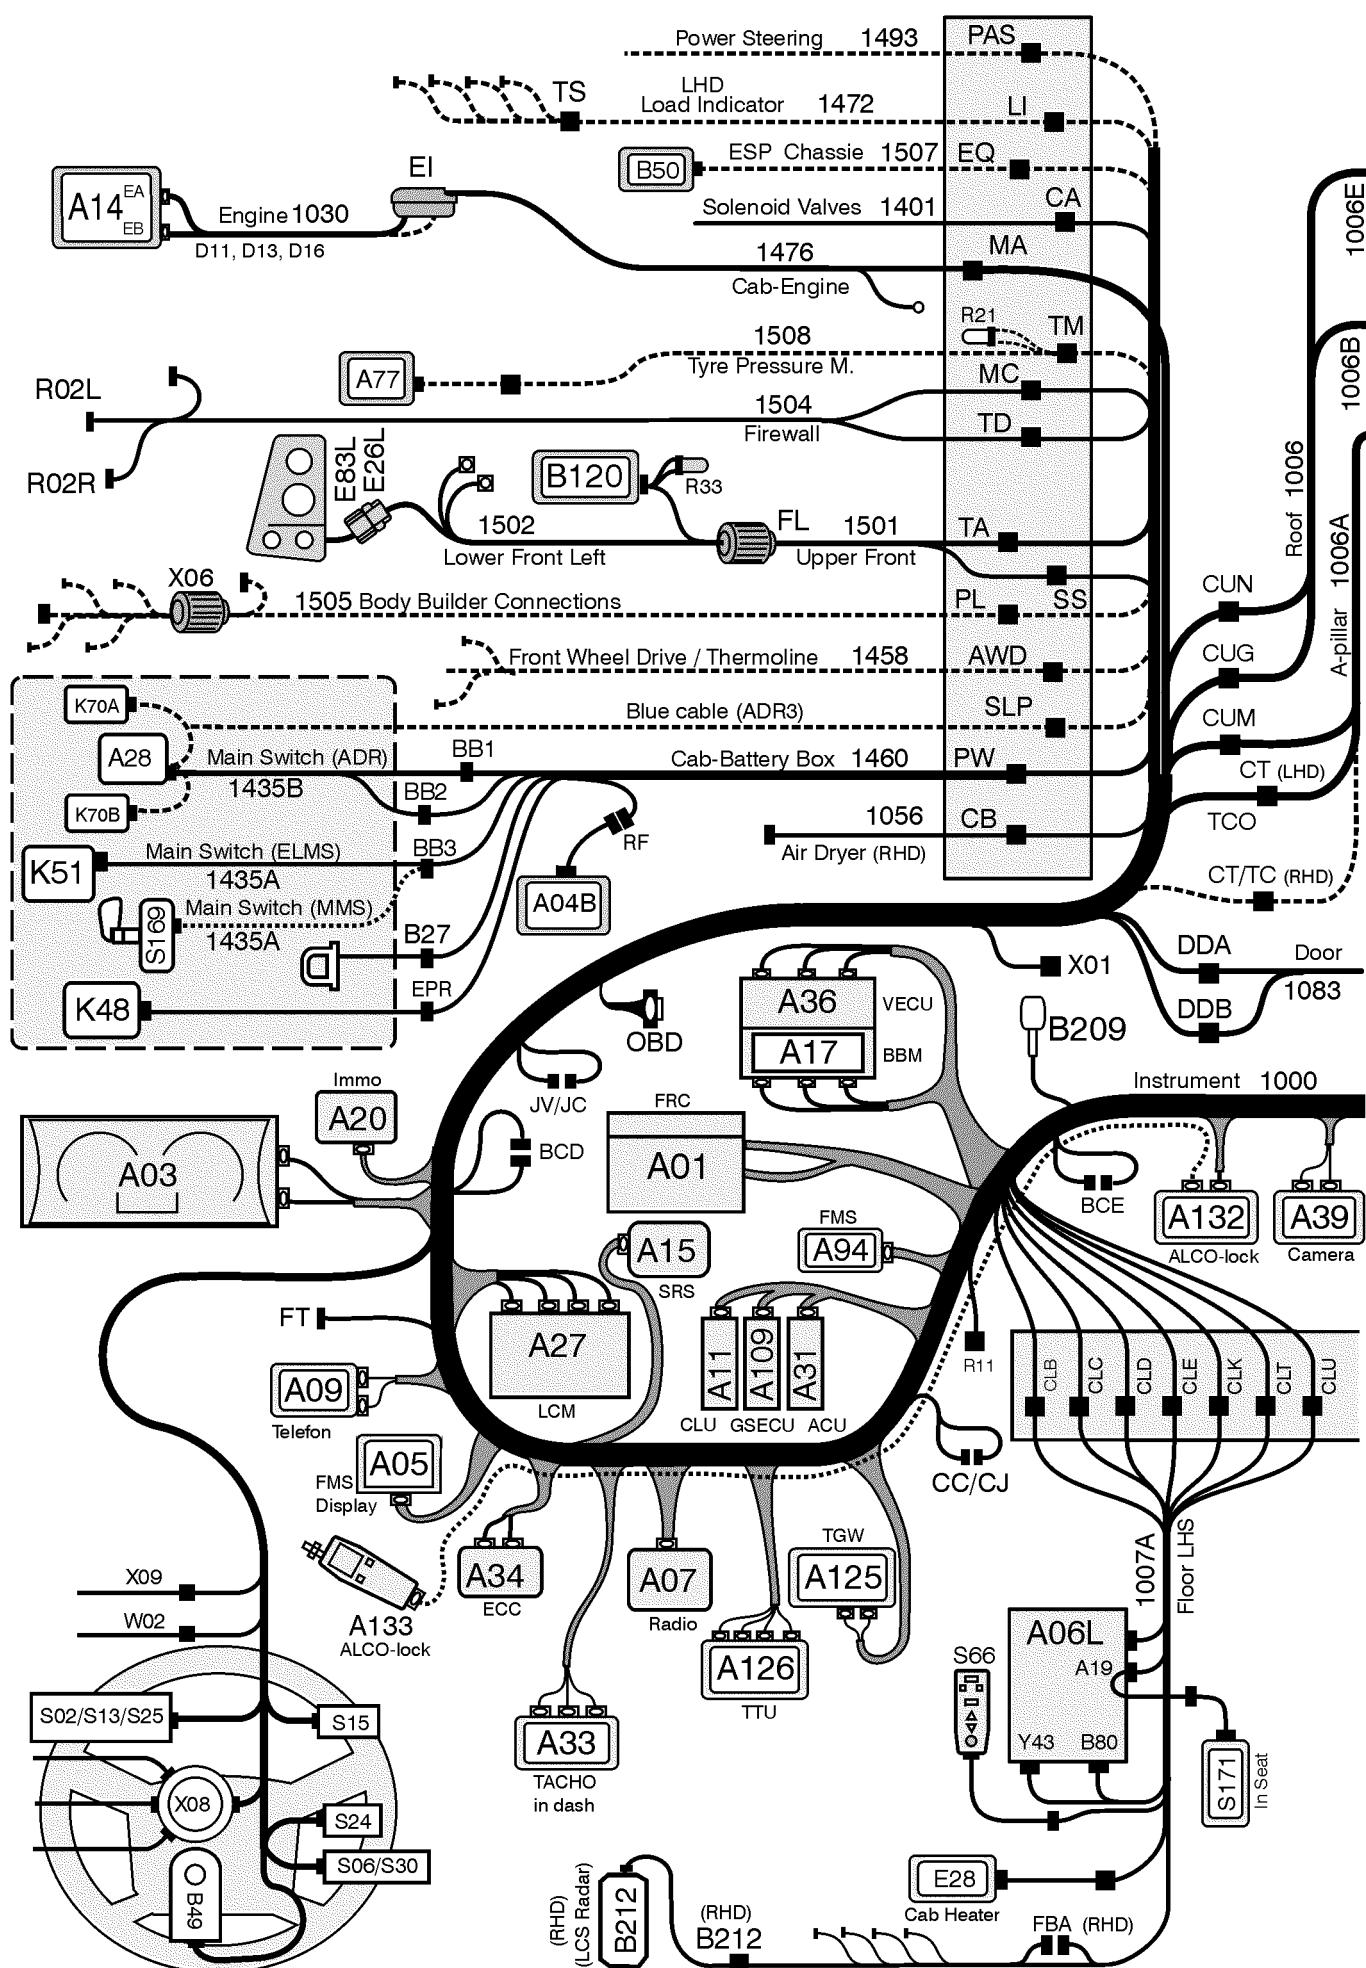


T3059955

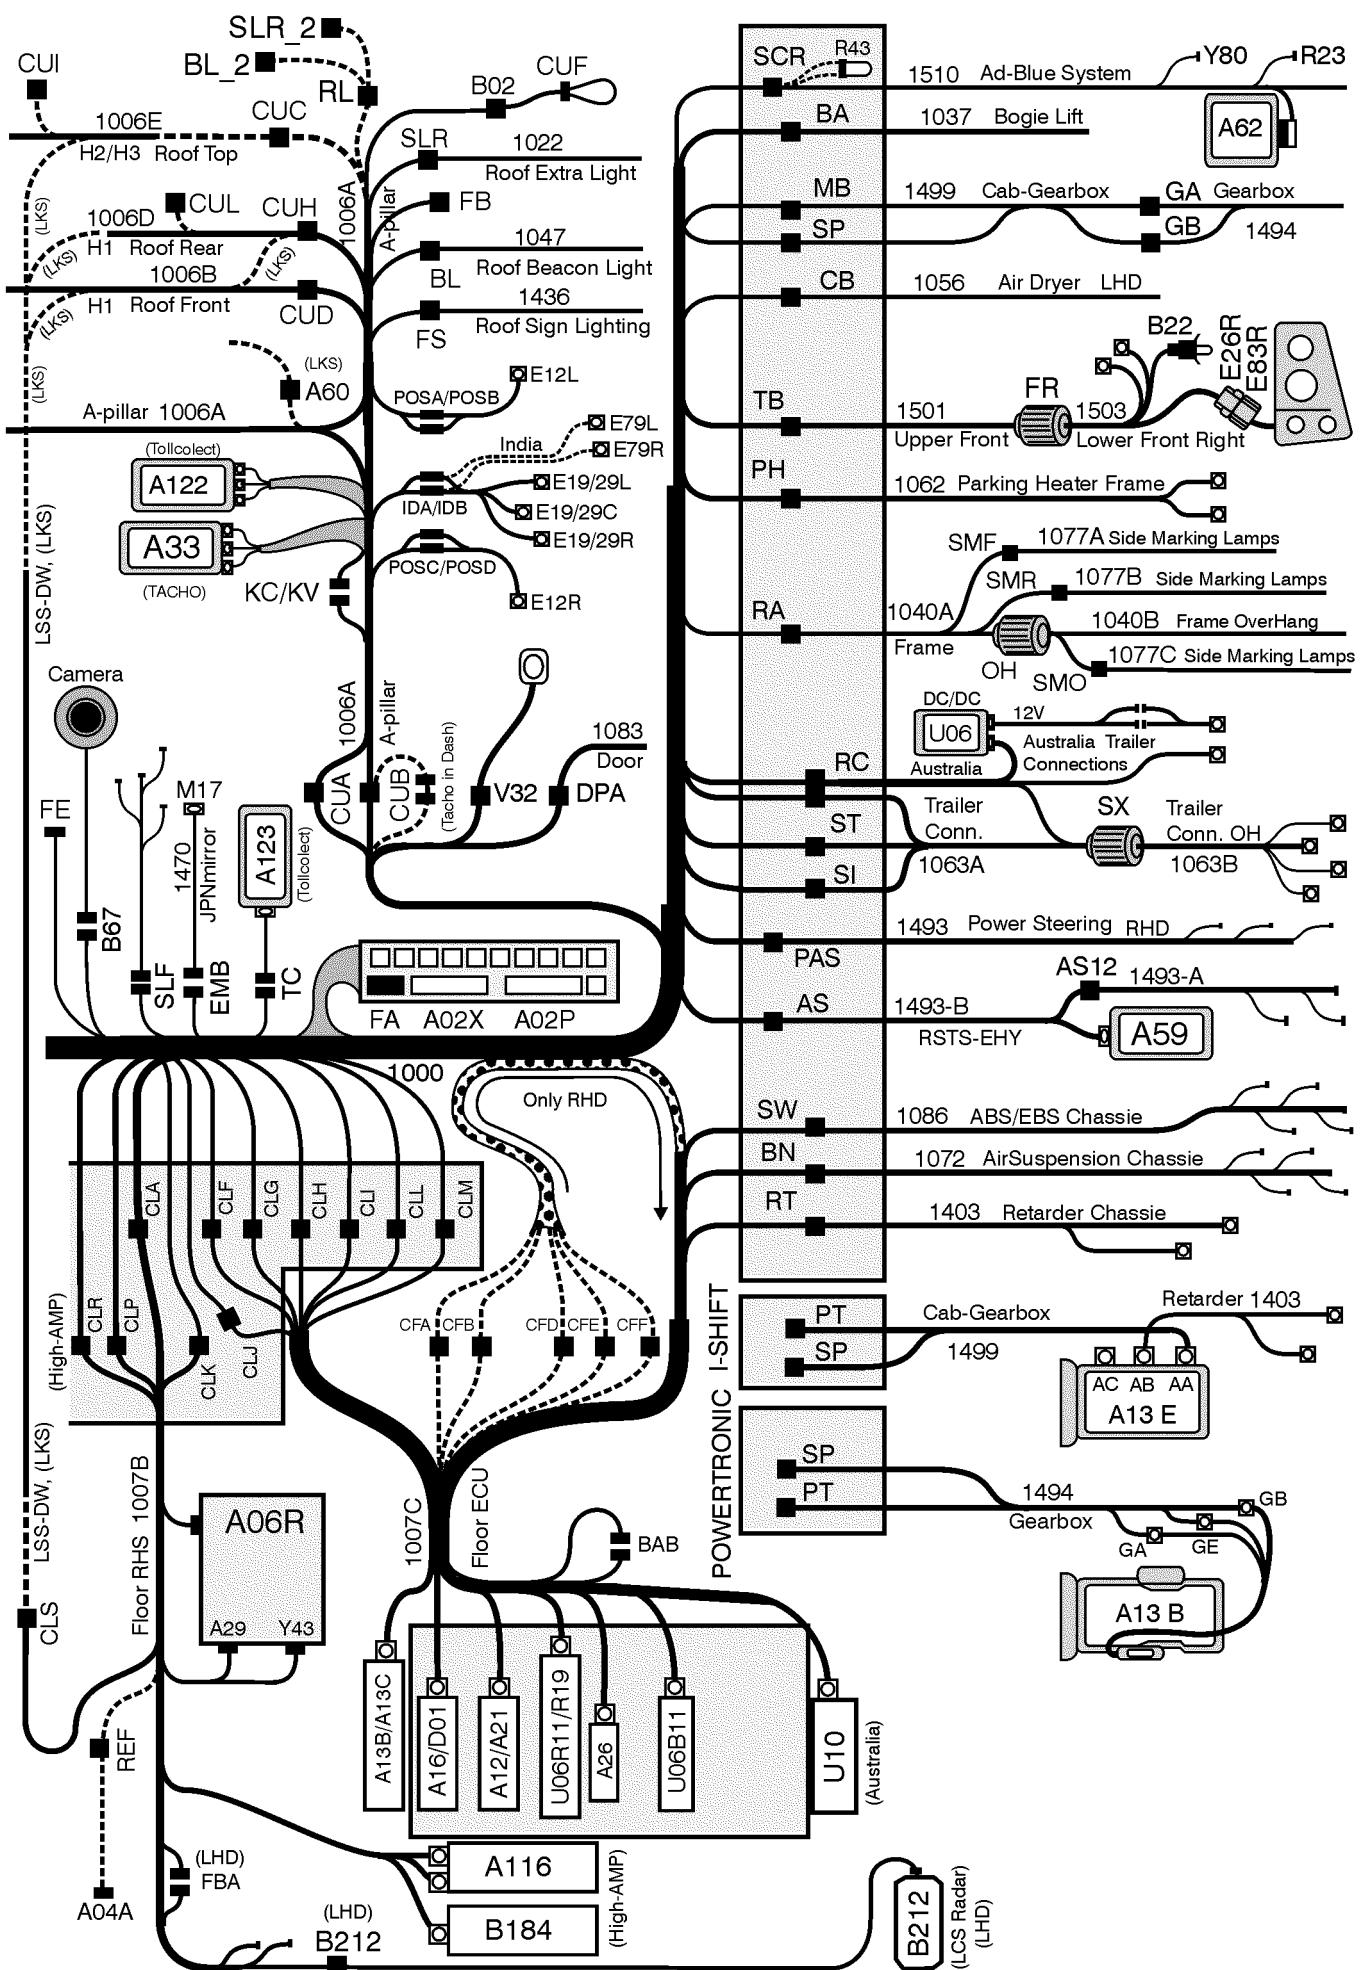

Ground connections

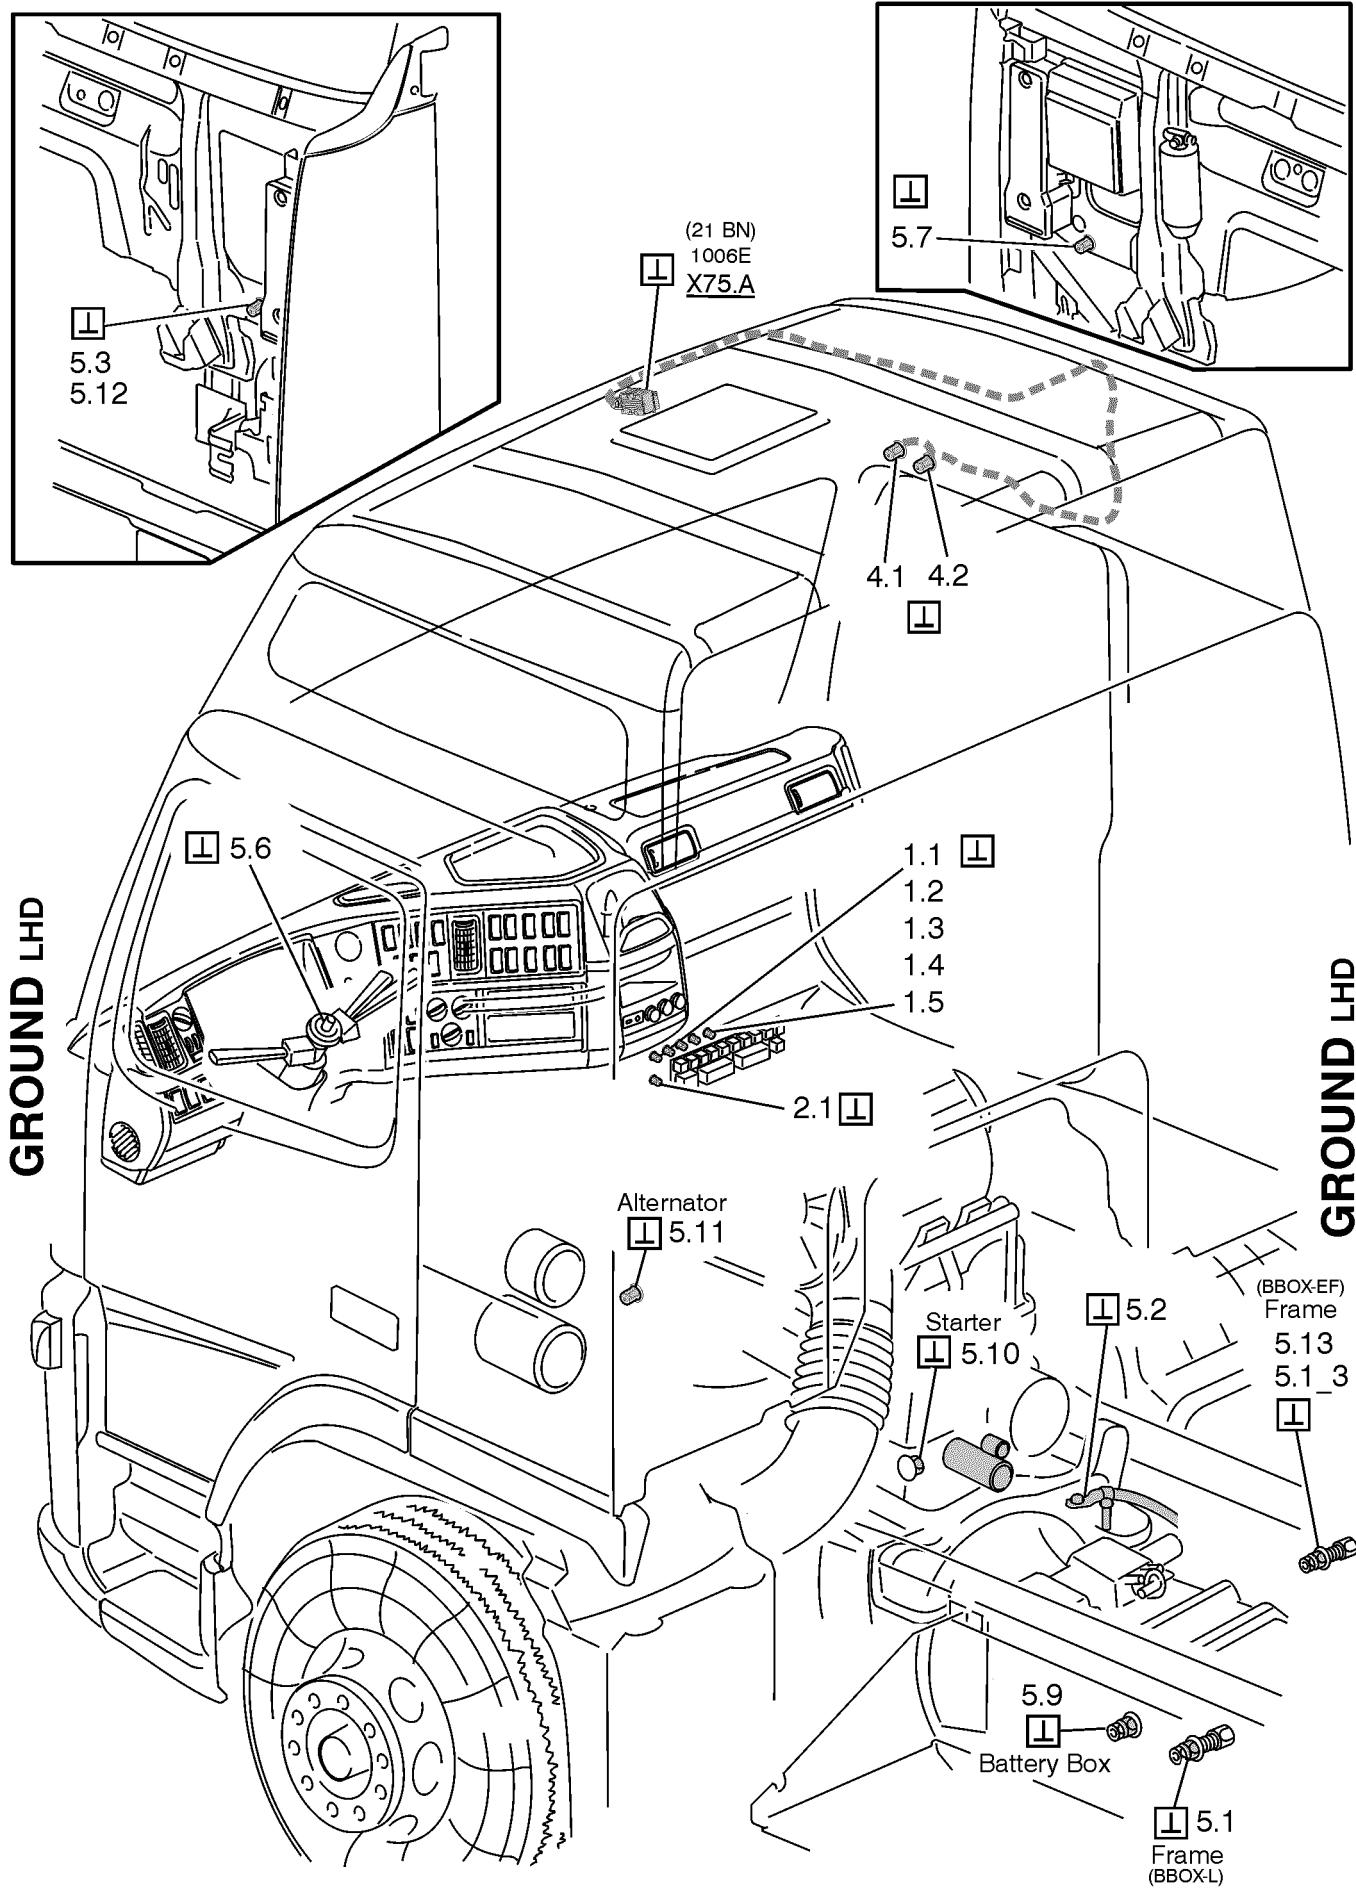

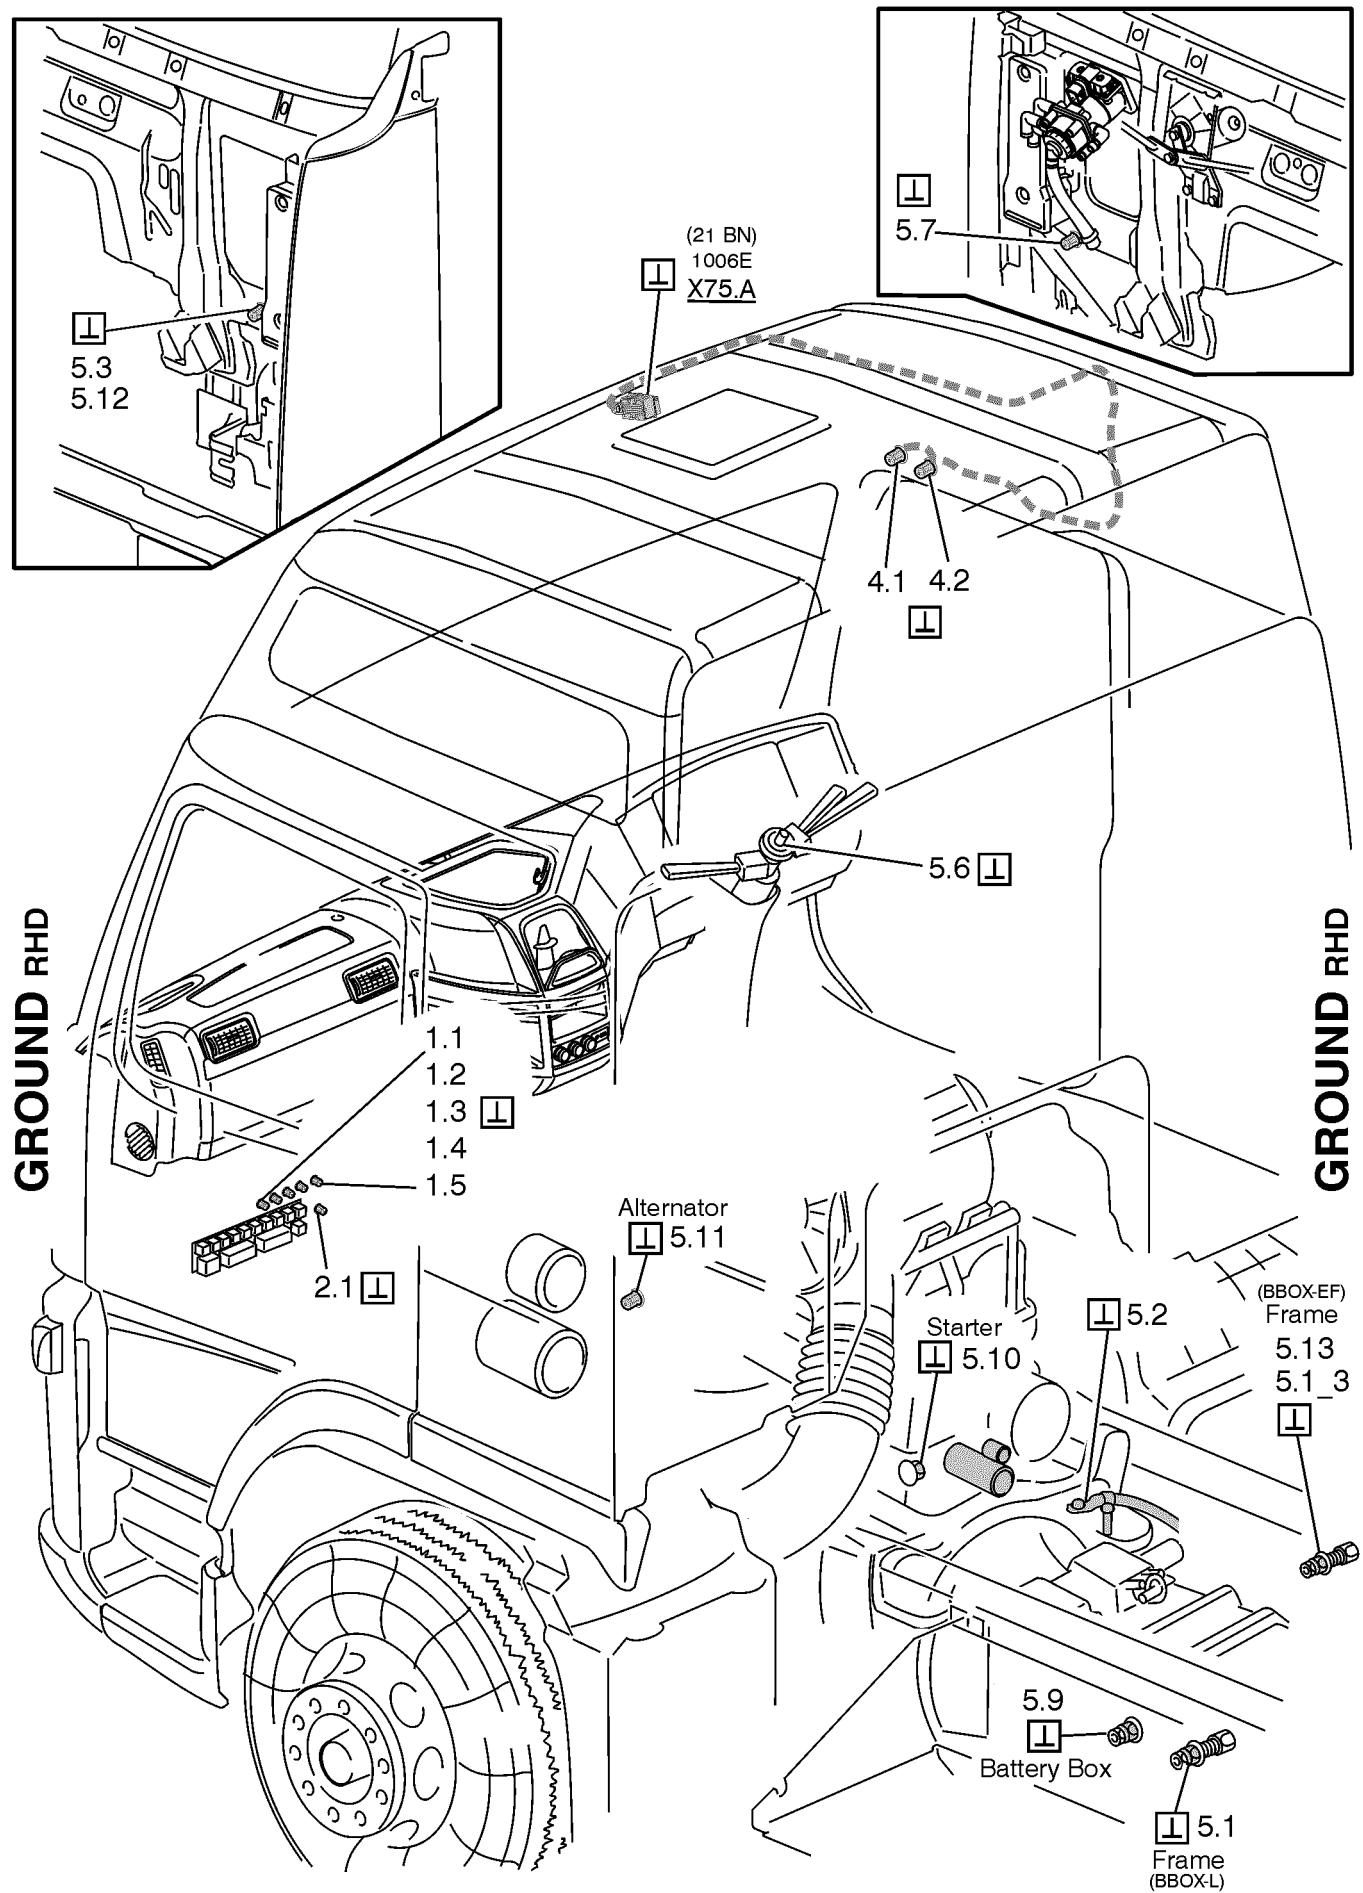

List of ground connections

1.1	(IR:1 E)	2.1_G	(BE:0 C)	5.13	(AA:0 D)
1.1_A	(IR:1 E)	4.1_1	(GA:1 E)	5.13	(AB:1 D)
1.1_A	(IU:0 E)	4.1_1	(GA:4 E)	5.2	(AA:0 E)
1.1_B	(IR:1 E)	4.1_1	(GL2:0 C)	5.2	(AF:1 E)
1.1_C	(IR:2 E)	4.1_2	(KI:2 C)	5.3	(AA:0 E)
1.1_D	(IR2:1 E)	4.1_3	(KI:2 E)	5.3	(AF:0 E)
1.2_A	(BA:1 E)	4.1_4	(GL:1 D)	5.4	(FI:3 D)
1.2_B	(IS:0 E)	4.1_5	(IH:0 E)	5.4	(FK:3 E)
1.2_C	(FX:0 D)	4.1_6	(BZ:0 D)	5.6	(GQ:1 E)
1.3	(AE:4 E)	4.1_7	(BE:0 D)	5.7_1	(GE:1 D)
1.3_A	(BU:0 E)	4.1_8	(IH3:2 E)	5.7_1	(GK:1 D)
1.3_B	(BU:2 E)	4.1_8	(IH4:2 D)	5.7_2	(GH:2 D)
1.4	(AA:3 E)	4.1_9	(YA:4 E)	5.7_2	(GK:1 D)
1.4	(AC:2 D)	4.2_1	(BN:1 D)	5.7_3	(GH:2 D)
1.4	(FL:1 E)	4.2_2	(HI:1 B)	5.7_3	(GK:0 D)
1.4	(ZA RHD:1 C)	4.2_4	(BN:1 D)	5.7_4	(GG:2 C)
1.4_B	(AA:4 E)	4.2_5	(KM:0 D)	5.7_5	(CV:1 C)
1.4_C	(HZ:1 D)	4.2_6	(NI:3 E)	5.7_6	(CV:0 C)
1.4_E	(IV:1 E)	4.2_9	(IR:3 E)	5.7_8	(CR:1 B)
1.5	(FL:1 E)	5.1	(AA:0 E)	5.7_9	(CR:2 C)
1.5_A	(HE:1 D)	5.1	(AB:0 E)	5.9_1	(AA:0 E)
1.5_B	(GA:3 B)	5.1	(AF:1 E)	5.9_1	(AB:0 D)
2.1_A	(CP:4 D)	5.10	(AA:1 E)	5.9_1	(AB:2 D)
2.1_B	(ZA RHD:1 D)	5.11	(AA:2 E)	5.9_1	(AE:0 E)
2.1_C	(NI:0 E)	5.1_1	(NA:4 D)	5.9_3	(AB:2 D)
2.1_E	(NA:2 D)	5.1_1	(NB:4 D)	5.9_4	(AE:0 E)
2.1_E	(NA_2:1 E)	5.1_2	(NA:4 D)	5.9_8	(AB:0 D)
2.1_E	(NA_2:4 C)	5.1_2	(NB:4 D)		
2.1_E	(NB:2 D)	5.12_1	(CJ:0 D)		
2.1_F	(BE:1 C)	5.12_2	(CJ:0 D)		

List of connectors

ADR:1	(AE:1 C)	BA:2	(FI:2 C)	BB3:1	(AA:0 A)
ADR:1	(AE:2 C)	BA:2	(FK:3 D)	BB3:2	(AB:4 C)
ADR:1	(AF:3 B)	BA:3	(FI:0 C)	BB3:3	(AB:0 B)
ADR:2	(AE:1 C)	BA:3	(FK:0 D)	BB3:3	(AB:2 C)
ADR:2	(AE:2 C)	BA:3	(FL:0 C)	BB3:4	(AB:0 B)
ADR:2	(AF:3 B)	BA:5	(FK:1 D)	BB3:5	(AB:3 C)
ADR:4	(AE:1 C)	BA:6	(FL:0 C)	BB3:6	(AA:0 A)
ADR:4	(AE:2 C)	BA:7	(FI:3 B)	BB3:7	(AB:3 C)
ADR:4	(AF:3 D)	BA:7	(FK:3 C)	BCD:1	(XA:2 B)
ADR:5	(AE:1 C)	BA:8	(FK:1 D)	BCD:2	(XA:3 B)
ADR:5	(AE:2 C)	BA:8	(FL:0 D)	BCD:3	(NX:2 A)
ADR:5	(AF:3 D)	BAB:1	(XA:4 D)	BCD:3	(XB:2 B)
AG:1	(FO:3 C)	BAB:2	(XA:2 D)	BCD:4	(NX:2 A)
AG:2	(FO:3 C)	BAB:3	(XA:3 D)	BCD:4	(XA:2 B)
AG:3	(FO:3 C)	BAB:4	(XA:2 D)	BCD:5	(XA:2 B)
AG:4	(FO:3 C)	BAB:5	(XA:3 D)	BCD:6	(IX:2 D)
AS:1	(FO:1 C)	BAB:6	(XA:2 D)	BCD:7	(XA:3 B)
AS:2	(FO:1 C)	BAB:7	(XB:3 D)	BCD:8	(XA:3 B)
AS:4	(FO:1 B)	BAB:8	(XA:3 C)	BCD:9	(NX:2 A)
AS:5	(FO:1 B)	BAB:9	(XA:2 C)	BCD:9	(XB:3 B)
AS:6	(FO:2 B)	BAB:10	(XB:3 D)	BCD:10	(NX:3 A)
AS:7	(FO:3 B)	BAB:11	(XB:2 D)	BCD:10	(XA:3 B)
AS:8	(FO:3 B)	BAB:12	(XB:2 D)	BCD:11	(XA:4 B)
AS:9	(FO:1 E)	BAB:13	(XB:3 D)	BCD:12	(IX:2 D)
AS12:1	(FO:3 C)	BAB:14	(XB:1 D)	BCD:13	(XA:2 B)
AS12:2	(FO:3 C)	BAB:15	(XB:1 D)	BCD:13	(XB:2 B)
AS12:3	(FO:3 C)	BAB:16	(XB:3 D)	BCD:14	(XA:4 B)
AS12:4	(FO:3 C)	BAB:17	(XB:4 D)	BCD:14	(XB:3 B)
AS12:5	(FO:2 C)	BAB:18	(XB:1 D)	BCD:15	(XA:1 B)
AS12:6	(FO:2 C)	BB1:1	(AE:1 A)	BCD:15	(XB:2 B)
AS12:7	(FO:2 C)	BB1:2	(AE:0 D)	BCD:16	(XA:4 B)
AS12:8	(FO:2 C)	BB1:3	(AE:1 E)	BCD:16	(XB:3 B)
AS12:9	(FO:1 C)	BB1:3	(AF:3 E)	BCE:1	(BM:3 A)
AS12:10	(FO:0 B)	BB1:4	(AE:1 A)	BCE:2	(BM:3 A)
AS12:11	(FO:0 B)	BB1:5	(AE:2 D)	BCE:3	(BM:3 A)
AS12:12	(FO:1 D)	BB1:5	(AF:3 D)	BCE:4	(BM:4 A)
AWD:1	(FX:0 D)	BB1:6	(AE:2 D)	BCE:5	(BM:4 A)
AWD:2	(FX:0 D)	BB1:6	(AF:4 D)	BCE:6	(BM:4 A)
AWD:3	(DU:2 C)	BB1:7	(AE:0 D)	BL:1	(KM:0 C)
AWD:4	(DU:2 C)	BB1:7	(AF:0 D)	BL:3	(KM:0 D)
AWD:5	(DU:4 C)	BB2:1	(AE:0 C)	BL_2:1	(KM:1 D)
AWD:6	(DU:4 C)	BB2:1	(AF:2 B)	BL_2:2	(KM:1 D)
AWD:8	(DU:2 D)	BB2:2	(AE:1 C)	BN:1	(FA:2 A)
AWD:9	(FX:0 D)	BB2:2	(AF:2 B)	BN:2	(FM:1 C)
AWD:10	(FX:0 D)	BB2:3	(AE:1 D)	BN:3	(FA:3 C)
B07_1:1	(BI:2 C)	BB2:3	(AF:3 C)	BN:4	(FA:3 C)
B07_1:2	(BI:2 D)	BB2:4	(AE:1 D)	BN:5	(FA:1 B)
BA:1	(FI:1 C)	BB2:4	(AF:3 C)	BN:6	(FA:1 B)
BA:1	(FK:1 D)	BB2:7	(AB:3 C)	BN:7	(FA:1 B)

BN:9	(FA:0 B)	CA:4	(DQ:0 C)	CJ_3:5	(IX:2 B)
BN:10	(FA:2 C)	CA:5	(GB:3 B)	CFA:1	(EE RHD:0 C)
BN:11	(FA:3 B)	CA:6	(EO:3 B)	CFA:1	(EO RHD:3 C)
BN:12	(FA:2 B)	CA:9	(DU:1 C)	CFA:2	(EE RHD:0 C)
BN:13	(FA:2 B)	CA:10	(EO:3 B)	CFA:2	(EO RHD:3 C)
BN:14	(FA:1 C)	CA:11	(EO:3 B)	CFA:3	(EE RHD:3 C)
BN:15	(FA:1 C)	CA:11	(ZA RHD:1 D)	CFA:3	(EO RHD:1 C)
BN:16	(FA:2 C)	CA:12	(EO:3 B)	CFA:4	(EE RHD:1 C)
BN:16	(FG:1 C)	CA:12	(ZA RHD:1 D)	CFA:4	(EO RHD:1 C)
BN:17	(FA:2 C)	CA:13	(EO:3 B)	CFA:5	(EE RHD:1 C)
BN:18	(FA:2 C)	CA:14	(EO:3 B)	CFA:5	(EO RHD:2 C)
BN:18	(FG:0 C)	CA:15	(EO:3 B)	CFA:6	(EE RHD:3 C)
BN:19	(FA:0 C)	CA:16	(DU:1 D)	CFA:6	(EO RHD:2 C)
BN:20	(FA:1 C)	CA:17	(FU:0 C)	CFA:7	(EE RHD:2 C)
BN:21	(FA:0 C)	CA:18	(FU:0 D)	CFA:7	(EO RHD:2 C)
BN:22	(FA:2 B)	CA:19	(NC:0 C)	CFA:8	(EE RHD:2 C)
BN:23	(FA:3 B)	CA:19	(NU:0 C)	CFA:8	(EO RHD:2 C)
BN:24	(FA:3 C)	CA:19	(NX:0 C)	CFA:9	(EE RHD:4 C)
BN:24	(FM:0 C)	CA:20	(NC:1 C)	CFA:9	(EO RHD:3 C)
BN:25	(FA:3 C)	CA:20	(NU:1 C)	CFA:10	(EE RHD:3 C)
BN_2:1	(FB RHD:3 D)	CA:20	(NX:1 C)	CFA:10	(EO RHD:3 C)
BN_2:2	(FA RHD:3 D)	CB:1	(FQ:0 B)	CFA:11	(EE RHD:3 C)
BN_2:3	(FA RHD:3 D)	CB:2	(FQ:0 D)	CFA:11	(EO RHD:4 C)
BN_2:4	(FA RHD:3 D)	CB:2	(ZA RHD:1 B)	CFA:12	(EE RHD:4 C)
BN_2:5	(FA RHD:1 B)	CB:3	(BA:0 D)	CFA:12	(EO RHD:4 C)
BN_2:6	(FA RHD:1 B)	CB:3	(FQ:2 B)	CFA:13	(EE RHD:0 C)
BN_2:7	(FA RHD:1 B)	CB:4	(BA:0 D)	CFA:13	(EO RHD:3 C)
BN_2:8	(FA RHD:3 D)	CB:5	(FQ:2 D)	CFA:14	(EE RHD:0 C)
BN_2:9	(FA RHD:0 B)	CB:6	(FQ:2 D)	CFA:14	(EO RHD:3 C)
BN_2:10	(FA RHD:2 D)	CC:1	(IZ:1 B)	CFA:15	(EE RHD:1 C)
BN_2:11	(FA RHD:3 B)	CC:2	(IZ:1 B)	CFA:15	(EO RHD:4 C)
BN_2:12	(FA RHD:2 B)	CC:3	(IZ:1 B)	CFA:16	(EE RHD:1 C)
BN_2:13	(FA RHD:2 B)	CC:4	(IZ:1 B)	CFA:17	(EE RHD:2 C)
BN_2:14	(FA RHD:1 D)	CC:5	(IX:2 A)	CFA:18	(EE RHD:2 C)
BN_2:15	(FA RHD:1 D)	CC_2:1	(IZ:1 B)	CFA:19	(EE RHD:3 C)
BN_2:16	(FA RHD:2 D)	CC_2:2	(IZ:1 B)	CFA:20	(EE RHD:3 C)
BN_2:17	(FA RHD:2 D)	CC_2:3	(IZ:1 B)	CFB:1	(FB RHD:3 C)
BN_2:18	(FA RHD:2 D)	CC_2:4	(IZ:1 B)	CFB:2	(FA RHD:3 D)
BN_2:19	(FA RHD:0 D)	CC_2:5	(IX:2 A)	CFB:3	(FA RHD:3 D)
BN_2:20	(FA RHD:1 D)	CC/CJ:3	(ZA RHD:1 B)	CFB:4	(FA RHD:3 D)
BN_2:21	(FA RHD:0 D)	CC/CJ:4	(GC RHD:1 C)	CFB:5	(FA RHD:1 B)
BN_2:22	(FA RHD:3 B)	CJ:1	(IZ:1 B)	CFB:6	(FA RHD:1 B)
BN_2:23	(FA RHD:3 B)	CJ:2	(IZ:1 B)	CFB:7	(FA RHD:1 B)
BS:1	(FK:1 D)	CJ:3	(IZ:1 B)	CFB:8	(FA RHD:3 D)
BS:2	(FK:0 D)	CJ:4	(IZ:1 B)	CFB:9	(FA RHD:0 B)
BS:4	(FK:1 D)	CJ:5	(IX:2 B)	CFB:10	(FA RHD:2 D)
CA:1	(DQ:0 D)	CJ_3:1	(IZ:1 B)	CFB:11	(FA RHD:3 B)
CA:2	(GB:3 B)	CJ_3:2	(IZ:1 B)	CFB:12	(FA RHD:2 B)
CA:2	(ZA RHD:1 D)	CJ_3:3	(IZ:1 B)	CFB:13	(FA RHD:2 B)
CA:3	(DU:1 C)	CJ_3:4	(IZ:1 B)	CFB:14	(FA RHD:1 D)

CFB:15	(FA RHD:1 D)	CLA:20	(IA:1 B)	CLE:10	(AF:3 B)
CFB:16	(FG:2 C)	CLA:21	(IA:0 D)	CLE:10	(FB:2 D)
CFB:16	(FA RHD:2 D)	CLA:22	(IH4:3 D)	CLE:11	(AE:1 C)
CFB:17	(FA RHD:2 D)	CLA:23	(IQ:3 C)	CLE:11	(AF:3 D)
CFB:18	(FG:2 C)	CLA:25	(IQ:3 D)	CLE:11	(FB:2 D)
CFB:18	(FA RHD:2 D)	CLB:1	(DC:0 D)	CLE:12	(AE:1 C)
CFB:19	(FA RHD:0 D)	CLB:2	(DC:1 D)	CLE:12	(AF:3 D)
CFB:20	(FA RHD:1 D)	CLB:3	(DC:1 D)	CLE:12	(FB:2 D)
CFB:21	(FA RHD:0 D)	CLB:4	(DC:1 D)	CLE:13	(FB:3 D)
CFB:22	(FA RHD:3 B)	CLB:5	(DC:1 D)	CLE:14	(FB:3 D)
CFB:23	(FA RHD:3 B)	CLB:7	(DC:1 D)	CLE:15	(FB:3 D)
CFD:1	(DM:3 C)	CLB:8	(DC:1 D)	CLE:16	(FB:3 D)
CFD:2	(DM:2 C)	CLB:9	(DC:1 D)	CLE:17	(IS:2 C)
CFD:3	(DM:2 C)	CLB:11	(DC:1 D)	CLE:18	(IS:2 C)
CFD:4	(DM:2 C)	CLB:12	(DC:2 D)	CLE:19	(IA:0 B)
CFD:5	(DM:2 C)	CLC:1	(HI:0 C)	CLE:20	(IA:2 B)
CFD:6	(DM:3 C)	CLC:1	(HI2:0 C)	CLE:21	(IA:1 D)
CFD:7	(DM:3 C)	CLC:2	(HI:0 C)	CLE:22	(IH4:4 D)
CFE:1	(FG:1 C)	CLC:2	(HI2:1 C)	CLE:23	(NK:0 D)
CFE:2	(FG:2 C)	CLC:3	(HI:0 C)	CLF:1	(IR:2 B)
CFE:3	(FG:2 C)	CLC:3	(HI2:1 C)	CLF:2	(IR:1 B)
CFE:4	(FG:2 C)	CLC:4	(HI:1 C)	CLF:3	(IR:2 C)
CFE:5	(FG:2 C)	CLC:4	(HI2:2 C)	CLF:4	(IR:1 C)
CFE:6	(FG:2 C)	CLC:6	(HI2:2 C)	CLF:5	(IR:0 B)
CFF:1	(CP:4 B)	CLC:7	(HI:2 C)	CLF:6	(IR:0 B)
CFF:2	(CP:4 B)	CLC:7	(HI2:3 C)	CLF:7	(IR:0 C)
CFF:3	(CP:3 B)	CLC:7	(ZA RHD:0 B)	CLF:8	(IR:0 C)
CFF:4	(CP:4 C)	CLC:8	(HI:1 C)	CLF:9	(IR:0 C)
CFF:5	(CP:3 C)	CLC:8	(HI2:1 C)	CLF:10	(DM:1 C)
CLA:1	(IA:1 B)	CLC:9	(HI:1 C)	CLF:11	(DM:0 D)
CLA:2	(BI:1 C)	CLC:9	(HI2:2 C)	CLF:12	(DM:0 C)
CLA:3	(IA:1 B)	CLC:10	(HI:2 C)	CLF:13	(XA:3 D)
CLA:6	(BI:1 D)	CLC:10	(HI2:3 C)	CLF:14	(XA:2 D)
CLA:7	(NK:0 D)	CLC:11	(HI:0 C)	CLF:15	(XB:3 D)
CLA:8	(FB RHD:2 D)	CLC:11	(HI2:0 C)	CLF:16	(XB:2 D)
CLA:9	(AE:2 C)	CLC:12	(HI2:2 C)	CLF:17	(FG:1 C)
CLA:9	(FB RHD:2 D)	CLD:1	(IX:0 C)	CLF:18	(XA:2 C)
CLA:10	(AE:2 C)	CLD:2	(IX:0 C)	CLF:19	(XA:2 C)
CLA:10	(FB RHD:2 D)	CLD:3	(IX:1 C)	CLF:20	(XB:1 C)
CLA:11	(AE:2 C)	CLD:4	(IX:1 C)	CLF:21	(XB:1 C)
CLA:11	(FB RHD:2 D)	CLE:1	(FB:3 D)	CLG:1	(EE:0 B)
CLA:12	(AE:2 C)	CLE:2	(BI:1 C)	CLG:1	(EF:0 B)
CLA:12	(FB RHD:2 D)	CLE:3	(IA:3 B)	CLG:1	(EO:0 C)
CLA:13	(FB RHD:2 D)	CLE:4	(IA:3 B)	CLG:2	(EE:0 B)
CLA:14	(FB RHD:3 D)	CLE:6	(BI:1 C)	CLG:2	(EF:0 B)
CLA:15	(FB RHD:3 D)	CLE:8	(IH4:3 B)	CLG:2	(EO:2 B)
CLA:16	(IS:3 C)	CLE:9	(AE:1 C)	CLG:3	(EE:3 B)
CLA:17	(IS:3 C)	CLE:9	(AF:3 B)	CLG:3	(EF:2 B)
CLA:18	(FB RHD:3 D)	CLE:9	(FB:2 D)	CLG:4	(EO:2 C)
CLA:19	(IA:0 B)	CLE:10	(AE:1 C)	CLG:5	(EO:2 C)

CLG:6	(EO:1 C)	CLH_R:5	(FB RHD:2 B)	CLR:2	(IV:1 C)
CLG:7	(EO:1 C)	CLH_R:6	(FB RHD:2 C)	CLR:3	(IV:1 C)
CLG:8	(EO:1 C)	CLH_R:7	(FB RHD:2 C)	CLR:4	(IV:1 C)
CLG:9	(EO:0 C)	CLH_R:8	(FB RHD:2 C)	CLR:5	(IV:1 C)
CLG:10	(EO:0 C)	CLH_R:9	(FB RHD:2 C)	CLR:6	(IV:1 C)
CLG:11	(EO:1 C)	CLH_R:10	(FB RHD:2 C)	CLR:7	(IV:1 C)
CLG:12	(EO:1 C)	CLH_R:11	(FB RHD:2 C)	CLR:8	(IV:2 C)
CLG:13	(EO:0 D)	CLH_R:12	(FB RHD:3 C)	CLR:9	(IV:2 C)
CLG:13	(ZA RHD:3 C)	CLH_R:16	(FB RHD:2 B)	CLR:10	(IV:2 C)
CLG:14	(EO:0 D)	CLH_R:17	(FB RHD:2 B)	CLR:11	(IV:2 C)
CLG:14	(ZA RHD:3 C)	CLH_R:20	(FB RHD:1 B)	CLR:12	(IV:2 C)
CLG:15	(EO:1 D)	CLH_R:21	(FB RHD:3 C)	CLR:13	(IV:1 B)
CLG:16	(EO:3 C)	CLH_R:22	(FB RHD:3 B)	CLR:14	(IV:1 B)
CLG:17	(EO:3 C)	CLI:1	(EO:0 D)	CLR:15	(IV:1 B)
CLG:18	(EO:3 C)	CLI:2	(EO:1 D)	CLR:16	(IV:1 B)
CLG:19	(BE:1 B)	CLI:3	(EO:1 D)	CLR:17	(IV:2 B)
CLG:20	(EE:4 D)	CLI:4	(EO:1 D)	CLR:18	(IV:2 B)
CLG:20	(EF:4 C)	CLI:5	(EO:3 C)	CLR:19	(IV:2 B)
CLG:20	(EO:0 D)	CLI:6	(EO:3 C)	CLR:20	(IV:2 B)
CLG:21	(EF:4 C)	CLI:7	(EO:3.C)	CLR:21	(IV:2 B)
CLH:1	(FB:1 C)	CLI:8	(EO:3 C)	CLS:1	(BE:1 C)
CLH:1	(FK:2 B)	CLI:9	(EO:3 C)	CLS:2	(BE:1 C)
CLH:2	(FB:1 C)	CLI:10	(EO:3 C)	CLS:3	(BE:1 C)
CLH:3	(FB:2 C)	CLI:11	(EO:4 C)	CLS:4	(BE:1 C)
CLH:3	(FK:2 B)	CLI:12	(EO:4 C)	CLS:5	(BE:1 C)
CLH:4	(FG:0 C)	CLJ:1	(BE:3 C)	CLT:1	(IH:3 B)
CLH:4	(FK:2 B)	CLJ:2	(BE:3 C)	CLT:1	(IH3:2 B)
CLH:5	(FB:2 C)	CLJ:3	(BE:3 C)	CLT:2	(IH:3 B)
CLH:5	(FK:2 B)	CLJ:4	(BE:3 C)	CLT:2	(IH3:1 B)
CLH:6	(FB:2 D)	CLJ:5	(BE:4 C)	CLT:3	(IH:3 C)
CLH:6	(FK:2 B)	CLJ:6	(BE:4 C)	CLT:3	(IH3:2 C)
CLH:7	(FB:2 D)	CLK:1	(BE:3 C)	CLT:4	(IH:3 C)
CLH:8	(FB:2 D)	CLK:2	(BE:3 C)	CLT:4	(IH3:2 B)
CLH:9	(FB:2 D)	CLK:3	(BE:3 C)	CLT:5	(IH:3 C)
CLH:10	(FB:3 D)	CLK:4	(BE:3 C)	CLT:6	(HI:3 B)
CLH:11	(FB:3 D)	CLL:1	(NA_2:3 B)	CLT:7	(HI:3 B)
CLH:12	(FB:3 D)	CLL:2	(NA_2:3 D)	CLT:8	(IQ:1 B)
CLH:13	(FM:0 B)	CLM:1	(BE:1 B)	CLT:9	(IQ:1 C)
CLH:14	(FG:0 C)	CLM:2	(BE:3 B)	CLT:10	(IQ:1 C)
CLH:15	(FG:0 C)	CLM:3	(BE:2 B)	CLT:11	(IM:3 B)
CLH:16	(FB:2 C)	CLM:4	(BE:2 C)	CLT:12	(IM:3 B)
CLH:17	(FB:2 C)	CLM:5	(BE:2 C)	CLT:13	(IU:1 D)
CLH:18	(FG:1 C)	CLM:6	(BE:3 C)	CLT:13	(IV:1 D)
CLH:19	(FG:1 C)	CLM:7	(BE:3 C)	CLT:14	(IU:2 D)
CLH:20	(FB:1 C)	CLM:8	(BE:1 C)	CLT:14	(IV:1 D)
CLH:21	(FB:3 D)	CLM:9	(FA RHD:3 D)	CLT:15	(IU:2 D)
CLH:22	(FB:3 C)	CLM:9	(FB:3 D)	CLT:15	(IV:2 D)
CLH_R:1	(FB RHD:0 B)	CLP:1	(IV:1 C)	CLT:16	(IU:2 D)
CLH_R:2	(FB RHD:1 B)	CLP:2	(IV:1 B)	CLT:16	(IV:2 D)
CLH_R:3	(FB RHD:2 B)	CLR:1	(IV:1 C)	CLT:17	(HI:2 B)

CLT:18	(HI:2 B)	CUA:20	(HI:1 B)	CUC:11	(BE:1 D)
CLT:19	(HI:2 B)	CUA:21	(GB:0 B)	CUC:18	(IH:0 D)
CLT:20	(HI:2 B)	CUB:1	(BN:1 B)	CUC:19	(GA:1 C)
CLT:20	(ZA RHD:0 B)	CUB:2	(BN:3 D)	CUC:20	(GA:4 D)
CLT:21	(HI:4 B)	CUB:3	(BN:1 B)	CUC:21	(GA:4 C)
CLU:1	(IR2:1 C)	CUB:4	(BN:3 B)	CUD:1	(IH:1 C)
CLU:3	(IR2:1 D)	CUB:5	(BN:3 B)	CUD:2	(IH:1 C)
CLV/CLW:1	(NA_2:4 C)	CUB:6	(BN:3 D)	CUD:3	(IH:1 D)
CLV:1	(NA_2:3 C)	CUB:7	(BN:2 D)	CUF:1	(HI:1 B)
CLW:1	(NA_2:3 C)	CUB:8	(BN:2 D)	CUF:2	(HI:1 B)
CLX:1	(NA_2:3 D)	CUB:9	(BN:2 D)	CUG:1	(NK:2 C)
CLX/CLY:1	(NA_2:4 C)	CUB:10	(BN:2 D)	CUG:2	(NK:2 C)
CLY:1	(NA_2:3 D)	CUB:11	(BN:3 D)	CUG:4	(NK:2 C)
CT:1	(BZ:1 D)	CUB:12	(KI:1 B)	CUG:5	(NK:3 C)
CT:2	(BZ:1 D)	CUB:13	(IR:3 C)	CUH:2	(BE:0 D)
CT:3	(BZ:1 D)	CUB:16	(GC:3 A)	CUH:3	(BE:0 D)
CT:4	(BZ:1 D)	CUB:17	(GC:3 B)	CUH:4	(BE:0 D)
CT:5	(BZ:1 C)	CUB2/CUB:12	(KI:1 B)	CUH:5	(IH:0 C)
CT:6	(BZ:1 C)	CUB2/CUB:13	(IR:3 C)	CUH:6	(IH:0 D)
CT:7	(BZ:1 C)	CUB2/CUB:16	(GC:3 A)	CUI:1	(IH4:0 B)
CT/TC:1	(BZ RHD:2 C)	CUB2/CUB:17	(GC:4 B)	CUI:3	(IH4:0 C)
CT/TC:2	(BZ RHD:2 C)	CUB/TACH:1	(BM:1 A)	CUJ:1	(IU:3 B)
CT/TC:3	(BZ RHD:1 C)	CUB/TACH:2	(BM:3 C)	CUJ:2	(IU:3 B)
CT/TC:4	(BZ RHD:1 C)	CUB/TACH:3	(BM:1 A)	CUL:1	(GL2:0 C)
CT/TC:5	(BZ RHD:1 C)	CUB/TACH:4	(BM:2 B)	CUL:2	(GL2:0 C)
CT/TC:6	(BZ RHD:1 C)	CUB/TACH:5	(BM:3 B)	CUL:3	(GL2:1 C)
CT/TC:7	(BZ RHD:1 C)	CUB/TACH:6	(BM:3 C)	CUL:4	(GL2:1 C)
CUA:1	(GA:1 C)	CUB/TACH:7	(BM:2 C)	CUL:5	(GL2:1 C)
CUA:1	(GL2:1 A)	CUB/TACH:8	(BM:2 C)	CUL_B:1	(GL2:2 A)
CUA:2	(GA:4 C)	CUB/TACH:9	(BM:2 C)	CUL_B:2	(GL2:2 A)
CUA:2	(GL2:0 A)	CUB/TACH:10	(BM:2 C)	CUL_B:3	(GL2:3 A)
CUA:3	(IH:1 B)	CUB/TACH:11	(BM:3 C)	CUL_B:4	(GL2:3 A)
CUA:3	(IH3:3 B)	CUB/TACH:12	(KI:1 C)	CUL_B:5	(GL2:3 A)
CUA:4	(IH:0 B)	CUB/TACH:13	(IR:3 C)	CUL_C:1	(GL2:2 C)
CUA:4	(IH3:3 B)	CUB/TACH:14	(BM:2 B)	CUL_C:2	(GL2:3 C)
CUA:6	(IH3:2 C)	CUB/TACH:15	(BM:2 B)	CUL_C:3	(GL2:3 C)
CUA:7	(BN:3 C)	CUB/TACH:16	(GC:3 B)	CUL_C:4	(GL2:3 C)
CUA:7	(IQ:0 B)	CUB/TACH:17	(GC:4 B)	CUL_C:5	(GL2:3 C)
CUA:8	(KM:0 C)	CUC:3	(IH:2 C)	CUM:1	(BN:1 B)
CUA:9	(NI:1 B)	CUC:3	(IH3:2 D)	CUM:2	(BN:1 D)
CUA:10	(NI:1 B)	CUC:3	(IH4:1 B)	CUM:3	(BN:1 B)
CUA:11	(KI:1 C)	CUC:4	(IH:0 C)	CUN:1	(IU:2 B)
CUA:12	(IH3:2 B)	CUC:4	(IH3:2 D)	CUN:2	(IU:2 B)
CUA:13	(IQ:1 C)	CUC:4	(IH4:2 B)	CUN:4	(IU:2 B)
CUA:14	(IQ:1 C)	CUC:5	(IR:3 D)	CUN:5	(IU:2 B)
CUA:15	(IH3:2 A)	CUC:6	(IQ:1 C)	DDA:1	(IM:1 C)
CUA:16	(IH3:3 B)	CUC:7	(IQ:0 C)	DDA:2	(IE:0 B)
CUA:17	(HI:1 B)	CUC:8	(IQ:0 C)	DDA:3	(IE:1 B)
CUA:18	(HI:1 B)	CUC:9	(BE:1 D)	DDA:3	(ZA RHD:1 B)
CUA:19	(HI:1 B)	CUC:10	(BE:1 D)	DDA:4	(IE:2 B)

DDA:5	(IH:2 C)	E03_L+:1	(NI:2 D)	EI:4	(CO:0 A)
DDA:5	(IH3:0 D)	E03_R-:1	(NI:2 D)	EI:5	(CJ:1 D)
DDA:6	(IE:3 B)	E03_R+:1	(NI:2 D)	EI:5	(CO:0 A)
DDA:7	(IM:1 C)	E12:1	(GA:1 C)	EI:6	(CJ:2 D)
DDA:8	(IM:1 C)	E12:2	(GA:4 D)	EI:6	(CO:0 A)
DDA:9	(IM:1 C)	E12:3	(GA:4 C)	EI:7	(CJ:3 D)
DDA:10	(IU:0 D)	E26L/R:1	(GA4:0 D)	EI:7	(CO:1 A)
DDA:10	(IU RHD:1 D)	E26L/R:1	(GA4:3 D)	EI:8	(CJ:1 D)
DDA:10	(IV:1 D)	E26L/R:3	(GU_2:3 D)	EI:8	(CO:0 A)
DDA:11	(IU:1 D)	E26L/R:4	(GA4:2 C)	EI:9	(AA:3 D)
DDA:11	(IU RHD:1 D)	E26L/R:4	(GA4:0 C)	EI:10	(AA:3 D)
DDA:11	(IV:1 D)	E26L/R:6	(GA4:0 D)	EI:13	(CJ:1 D)
DDA:12	(IH:2 C)	E26L/R:6	(GA4:2 D)	EI:13	(CO:0 A)
DDA:12	(IH3:0 D)	E26L/R:7	(GA4:0 C)	EI:15	(CJ:0 D)
DDA:13	(IE:0 C)	E26L/R:7	(GA4:3 C)	EI:15	(CO:0 A)
DDA:14	(IE:1 C)	E26L/R:8	(GA4:1 C)	EI:18	(CO:1 A)
DDA:15	(IE:1 C)	E26L/R:8	(GA4:3 C)	EI:21	(CJ:3 D)
DDB:1	(IE:1 C)	E26L/R:9	(GU_2:2 D)	EI:21	(CO:3 A)
DDB:2	(IE:2 C)	E26L/R:9	(GU_2:3 D)	EI:22	(CO:4 A)
DDB:3	(IE:2 C)	E26L/R:10	(GA4:0 C)	EI:23	(HG:0 D)
DDB:4	(IE:0 C)	E26L/R:10	(GA4:3 C)	EI:23	(HY:2 D)
DDB:5	(IE:0 B)	E26L/R:11	(GU_2:2 D)	EI:25	(CO:1 A)
DDB:6	(IE:0 B)	E26L/R:11	(GU_2:3 D)	EI:26	(CO:4 D)
DDB:7	(IE:1 B)	E27:1	(GF:3 C)	EI:27	(CJ:0 D)
DDB:9	(IE:2 B)	E27:2	(GF:3 C)	EI:27	(CO:4 D)
DPA:1	(IM:2 C)	E27:3	(GF:3 C)	EI:31	(CJ:0 D)
DPA:3	(IE:3 B)	E27:4	(GF:3 C)	EI:31	(CO:4 A)
DPA:3	(ZA RHD:0 D)	E27:5	(GF:3 C)	EI:33	(CJ:2 D)
DPA:4	(IE:3 B)	E27:6	(GF:3 C)	EI:33	(CO:0 A)
DPA:5	(IH:2 C)	E27:7	(GF:3 C)	EI:35	(AA:2 D)
DPA:5	(IH3:0 D)	E27_1:1	(GF:0 C)	EI:35	(CJ:3 D)
DPA:6	(IE:3 B)	E27_1:2	(GF:0 C)	EI:35	(CO:2 A)
DPA:7	(IM:2 C)	E27_1:3	(GF:1 C)	EI:37	(CJ:0 D)
DPA:8	(IM:2 C)	E27_1:4	(GF:1 C)	EI:37	(CO:3 A)
DPA:9	(IM:2 C)	E27_1:5	(GF:1 C)	EI:39	(CJ:0 D)
DPA:10	(IU:1 D)	E27_1:6	(GF:1 C)	EI:39	(CO:4 A)
DPA:10	(IU RHD:0 D)	E27_1:7	(GF:0 C)	EMB:1	(IF:0 D)
DPA:10	(IV:1 D)	E88L_A:1	(IH:0 C)	EMB:2	(IF:0 D)
DPA:11	(IU:1 D)	E88L_A:1	(IH4:1 C)	EPR:1	(CJ:2 B)
DPA:11	(IU RHD:1 D)	E88L_B:1	(IH:0 D)	EPR:3	(CJ:3 B)
DPA:11	(IV:1 D)	E88L_B:1	(IH4:1 C)	EPR:4	(CJ:2 C)
DPA:12	(IH:2 C)	E96:1	(KE:1 D)	EQ_A:1	(EO:4 B)
DPA:12	(IH3:0 D)	E96:4	(KE:0 D)	EQ_A:2	(EO:4 B)
DS_L:1	(NU:2 C)	EI:1	(CJ:2 D)	EQ_A:3	(EO:4 B)
DS_L:2	(NU:2 D)	EI:1	(CO:0 A)	EQ_A:4	(EO:4 C)
DS_R:1	(GQ:0 B)	EI:2	(CJ:1 D)	EXT:1	(HZ:1 B)
DS_R:1	(NU:2 C)	EI:2	(CO:0 A)	EXT:2	(HZ:1 B)
DS_R:2	(GQ:0 C)	EI:3	(CJ:2 D)	FA:1	(BI:3 B)
DS_R:2	(NU:2 D)	EI:3	(CO:0 A)	FA:2	(FB:2 B)
E03_L:-1	(NI:2 D)	EI:4	(CJ:2 D)	FA:2	(FB RHD:2 B)

FA:3	(FB:2 B)	FE:3	(NC:1 B)	FL:26	(GA4:1 C)
FA:3	(FB RHD:2 B)	FE:3	(NU:0 A)	FL:29	(KA:0 C)
FA:4	(NU:4 B)	FE_B:1	(IF:1 A)	FMS:1	(BX:0 D)
FA:5	(GA:0 C)	FE_B:2	(IF:1 A)	FMS:1	(BX:1 D)
FA:5	(NI:1 A)	FE_B:3	(IF:1 A)	FMS:2	(BX:1 D)
FA:6	(BA:0 C)	FE_BR:1	(IF:2 A)	FMS:6	(BX:0 D)
FA:7	(BI:1 C)	FE_BR:2	(IF:2 A)	FMS:9	(BX:0 D)
FA:8	(GA:4 C)	FE_BR:3	(IF:1 A)	FMS:10	(BX:0 D)
FA:8	(NA:0 A)	FE_C:1	(NX:0 B)	FMS:12	(BX:0 D)
FA:8	(NB:0 A)	FE_C:2	(NX:0 B)	FN:1	(GA4:1 C)
FA:9	(GB:3 D)	FE_C:3	(NX:0 B)	FN:1	(GA4:3 C)
FA:9	(NA:0 A)	FE2_C:1	(NX:0 B)	FN:3	(GA4:1 D)
FA:9	(NB:0 A)	FE2_C:2	(NX:0 B)	FN:3	(GA4:3 D)
FA:10	(GC:1 B)	FE2_C:3	(NX:0 B)	FR:1	(GA:3 D/GA4:3 D)
FA:10	(GC RHD:1 B)	FE2:1	(NC:1 B)	FR:2	(GA:3 C)
FA:10	(NA:0 A)	FE2:1	(NU:0 A)	FR:2	(GA4:3 C)
FA:10	(NA_2:1 D)	FE2:2	(NC:0 B)	FR:3	(GA:3 C)
FA:10	(NB:0 A)	FE2:2	(NU:0 A)	FR:3	(GA4:3 C)
FA:10	(NU:2 B)	FE2:3	(NC:1 B)	FR:4	(NK:3 D)
FA:11	(GB:0 A)	FE2:3	(NU:0 A)	FR:5	(NK:4 D)
FA:11	(NA:3 A)	FL:1	(GA:2 D/GA4:0 D)	FR:6	(GA:3 C)
FA:11	(NA_2:0 A)	FL:2	(GA:2 C)	FR:7	(GA:3 C)
FA:11	(NB:3 A)	FL:2	(GA4:0 C)	FR:7	(GA4:2 C)
FA:12	(BA:1 D)	FL:3	(GA:2 C)	FR:8	(GA:3 C)
FA:12	(CP:1 A)	FL:3	(GA4:0 C)	FR:8	(GA4:3 C)
FA:12	(NU:4 B)	FL:4	(NK:3 D)	FR:9	(GA:3 C)
FA:13	(GQ:2 C)	FL:5	(NK:3 D)	FR:9	(GA4:3 C)
FA:14	(AA:2 A)	FL:6	(GA:2 C)	FR:10	(GM:0 C)
FA:15	(KM:0 B)	FL:7	(GA:2 C)	FR:11	(GM:0 C)
FA:16	(GG:1 A)	FL:7	(GA4:0 C)	FR:13	(GU:1 D)
FA:17	(GG:1 A)	FL:8	(GA:1 C)	FR:13	(GU_2:3 C)
FA:18	(GG:1 A)	FL:8	(GA4:1 C)	FR:14	(GU:1 D)
FA:19	(GG:1 A)	FL:9	(GA:2 C)	FR:14	(GU_2:3 C)
FA:20	(GG:0 A)	FL:9	(GA4:1 C)	FR:15	(GU:1 D)
FA:21	(GG:0 A)	FL:10	(GQ:1 C)	FR:15	(GU_2:3 C)
FB:1	(IZ:2 A)	FL:11	(GQ:1 B)	FR:16	(GM:1 C)
FB:1	(KI:2 A)	FL:12	(GQ:1 B)	FR:17	(BI:2 C)
FB:3	(IZ:2 A)	FL:13	(GU:0 D)	FR:18	(BI:2 D)
FB:3	(KI:2 B)	FL:13	(GU_2:3 C)	FR:25	(GA:3 D/GA4:3 D)
FB_B:1	(KI:2 A)	FL:14	(GU:0 D)	FR:26	(GA:3 C)
FB_B:3	(KI:2 B)	FL:14	(GU_2:2 C)	FR:26	(GA4:4 C)
FBA:1	(BE:3 D)	FL:15	(GU:0 D)	FR:29	(KA:0 C)
FBA:3	(BE:3 D)	FL:15	(GU_2:2 C)	FS:1	(KI:1 C)
FE:1	(ME:1 B)	FL:16	(GQ:1 C)	FS:2	(KI:1 D)
FE:1	(NC:0 B)	FL:20	(BE:3 D)	FS:3	(KI:2 D)
FE:1	(NU:0 A)	FL:21	(BE:2 D)	FS_2:1	(KI:0 C)
FE:2	(ME:1 B)	FL:22	(BE:3 D)	FS_2:2	(KI:0 D)
FE:2	(NC:0 B)	FL:23	(BE:3 D)	FT:1	(IR:0 D)
FE:2	(NU:0 A)	FL:25	(GA:2 D/GA4:1 D)	FT:2	(IR:1 D)
FE:3	(ME:1 B)	FL:26	(GA:1 C)	FT:3	(IR:1 D)

GA:1	(GB:3 D)	JV/JC:13	(IM:3 C)	MA:8	(CJ:2 C)
GA:2	(BI:1 D)	JV/JC:14	(DQ:1 C)	MA:9	(AA:3 C)
GA:2	(DI:1 B)	JV/JC:15	(HE:0 B)	MA:10	(XC:0 C)
GA:3	(BI:1 C)	JV/JC:16	(IM:2 A)	MA:11	(XC:0 C)
GA:3	(DI:1 B)	JV/JC:17	(IR2:2 C)	MA:13	(AA:3 C)
GA:4	(BA:1 B)	JV/JC:18	(IR2:2 C)	MA:15	(CJ:1 C)
GA:4	(DI:1 B)	JV/JC:19	(HI:3 C)	MA:20	(AA:2 C)
GA:5	(BA:0 B)	JV/JC:19	(ZA RHD:0 C)	MA:20	(CJ:3 C)
GA:5	(DI:1 B)	JV/JC:20	(AC:3 D)	MA:22	(CJ:3 C)
GA:6	(BA:0 C)	JV/JC:21	(HP:0 D)	MA:23	(CJ:0 C)
GA:6	(DI:1 B)	JV/JC:21	(HY RHD:1 B)	MA:24	(CJ:0 C)
GA:7	(BA:0 C)	JV/JC:22	(FU:0 D)	MA:25	(CJ:1 C)
GA:7	(DI:1 B)	JV/JC:23	(GC RHD:3 C)	MB:1	(BI:2 D)
GB:1	(BI:2 C)	JV/JC:23	(KM:1 C)	MB:2	(BA:0 C)
GB:1	(DI:0 B)	JV/JC:24	(IR2:2 C)	MB:4	(BA:1 B)
GB:2	(BI:2 D)	JV/JC:25	(IR2:2 C)	MB:5	(BI:2 C)
GB:2	(DI:0 B)	KV/KC:1	(GB:0 B)	MB:8	(BI:1 D)
GB:3	(BM:2 D)	KV/KC:2	(GB:0 A)	MB:9	(BA:0 B)
GB:4	(BM:2 D)	KV/KC:2	(GB:0 B)	MB:14	(BI:1 C)
GB:5	(BM:2 D)	KV/KC:3	(GB:0 B)	MB:15	(GB:3 D)
GB:6	(BM:2 D)	KV/KC:4	(GB:0 A)	MB:16	(BA:0 C)
GB:7	(DI:3 B)	LDS:1	(BA:2 D)	MC:1	(EO:0 D)
GD:2	(HZ:1 C)	LDS:2	(BA:2 D)	MC:2	(EO:1 D)
GE:1	(DI:2 B)	LDS:4	(BA:2 D)	MC:3	(EO:1 D)
GE:2	(DI:2 B)	LDS1:1	(BA:2 D)	MC:4	(EO:1 D)
GE:3	(DI:1 B)	LDS1:2	(BA:2 D)	MC:5	(EO:1 D)
GE:4	(DI:1 B)	LDS1:4	(BA:2 D)	MC:6	(GQ:0 B)
GE:5	(DI:2 B)	LI:1	(FG:0 B)	MC:6	(NU:2 C)
GE:6	(DI:2 B)	LI:2	(FG:0 B)	MC:7	(GQ:0 C)
IDA:1	(GL:1 B)	LI:3	(FG:0 B)	MC:7	(NU:2 D)
IDA_B:1	(GL:2 B)	LI:4	(FG:1 B)	MC:8	(NK:1 C)
IDA_C:1	(GL:2 C)	LI:5	(FG:1 B)	MC:9	(NK:1 D)
IDA_D:1	(GL:3 B)	LI:6	(FG:1 B)	MOT:1	(HZ:2 C)
IDB:1	(GL:1 D)	LS:1	(GL2:0 C)	MOT:2	(HZ:2 C)
IDB_B:1	(GL:2 D)	LS:1	(GL2:2 C)	MOT:3	(HZ:1 C)
IDB_C:1	(GL:2 D)	LS:2	(GL2:0 C)	MOT:4	(HZ:2 C)
IDB_D:1	(GL:3 B)	LS:2	(GL2:3 C)	NS:1	(MF:3 D)
JV/JC:1	(DC:2 C)	LS:3	(GL2:1 C)	NS:2	(NU:1 C)
JV/JC:2	(KA:1 D)	LS:3	(GL2:3 C)	NS:3	(NX:2 C)
JV/JC:3	(DQ:1 B)	LS:4	(GL2:1 C)	NS:4	(MF:3 D)
JV/JC:4	(AE:3 B)	LS:4	(GL2:3 C)	NS:5	(MF:3 D)
JV/JC:5	(AE:3 B)	LS:5	(GL2:1 C)	NS:5	(NU:3 B)
JV/JC:6	(AE:3 B)	LS:5	(GL2:3 C)	NS:6	(NU:3 B)
JV/JC:7	(AC:1 D)	MA:1	(HG:0 C)	NS:6	(NX:2 A)
JV/JC:7	(AE:4 D)	MA:1	(HY:1 D)	NS:7	(NX:3 C)
JV/JC:8	(BI:3 D)	MA:3	(CJ:2 C)	NS:8	(NU:4 B)
JV/JC:9	(AA:2 B)	MA:4	(CJ:2 C)	NS:8	(NX:4 C)
JV/JC:10	(IX:2 B)	MA:5	(CJ:1 C)	NS:9	(NU:1 B)
JV/JC:11	(BA:3 C)	MA:6	(CJ:1 C)	NS:10	(NU:0 B)
JV/JC:12	(BA:3 D)	MA:7	(CJ:2 C)	NS:10	(NX:0 D)

NS:11	(NX:2 C)	PH_3:3	(HP:0 D)	PL:11	(NB:0 C)
NS:12	(NX:1 A)	PH_4:1	(HP:0 B)	PL:12	(NA:1 C)
NS:13	(NX:1 C)	PH_4:2	(HP:0 C)	PL:12	(NB:0 C)
NS:14	(NX:1 C)	PH_4:3	(HP:0 D)	PL:13	(NC:2 C)
NS:15	(NU:1 B)	PHA:1	(HI:0 D)	PL:13	(NU:1 C)
NS:15	(NX:2 A)	PHA:1	(HI2:0 C)	PL:14	(NC:2 C)
NS:16	(NX:3 A)	PHA:3	(HI:0 D)	PL:14	(NU:1 C)
NS:17	(NU:1 B)	PHA:3	(HI2:1 C)	PL:15	(NC:2 C)
NS:17	(NX:3 A)	PHA:4	(HI:1 D)	PL:15	(NU:2 C)
NS:18	(NU:3 B)	PHA:4	(HI2:2 C)	PL:16	(NC:2 C)
NS:18	(NX:4 C)	PHA:5	(HI:0 D)	PL:16	(NU:2 C)
NS:19	(NU:4 B)	PHA:5	(HI2:1 C)	PL:17	(NC:2 C)
NS:19	(NX:3 A)	PHA:6	(HI:0 D)	PL:17	(NU:2 C)
NS:20	(NU:3 B)	PHA:6	(HI2:1 C)	PL:18	(NA:2 C)
NS:20	(NX:2 C)	PHA:7	(HI:1 D)	PL:18	(NB:3 C)
NS:21	(MF:3 D)	PHA:7	(HI2:2 C)	PL:19	(NC:3 C)
OBD:4	(XC:0 B)	PHA:8	(HI:1 D)	PL:19	(NU:3 C)
OBD:5	(XC:0 B)	PHA:8	(HI2:1 C)	PL:20	(NC:3 C)
OBD:6	(XC:1 B)	PHA:9	(HI:0 D)	PL:20	(NU:3 C)
OBD:14	(XC:1 B)	PHA:9	(HI2:0 C)	PL:21	(NC:3 C)
OBD:16	(XC:0 B)	PHA:10	(HI:2 D)	PL:21	(NU:3 C)
OH:1	(GE:1 B)	PHA:10	(HI2:3 C)	POS_A:1	(GL:3 B)
OH:2	(GE:2 B)	PHA:11	(HI2:2 C)	POS_B:1	(GL:3 B)
OH:3	(GE:1 B)	PHA:12	(HI:2 D)	POS_C:1	(GL:4 B)
OH:4	(GE:2 B)	PHA:12	(HI2:2 C)	POS_D:1	(GL:4 B)
OH:9	(GE:1 B)	PHA:15	(HI2:3 C)	PT:1	(DI:1 A)
OH:13	(GE:1 B)	PL:1	(NC:4 C)	PT:1	(DP:1 B)
OH:14	(GE:2 B)	PL:2	(NA:1 C)	PT:2	(DI:1 A)
OH:17	(GE:1 B)	PL:2	(NA_2:0 C)	PT:2	(DP:1 B)
OH:18	(GE:3 B)	PL:2	(NB:1 C)	PT:3	(DI:1 A)
OH:24	(GE:1 D)	PL:3	(NA:1 C)	PT:3	(DP:1 B)
PAS:1	(FP:0 C)	PL:3	(NA_2:2 C)	PT:4	(DI:1 A)
PAS:6	(FP:0 D)	PL:3	(NB:2 C)	PT:4	(DP:1 B)
PAS:6	(ZA RHD:1 B)	PL:4	(NA:1 C)	PT:6	(DI:0 A)
PH_1:1	(HM:0 B)	PL:4	(NB:1 C)	PT:6	(DP:0 B)
PH_1:2	(HM:0 B)	PL:5	(NA:2 C)	PT:7	(DI:3 A)
PH_1:3	(HM:2 B)	PL:5	(NB:2 C)	PT:7	(DP:0 B)
PH_1:4	(HM:1 B)	PL:6	(NA:3 C)	PT:8	(XC:2 D)
PH_1:5	(HM:2 B)	PL:6	(NA_2:1 C)	PT:9	(XC:1 D)
PH_1:6	(HM:2 B)	PL:6	(NB:3 C)	PT:12	(XC:2 D)
PH_1:7	(HM:2 D)	PL:7	(NC:1 C)	PT:13	(XC:2 D)
PH_1:8	(HM:0 D)	PL:7	(NU:1 C)	PW:1	(AB:4 C)
PH_1:9	(HM:0 D)	PL:8	(NA:4 C)	PW:1	(ZA RHD:3 C)
PH_1:10	(HM:1 B)	PL:8	(NB:4 C)	PW:2	(AB:3 C)
PH_1:11	(HM:1 B)	PL:9	(NC:1 C)	PW:3	(AE:0 C)
PH_2:1	(HP:0 B)	PL:9	(NU:1 C)	PW:3	(AF:2 B)
PH_2:2	(HP:0 D)	PL:10	(NC:2 C)	PW:4	(AE:1 C)
PH_2:3	(HP:0 D)	PL:10	(NU:3 C)	PW:4	(AF:2 B)
PH_3:1	(HP:0 C)	PL:11	(NA:0 C)	PW:5	(AE:1 D)
PH_3:2	(HP:0 C)	PL:11	(NA_2:2 B)	PW:5	(AF:3 D)

PW:6	(AE:1 D)	RC:2	(GK:0 A)	RT:1	(DM:3 C)
PW:6	(AF:3 D)	RC:3	(GG:0 B)	RT:2	(DM:2 C)
PW:7	(AE:2 D)	RC:3	(GK:1 A)	RT:3	(DM:2 C)
PW:7	(AF:3 D)	RC:4	(GG:0 B)	RT:4	(DM:2 C)
PW:8	(AE:2 D)	RC:4	(GK:1 A)	RT:5	(DM:2 C)
PW:8	(AF:4 D)	RC:5	(GG:0 B)	RT:6	(DM:3 C)
PW:9	(BI:2 D)	RC:5	(GK:1 A)	RT:7	(DM:3 C)
PW:10	(BI:2 C)	RC:6	(GG:0 B)	S58:1	(BA:3 D)
PW:11	(BI:2 C)	RC:6	(GK:1 A)	S58:2	(BA:3 D)
PW:12	(GB:0 D)	RC:7	(GG:1 B)	S59:1	(BA:3 D)
PW:13	(AB:2 B)	RC:9	(GG:1 B)	S59:2	(BA:3 D)
PW:13	(AB:3 C)	RC:10	(GG:1 B)	S171:1	(DC:1 D)
PW:14	(AB:3 C)	RC:10	(GK:1 A)	S171:2	(DC:1 D)
PW:14	(AE:2 D)	RC:11	(GG:1 B)	S171:3	(DC:1 D)
PW:14	(AF:3 D)	RC:12	(GG:1 B)	S171:4	(DC:1 D)
PW:15	(CJ:3 B)	RC:14	(GG:1 B)	S171:5	(DC:1 D)
PW:16	(CJ:2 B)	RC:15	(GC:0 B)	S171:6	(DC:1 D)
PW:17	(CJ:2 C)	RC:16	(GC:2 B)	S171:7	(DC:1 D)
PW:18	(AB:0 B)	RC:17	(GG:0 B)	S171:8	(DC:2 D)
PW:19	(IQ:4 C)	RC:18	(GG:0 B)	S171:11	(DC:1 D)
PW:20	(IQ:4 D)	RC:19	(GK:1 A)	S171:12	(DC:1 D)
PW:21	(AB:0 B)	RC:19	(KE:0 C)	SCR:1	(CR:0 B)
R23:1	(CV:1 D)	RC:20	(GK:1 A)	SCR:1	(CV:2 B)
R23:2	(CV:2 D)	RC:20	(KE:0 D)	SCR:2	(CR:2 C)
R23:3	(CV:1 D)	RC:21	(CP:1 A)	SCR:3	(CR:1 B)
R23:4	(CV:2 D)	RC:21	(GK:1 A)	SCR:3	(CV:1 B)
R23:5	(CV:1 D)	RC_2:2	(GH:1 B)	SCR:4	(CR:2 C)
R23:6	(CV:2 D)	RC_2:3	(GH:1 B)	SCR:5	(CR:2 A)
RA:1	(GC:2 E)	RC_2:4	(GH:1 B)	SCR:5	(CV:1 B)
RA:2	(GC:1 B)	RC_2:5	(GH:1 B)	SCR:6	(CR:3 B)
RA:3	(GC:1 B)	RC_2:6	(GH:1 B)	SCR:6	(CV:2 B)
RA:4	(GC:1 B)	RC_2:7	(GH:1 B)	SCR:7	(CR:3 B)
RA:5	(GC:2 B)	RC_2:9	(GH:1 B)	SCR:7	(CV:2 B)
RA:6	(GC:2 B)	RC_2:10	(GH:1 B)	SCR:8	(XC:3 D)
RA:7	(GC:1 B)	RC_2:11	(GH:1 B)	SCR:9	(XC:3 D)
RA:7	(GC RHD:1 C)	RC_2:12	(GH:1 B)	SI:1	(GG:3 B)
RA:8	(GC:1 B)	RC_2:14	(GH:0 B)	SI:1	(GK:3 A)
RA:9	(GC:2 B)	RC_2:17	(GH:0 B)	SI:2	(GG:3 B)
RA:10	(GC:2 B)	RC_2:18	(GH:0 B)	SI:2	(GK:3 A)
RA:10	(GC RHD:2 C)	RC_2:19	(GH:0 B)	SI:4	(GG:3 B)
RA:11	(GC:2 B)	RC_2:20	(GH:0 B)	SI:4	(GK:4 A)
RA:12	(BI:2 C)	REF:1	(IQ:3 C)	SI:5	(GG:3 B)
RA:13	(BI:2 D)	REF:2	(IQ:3 D)	SI:5	(GK:4 A)
RA:14	(DU:3 C)	REV:1	(NU:2 C)	SI_2:1	(GH:3 B)
RA:15	(HI:0 B)	RF:1	(IQ:4 C)	SI_2:2	(GH:3 B)
RA:15	(HM:0 D)	RF:4	(IQ:4 D)	SI_2:4	(GH:3 B)
RA:16	(HI:0 B)	RL:1	(KM:1 D)	SI_2:5	(GH:3 B)
RA:16	(HM:0 D)	RL:2	(KM:1 D)	SI_3:1	(CP:2 A)
RA:17	(DU:3 C)	RL:3	(NI:1 C)	SI_3:1	(ZA RHD:3 C)
RC:2	(GG:0 B)	RL:4	(NI:1 C)	SI_3:2	(CP:2 A)

SI_3:2	(ZA RHD:3 C)	SW:13	(EF:0 C)	SW_3:8	(EE RHD:2 D)
SI_3:4	(ZA RHD:3 C)	SW:14	(EF:0 C)	SW_3:9	(EE RHD:4 D)
SI_3:5	(ZA RHD:3 C)	SW:15	(EF:0 C)	SW_3:10	(EE RHD:3 D)
SLF:1	(NI:0 D)	SW:16	(EF:0 C)	SW_3:11	(EE RHD:3 D)
SLF:2	(NI:0 D)	SW:17	(EF:1 C)	SW_3:12	(EE RHD:4 D)
SLP:2	(AF:2 D)	SW:18	(EF:1 C)	SW_3:13	(EE RHD:0 D)
SLP:7	(AF:2 D)	SW:19	(EF:2 C)	SW_3:14	(EE RHD:0 D)
SLR:1	(NI:1 C)	SW:20	(EF:2 C)	SW_3:15	(EE RHD:1 D)
SLR:3	(NI:1 C)	SW_1:1	(EE:0 C)	SW_3:16	(EE RHD:1 D)
SLR_2:1	(NI:1 C)	SW_1:2	(EE:0 C)	SW_3:17	(EE RHD:2 D)
SLR_2:2	(NI:1 C)	SW_1:3	(EE:0 D)	SW_3:18	(EE RHD:2 D)
SM_F:1	(GC:3 C)	SW_1:4	(EE:1 C)	SW_3:19	(EE RHD:3 D)
SM_F:2	(GC:0 C)	SW_1:5	(EE:1 C)	SW_3:20	(EE RHD:3 D)
SM_F:4	(GC:3 D)	SW_1:6	(EE:1 D)	SW_4:1	(EO RHD:3 D)
SM_O:1	(GE:2 B)	SW_1:7	(EE:2 C)	SW_4:2	(EO RHD:3 D)
SM_O:2	(GE:1 B)	SW_1:8	(EE:2 C)	SW_4:3	(EO RHD:1 D)
SM_O:4	(GE:1 B)	SW_1:9	(EE:2 D)	SW_4:4	(EO RHD:1 D)
SM_R:1	(GC:3 C)	SW_1:10	(EE:3 C)	SW_4:5	(EO RHD:2 D)
SM_R:2	(GC:0 C)	SW_1:11	(EE:3 C)	SW_4:6	(EO RHD:2 D)
SM_R:4	(GC:3 D)	SW_1:12	(EE:3 D)	SW_4:7	(EO RHD:2 D)
SP:1	(BM:2 C)	SW_1:13	(EE:0 C)	SW_4:8	(EO RHD:2 D)
SP:2	(BM:2 C)	SW_1:14	(EE:0 C)	SW_4:9	(EO RHD:3 D)
SP:3	(BM:2 C)	SW_1:15	(EE:1 C)	SW_4:10	(EO RHD:3 D)
SP:4	(BM:2 C)	SW_1:16	(EE:1 C)	SW_4:11	(EO RHD:4 D)
SP:5	(BA:2 D)	SW_1:17	(EE:2 C)	SW_4:12	(EO RHD:4 D)
SP:6	(BA:2 D)	SW_1:18	(EE:2 C)	SW_4:13	(EO RHD:3 D)
SP:7	(BA:2 D)	SW_1:19	(EE:3 C)	SW_4:14	(EO RHD:3 D)
SS:1	(BE:3 D)	SW_1:20	(EE:3 C)	SW_4:15	(EO RHD:4 D)
SS:2	(BE:3 D)	SW_2:1	(EO:3 D)	SX:1	(GG:1 C)
SS:3	(BE:3 D)	SW_2:2	(EO:3 D)	SX:1	(GK:2 C)
SS:4	(BE:3 D)	SW_2:3	(EO:1 D)	SX:2	(GG:1 C)
ST:1	(GG:4 B)	SW_2:4	(EO:1 D)	SX:3	(GG:3 C)
ST:1	(GK:3 A)	SW_2:5	(EO:2 D)	SX:3	(GK:3 C)
ST:2	(GK:3 A)	SW_2:6	(EO:2 D)	SX:4	(GG:0 C)
ST_2:1	(GH:3 B)	SW_2:7	(EO:2 D)	SX:4	(GK:2 C)
ST:3	(GK:3 A)	SW_2:8	(EO:2 D)	SX:5	(GG:1 C)
ST_3:1	(CP:3 A)	SW_2:9	(EO:3 D)	SX:6	(GG:0 C)
ST_3:1	(ZA RHD:4 C)	SW_2:10	(EO:3 D)	SX:6	(GK:2 C)
SW:1	(EF:0 C)	SW_2:11	(EO:4 D)	SX:7	(GG:3 C)
SW:2	(EF:0 C)	SW_2:12	(EO:4 D)	SX:7	(GK:3 C)
SW:3	(EF:0 C)	SW_2:13	(EO:3 D)	SX:8	(GG:3 C)
SW:4	(EF:1 C)	SW_2:14	(EO:3 D)	SX:8	(GK:3 C)
SW:5	(EF:1 C)	SW_2:15	(EO:4 D)	SX:10	(GG:0 C)
SW:6	(EF:1 C)	SW_3:1	(EE RHD:0 D)	SX:10	(GK:2 C)
SW:7	(EF:1 C)	SW_3:2	(EE RHD:0 D)	SX:11	(GG:0 C)
SW:8	(EF:1 C)	SW_3:3	(EE RHD:3 D)	SX:11	(GK:2 C)
SW:9	(EF:1 C)	SW_3:4	(EE RHD:1 D)	SX:12	(GG:0 C)
SW:10	(EF:2 C)	SW_3:5	(EE RHD:1 D)	SX:12	(GK:2 C)
SW:11	(EF:2 C)	SW_3:6	(EE RHD:3 D)	SX:15	(GG:3 C)
SW:12	(EF:2 C)	SW_3:7	(EE RHD:2 D)	SX:15	(GK:3 C)

SX:18	(GG:1 C)	TA:5	(NK:3 C)	TB:19	(GA:3 C)
SX:20	(GG:0 C)	TA:6	(GA:2 C)	TB:19	(GA4:4 B)
SX:21	(GG:0 C)	TA:7	(GA:2 C)	TB:20	(GQ:0 C)
SX:24	(GG:1 C)	TA:7	(GA4:0 B)	TB:21	(BI:2 D)
SX:24	(GK:3 C)	TA:8	(GA:1 C)	TC:1	(BZ:2 C)
SX:25	(GG:1 C)	TA:8	(GA4:1 B)	TC:2	(BZ:2 C)
SX:29	(GG:1 C)	TA:9	(GA:2 C)	TC:3	(BZ:2 C)
SX:30	(GG:4 C)	TA:9	(GA4:1 B)	TC:4	(BZ:1 C)
SX:30	(GK:3 C)	TA:10	(GQ:1 C)	TC:5	(BZ:1 C)
SX:31	(GG:2 C)	TA:11	(GQ:1 B)	TC:6	(BZ:1 C)
SX:31	(GK:2 C)	TA:12	(GA:2 D)	TC:7	(BZ:1 C)
SX_2:1	(GR:1 B)	TA:12	(GA4:1 D)	TCO:1	(BZ:0 B)
SX_2:2	(GR:1 B)	TA:13	(GU:0 C)	TCO:2	(BZ:0 B)
SX_2:3	(GR:2 B)	TA:13	(GU_2:3 C)	TD:1	(IE:0 C)
SX_2:4	(GR:0 B)	TA:14	(GU:0 C)	TD:2	(IE:0 D)
SX_2:5	(GR:1 B)	TA:14	(GU_2:2 C)	TD:3	(IE:0 C)
SX_2:6	(GR:0 B)	TA:15	(GU:0 C)	TD:4	(IE:1 C)
SX_2:7	(GR:3 B)	TA:15	(GU_2:2 C)	TD:5	(IE:1 C)
SX_2:8	(GR:3 B)	TA:16	(GQ:1 C)	TD:6	(BI:3 C)
SX_2:10	(GR:0 B)	TA:17	(NK:3 C)	TD:7	(BI:3 C)
SX_2:11	(GR:0 B)	TA:19	(GA:1 C)	TD:8	(GM:2 D)
SX_2:12	(GR:0 B)	TA:19	(GA4:1 B)	TD:9	(GM:2 C)
SX_2:15	(GR:2 B)	TB:1	(GA:3 D)	TD:10	(GM:3 C)
SX_2:18	(GR:1 B)	TB:1	(GA4:3 D)	TD:11	(GM:2 C)
SX_2:20	(GR:0 B)	TB:2	(GA:3 C)	TD:12	(GM:2 C)
SX_2:21	(GR:0 B)	TB:2	(GA4:3 B)	TD:13	(BI:3 D)
SX_2:24	(GR:1 B)	TB:3	(GA:3 C)	TD:15	(IE:1 C)
SX_2:25	(GR:1 B)	TB:3	(GA4:3 B)	TD:16	(IE:1 D)
SX_2:29	(GR:1 B)	TB:4	(KA:0 C)	TD:17	(IE:1 C)
SX_2:30	(GR:3 B)	TB:5	(NK:3 C)	TD:18	(IE:2 C)
SX_2:31	(GR:2 B)	TB:6	(GA:3 C)	TD:19	(IE:2 C)
SX_3:18	(GF:1 B)	TB:7	(GA:3 C)	TD:20	(BI:3 C)
SX_3:24	(GF:1 D)	TB:7	(GA4:2 B)	TD:21	(BI:3 C)
SY:1	(EF:3 C)	TB:8	(GA:3 C)	TM:1	(OA:2 D)
SY:2	(EF:3 C)	TB:8	(GA4:3 B)	TM:2	(OA:2 D)
SY:3	(EF:2 C)	TB:9	(GA:3 C)	TM:3	(OA:2 B)
SY:4	(EF:2 C)	TB:9	(GA4:3 B)	TM:4	(OA:2 B)
SY:5	(EF:3 C)	TB:10	(GM:0 C)	TM:5	(OA:1 D)
SY:6	(EF:3 C)	TB:11	(GM:0 C)	TMA:1	(OA:2 C)
SY:7	(EF:3 C)	TB:12	(GA:3 D)	TMA:3	(OA:1 C)
SY:8	(EF:3 C)	TB:12	(GA4:3 D)	TMA:5	(OA:2 B)
SY:9	(EF:3 C)	TB:13	(GU:1 C)	TMA:6	(OA:2 C)
SY:21	(EF:3 C)	TB:13	(GU_2:3 C)	TMA:7	(OA:2 B)
TA:1	(GA:2 D)	TB:14	(GU:1 C)	TS:1	(FG:0 A)
TA:1	(GA4:0 D)	TB:14	(GU_2:3 C)	TS:2	(FG:0 A)
TA:2	(GA:2 C)	TB:15	(GU:1 C)	TS:3	(FG:0 A)
TA:2	(GA4:0 B)	TB:15	(GU_2:3 C)	TS:4	(FG:1 A)
TA:3	(GA:2 C)	TB:16	(GM:1 C)	TS:5	(FG:1 A)
TA:3	(GA4:0 B)	TB:17	(NK:4 C)	TS:6	(FG:1 A)
TA:4	(KA:0 C)	TB:18	(BI:2 C)	TU:1	(CR:2 A)

TU:1	(CV:2 D)	X03:5	(GG:0 E)	X04_2:3	(GH:2 D)
TU:2	(CR:2 A)	X03:6	(GG:0 E)	X04_2:3	(GK:2 E)
TU:2	(CV:2 D)	X03:7	(GG:0 E)	X04_2:4	(GH:2 D)
TU:3	(CR:2 B)	X03:8	(GG:1 E)	X04_2:4	(GK:2 E)
TU:3	(CV:2 D)	X03:9	(GG:1 E)	X04_2:5	(GH:2 D)
TU:4	(CR:2 B)	X03:10	(GG:1 E)	X04_2:5	(GK:2 E)
TU:4	(CV:2 D)	X03:11	(GG:1 E)	X04_2:6	(GH:3 D)
WL:1	(NA_2:2 C)	X03:12	(GG:1 E)	X04_2:6	(GK:2 E)
WL:2	(NA_2:2 C)	X03:13	(GG:1 E)	X04_2:7	(GH:3 D)
WL:3	(NA_2:3 C)	X03:14	(GG:0 E)	X04_2:7	(GK:2 E)
WL:4	(NA_2:3 C)	X03:15	(GG:0 E)	X05:1	(GG:3 E)
X02:1	(GG:4 E)	X03_2:1	(GH:1 D)	X05:2	(GG:2 E)
X02:2	(GG:3 E)	X03_2:2	(GH:1 D)	X05:3	(GG:2 E)
X02:3	(GG:3 E)	X03_2:3	(GH:0 D)	X05:4	(GG:2 E)
X02:4	(GG:3 E)	X03_2:4	(GH:1 D)	X05:5	(GG:3 E)
X02:5	(GG:3 E)	X03_2:5	(GH:1 D)	X05:7	(GG:3 E)
X02:6	(GG:3 E)	X03_2:6	(GH:1 D)	X06:1	(NC:4 D)
X02:7	(GG:3 E)	X03_2:7	(GH:1 D)	X06:2	(NA:1 D)
X02_1:1	(GK:3 E)	X03_2:8	(GH:1 D)	X06:2	(NA_2:0 D)
X02_1:2	(GK:3 E)	X03_2:9	(GH:1 D)	X06:2	(NB:1 D)
X02_1:3	(GK:3 E)	X03_2:10	(GH:1 D)	X06:3	(NA:1 D)
X02_1:4	(GK:3 E)	X03_2:11	(GH:1 D)	X06:3	(NA_2:2 D)
X02_1:5	(GK:3 E)	X03_2:12	(GH:1 D)	X06:3	(NB:2 D)
X02_1:6	(GK:3 E)	X03_2:13	(GH:1 D)	X06:4	(NA:1 D)
X02_1:7	(GK:3 E)	X03_2:14	(GH:0 D)	X06:4	(NB:1 D)
X02_2:1	(GH:3 D)	X03_2:15	(GH:0 D)	X06:5	(NA:2 D)
X02_2:1	(GK:3 E)	X04:1	(GG:2 E)	X06:5	(NB:2 D)
X02_2:2	(GH:3 D)	X04:1	(GK:0 D)	X06:6	(NA:3 D)
X02_2:2	(GK:3 E)	X04:2	(GG:1 E)	X06:6	(NA_2:1 D)
X02_2:3	(GH:3 D)	X04:2	(GK:1 D)	X06:6	(NB:3 D)
X02_2:3	(GK:3 E)	X04:3	(GG:2 E)	X06:7	(NC:1 D)
X02_2:4	(GH:3 D)	X04:3	(GK:0 D)	X06:7	(NU:1 D)
X02_2:4	(GK:3 E)	X04:4	(GG:2 E)	X06:8	(NA:4 C)
X02_2:5	(GH:3 D)	X04:4	(GK:0 D)	X06:8	(NC:4 C)
X02_2:5	(GK:3 E)	X04:5	(GG:2 E)	X06:9	(NC:1 D)
X02_2:6	(GH:3 D)	X04:5	(GK:0 D)	X06:9	(NU:1 D)
X02_2:6	(GK:4 E)	X04:6	(GG:2 E)	X06:10	(NC:2 D)
X02_2:7	(GH:3 D)	X04:6	(GK:1 D)	X06:10	(NU:3 D)
X02_2:7	(GK:4 E)	X04:7	(GG:2 E)	X06:11	(NA:0 D)
X02_3:1	(GR:3 E)	X04:7	(GK:1 D)	X06:11	(NA_2:2 B)
X02_3:2	(GR:2 E)	X04_1:1	(GK:2 E)	X06:11	(NB:0 D)
X02_3:3	(GR:2 E)	X04_1:2	(GK:2 E)	X06:12	(NA:1 D)
X02_3:4	(GR:2 E)	X04_1:3	(GK:2 E)	X06:12	(NB:0 D)
X02_3:5	(GR:2 E)	X04_1:4	(GK:2 E)	X06:13	(NC:2 D)
X02_3:6	(GR:3 E)	X04_1:6	(GK:2 E)	X06:13	(NU:1 D)
X02_3:7	(GR:3 E)	X04_1:7	(GK:2 E)	X06:14	(NC:2 D)
X03:1	(GG:0 E)	X04_2:1	(GH:2 D)	X06:14	(NU:1 D)
X03:2	(GG:0 E)	X04_2:1	(GK:2 E)	X06:15	(NC:2 D)
X03:3	(GG:1 E)	X04_2:2	(GH:2 D)	X06:15	(NU:1 D)
X03:4	(GG:1 E)	X04_2:2	(GK:2 E)	X06:16	(NC:2 D)

X06:16	(NU:2 D)	X63:12	(GR:1 E)	XD:6	(FB:3 D)
X06:17	(NC:2 D)	XA:1	(GB:0 B)	XD:6	(FI:0 C)
X06:17	(NU:2 D)	XA:1	(GC RHD:3 B)	XD:6	(FK:1 D)
X06:18	(NA:2 D)	XA:2	(GB:1 B)	XD:7	(GU:2 D)
X06:18	(NB:3 D)	XA:3	(GB:1 B)	XD:7	(GU_2:4 C)
X06:19	(NA:3 D)	XA:4	(GB:1 B)	XD:8	(IX:2 D)
X06:19	(NB:3 D)	XA:5	(GB:1 B)	XD:9	(BI:1 D)
X06:20	(NC:3 D)	XA:6	(GB:2 B)	XD:10	(OA:2 D)
X06:20	(NU:3 D)	XA:7	(GB:2 B)	XD:11	(AA:3 B)
X06:21	(NC:3 D)	XA:8	(GB:2 B)	XD:12	(NC:0 C)
X06:21	(NU:3 D)	XA:9	(GB:2 B)	XD:12	(NU:2 D)
X06:22	(NC:3 D)	XA:10	(GB:0 B)	XD:12	(NX:0 B)
X06:22	(NU:3 D)	XA:11	(GB:1 B)	XE:1	(AA:3 D)
X06:24	(NA:3 D)	XA:12	(GB:1 B)	XE:1	(AC:2 D)
X06:24	(NA_2:3 B)	XA:13	(GB:1 B)	XF:1	(FB:1 B)
X06:24	(NB:3 D)	XA:14	(GB:1 B)	XF:1	(FB RHD:1 B)
X06:30	(NA:3 D)	XA:15	(GB:2 B)	XF:2	(FQ:1 B)
X06:30	(NB:3 D)	XA:16	(GB:2 B)	XF:3	(ME:3 B)
X06:31	(NA:4 D)	XA:16	(GC RHD:3 B)	XF:3	(MF:3 B)
X06:31	(NB:4 D)	XA:17	(GB:2 B)	XF:4	(KE:0 C)
X15_1:1	(GK:2 D)	XA:18	(GB:2 B)	XF:5	(FQ:0 B)
X15_1:2	(GK:2 D)	XB:1	(AA:4 D)	XF:6	(FQ:1 B)
X15_1:3	(GK:2 D)	XC:1	(BM:1 C)	XF:7	(KE:0 C)
X15_1:4	(GK:2 D)	XC:2	(XC:0 B)	XF:8	(KE:0 C)
X15_1:5	(GK:2 D)	XC:3	(IH:3 C)	XF:9	(AA:3 B)
X15_1:6	(GK:2 D)	XC:4	(HP:0 E)	XF:10	(FB:1 B)
X15_1:7	(GK:2 D)	XC:5	(HG:0 D)	XF:12	(KE:0 B)
X15_2:1	(GK:2 C)	XC:5	(HY:2 D)	XF:13	(BA:0 B)
X15_2:2	(GK:2 C)	XC:5	(HY RHD:2 D)	XF:15	(FB:1 B)
X15_2:3	(GK:2 C)	XC:6	(IK:0 D)	XF:15	(FB RHD:1 B)
X15_2:4	(GK:2 C)	XC:7	(BM:1 C)	XF:18	(GB:3 C)
X15_2:5	(GK:2 C)	XC:7	(BN:1 D)	XG:1	(AC:0 A)
X15_2:6	(GK:2 C)	XC:8	(AE:2 C)	XH:1	(AC:2 A)
X15_2:7	(GK:2 C)	XC:8	(AF:4 B)	XJ:1	(GM:1 C)
X62:1	(NB:1 D)	XC:8	(NK:1 D)	XJ:2	(GM:1 D)
X62:5	(NB:2 D)	XC:9	(DC:0 D)	XJ:3	(HG:0 B)
X62:6	(NB:2 D)	XC:9	(DM:0 E)	XJ:4	(GQ:1 A)
X63:1	(GR:1 E)	XC:10	(HP:1 E)	XJ:6	(HG:0 B)
X63:2	(GR:0 E)	XC:11	(NU:2 D)	XJ:7	(GQ:2 A)
X63:3	(GR:0 E)	XC:12	(KI:1 C)	XJ:10	(GA:0 A)
X63:4	(GR:0 E)	XD:1	(BU:1 C)	XJ:11	(HI:3 A)
X63:5	(GR:0 E)	XD:1	(BU:2 C)	XJ:12	(BA:1 B)
X63:6	(GR:0 E)	XD:1	(BX:1 D)	XJ:13	(GA:0 A)
X63:7A	(GR:0 E)	XD:2	(IH3:0 C)	XJ:14	(IH:1 B)
X63:7B	(GR:1 E)	XD:3	(AB:1 D)	XJ:14	(IH3:3 B)
X63:8A	(GR:0 E)	XD:4	(EE:4 D)	XJ:15	(BA:0 B)
X63:8B	(GR:0 E)	XD:4	(EF:4 D)	XJ:16	(IH:3 B)
X63:9	(GR:1 E)	XD:4	(EO:0 D)	XJ:16	(IH3:3 B)
X63:10	(GR:1 E)	XD:5	(DU:2 E)	XJ:17	(IH:1 B)
X63:11	(GR:1 E)	XD:5	(EO:0 D)	XJ:18	(IH:2 B)

XJ:18	(IH3:3 B)	XL:1	(BA:1 B)	XM:3	(CJ:4 B)
XK:1	(BA:0 B)	XL:2	(IH4:3 A)	XM:4	(AA:2 A)
XK:2	(CR:1 A)	XL:3	(BA:1 B)	XM:5	(AA:2 A)
XK:2	(CV:0 A)	XL:4	(OA:2 B)	XM:5	(CJ:4 B)
XK:3	(GM:2 A)	XL:5	(BA:1 B)	XM:6	(AC:3 D)
XK:4	(BA:0 B)	XL:6	(BA:1 B)	XM:7	(AC:3 D)
XK:5	(CR:1 A)	XL:7	(DM:0 B)	XM:8	(AC:3 D)
XK:5	(CV:1 A)	XL:8	(BI:0 B)	XM:9	(AC:3 D)
XK:6	(GM:1 D)	XL:9	(OA:2 B)	XM:10	(AC:3 D)
XK:7	(BA:0 A)	XL:10	(DM:0 B)	XM:11	(AC:2 C)
XK:7	(DC:0 B)	XL:11	(BI:0 B)	XM:12	(BI:3 B)
XK:8	(BA:0 B)	XL:12	(BA:1 B)	XM:13	(AC:2 B)
XK:9	(DM:1 B)	XL:13	(DQ:0 B)	XM:14	(AC:2 C)
XK:10	(HY:0 B)	XL:14	(DU:1 B)	XM:15	(BI:3 B)
XK:11	(DC:0 B)	XL:15	(BA:1 D)	XM:16	(AC:2 B)
XK:11	(DM:0 B)	XL:16	(BA:1 D)	XM:17	(AC:2 B)
XK:12	(DC:1 B)	XL:16	(CP:1 C)	XM:18	(BI:3 B)
XK:12	(DM:1 B)	XL:17	(BA:1 D)	XO:1	(AC:0 A)
XK:13	(HY:0 B)	XL:18	(BA:1 D)	XS:1	(AC:2 A)
XK:15	(IQ:2 B)	XM:1	(AA:2 B)	XT:1	(AC:1 A)
XK:16	(HY:1 B)	XM:1	(CJ:3 B)	Y18GH:1	(DP:2 B)
XK:16	(HY RHD:1 B)	XM:2	(AA:2 B)	Y18GH:2	(DP:2 B)
XK:17	(CJ:0 B)	XM:2	(CJ:3 B)	Y18GH:4	(DP:2 A)
XK:18	(CJ:0 B)	XM:3	(AA:2 B)		

List of components

A01	Fuse and Relay Centre (1000)	A36	Control unit, BBM (Body Builder Module) (NC:1 B/NU:1 A/NX:1 B) (1000)
A02L	Fuse holder, 6-fuses (GB:0 C) (1000)	A39	Control unit, camera (IZ:0 C) (1000)
A02P	Fuse holder, 6-fuses (ME:2 C/MF:2 C) (1000)	A41	Component group transmission. Contains B23D, B138D and Y17D (DM:2 B/DP:0 D) (1403/1499)
A02X	Fuse holder, 6-fuses (ME:3 C/MF:3 C) (1000)		Component group transmission. Contains B26, Y21, Y22, Y23 and Y26B (DP:2 D) (1494/1499)
A03	Instrument cluster (BI:0 B/CP:2 C/ZA RHD:2 B) (1000)	A42B	Electric fan control (B32 fan speed sensor, Y35 visco clutch) (CO:0 D) (1030)
A04A	Refrigerator (IQ:3 C) (1006E/1007B)	A43	Fuel pre filter (B52 water level sensor, R10 heater, Y38 water drain solenoid (CO:3 B) (1030)
A04B	Refrigerator (IQ:4 C) (1460)		Control unit, RAS (Rear Axle Steering) (FO:1 B) (1493)
A05	Display, FMS (Fleet Management System) (BU:3 D/IZ:0 D) (1000)	A45	Control unit, LDWS (Lane Departure Warning System) (BE:0 E) (1006A)
A06L	EI. adjustable seat (IA:2 B) (1007A)		Control unit, ADS (AdBlue Dosing System) (CV:1 C) (1510)
A06R	EI. adjustable seat (IA:0 B) (1007B)	A59	Control unit, Tyre pressure monitoring (OA:1 B) (1508)
A07	Radio (IU:0 C/IU RHD:0 C) (1000)		Airdryer, electronical controlled (FQ:1 C) (1056)
A09	Telephone (IX:0 C) (1000)	A60	Control unit, FMS Gateway (Fleet Management System) (BX:0 B) (1000)
A11	Control unit, door lock (IM:1 B) (1000)		Control unit, Roof cooler (HZ:1 B) (1018)
A12	Control unit, ABS (Anti-lock Brake System) (EE:0 B/EE RHD:0 B/EF:0 C) (1007C)	A62	Fuse holder, 3-fuses, not mainswitch dependent (AB:3 B) (1000)
A13B	Control unit, TECU (automatic transmission) (DI:0 C) (1494)	A77	Control unit, GSECU (Gearshift ECU) (DC:1 C) (1000)
A13C	Control unit, TECU (automatic transmission) (DM:0 C) (1007C)	A80	Control unit, amplifier (IV:1 B) (1007B)
A13E	Control unit, TECU (automatic transmission) (DP:0 C)	A94	Control unit, toll collect OBU (BZ:0 C/BZ RHD:0 C) (1006A)
A14	Control unit, EMS (Engine Management System) (CO:2 C) (1030)	A96	Control unit toll collect DSRC (BZ:1 B/BZ RHD:1 B) (1000)
A15	Control unit, SRS (Supplementary Restraint System) (IS:0 B) (1000)	A106	Component group engine (K65 power relay, starter motor pre-relay M04 starter motor) (AA:1 D/CO:2 A)
A16	Control unit, ECS (Electronic Controlled air Suspension) (FA:0 C/FA RHD:0 C/FB:0 C/FB RHD:0 C/FG:0 D/FG:2 D/) (1007C)	A116	Control unit, TGW (Telematics Gateway) (BU:0 C) (1000)
A17	Control unit, VECU (Vehicle ECU) (BA:0 C) (1000)	A122	Control unit, TTU (Telematics Terminal Unit) (BU:2 C) (1000)
A18	Control unit, roof hatch (IQ:0 C) (1006E)	A123	Control unit, alcolock (IK:0 B) (1000)
A20	Control unit, Immobiliser (IM:3 D) (1000)	A124	Handset, alcolock (IK:3 C) (1000)
A21	Control unit, EBS (Electronic Brake System) (EO:0 C/EO RHD:0 B) (1007C)		Control module, ACM (Adblue Control Module) (CR:0 C) (1510)
A26	Control unit, DACU (Driver Assistance Control Unit) (BE:1 B) (1007C)	A125	Fuseholder, 3-fuses (IR:3 B/IR2:0 B/IR3:0 B) (1000)
A27	Control unit, LCM (Light Control Module) (GA:0 B/GA4:1 A/GB:0 C/GC:0 A/GC RHD:0 A/GM:1 E) (1000)	A126	Sensor, flame, parking heater (HM:0 E)
A28B	Control unit, ADR main switch, integrated power relay (AE:0 C/AF:2 C) (1435B)	A132	Thermostat, parking heater (HI:1 A) (1006A/1006E)
A29	Telephone handset, secrecy receiver (IX:1 B) (1000)	A133	Thermostat, parking heater (HI:2 A) (1007A)
A31	Control unit, burglar alarm (NK:0 C) (1000)	B01	Sensor, footbrake valve (EO:0 D) (1504)
A32	Control unit, parking heater (HM:0 C) (1062)	B02A	
A33	Tachograph (BM:1 B) (1000)		
A33B	Tachograph (BN:1 B) (1006A)	B02B	
A34B	Control unit, climate unit (HG:0 A) (1000)	B03_A	

B04	Sensor, engine speed, crankshaft (CO:1 D) (1030)	B22	Sensor, outdoor temperature (BI:2 C) (1503)
B05	Sensor, engine speed, camshaft (CO:1 D) (1030)	B23B	Sensor, oil temperature, retarder (DI:2 B) (1494)
B06	Sensor, air pressure, air tank (BA:2 D) (1000)	B23C	Sensor, oil temperature, retarder (DM:3 B)
B07	Sensor, fuel level (BI:2 C) (1040)	B24	Sensor, air pressure, bogie lift bellow (FA:0 D) (1072)
B09B	Sensor, oil temperature, gearbox (BI:2 C) (1494)	B25	Sensor, accelerator pedal (BA:4 D) (1000)
B10C	Sensor, oil level (FO:0 C) (1493)	B26B	Sensor, clutch position (DP:2 D)
B12	Sensor, tachograph/speedometer (BM:2 D) (1494/1499)	B27	Sensor, battery charging (BI:2 C) (1435A/1435B)
B12B	Sensor, tachograph/speedometer (BM:1 D) (1494)	B28	Sensor, chassis level, front axle (FA:2 D) (1072)
B13	Sensor, wheel speed, lhs. 1:st front axle (EF:0 D) (1086)	B29B	Sensor, chassis level, lhs. rear axle (FA:3 D) (1072/1086)
B13A	Sensor, wheel speed, lhs. 1:st front axle (EE:0 D) (1086)	B30	Sensor, chassis level, rhs. rear axle (FA:3 D) (1072)
B13B	Sensor, wheel speed, lhs. 1:st front axle (EP:0 C/EP:2 C) (1086)	B32	Sensor, engine cooling fan speed (Included in A43) (CO:0 B)
B14	Sensor, wheel speed, rhs. 1:st front axle (EF:0 D) (1086)	B37	Sensor, boost pressure and boost temperature (CO:1 D) (1030)
B14A	Sensor, wheel speed, rhs. 1:st front axle (EE:1 D) (1086)	B37A	Sensor, boost temperature (CO:1 D) (1030)
B14B	Sensor, wheel speed, rhs. 1:st front axle (EP:1 C/EP:2 C) (1086)	B37B	Sensor, boost pressure (EGR Mixer position) (CO:1 D) (1030)
B15	Sensor, wheel speed, lhs. 1:st driven rear axle (EF:1 D) (1086)	B39	Sensor, air filter pressure and air filter temperature (CO:1 B) (1030)
B15A	Sensor, wheel speed, lhs. 1:st driven rear axle (EE:2 D) (1086)	B40A	Sensor, brake lining wear indicator, lhs. 1:st front axle (EP:2 C) (1086)
B15B	Sensor, wheel speed, lhs. 1:st driven rear axle (EP:1 E/EP:2 E) (1086)	B40B	Sensor, brake lining wear indicator, lhs. 1:st front axle (EP:0 C) (1086)
B16	Sensor, wheel speed, rhs. 1:st driven rear axle (EF:2 D) (1086)	B41A	Sensor, brake lining wear indicator, rhs. 1:st front axle (EP:2 C) (1086)
B16A	Sensor, wheel speed, rhs. 1:st driven rear axle (EE:3 D) (1086)	B41B	Sensor, brake lining wear indicator, rhs. 1:st front axle (EP:1 C) (1086)
B16B	Sensor, wheel speed, rhs. 1:st driven rear axle (EP:1 E/EP:2 E) (1086)	B42A	Sensor, brake lining wear indicator, lhs. 1:st driven rear axle (EP:2 E) (1086)
B17	Sensor, wheel speed, lhs. 2:nd driven rear axle (EF:2 D) (1086)	B42B	Sensor, brake lining wear indicator, lhs. 1:st driven rear axle (EP:0 E) (1086)
B17	Sensor, wheel speed, lhs. 2:nd driven rear axle (EP:1 E) (1086)	B43A	Sensor, brake lining wear indicator, rhs. 1:st driven rear axle (EP:2 E) (1086)
B17B	Sensor, wheel speed, lhs. 2:nd driven rear axle (EP:3 C) (1086)	B43B	Sensor, brake lining wear indicator, rhs. 1:st driven rear axle (EP:2 E) (1086)
B18	Sensor, wheel speed, rhs. 2:nd driven rear axle (EF:3 D) (1086)	B44A	Sensor, brake lining wear indicator, lhs. 2:nd driven rear axle (EP:2 C) (1086)
B18	Sensor, wheel speed, rhs. 2:nd driven rear axle (EP:1 E) (1086)	B44B	Sensor, brake lining wear indicator, lhs. 2:nd driven rear axle (EP:0 E) (1086)
B18B	Sensor, wheel speed, rhs. 2:nd driven rear axle (EP:3 C) (1086)	B45A	Sensor, brake lining wear indicator, rhs. 2:nd driven rear axle (EP:3 C) (1086)
B19	Sensor, wheel speed, lhs. 2:nd front axle (EP:0 C) (1086)	B45B	Sensor, brake lining wear indicator, rhs. 2:nd driven rear axle (EP:0 E) (1086)
B20	Sensor, wheel speed, rhs. 2:nd front axle (EP:1 C) (1086)	B46B	Sensor, brake lining wear indicator, lhs. 2:nd front axle (EP:0 C) (1086)
B21	Sensor, coolant temperature, engine (CO:1 B) (1030)	B47B	Sensor, brake lining wear indicator, rhs. 2:nd front axle (EP:1 C) (1086)
		B49	Sensor, steering angle (EO:3 A) (1000)

B49F	Sensor, steering angle (FO:1 D) (1493)	B77B	Sensor, brake lining wear indicator, rhs., tag axle (EP:3 E) (1086)
B49R	Sensor, steering angle (FO:2 D) (1493)		
B50	Sensor, yaw-rate (EO:4 B) (1507)	B80	Handsfree, Loudspeaker, Microphone (IX:0 B) (1007A/1007B)
B51	Sensor, fuel pressure (CO:2 B) (1030)	B85	Sensor, temp, downstream particle filter (CR:0 D) (1510)
B52	Sensor, water level (CO:3 B)		Sensor, turbo speed (CO:2 B) (1030)
B53	Sensor, temperature, parking heater (HM:1 E)	B87	Transmitter, movement sensor (NK:2 D) (1006B/1006E)
B54	Sensor, crank case pressure (CO:1 B) (1030)	B90	Receiver, movement sensor (NK:3 D) (1006B/1006E)
B55	Sensor, air pressure, suspension bellows, 3:rd axle (FA:0 D) (1072)	B91	Sensor, NOx (CAN based) (CR:3 B/CV:1 B) (1510)
B56	Sensor, air pressure, suspension bellows, front axle (FA:1 D) (1072)	B96	Sensor, NOx (CAN based) (CR:2 B) (1510)
B57	Sensor, air pressure, suspension bellows, lhs. rear (FA:1 D) (1072)	B96B	Sensor, exhaust temp (before catalyst) (CV:3 D) (1510)
B58	Sensor, air pressure, suspension bellows, rhs. rear (FA:2 D) (1072)	B97	Sensor, exhaust temp (before catalyst) (CR:1 D) (1510)
B60DD	Loudspeaker (IU:0 D/IU RHD:0 D/IV:1 D) (1083)	B98	Sensor, exhaust temp (after catalyst) (CV:3 D) (1510)
B60DP	Loudspeaker (IU:1 D/IU RHD:1 D/IV:1E) (1083)	B98D	Sensor, exhaust temp (after catalyst) (CR:0 D) (1510)
B60LF	Loudspeaker (IU:0 D/IU RHD:0 D/IV:2 E) (1000)	B100	Sensor, air pressure, suspension bellows, tridem (FA:0 D) (1072)
B60LR	Loudspeaker (IU:1 D/IV:1 D) (1007A)	B115	Sensor, DPF pressure (CR:1 D) (1510)
B60RF	Loudspeaker (IU:1 D/IU RHD:1 D/IV:2 E) (1000)	B118	Sensor, oil pressure (CO:1 B) (1030)
B60RR	Loudspeaker (IU:2 D/IV:2 E) (1007A)	B119	Sensor, oil level and oil temp (CO:1 D) (1030)
B61L	Loudspeaker, treble (IU:0 D/IU RHD:0 D/IV:2 D) (1000)	B120	Radar ACC, Adaptive Cruise Control (BE:2 D) (1502)
B61R	Loudspeaker, treble (IU:1 D/IU RHD:1 D/IV:3 D) (1000)	B122	Sensor, exhaust temp, engine mounted (CO:1 A) (1030)
B63	Microphone, (handsfree) (IU:3 A) (1006A)	B138B	Sensor, Control pressure retarder (DI:3 B) (1494)
B66	Sensor, temperature EGR (CO:2 B) (1030)		Sensor, Control pressure retarder (DM:2 B)
B67	Rear view camera (IZ:2 D) (1000)	B138C	Sensor, AdBlue level and temperature (CV:2 D) (1510)
B68	Sensor, output shaft speed, gearbox (DI:3 D) (1494)	B142B	Sensor, brake airpressure, front (BI:3 C) (1504)
B69B	Sensor, coolant temperature, retarder (DM:3 B) (1403)	B152	Sensor, brake airpressure, rear (BI:3 C) (1504)
B69C	Sensor, coolant temperature, retarder (DP:0 D) (1499)	B153	Sensor, water level roof cooler (HZ:2 C) (1018)
B70	Sensor, wheel speed, lhs., pusher axle (EP:3 E) (1086)	B154	Sensor, EGR Differential pressure (Venturi) (CO:1 D) (1030)
B71	Sensor, wheel speed, rhs., pusher axle (EP:3 E) (1086)	B166	Sensor, chassis level, rear axle (BA:2 E) (1499)
B72	Sensor, wheel speed, lhs., tag axle (EP:4 E) (1086)	B175	Loudspeaker, subwoofer (IV:3 D) (1007B)
B73	Sensor, wheel speed, rhs., tag axle (EP:4 E) (1086)	B184	Sensor, after treatment fuel pressure (CO:3 B) (1030)
B74B	Sensor, brake lining wear indicator, lhs., pusher axle (EP:2 E) (1086)	B187	Sensor, oil cooling jet pressure (CO:0 B) (1030)
B75B	Sensor, brake lining wear indicator, rhs., pusher axle (EP:3 E) (1086)	B207	Sensor, rainsensor (GM:3 D) (1000)
B76B	Sensor, brake lining wear indicator, lhs., tag axle (EP:3 E) (1086)	B209	Radar, LCS (Lane Change Support) (BE:3 E) (1007A/1007B)

B213	Sensor, pressure, butterfly valve backpressure (CO:4 B) (1030)	E14_B	Lamp, beacon warning lamp (KM:1 D) (1047)
B217	Sensor, Diff. pressure (DI:3 B) (1494)	E14_BR	Lamp, beacon warning lamp (KM:2 C) (1047)
B229	Sensor, Adblue level, temp, quality (CR:2 B) (1510)	E18_LB	Lamp, reading light (IH:0 D/IH3:1 D/IH4:1 C) (1006D/1006E)
D01	Time delay relay, bogie lift, axle load limiter (FK:3 A) (1007C)	E18_RB	Lamp, reading light (IH:1 D/IH3:3 D/IH4:3 C) (1006D/1006E)
E01	Lamp, full beams (GA:2 C/GA:3 C) (1502/1503)	E19C	Lamp, identification light, roof (GL:1 C/GL:2 C) (1436)
E01L/R	Lamp, full beams (GA4:0 C/GA4:3 C)	E19L	Lamp, identification light, roof (GL:1 C/GL:2 C) (1436)
E02	Lamp, dipped beams (GA:2 D/GA:3 D) (1502/1503)	E19R	Lamp, identification light, roof (GL:1 C/GL:2 C) (1436)
E02L/R	Lamp, dipped beams (GA4:0 C/GA4:3 C)	E21	Lamp, rear fog light (GC:1 D/GC:2 D) (1040)
E03	Lamp, spot light (GA:2 C/GA:3 C) (1502/1503/1047)	E22	Lamp, roof sign illumination (KI:0 C/KI:0D) (1436)
E03_A	Lamp, spot light (NI:2 C)	E22L	Lamp, roof sign illumination (KI:3 D)
E03_B	Lamp, spot light (NI:2 C)	E22M	Lamp, roof sign illumination (KI:3 C)
E03_L	Lamp, spot light (NI:2 D)	E22R	Lamp, roof sign illumination (KI:3 B)
E03_R	Lamp, spot light (NI:2 D)	E23	Lamp, luggage compartment illumination (IH4:3 C) (1007A)
E03_C	Lamp, spot light (NI:2 A) (1006A)	E27L_1	Tail lamp module (GC:1 D) (1040)
E03_D	Lamp, spot light (NI:3 A) (1006A)	E27L_2	Tail lamp module (GE:1 C) (1040)
E05	Lamp, 5:th wheel light (GH:0 D/GK:1 B/KE:0 D/) (1063)	E27L_3	Tail lamp module (GF:3 C) (1040)
E06	Lamp, reversing light (GC:1 D/GC:2 D/GF:1 C) (1040)	E27L_4	Tail lamp module (GF:0 C) (1040)
E07	Lamp, fog light (GA:2 D/GA:3 D) (1502/1503)	E27R_1	Tail lamp module (GC:2 D) (1040)
E07L/R	Lamp, fog light (GA4:1 C/GA4:3 C)	E27R_2	Tail lamp module (GE:2 C) (1040)
E08	Lamp, parking light, front (GA:1 D/GA:3 D) (1502/1503)	E28	Parking heater, ADR (HI2:0 C/HM:0 D) (1007A/1062)
E08L/R	Lamp, parking light, front (GA4:1 C/GA4:3 C)	E29C	Lamp, external speed indication (GL:0 C/GL2:1 D/GL2:3 D) (1436)
E09	Lamp, brake light (GC:1 D/GC:2 D) (1040)	E29L	Lamp, external speed indication (GL:0 D/GL2:0 D/GL2:3 D) (1436)
E10	Lamp, tail light (GC:1 D/GC:2 D) (1040)	E29R	Lamp, external speed indication (GL2:1 D/GL2:3 D) (1436)
E11L_C	Lamp, side marker light (GC:0 D) (1077)	E32ATC	Climate unit (HY:2 C/HY RHD:2 C) (1000)
E11L_F	Lamp, side marker light (GC:0 D) (1077)	E32ECC	Climate unit (HG:1 C) (1000)
E11L_R	Lamp, side marker light (GC:0 D) (1077)	E33LF	Lamp, additional load lamps (reverse lamps) (NA:0 D/NB:0 D) (1506A)
E11L_W	Lamp, side marker light (GC:0 D) (1077)	E33LR	Lamp, additional load lamps (reverse lamps) (NA:1 D/NB:1 D) (1506A)
E11R_C	Lamp, side marker light (GC:3 D) (1077)	E33RF	Lamp, additional load lamps (reverse lamps) (NA:1 D/NB:1 D) (1506A)
E11R_F	Lamp, side marker light (GC:3 D) (1077)	E33RR	Lamp, additional load lamps (reverse lamps) (NA:1 D/NB:1 D) (1506A)
E11R_R	Lamp, side marker light (GC:3 D) (1077)	E34	Lamp, body builder centre light (IH:3 D/IH3:0 D/ZA RHD:0 D) (1000)
E11R_W	Lamp, side marker light (GC:3 D) (1077)	E39	Lamp, Licence Plate Illumination (GF:3 B) (1040)
E12L	Lamp, roof position light (GA:4 D) (1006A/1006E/1436)	E39L	Lamp, Licence Plate Illumination (GE:2 C) (1040)
E12R	Lamp, roof position light (GA:1 D) (1006A/1006E/1436)	E39R	Lamp, Licence Plate Illumination (GE:2 C) (1040)
E13	Lamp, direction indicator (GA:2 C/GA:3 C/GC:1 D/GC:2 D) (1040/1502/1503)		
E13L/R	Lamp, direction indicator (GA:0 C/GA4:2 C)		
E14_A	Lamp, beacon warning lamp (KM:2 D) (1047)		
E14_AR	Lamp, beacon warning lamp (KM:1 C) (1047)		

E73	7th injector (CO:1 D) (1030)	H02	Horn (GQ:1 B) (1502)
E79L	Lamp, roof position light, rear, left (GL:3 C) (1436)	H03	Reverse warner, acoustic (GC:1 D/GC:2 D/GF:0 C) (1040)
E79R	Lamp, roof position light, rear, right (GL:4 C) (1436)	H06	Siren (NK:3 D) (1502/1503)
E81	Lamp, static corner light (GA:2 C/GA:3 C) (1502/1503)	K01	Relay, starting switch, radio position (AC:3 C) (1000)
E82	Parking heater, UADR (HI:0 D) (1007A)	K02	Relay, EMS (Engine Management System) (BA:1 A) (1000)
E83L	Headlight module (GA:1 C) (1502)	K03	Relay, starter motor (AA:2 B/CJ:4 B) (1000)
E83R	Headlight module (GA:2 C) (1503)	K04	Relay, body builder fuse box (kl.15) (ME:2 A) (1000)
E84L	Lamp, direction indicator, LED (GA:1 D/GA4:1 C) (1502)	K05	Relay, I-shift/Powertronic/Retarder (DC:0 A/DM:0 A) (1000)
E84R	Lamp, direction indicator, LED (GA:3 D/GA4:4 C) (1503)	K06	Relay, fan climate unit (HY:0 B/HY RHD:0 B) (1000)
E85L	Lamp, interior light, roof (IH:1 D/IH3:2 D/IH4:2 C) (1006B/1006E)	K07	Relay, intermittent wiper (GM:1 C) (1000)
E85R	Lamp, interior light, roof (IH:2 D/IH3:2 D/IH4:2 C) (1006B/1006E)	K08	Relay, gearbox area inhibitor (BA:1 A) (1000)
E86L	Lamp, interior light, reading light, lower bunk (IH:0 D/IH3:1 D/IH4:1 C) (1006D/1006E)	K09	Relay, interior lamps (IH:2 A/IH3:3 A) (1000)
E86R	Lamp, interior light, reading light, lower bunk (IH:1 D/IH3:3 D7IH4:2 C) (1006D/1006E)	K10	Relay, fifth wheel-, working-light (KE:0 C) (1000)
E87L	Lamp, interior light, reading light, front shelf (IH3:3 D) (1006A)	K11	Relay, air suspension (FB:1 B) (1000)
E87R	Lamp, interior light, reading light, front shelf (IH3:3 D) (1006A)	K12	Relay, reverse light, trailer (GB:4 D) (1000)
E88L	Lamp, interior light, snake lamp (IH:0 D/IH3:2 D/IH4:1 C) (1006D/1006E)	K13	Relay, alternator controlled (AA:4 B) (1000)
E88R	Lamp, interior light, snake lamp (IH:1 D/IH3:2 D/IH4:2 C) (1006D/1006E)	K14	Time delay relay, bogie lift, A-ride (FI:1 B/FK:1 C) (1000)
E89	Lamp, interior light, overall storage, midsection (IH3:1 D) (1006A)	K15	Time delay relay, bogie lift, A-ride, with axle load limiter (FK:2 C) (1000)
E90	Lamp, interior light, map/reading light, midsection (IH3:1 D) (1006A)	K16	Relay, bogie lift, A-ride, with axle load limiter (FK:1 C) (1000)
E91DS	Lamp, interior light, door (IH:2 D/IH3:0 D) (1083)	K20	Relay, D+ short-circuit, (ADR-trucks only) (AE:4 D) (1000)
E91PS	Lamp, interior light, door (IH:2 D/IH3:0 D) (1083)	K21	Relay, el. adjustable seat (IA:2 B) (1000)
E92	Lamp, interior light, drawer/floor light (IH:2 D/IH3:0 D) (1000)	K22	Relay, climate fan, 1:st speed (by parking heater) (HY:1 B/HY RHD:1 B) (1000)
E93L	Lamp, interior light, compartment light, front (IH3:4 D) (1006A)	K23	Relay, cab tilt (KA:0 C) (1000)
E93R	Lamp, interior light, compartment light, front (IH3:4 D) (1006A)	K24	Relay, central lubrication (FU:0 B) (1000)
E94L	Lamp, position light, sunvisor (GL2:0 D/GL2:2 D)	K25	Relay, light sign (KI:1 C) (1000)
E94R	Lamp, position light, sunvisor (GL2:1 D/GL2:4 D)	K26A	Relay, foldable rear view mirror arm, Japan (IF:0 C) (1000)
E95	Lamp, working, roof (NA_2:4 D)	K26B	Relay, foldable rear view mirror arm, Japan (IF:1 C) (1000)
E95L	Lamp, working, roof (NA_2:3 C) (1007A)	K30	Relay, beacon warning light (KM:0 B) (1000)
E95R	Lamp, working, roof (NA_2:3 C) (1007A)	K35	Relay, headlamp high pressure wash (GM:0 B) (1000)
G01A	Battery (AA:0 D/AB:1 D/AE:0 D/AF:1 C)	K37	Relay, parking light (NA:1 C/NB:0 C) (1000)
G01B	Battery (AA:0 D/AB:1 D/AE:0 D/AF:1 C)	K38	Relay, body builder preparation, pressure sel./switch 2/free (NA:1 C/NA_2:0 C/NB:1 C) (1000)
G02	Alternator (AA:3 D) (1476)	K39	Relay, body builder preparation, plough light, spotlights (NA:1 C/NB:1 C) (1000)
H01	Horn, air-operated (GQ:1 B) (1502)	K40	Relay, body builder preparation (NA:3 C/NA_2:1 C/NB:3 C) (1000)
256		K41	Relay, body builder preparation, swapbody (NA:2 C/NB:2 C) (1000)

K42	Relay, body builder preparation, spotlights/free (NI:1 B) (1000)	M12	Motor, seat fan (IA:0 C/IA:2 C)
K43	Relay, body builder preparation, external start/free (NC:3 C) (1000)	M13	Motor, coolant pump, parking heater (HM:2 E/HP:0 C) (1062)
K45A	Relay, body builder preparation, dual speed (NU:2 B) (1000)	M14	Motor, central lubrication pump (FU:0 C) (1401)
K45B	Relay, body builder preparation, dual speed (NU:2 C) (1000)	M17	Motor, foldable rear view mirror arm, Japan (IF:0 D) (1470)
K48	Power relay, engine preheating (CJ:3 C) (1435A/1435B)	M27	Motor, roof cooler fan (HZ:1 C)
K49	Power relay, bogie lift motor (FI:3 B/FK:3 D) (1037)	M28	Motor, washer, roof cooler (HZ:2 C) (1018)
K51	Power relay, battery main switch (AB:0 C/CS:0 C) (1435A)	M29	Motor, fan in dash board (HE:0 C) (1000)
K61	Relay, auxiliary revers light, truck (NA:0 C/NA_2:3 B/NB:0 C) (1000)	M41	Motor, pump, Adblue (CR:2 D) (1510)
K63	Relay, ACC Adaptive cruise control (BE:1 B) (1000)	R01	Heater, engine preheat (CO:0 D) (1030)
K64	Relay, man. main switch BBOX-EF (AB:1 C) (1000)	R02L	Heater, rear-view mirror (IE:0 D) (1504)
K65	Power relay, starter motor pre-relay (AA:1 D/CO:2 B) (1030)	R02R	Heater, rear-view mirror (IE:1 D) (1504)
K66	Relay, tail lift indication (NB:2 C) (1000)	R03	Heater, seat (IA:0 C/IA:2 C)
K67	Relay, rainsensor, high speed wiper (GM:3 C) (1000)	R04B	Cigarette lighter (IQ:3 C) (1000)
K68	Relay, power outlets (IR2:1 A) (1000)	R05	Heater, air dryer (FQ:0 C) (1056)
K69	Relay, fuel heater, thermoline (FX:0 C) (1000)	R07	Glow plug, parking heater (HI:3 E/HI2:3 D/HM:1 E)
K70A	Relay, ADR/SLP (AF:0 B) (1435)	R10	Heater, fuel pre filter (Included in A45) (CO:2 B)
K70B	Relay, ADR/SLP (AF:0 D) (1435)	R11	Heater, coffee maker (ME:1 B) (1000)
L01	Reactor, light sign illumination (KI:0 D)	R14	Termination resistor (XB:2 D) (1007C)
L01L	Reactor, light sign illumination (KI:3 D)	R17	Resistor (AB:2 B/AE:3 C) (1000)
L01M	Reactor, light sign illumination (KI:3 C)	R18	Heater, electronic controlled air dryer (FQ:1 C)
L01R	Reactor, light sign illumination (KI:3 B)	R21	Termination resistor (OA:3 C) (1000)
M01	Motor, windscreen wiper (GM:2 C) (1504)	R23A	Heater, AdBlue hose (CV:1 D) (1510)
M02	Motor, windscreen washer pump (GM:0 D) (1503)	R23B	Heater, AdBlue hose (CV:2 D) (1510)
M03	Motor, headlamp high pressure washer pump (GM:1 D) (1503)	R23C	Heater, AdBlue hose (CV:2 D) (1510)
M04	Motor, starter motor (AA:1 D/CO:2 A) (1476)	R23D	Heater, AdBlue hose (CV:1 D) (1510)
M05	Motor, hydraulic bogie lift pump unit (FI:3 B/FK:3 C) (1037)	R23J	Heater, AdBlue hose (CV:1 D) (1510)
M06DS	Motor, window winder (IE:2 C) (1083)	R25	Resistor (GU_2:3 B)
M06PS	Motor, window winder (IE:3 C) (1083)	R26	Resistor (GU_2:4 B)
M07	Motor, parking heater fan (HI:1 E/HI2:2 D/HM:2 E)	R33	Termination resistor (BE:2 D) (1502)
M08	Motor, levelling control, headlights (GA:1 C/GA:2 C) (1502/1503)	R35	Termination resistor (XC:2 C)
M08L/M08R	Motor, levelling control, headlights (GU_2:2 E/GU_2:3 E)	R36	Heater, AdBlue filter housing (CV:0 E) (1510)
M09DS	Motor, door lock (IM:1 D) (1083)	R37	Termination resistor, Can-bus (BE:2 D) (1000)
M09PS	Motor, door lock (IM:2 D) (1083)	R43	Termination resistor (XC:3 D) (1000)
M10	Motor, roof hatch (IQ:0 D)	R45	Termination resistor (BE:3 D) (1007A/1007B)
M11	Motor, cab tilt pump (KA:0 D) (1502/1503)	R46	Heater, fuel hose, thermoline (FX:0 D) (1458)
		R47	Termination resistor (DI:1 B) (1494)
		R50	Termination resistor (CR:3 C)
		R51	Heater, hose, AdBlue (CR:3 D) (1510)
		R52	Heater, hose, AdBlue (CR:3 D) (1510)
		R53	Heater, hose, AdBlue (CR:3 D) (1510)
		S01	Switch, main lighting, selector type (GA:0 A/GU:1 A/GU_2:4 B) (1000)

S02	Stalk switch, full-/dipped beam, direction indicator (BA:2 B/GA:2 A) (1000)	S31	Switch, TCS (Traction Control System) (EO:1 A) (1000)
S03	Switch, loading lamps/working lamps (KE:1 B/ZA RHD:2 B) (1000)	S32	Switch, brake hold (EO:1 B) (1000)
S04	Switch unit, climate fan (HY:1 A/HY RHD:1 A) (1000)	S33	Switch, trailer brake (EO:0 B) (1000)
S05A	Switch, interior light, selector type (IH:3 B) (1000)	S34	Switch unit, steering wheel push buttons (IS:1 D) (1000)
S05B	Switch, interior light, selector type (IH:3 B/IH3:1 B) (1007A)	S36DS	Switch unit, door functions (IE:0 B) (1083)
S05C	Switch, interior light, selector type (IH3:2 B) (1006A)	S36PS	Switch unit, door functions (IE:3 B) (1083)
S06	Stalk switch, windscreen wiper, selector type (BI:3 B/GM:2 B) (1000)	S37	Switch, rear view camera, camera activation (IZ:1 B) (1000)
S07	Switch, engine brake, selector type (BA:3 B) (1000)	S38	Switch, ADR, emergency switch, cab (AE:1 B/AF:3 A) (1000)
S08	Switch, differential gear lock, rear wheels (DU:1 B) (1000)	S39	Switch, ADR, emergency switch, exterior (AE:1 C/AF:3 C) (1007A)
S09	Switch, differential gear locks, inter axles and rear wheels, selector type (DU:1 B) (1000)	S39R	Switch, ADR, emergency switch, exterior (AE:2 C) (1007A/1007B)
S10	Switch, sign light, roof (KI:1 B) (1006A)	S40	Switch, rear view camera, camera selection (IZ:2 B)
S11	Switch, bogie lift, selector type (FI:0 B/FK:0 B/FL:0 B) (1000)	S43	Pressure switch, parking brake indicator, NC. (BA:1 D) (1000)
S11A	Switch, bogie lift, selector type (FB:3 A/FA RHD:2 A) (1000)	S45	Position switch, differential gear lock indicator, rear wheels, NC. or NO. (DU:3 C) (1040)
S14A	Switch, push button, horn (GQ:1 D)	S45R	Position switch, differential gear lock indicator, rear wheels, NC. or NO. (DU:3 C) (1040)
S14B	Switch, push button, horn (GQ:1 D)		
S15	Switch, starting (AC:1 B/AE:0 B/AF:0 A) (1000)	S46	Pressure switch, bogie lift indicator, NO. (FI:2 D/FK:3 E) (1037)
S16	Switch, push button, air horn (GQ:2 D)	S47	Position switch, low split indicator, NO. (BI:1 D) (1494)
S17	Switch, front wheel drive (DU:2 B) (1000)	S48A	Pressure switch, brake light, NO. (ABS/UABS) (GB:3 B) (1401)
S18	Switch, differential gear lock, front (DU:2 B) (1000)	S48B	Pressure switch, brake light, NO. (ABS/UABS trailer control valve) (GB:3 B) (1401)
S19	Switch, extra (NA:3 B/NA_2:2 C/NB:3 B) (1000)	S48C	Pressure switch, brake light, NO. (ABS/UABS trailer control valve) (GB:3 A) (1000)
S20	Switch, 3:rd axle lock (FO:3 B) (1000)	S49	Position switch, reverse lamps, NO (GB:3 D) (1494)
S21A	Switch, parking heater (HI:3 B/ZA RHD:0 B) (1000)	S52_L	Proximity switch, cab lock, NO. (BI:1 C) (1007A)
S21B	Switch, parking heater (HI:3 B) (1007A)	S52_R	Proximity switch, cab lock, NO. (BI:1 D) (1007B)
S23	Switch, roof hatch, selector type (IQ:0 B) (1006A)	S53	Position switch, front-wheel drive indication, NO. (DU:4 C) (1458)
S23B	Switch, roof hatch, selector type (IQ:1 B) (1007A)	S54	Position switch, differential gear lock, front-wheels, NO. (DU:4 C) (1458)
S24	Stalk switch, retarder, selector type (BA:3 B) (1000)	S55	Thermal switch (HP:0 C/IA:0 C/IA:2 C) (1062)
S25	Switch unit, cruise control (BA:2 B/GA:2 A) (1000)	S56	Thermal switch, bogie lift, NC (FI:3 C/FK:3 D) (1037)
S26A	Switch, cab tilt pump (KA:0 B) (1000)	S57L	Position switch, luggage compartment lighting, NC. (IH4:3 D) (1007A)
S26B	Switch, cab tilt pump (KA:0 D) (1502/1503)		
S28A	Switch, power take off (DQ:0 B) (1000)		
S28B	Switch, power take off (NC:0 C/NU:0 B/NX:0 B) (1000)		
S30	Switch unit, multi-function display (BI:3 B/GM:2 B) (1000)		

S57R	Position switch, luggage compartment lighting, NC. (IH4:3 D) (1007B)	S86	Switch, foldable rear view mirror arm, Japan (IF:1 B) (1000)
S58	Position switch, clutch pedal, NO. (BA:3 D) (1000)	S88L	Position switch, door, NC (NK:0 D) (1007A)
S59	Position switch, brake pedal, NO. (BA:3 D) (1000)	S88R	Position switch, door, NC (NK:0 D) (1007B)
S60A	Pressure switch, oil, power steering, NC. (FP:0 C) (1493)	S95	Switch, Panic alarm (NK:2 A) (1000)
S60B	Pressure switch, oil, power steering, NC. (FP:0 C) (1493)	S96	Switch, Reduced set, Alarm (NK:2 B) (1000)
S61	Position switch, seat belt lock, NC. (IA:1 C/IA:3 C)	S128	Switch, Axle pressure divider (FB:3 B/FB RHD:3 A) (1000)
S63	Position switch, low range gear (BA:0 B) (1494)	S169	Switch, battery main switch (AB:2 C) (1435)
S64	Pressure switch, air pressure, parking brake tank, NC. (EO:1 B) (1000)	S171	Switch, GLU (Gearlever unit) (DC:1 D) (1007A/1007B)
S66_L	Switch unit, ECS (electronic controlled susp.), full air suspension (FB:2 E) (1007A)	S187	Switch, night driving light roof (IH3:0 B) (1006A)
S66_R	Switch unit, ECS (electronic controlled susp.), full air suspension (FA RHD:2 E) (1007B)	S188	Switch, night driving light dash (IH3:0 B) (1000)
S68	Sensor, coolant level (CO:2 B) (1030)	S202	Switch, LDWS (Lane Departure Warning System) (BE:0 B) (1000)
S69	Proximity switch, bogie lift position, NO. (FK:1 D) (1037)	S203	Switch, BBOX-EF manual el/mek (AB:1 C) (1460)
S70	Position switch, flow sensor, power-steering, NC. (FP:0 C) (1493)	S210	Switch, ID-lamps (GL:2 B/GL2:3 B) (1006A)
S71	Pressure switch, compressor charging, NO. (BA:0 D) (1056)	S212	Switch, tail lift (NB:1 B) (1000)
S73	Switch, acoustic reverse warning (GC:4 A) (1006A)	S220	Switch, static corner light (GA:3 A) (1000)
S73_2	Switch, acoustic reverse warning (GC RHD:3 B) (1006A)	S221	Switch, door lock/unlock (IM:3 A) (1007A)
S74	Switch, short stop cab heater (HP:0 B) (1000)	S222L	Switch, interior light, compartment light, front (IH3:4 D) (1006A)
S75	Switch, beacon warning light (KM:0 B) (1000)	S222R	Switch, interior light, compartment light, front (IH3:4 D) (1006A)
S76	Switch, spotlights (NA:4 B/NB:4 B) (1000)	S227	Switch, fuel heater, thermoline (FX:0 B) (1000)
S76A	Switch, spotlights (NI:4 C) (1006A)	S228	Switch, tridem bogie control (FB:2 A) (1000)
S77	Switch, emergency call (BU:1 B) (1000)	U01_A	Modulator, EBS, left front (EP:0 B) (1086)
S78	Switch unit, TIS (Traffic Information System) (BU:3 B) (1000)	U02_A	Modulator, EBS, right front (EP:1 B) (1086)
S79A	Switch, additional work lamps (reverse lamps), manual turn on (NA:1 B/NA_2:1 C/NB:1 B) (1000)	U03_A	Modulator, EBS, rear axle (EP:2 D) (1086)
S79A_2	Switch, additional work lamps (reverse lamps), manual turn on (NA_2:0 C)	U03_B	Modulator, EBS, rear axle (EP:0 D) (1086)
S79B	Switch, additional work lamps (reverse lamps), manual turn on (NA:2 B) (1000)	U03_C	Modulator, EBS, rear axle (EP:2 B) (1086)
S79D	Switch, additional work lamps (reverse lamps), manual turn on (NA:0 B/NA_2:4 B/NB:0 B) (1000)	U04_A	Modulator, EBS, pusher axle (EP:2 D) (1086)
S80	Position switch, front hatch (NK:1 D) (1504)	U05_A	Modulator, EBS, trailer (EO:3 B) (1401)
S83	Switch, container lock (NA:2 B/NB:2 B) (1000)	U06	Voltage converter (GK:0 D) (1063)
S84	Switch, tachograph mode (BN:0 C) (1006A)	U06B11	Voltage converter (IR:1 B) (1007C)
		U06B20	Voltage converter (IR:2 B) (1007C)
		U06R11	Voltage converter (IR:1 B) (1007C)
		U06R19	Voltage converter (IR:0 B) (1007C)
		U07_A	Modulator, EBS, tag axle (EP:3 D) (1086)
		U08_A	Modulator, EBS, front (EP:2 B) (1086)
		U10	Voltage converter, 12V ABS Trailer (CP:3 B) (1007C)
		V02	Diode module (AE:2 B) (1000)
		V03	Diode (GG:3 B/ZA RHD:3 B) (1000)
		V04	Diode (FI:0 D/FK:0 D) (1037)
		V05	Diode (FK:2 D) (1000)
		V07	LED, indicator, Alarm (NK:2 C) (1000)

V08	Diode (NU:2 B) (1000)	Y05	Solenoid valve, bogie lift (FI:0 D/FK:0 D) (1037)
V10	Diode (CP:1 B) (1000)	Y05A	Solenoid valve, bogie lift (FL:0 D) (1037)
V11	Diode (CP:2 B) (1000)	Y05B	Solenoid valve, bogie lift (FL:1 D) (1037)
V25	Diode (IH:4 B) (1000)	Y06	Solenoid valve, range inhibitor (BA:0 B) (1494)
V25B	Diode (IH3:2 B) (1006A)	Y08	Solenoid valve, front-wheel drive (DU:2 D) (1458)
V27	Diode (DQ:1 C) (1000)	Y09	Solenoid valve, differential lock, front axle (DU:2 D) (1458)
V28	Diode (DQ:1 C) (1000)	Y10	Solenoid valve, 3:rd axle lock (FM:0 C) (1072)
V32	LED, indicator, LCS (Lane Change Support) (BE:3 C) (1000)	Y11	Solenoid valve unit, ABS, lhs. front (EE:0 D/EF:0D) (1086)
V33	Diode (CP:1 B)	Y11_A	Solenoid valve unit, ABS, lhs. front (EO:3 D) (1086)
V34	Diode (NA_2:1 D)	Y12	Solenoid valve unit, ABS, rhs. front (EE:1 D/EF:1 D) (1086)
V35	Diode (HP:0 D) (1000)	Y12_A	Solenoid valve unit, ABS, rhs. front (EO:4 D) (1086)
V36	Diode (IM:0 C) (1000)	Y13	Solenoid valve unit, ABS, lhs. rear (EE:2 D/EF:1 D) (1086)
V37	Diode (IM:1 C)	Y14	Solenoid valve unit, ABS, rhs. rear (EE:3 D/EF:2 D) (1086)
W02	Antenna, immobiliser (IM:3 C) (1000)	Y15	Solenoid valve unit, ABS, rhs. rear (EF:3 D) (1086)
X01	Connector, vehicle diagnostics (XA:0 C) (1000)	Y16	Solenoid valve unit, ABS, rhs. rear (EF:3 D) (1086)
X02	Trailer connection, ABS/EBS (1063)	Y17B	Solenoid valve, retarder (DI:3 D) (1494)
X03	Trailer connection, 15-pole unit (1063)	Y17C	Solenoid valve, retarder (DM:2 B)
X04	Trailer connection, 7-pole unit, 24 N (1063)	Y18A	Solenoid valve, PTO (Power Take Off) (DQ:0 D) (1401)
X05	Trailer connection, 7-pole unit, 24 S (1063)	Y18B	Solenoid valve, PTO (Power Take Off) (DI:4 B) (1494)
X06	Connector, 31-pole, in lhs. frame side, for body builder preparations (1505)	Y18C	Solenoid valve, PTO (Power Take Off) (NC:0 D/NU:0 C/NX:0 D) (1401)
X07B	Socket, 12V (IR:1 D) (1000)	Y18G	Solenoid valve, PTO (Power Take Off) (DP:2 B) (1499)
X07C	Socket, 12V (IR:2 D) (1000)	Y18H	Solenoid valve, PTO (Power Take Off) (DP:2 B) (1499)
X08	Contact reel, air bag (IS:0 C) (1000)	Y18A	Solenoid valve unit, level control, air suspension (FA:1 B) (1072)
X09	Slip contact, horn (GQ:1 C) (1000)	Y18B	Solenoid valve unit, level control, air suspension (FA:2 B) (1072)
X10	B+ pass through, cab (AC:0 B) (1000)	Y18C	Solenoid valve unit, gearbox (DI:0 D) (1494)
X25	Power connector, bogie lift/extra equipment (AA:1 B) (1037)	Y30C	Solenoid valve, area inhibitor (BA:1 B) (1494)
X54	Power connector, Engine (B+) (AA:1 D) (1030)	Y31	Fuel dosing pump, parking heater (HI:0 A/HM:0 D) (1040)
X55	Plug, start aid (AA:1 C) (1435)	Y32	Solenoid valve, UI (Unit Injectors) (CO:3 D) (1030)
X63	Trailer connection, VBG 14 (1063)	Y33	Actuator, EGR system (Lisk) (CO:1 D) (1030)
X66	Connector, USB, Audio (IU:3 D) (1000)	Y34	Solenoid valve, engine cooling fan (Included in A43) (CO:0 B)
X67	Connector, USB, AUX (IU:3 A) (1000)	Y35	
X74F	Power outlet, 24V (IR2:0 D) (1000)		
X74R	Power outlet, 24V (IR2:1 D) (1007A)		
X75	Split connector, ground (YA:0 D) (1006A/1006E)		
X79L	Connector, 12V, TV preparation kit (IR:3 D) (1006E)		
X79R	Connector, 12V, TV preparation kit (IR:4 D)		
X80L	Connector, AUX, Audio, TV preparation kit (IU:2 A) (1006E)		
X80R	Connector, AUX, Audio, TV preparation kit (IU:2 A)		
Y02	Solenoid valve, differential lock, rear wheels (DU:1 D) (1401)		
Y03	Solenoid valve, differential lock, inter axles, rear (DU:1 D/ZA RHD:3 B) (1401)		

Y37	Solenoid valve unit, AVU (CO:3 B) (1030)	Y51B	Solenoid valve, compressor control (FQ:1 C)
Y37A	Solenoid valve unit, AVU (Air Valve Unit) (CO:3 B) (1030)	Y53	Control valve block , RAS (FO:3 D) (1493)
Y37B	Solenoid valve unit, AVU (Butterfly) (CO:3 B) (1030)	Y54	Control module VGT (Variable Geometry Turbine) (CO:0 B) (1030)
Y38	Solenoid valve, fuel water separator (Included in A45) (CO:3 B)	Y68	Solenoid valve, tridemaxle (FA:2 B) (1072)
Y39	Solenoid valve, VCB (CO:3 B) (1030)	Y72	Solenoid valve, Airhorn (GQ:0 B) (1504)
Y40	Solenoid valve unit, front axle, air suspension (FA:0 B) (1072)	Y80	Solenoid valve, AdBlue dosing unit (CR:1 B/CV:3 D) (1510)
Y42	Clutch, magnetic, air conditioning compressor (HG:0 D/HY:1 D) (1476)	Y81B	Solenoid valve, AdBlue tank heating (CR:1 D/CV:0 D) (1510)
Y43L	Seat belt tensioner, pyrotechnical (IS:2 D) (1007A)	Y88	Solenoid valve, trailing axle, air suspension, bogie lift (FA:3 B) (1072)
Y43R	Seat belt tensioner, pyrotechnical (IS:3 D) (1007B)	Y103	Safety valve, fuel system, ATI (CO:0 B) (1030)
Y44	Air-bag, pyrotechnical (IS:0 D)	Y109	Electro clutch, coolant pump (CO:1 D) (1030)
Y48A	Solenoid valve, container lock (NA:2 D/NB:2 D) (1506A)	Y110	Solenoid valve, oil thermostat (CO:0 D) (1030)
Y48B	Solenoid valve, fifth wheel lock (NA:4 D/NB:3 D) (1506A)	Y111	Solenoid valve, oil piston cooling jet (CO:2 D) (1030)
Y49	Solenoid valve, parking brake (NU:2 C) (1504)	Y114	Throttle (CO:2 D) (1030)
Y51A	Solenoid valve, regeneration (FQ:2 C)	Y128	Solenoid valve, air shut-off (FQ:3 C) (1056)

Abbreviations

ABS	Antilock brake system	EM-EC01	European community 2001 level EURO3
ACC	Adaptive cruise control	EM-EC06	European community 2006 level EURO4
ACU	Alarm control unit	EM-EU5	Engine emission control, EURO5
ADR-BAS1/ ADR1 ...	ADR adaptation, 1 switch	EM-JPN10	Emission control Japan community 2010
ADR2	ADR adaptation, 2 switches	ENG-VE11	Volvo engine 11 litre
ADR3	ADR adaptation, 3 switches	ENG-VE13	Volvo engine 13 litre
AIRDRY-E	Electric airdryer	EPG	Exhaust pressure governor
ATB	Axle load limiter	ESP	Electronic stability program
ATC	Automatic temperature control	FAA10	1 front axle, non driven
ATO2512C	Gearbox variant	FAA20	2 front axle, non driven
AT2412C	Gearbox variant	FMS	Fleet management system
AT2512C	Gearbox variant	FSS-LEAF	Leaf suspension, front
AUS	Australia	GSS-AGS	Automatic gear shifting system (I-shift)
AUXSW-6	Wiring for six auxiliary switches for body building	GSS-PS	Automatic transmission, automatic gear shifting system (Powertronic)
AWD	All wheel drive	GSS-RC	Range gear shifting, cable manoeuvred
BBM	Body builder module	GSS-SRC	Split and range gear shifting, cable manoeuvred
BBOX-AC	Battery box across framerails	INLI-BAS	Interior light, basic
BBOX-EF	Battery box end of frame	INLI-NL	Interior light, night light
BBOX-R	Battery box right hand side	JPN	Japan
BUMP-HDC	Bumper, heavy duty, construction	L	Left
BUMP-P	Bumper, plastic	LCM	Light control module
BUMP-S	Bumper, steel	L1H1	Short cab
BUMP-SC	Bumper, steel, construction	L2H1	Long cab
CHH-LOW	Chassis height low	L2H2	Long high cab (Globetrotter)
CLU	Central locking unit	LF	Left front
CU-ACAUT	Air condition, automatic	LHD	Left hand drive
CU-ACMAN	Air condition, manual	LHS	Left hand side
CU-BAS	Basic version with stepper motor without air condition	LKS	Lane keeping support
CU-ECC	Electronic controlled climate control air condition	LOCK-ALL	Central door lock and cut off electricity of truck
CU-HEAT	Heater unit	LR	Left rear
CU-MCC	Manual controlled climate control air condition	LSS-DW	Lane support system departure warning
DACU	Driver assistance control unit	MAINSW-M	Mechanical main switch
DS	Driver side	MAINSWI	Main switch
EBS	Electronic brake system	MECHTRAN	Mechanical transmission
ECS	Electronic controlled air suspension	MMS	Mechanical main switch
EGR-C	Exhaust gas regulation, cooled	OBD	On Board Diagnostic
ELCE-CK	Electrical complete kit for body builder		
ELMS	Electrical main switch		

PH-CAB	Cab parking heater	TIS-BAS	Transport information system, Logger and Positioning
PH-ENGCA	Engine and cab parking heater	TIS-HIGH	Transport information system, Logg. Pos. and Adv. message system
PS	Passenger side	TIS-MED	Transport information system, Logg. Pos. and message
PSS-DUAL	Power steering system dual	TMC	Traffic message channel
PTO	Power take off	TPM	Tyre pressure monitoring
R	Right	TRACTOR	Semi-trailer tractor
RAD-A4	4x2, air spring, 4bellows	TREL7-7	Trailer connectors 2x7-pole unit
RADD-A8	6x4, air spring, 8 bellows	TREL14	Trailer connectors 14-pole unit
RADT-A8	6x2, air spring, 8 bellows, tag axle	TURB-HD	Turbo heavy duty design
RADT-AR	6x2, leaf spring (A-ride)	UACC	Without adaptive cruise control
RAL23	Rear axle load 23 tonnes	UADR	Without ADR adaptation
RAL26	Rear axle load 26 tonnes	UALARMB	Without alarm
RF	Right front	UJERICO	Without Jerico horn
RHD	Right hand drive	ULKS	Without lane keeping support
RHS	Right hand side	ULSS	Without lane support system
RIGID	Platform or tipper truck	UMAINSWI	Without main switch
RR	Right rear	URETARD	Without retarder
RSTS-EHY	Rear steering system, electrical controlled, hydraulic	USMCONT	Without starter motor control
SCR	Selective Catalyst Reduction	USUSPLEV	Without air suspension levelling device
SCRS-UHH	SCR system equipment, without heated hose	UTPM	Without tyre pressure monitoring
SI-GRAF	Tachograph	UTRBRAKE	Without trailer brake valve
SI-GRAFR	Tachograph	VECU	Vehicle electronic control unit
SI-SPEED	Speedometer	VERS-SAM	South American Version
SMCONT	Starter motor control	VT2412B	Gearbox variant
SPDU-S	Dual speed limiter for side mounted	WLUR-BPK	Working lamp upper rear, body, prekit
SPEED-DU	Dual speed limiter	WLUR-CL	Working lamp upper rear, cab, lamp
SRS	Supplementary restraint system	WLUR-CPK	Working lamp upper rear, cab, prekit
STWPOS-L	Steering wheel position left hand side	WPRE-BOC	Wire preparation back of cab incl. switch
STWPOS-R	Steering wheel position right hand side	ZT1816	Gearbox variant (South America only)
SUSPL-EC	Air suspension, electronic control system levelling device		
SUSPL-M	Air suspension, manual regulation levelling device		
SWAPBODY	Swap body		
TECU	Transmission electronic control unit		

Cable colour code

BL	Blue	SB	Black
BN	Brown	VO	Violet
GN	Green	W	White
GR	Grey	Y	Yellow
OR	Orange		
P	Pink		
R	Red		

Note: If a wire have two colours, this is written out like the following example: Y/R = Yellow/Red.

Feedback

One of our objectives is that workshop personnel should have access to correct and appropriate service manuals where it concerns fault tracing, repairs and maintenance of Volvo vehicles.
In order to maintain the high standards of our literature, your opinions and experience when using this manual would be greatly appreciated.
If you have any comments or suggestions, make a copy of this page, write down your comments and send them to us, either via telefax or mailing directly to the address listed below. You can also send your comments via e-mail.

To	From
VPCS technical team
Smalleheerweg 29
BE-9041 Gent
Belgium
technical.team@volvo.com
Fax +32 9 2556767

VOLVO

Volvo Truck Corporation
Göteborg, Sweden